ASSEMBLY INSTRUCTION Item: N759P192449 SIDEBOARD



Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



To reduce the likelihood of damaging your product please ensure that

your power drill is set on low torque setting.

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners. • From time to time check that • there are no loose screws on this d unit. T

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts
 loosely during assembly, only
 once the product is complete
 should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING

In order to help prevent overturning please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable) Do not allow children to climb or hang on the furniture Do not open more than one drawer at a time

Do not place heavy items in the top drawers Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided. You will need to provide wall plugs and screws applicable for your wall type

Tools required



Philips screwdriver (medium & large)

Ruler - Use this ruler to help correctly identify the screws

 5
 10
 15
 20
 25
 30
 35
 40
 45
 50
 55
 60
 65
 70
 75
 80
 85
 90
 95
 100
 105
 110
 115
 120
 125
 130
 135
 140
 145
 150
 155
 160
 165
 170

 10
 15
 160
 155
 160
 165
 70
 75
 80
 85
 90
 95
 100
 105
 110
 115
 120
 125
 130
 135
 140
 145
 150
 155
 160
 165
 170

The screws length is measured from the head to the point (16mm screw shown).





PAGE 3 OF 12

12



Leg frame (front & back) - 2pcs	Leg frame (side) - 2pcs	Leg frame connector - 4pcs	Leg - 4pcs	
13				
Door panel - 4pcs				



wood serew (szpes)	Soft close hinges (8pcs)	Wood screw (48pcs)	Wood screw (42pcs)
Η	Ι	J	Κ
1484mm	((((((((((((((((((((((((((((((((())))))		
H connector (1pc)	JCBB (4pcs)	Spring Washer (4pcs)	Flat Washer (4pcs)
L	Μ	L L1 L2	L3 L4 L5
M5	30mm	2pcs 2pcs	2pcs 2pcs 4pcs
Allen Key (1pc)	Handle with screw (4sets)	Anti tipping kit 2 sets	















PAGE 6 OF 11



Step 5







	((((((((((((((((((((((((((((((((((((((M5
D X 16	IX4	J X 4	K X 4	L X 1





PAGE 8 OF 11



PAGE 9 OF 11

ANCHORING CABINET



- Use electric drill to drill a hole on the wall, the diameter and depth need to keep same with wall plug (L1) provided (4*30mm)
- 2. Use a rubber hammer to knock wall plug (L1) into the wall
- 3. Insert the longer screw (L3) through washer (L5) & L brocket (L2) provided on shown below. Attach screw &



bracket (L2) provided as shown below. Attach screw & washer (L4,L5) onto cabinet's sides to hold it.



PAGE 10 OF 11



Assembly is complete.



