

Specification

Model	T3201-30
Voltage	Non-electric
Water Supply Mode	Connect to the cold water supply pipe directly
Angle of Nozzle	Adjustable
Water Temperature for self-cleaning	Cold
Self-cleaning	YES
Water Temperature	3°~ 35°
Room Temperature	3°~ 40°
Water Pressure	0.05 MPa ~0.6 MPa
Distance between Holes Axis	116~215 mm
Item Size	382.5x188x71.5mm

Trouble shooting

Issues	Measures
The spray nozzle has no water	1.The water supply is cut off. 2.The angle valve is closed. 3.The spray nozzle is clogged. 4. Low water pressure. 5. Water supply pipe is bended.
Low water pressure	1. The water flow control knob is adjusted to be low position. 2. Water supply pipe is bended.


Note




Please do not use the body to press or trample the bidet.



Assembly Instruction

T3201-30 bidet with cold

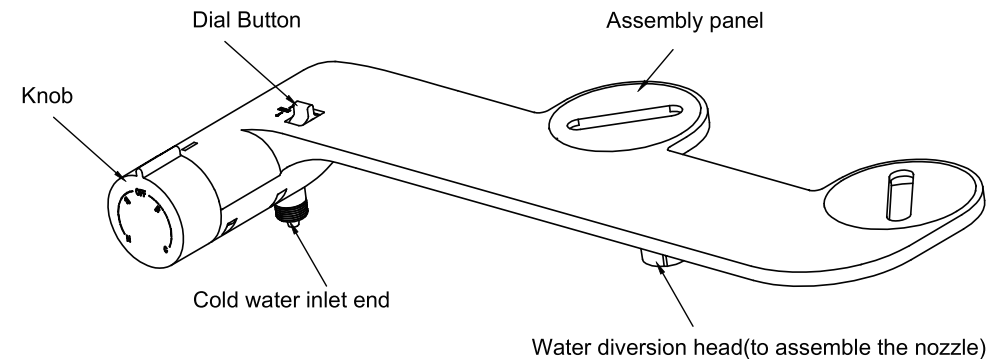


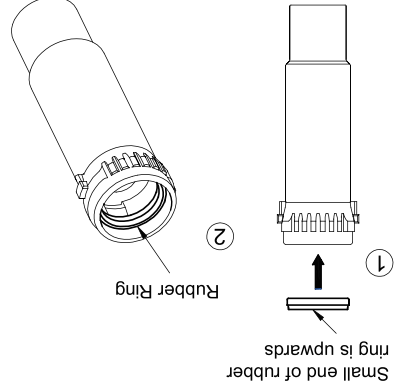


Check if rubber ring is assembling into position. If fall out, assembly again via instruction.

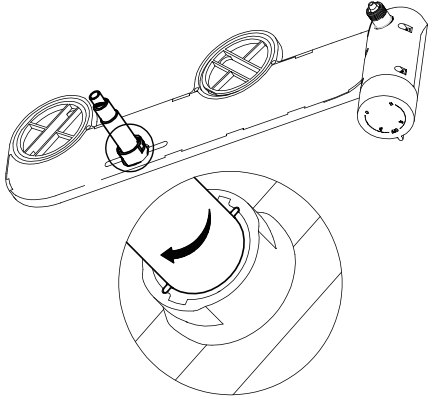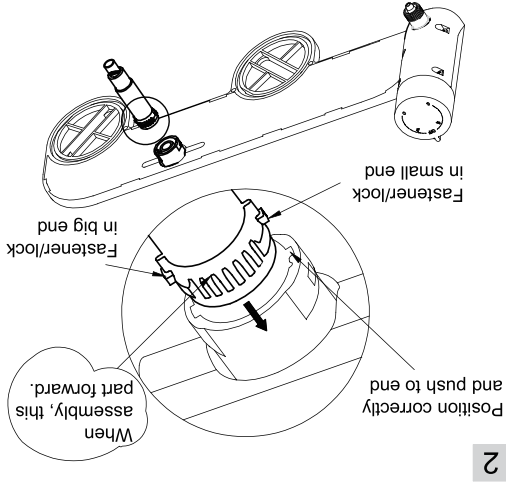



It is assembling into position when clockwise rotating to the end, and pull out nozzle without any movement.

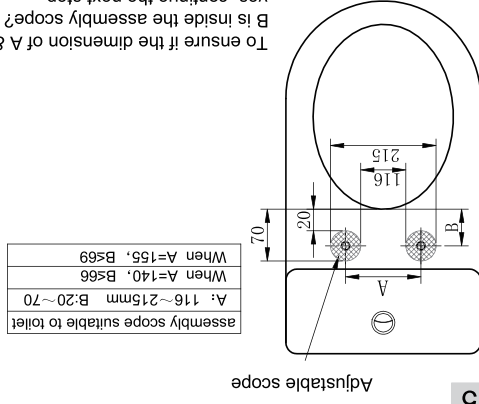

To ensure if the dimension of A & B is inside the assembly scope? If yes, continue the next step.

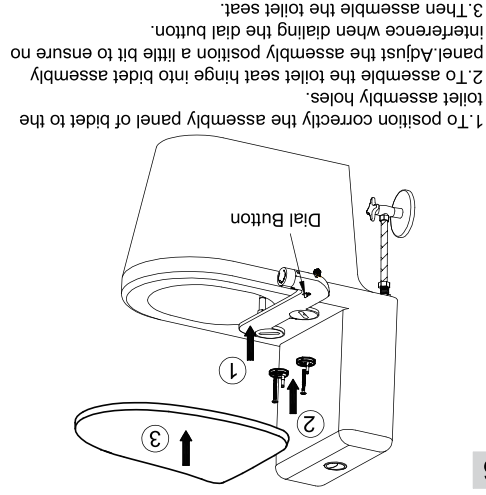


Disassemble the toilet seat and save all toilet seat parts.

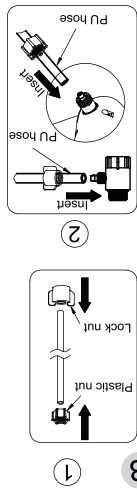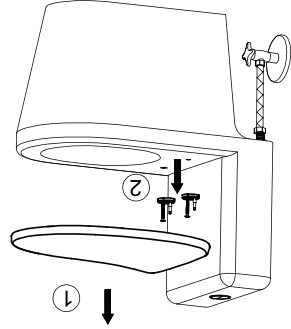


Classification	Assembly parts	Relative assembly diagram
A	Braided hose	A
B	PU hose	B

Choose the right assembly parts according to the relative assembly diagram.

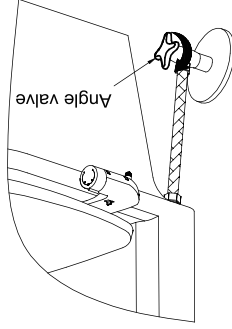

Turn off the angle valve, and then flush out all the water in the tank.

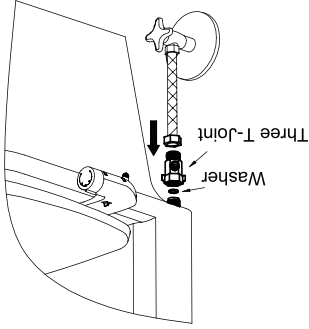

To assemble the braided hose to the water inlet end of bidet and turn tight.

