




ITEM #0756819

3-LIGHT VANITY BAR

MODEL #FS141117-3

Français p. 8

Español p. 15

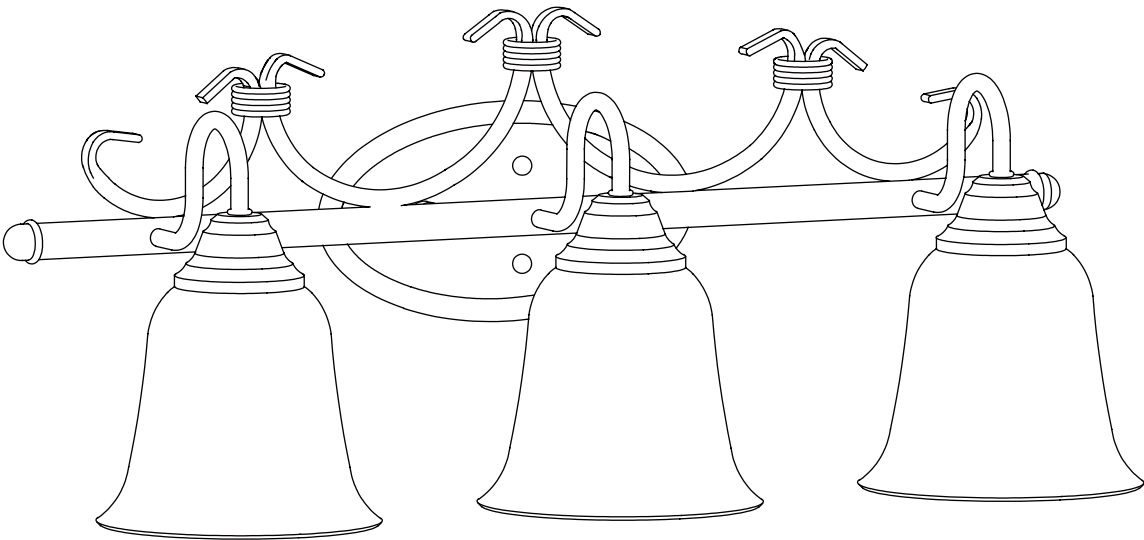

ATTACH YOUR RECEIPT HERE


Serial Number _____ Purchase Date _____



Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.







PACKAGE CONTENTS

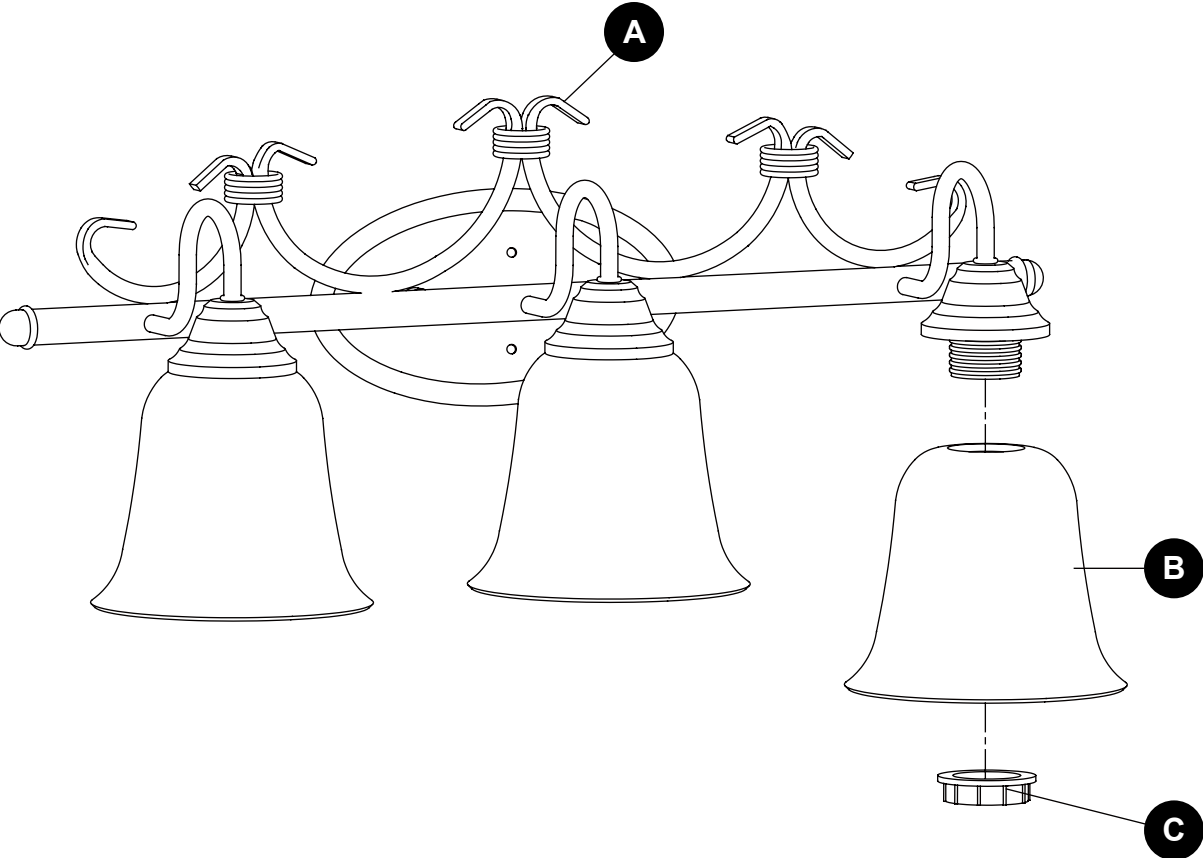

PART	DESCRIPTION	QUANTITY
A	Fixture	1
B	Glass shade	3
C	Socket ring (preassembled to Fixture (A))	3

   HARDWARE CONTENTS (shown actual size)

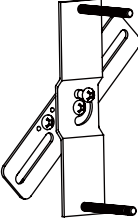AA	BB	CC	DD
			
Cap nut (preassembled to Crossbar (DD))	Wire nut	Machine screw	Crossbar (Not actual size)
Qty. 2	Qty. 3	Qty. 2	Qty. 1

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING

- TURN OFF ELECTRICITY at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching off circuit breaker).

CAUTION

- CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.
- If in doubt about electrical installation, consult a licensed electrician.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 25 minutes

Tools Required for Assembly (not included): Flathead screwdriver, Phillips screwdriver, Pliers, Electrical tape, Wire cutters, Safety glasses, Step ladder.

Helpful Tools (not included): Wire strippers.

ASSEMBLY INSTRUCTIONS

1. Remove cap nuts (AA) from the preassembled mounting screws on crossbar (DD). Attach crossbar (DD) to the outlet box (not included) with machine screws (CC). **Note:** The mounting screws should protrude away from the outlet box.

Hardware Used

AA

Cap nut

CC

Machine screw

DD

Crossbar

x 2

x 2

x 1

2. Strip 3/4 in. of insulation from wire ends. Twist stripped ends together with pliers (not included), black to black (power) and white to white (neutral). Attach copper wire to ground wire. **Helpful hint:** If necessary, attach copper ground wire to grounded outlet box.




3. Attach wire nuts (BB) to connections. Tape wire nuts (BB) and wires together with electrical tape (not included).

Hardware Used

BB

Wire nut

x 3

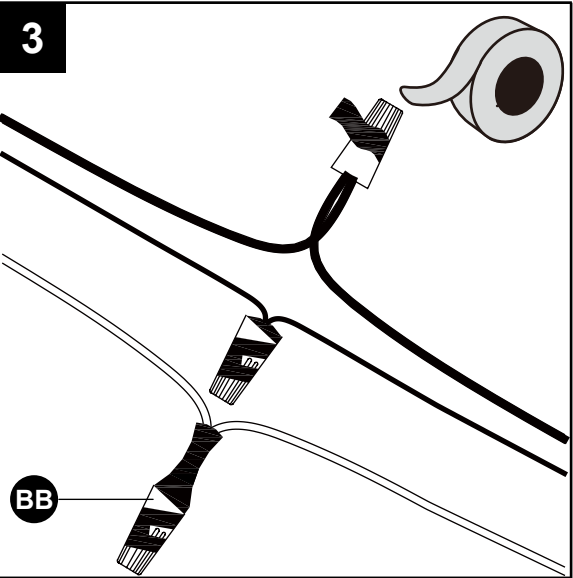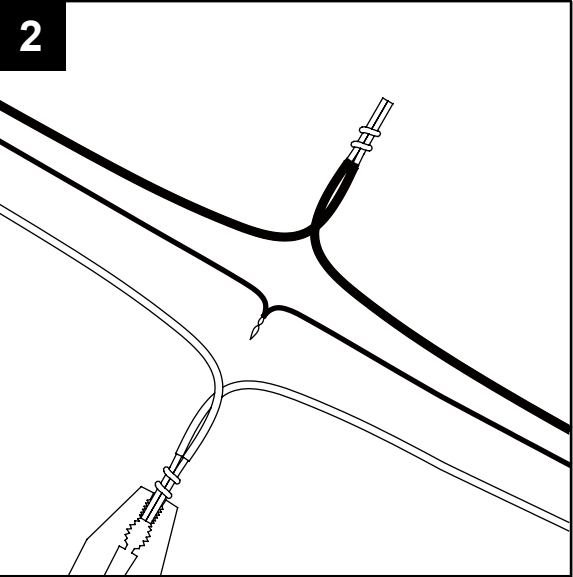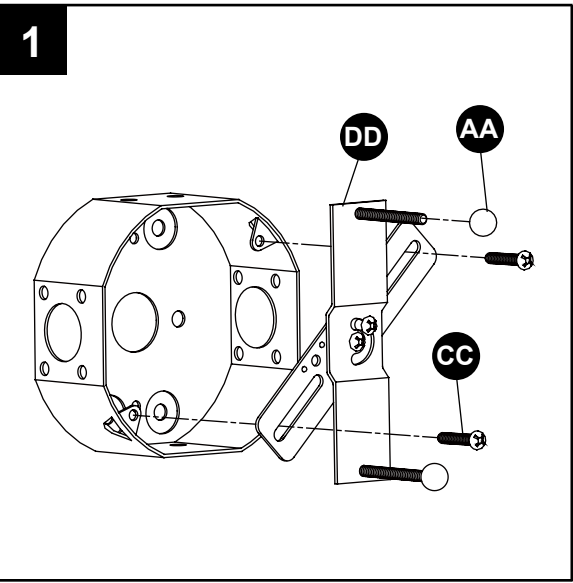

ASSEMBLY INSTRUCTIONS

4. Place fixture (A) onto mounting screws protruding from crossbar (DD). Secure with previously remove cap nuts (AA). **Note:** If necessary, keep screwing cap nuts (AA) until the mounting screws thread backward enough that fixture (A) is flush with the wall. **Note:** The fixture (A) can be installed with the sockets facing either up or down.

Hardware Used

AA

Cap nut

DD




Crossbar

x 2

x 1

5. Remove socket rings (C). Install glass shades (B) over sockets of fixture (A), then secure with socket rings (C).

6. Install light bulbs (not included). Use three 100-watt max. standard-base incandescent bulbs or halogen/CFL/LED equivalents.

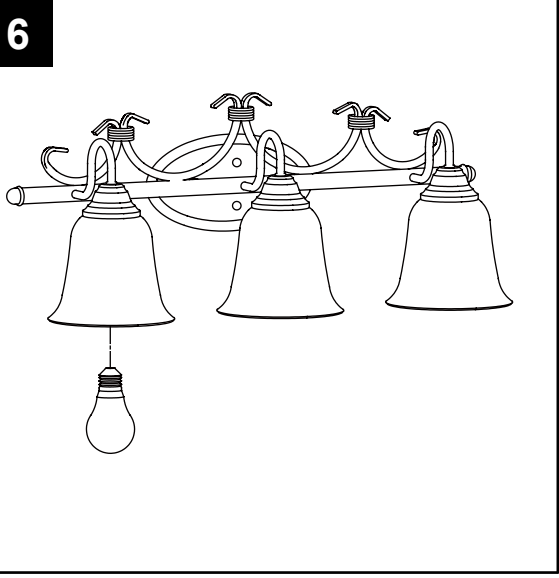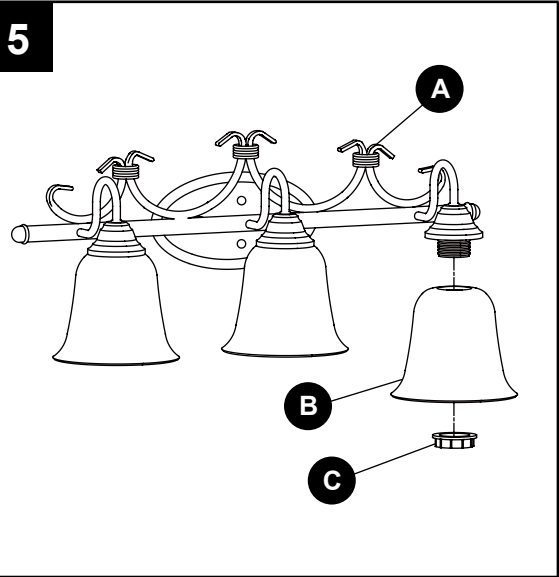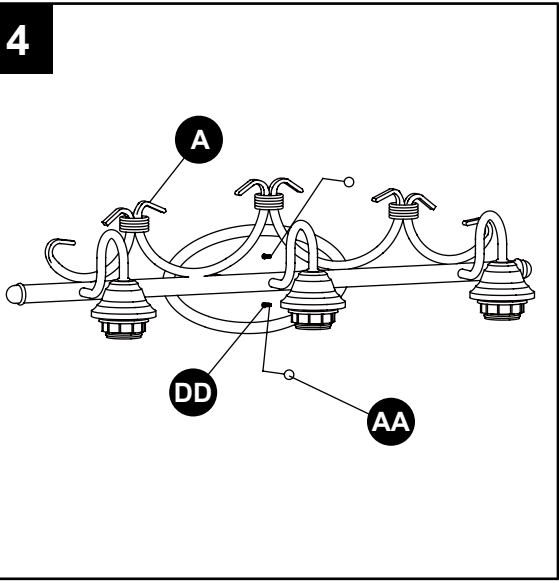

CARE AND MAINTENANCE

- Shut off main power supply before wiping product with damp cloth or window cleaner. Do not use abrasives.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Bulb won't light.	1. Bulb is burned out. 2. Power is off. 3. Faulty wire connection. 4. Faulty switch.	1. Replace light bulb. 2. Make sure power supply is on. 3. Check wiring. 4. Test or replace switch.
Fuse blows or circuit breaker trips when light is turned on.	Crossed wires or power wire is grounding out.	Check wire connections.

WARRANTY

The manufacturer warrants all of its lighting fixtures against defects in materials and workmanship for one (1) year from the date of purchase. If within this period the product is found to be defective in material or workmanship, the product must be returned, with a copy of the original sales receipt as proof of purchase in the original carton, to the place of purchase. The manufacturer will, at its option, repair, replace or refund the original purchase price to the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage, improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

REPLACEMENT PARTS LIST


For replacement parts, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PART	DESCRIPTION	PART #
AA	Cap nut	110-100900
BB	Wire nut	375-022000
CC	Machine screw	109-042600
DD	Crossbar	152-103000


AA



 BB



CC

 

DD

