

MODEL: PP2300i

Product No: A060010002

INVERTER GENERATOR



Have product questions or need technical support?

Contact Us:



Website: www.poulanpro.com



Toll free: 1-888-676-7909 Mon-Fri 8-4 CST



Email: support@poulanpro-power.us



READ AND UNDERSTAND THE OPERATOR'S MANUAL AND ALL SAFETY WARNINGS BEFORE USE

Failure to operate the product correctly can result in damage to the product, personal property and cause serious injury or death.

Manufactured under license from Husqvarna AB
Poulan Pro® is a registered Trademark of Husqvarna AB
Imported by Novus Performance Products
W225N16708 Cedar Park Ct. Jackson, WI



Vol. 2025-02

UNPACKING



- ▶ Carefully lift the generator out from the carton/box and place the unit on the ground or other solid surface.
- ▶ Note: Do not discard packaging until you have confirmed the Oil Bottle (0.35L - 12oz 10W-30), Funnel with tube, tool kit and Operator's Manual are present.

Add Engine Oil

⚠ Important Note:
 Engine is shipped from the factory without oil. Engine Oil Must be added prior to operating generator.

Note: The oil fill location is located behind the oil cover plate on the right-hand side of the generator.


1. Place the generator on a flat and level surface.
2. Using the supplied funnel and hose, add up to (12oz / .35L) of oil to the engine. The oil should be near the top thread of the fill neck.
3. Check the oil level using the dipstick. Do Not screw in when checking the oil level.
4. When finished screw in the oil cap / dipstick securely.

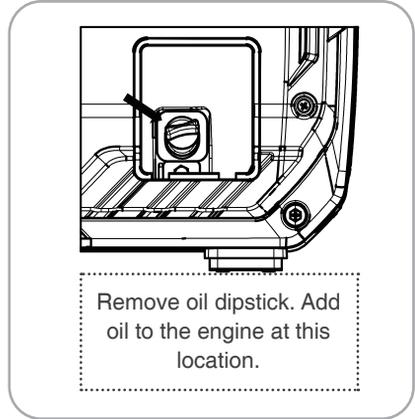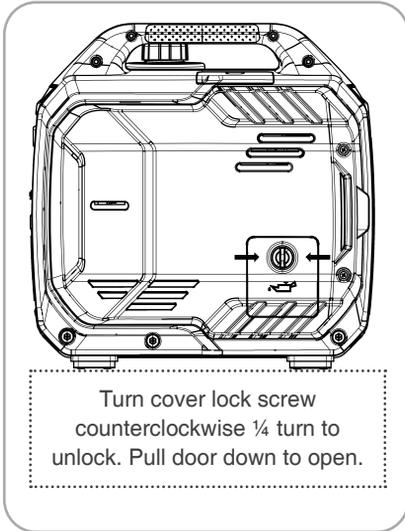


Add Fuel

1. Slowly add fresh regular unleaded gasoline with a minimum of 87 octane and a maximum of 10% ethanol to the fuel tank.
2. Replace and tighten the fuel cap.
3. Immediately wipe up any spilled fuel.

⚠ Important Note:
 Avoid overfilling the fuel tank. Do not exceed the "Red" line of the fuel screen inside the fuel tank opening. (fuel tank capacity is 1.2 gal)

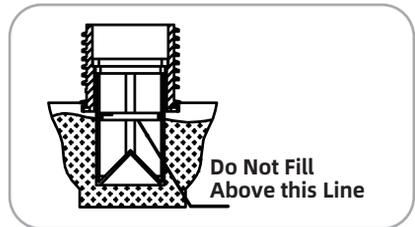


Collect and retain the product, model and serial numbers from the product ID decal which is located on the side maintenance cover of the generator.

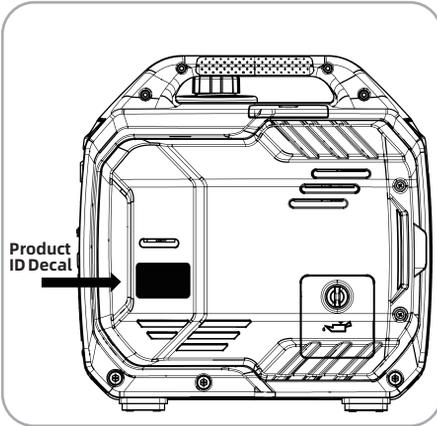

STARTING THE GENERATOR

1. Set the fuel cap vent switch to the ON position. Turn the Engine Control Switch (side of generator) clockwise to the "Choke" position.

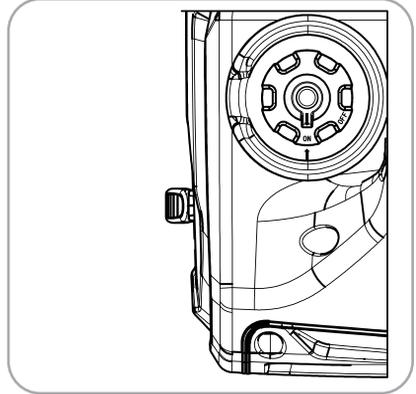


STARTING AND OPERATING PROCEDURES

This section of the quick start guide provides the basic instructions on how to start and operate your new Inverter Generator. This quick start guide is not a comprehensive guide, we recommend the operator's manual is read and understood before using your new equipment.

UNIT PREPARATION

Prior to starting the generator, always check the following.

1. Check the engine oil level, add if necessary.
2. The fuel tank has fresh, unleaded 87 octane gasoline containing up to a maximum of 10% ethanol.
3. The generator must be located outdoors in an open well-ventilated area away from windows, doors & vents. 
4. All electrical loads are disconnected from the generator.

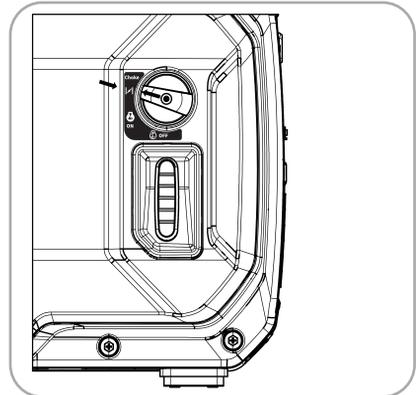

2. Start the engine by pulling the recoil starter handle out slowly until resistance is felt, then pull rapidly.



- Once the engine starts, turn the Engine Control Switch counterclockwise to the "ON" position.



Allow the generator to run for 30-50 seconds with the engine running smoothly before connecting an electrical load.

STOPPING THE GENERATOR

- Turn Off all electrical appliances connected to the generator.
- Remove all plugs / cords from the generator.
- Turn the Engine Control Switch knob counterclockwise into the "OFF" position. Allow the generator to cool down prior to moving it to any enclosed area.

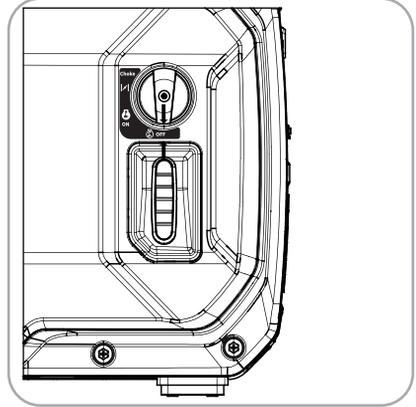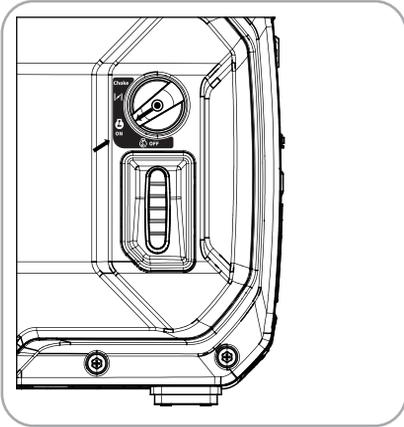

KEY FEATURES

