

Thank you for purchasing Leick Furniture products. Contact customer service for comments or concerns.

Sheboygan,WI

920-451-4060

info@leickhome.com

(P)www.leickhome.com

Assembly Instructions, #23400 Writing/Computer Desk

Parts List

Item	Parts	Description	Quantity
A		Top Assembly	1
В		Left Leg Frame	1
С		Right Leg Frame	1
D		Metal Rail	2

Item	Hardware	Description	Quantity		
1		Long Allen Bolts	4		
2		Short Allen Bolts	8		
3	\bigcirc	Flat Washers	12		
4	¢	Lock Washers	12		
5	Į	Allen Wrench	1		

Hardware List

Assembly Steps

Step 1

- 1.1 Lay the Top Assembly (A) upside-down on a soft surface.
- **1.2** Insert the Left Leg Frame (B) into the Top Panel's (A) tube, fasten with two Long Allen Bolts to the lower face of Top Panel and two Short Allen Bolts on the ends of Top Assembly's tube. Do not tighten.



Step 2

Insert the protruding part of Left Leg Frame (B) into the ends of Metal Rails (D), fasten with two Short Allen Bolts. Do not tighten.



Assembly Steps

