



Questions about your new *Super Combo?*

	Wash Times	Approx Dry Times
Cycles	Mins	Mins
NORMAL	51	90
Prewash + Heavy	75	120
Heavy	61	120
ECO	31	80
Quick 20	20	80
Delicate	36	80
Wool	36	TUMBLE ONLY NO HEAT
Quiet	31	80
Allergen	59	120
Sanitize	69	120
Winterize	02	NA

DIAGNOSTIC MENU		
Code	Description	Component
E1	Door open	Door Switch
E2	Drain failure	Drain Pump
E3	Water inlet failure	Inlet Valves
E4	Water overfill	Pressure Switch
E5	Motor failure	Motor +Electronic Module
E7	Washing heater failure	Washing heater
E8	Dryer Malfunction	Temp. sensor (@rear-bottom of tub)
E9	Dryer Malfunction	Temp. sensor (@front of heater housing)
E10	Water level failure	Water level sensor
E11	Dryer Malfunction	Temp. sensor (near the blow fan motor)
E12	Dryer Malfunction	Fan Motor
E13	Dryer Malfunction	Drying heater
E16	Communication between display & electronic module	Communication Cable

QUESTIONS / SERVICE

Phone/Text : 1-800-776-3538

www.ApplianceDesk.com

QUICK START GUIDE

INSTALLATION



 
Remove shipping bolts (3) with adjustable wrench



Pull out 3 shipping bolts




Ensure spacer is removed with each shipping bolt (3)

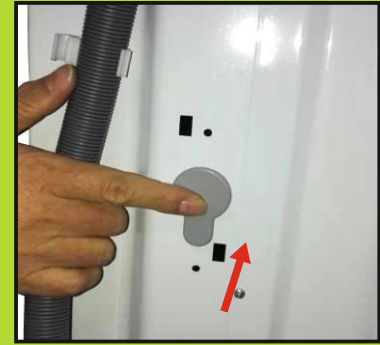

Close the empty space with the blanking plug enclosed

 CONNECTIONS

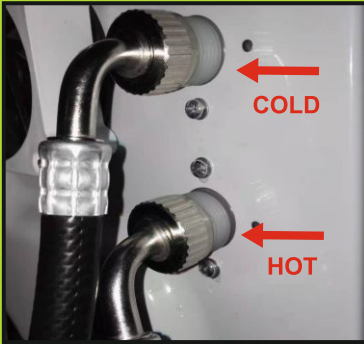


Connect hot & cold water hoses (included)



Insert hose into U-connector and insert into standpipe over sink 24"- 40"



 1. Remove exhaust vent plate
2. Attach 4" vent hose to exhaust fan using vent adapter included (FOR VENT DRY OPTION ONLY)

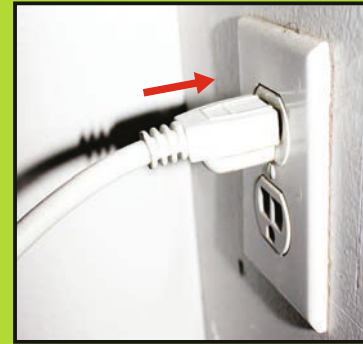

Plug power cord into 110V/60Hz/15A outlet

 
LAUNDRY PREP



Press Venting/Condensing button for 3 seconds to select drying option (One time setup)



Load the machine to a maximum 2/3 full

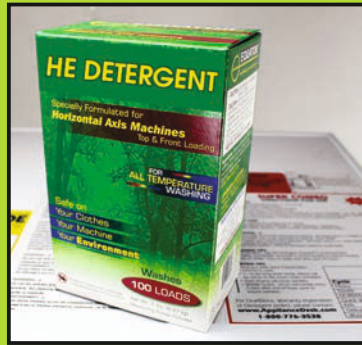

Important:
Use High-Efficiency (HE) Detergent 1 tablespoon



Use liquid fabric softener. Items tumble more freely and dry faster

OPERATIONS



WASH & DRY:
1. Press POWER button
2. Press START
(Default cycle is NORMAL)

 


WASH Only:
1. Press POWER button
2. Press WASH Only
3. Press START
(Default cycle is NORMAL)



DRY Only:
1. Press POWER button
2. Press DRY Only
3. Press START
(Default cycle is NORMAL)

MAINTENANCE

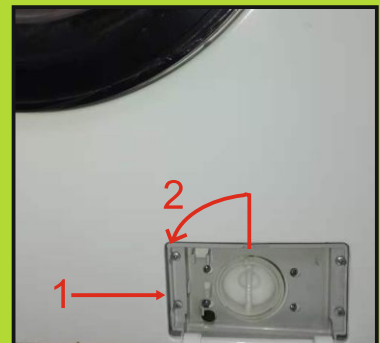

1. Open coin trap door flap
2. Rotate handle counter - clockwise and pull out
3. Clean interior