

Recommended settings to record successfully:

The settings below should allow to record even whispering not from the long distance.

From the main menu, please select "Recordings" and set the following values for the three menu options:

- Recording format: WAV
- Bitrate: 1024kbps
- Mic sensitivity: Grade 7

Main instructions on how to operate X200 recorder:

- 1) To start recording, please press and hold the "REC" button on the front side of the recorder for 2 seconds. When recording has started, you will see the respective screen. To pause/resume recording, please use the "Play/Pause" button located on the right side of the recorder.
- 2) When you want to stop recording and save the recorded file, please press and hold the "REC" button on the front side of the recorder for 2 seconds. You will see "Saved!" prompt.
- 3) To see all the saved recordings, please select the "Recordings" option from the main menu using the "Next"/"Previous" buttons, to confirm the selection press "Play/Pause" button. Now, please select the "Recordings library" option and confirm the selection by pressing the "Play/Pause" button.
- 4) To play the recording, please select the required one using the "Next"/"Previous" buttons and press the "Play/Pause" button.
- 5) To delete only one recording, go to "Recordings" => "Recordings library", select the file to be deleted and start to play it. When played, please press and hold the "Play/Pause" button on the right side of the recorder for 1 second. Select "Delete" and confirm the selection using the "Play/Pause" button.
- 6) To erase all the recordings, go to "Recordings" => "Recordings library", select any file and start to play it. When played, please press and hold the "Play/Pause" button on the right side of the recorder for 1 second. Select "Delete all" and confirm the selection using the "Play/Pause" button. This was all the rest data (like document, photos, etc.) stored on the recorder will be saved.
- 7) To delete all the files from the recorder, please select the "Settings" option from the main menu using the "Next"/"Previous" buttons, to confirm the selection press the "Play/Pause" button. Scroll down to the "Format device" option and confirm the selection by pressing the "Play/Pause" button. You will see a prompt: Format device? You need to select "Yes". All the files will be deleted.
- 8) To enable the Voice Activated mode, please go to "Recordings" => "VOR Mode" => "VOR Mode On/Off" and select VOR On. The VOR Sensitivity option defines the minimum level of dB required to start recording (0 is the less sensitive level and 7 is the most sensitive). The VOR Delay option sets the length of time for which the external sound is continuously recognized as a condition to start the recording in VOR mode.