




9 In. LED Hanging Grow Reflector

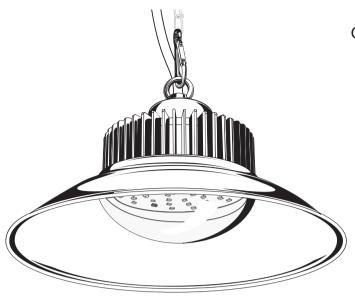



PACKAGE CONTENTS

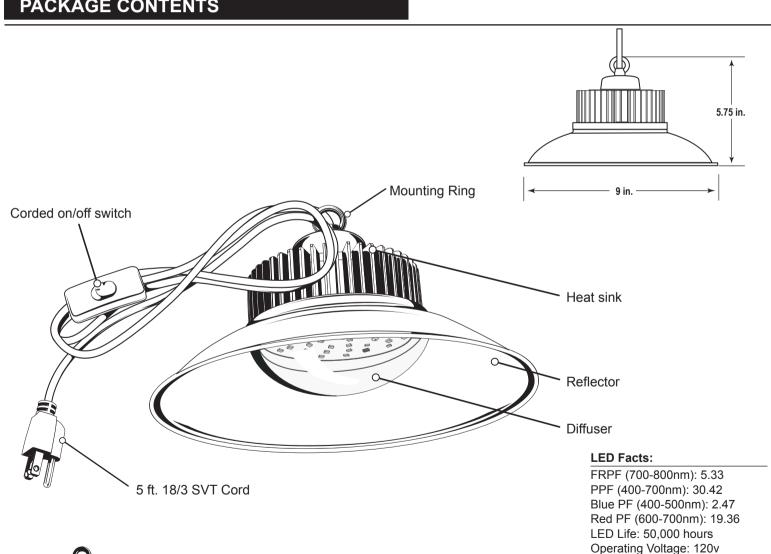

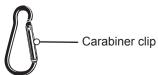

Operating Voltage: 120v Cord Type: .18/3 SVT Cord Length: 5 ft.

This fixture is rated for damp locations.



WARNING: TO AVOID ELECTRIC SHOCK, DISCONNECT POWER BEFORE INSTALLING

WARNING: This product may represent a possible shock or fire hazard if improperly installed or mounted. Products should be installed following these instructions, local electrical codes and/or the current National Electric Code (NEC).



WARNING: DO NOT alter or disassemble the fixture it is completely enclosed and does not contain replaceable or serviceable parts.

WARNING: Before installation, plug in fixture to a 120v, 60Hz electrical outlet to check for proper operation. Then, unplug and begin the installation.

A

WARNING: BURN HAZARD! Light fixture is hot, allow cooling time before touching.

CAUTION: Personal injury can occur, along with damage to the fixture and/or mounting surface may result if the fixture is pulled from the surface. To prevent premature failure from overheating, fixture should only be installed in environments where the operating temperatures are between -4° to 104°F (-20° to 40° C).

A

WARNING: Do **NOT** look directly at LED light sources.

WARNING: This product has a grounded plug (two contact blades and a grounding prong) as a feature to reduce the risk of electric shock. The plug is fashioned to only fit in a grounded outlet one way. If it does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. DO NOT ALTER THE PLUG OR CORD.

A

WARNING: Use only in 120v, 60Hz circuits.



WARNING: This product is not wateproof.

SAFETY AND PRECAUTIONS

- Shut off power to electrical outlet before installing or servicing this fixture.
 - 1. Suitable for damp location use.
 - 2. Do NOT install over stoves.
 - 3. Do NOT look directly at LED light sources.
 - 4. The LED modules used in this fixture are not serviceable.
 - 5. This product is inspected prior to shipping. Do not use if product is cracked, broken or missing parts.
 - 6. Suitable for use in operating environments ranging between -4° to 104°F (-20° to 40° C).
 - 7. Electrical requirements can be found on back of the fixture.
 - 8. Do not mount where fixture may come in contact with water.

ADDITIONAL WARNINGS

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The user is cautioned that any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) Reorient or relocate the receiving antenna. 2) Increase the separation between the equipment and receiver. 3) Connect the equipment into an outlet on a circuit different from that of the receiver. 4) Consult the dealer or an experienced radio/TV technician for help.

DIMMING


DO NOT USE THIS FIXTURE WITH DIMMERS.
 Doing so will void the warranty of this product.

INSTALLATION INSTRUCTIONS

Install the fixture before plugging it into an electrical outlet. Be sure to locate fixture within 5 ft. of the power supply.

Install the fixture between 12 in. to 39 in. above the top of the plants (Fig. 1).

Set the height of the grow light so the center of the light shining down does not create a "hot spot", the light will be too focused on a specific area and may decrease the light absorption in the plants at the perimeter of the coverage area.

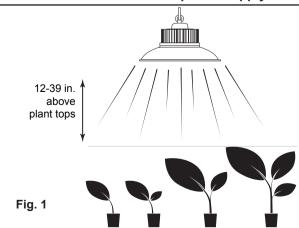



INSTALLATION INSTRUCTIONS


Install the fixture before plugging it into an electrical outlet.

2. To mount the light, hook the light onto the structure or hardware it will be attached to or hang the fixture with the included carabiner clip. The carabiner clip is equipped with a spring loaded locking gate that closes after it is attached to the mounting ring and/or hardware to suspend the light is positioned past the gate.

For demonstration purposes, the light will be supported by a hanging chain (not included). How to secure the chain to structure located above the light will not be covered in these instructions. The chain loop is pushed through the gate and onto the carabiner clip (Fig. 2). The carabiner clip is attached to the mounting ring (Fig. 3). Be sure the weight of the light is supported by the mounting hardware and not the cord (Fig. 4).

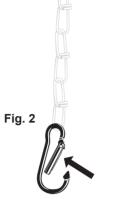


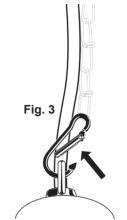

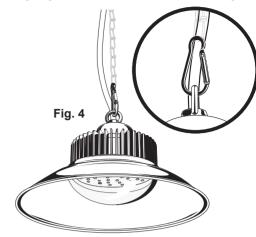


RECOMMENDED

It is recommended the power cord be secured to the hanging support with cable ties (not included) (Fig. 5).

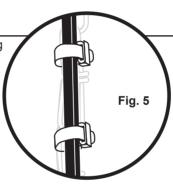



3. Installation is now complete. Remove plug cover (Fig. 6). Plug the fixture in.

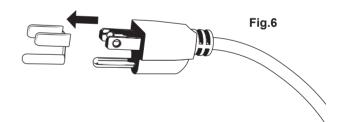

OPERATION

1. Press the side of the rocker switch marked with "I" to turn the light on (Fig 7). Press the other side to shut off the light (Fig 8).

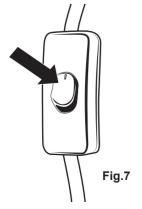

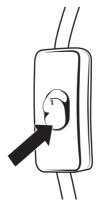

CLEANING INSTRUCTIONS

Disconnect power to fixture before cleaning. Using a soft cloth, clean the fixture using a mild, non-abrasive glass cleaner. DO NOT use solvents. DO NOT use cleaners containing abrasive agents. NEVER spray liquid cleaner directly onto the LEDs, fixture or wiring.

TROUBLESHOOTING GUIDE

Before starting work to connect the fixture, shut off power supply at the circuit breaker panel to avoid electrical shock.

Problem	Probable Cause	Solution
Fixture does not turn on.	 Faulty switch. Power is off. 	 Test switch or replace it. Verify power supply is on.
Circuit breaker trips or fuse blows when light is turned on.	Discontinue use immediately.	1. Call an electrician.

3 YEAR LIMITED WARRANTY

This product is guaranteed against failure due to factory defects in materials or workmanship for three (3) years from the date of purchase. This warranty is non-transferable and applies only to the original owner. Proof of purchase is required for repair or replacement. This warranty does not cover normal wear of parts or damage resulting from any misuse of the product. Misuse of the product includes, but is not limited to: washing the product, using in extreme weather conditions, opening the product, or trying to remodel the product. Important: this warranty is only valid if the product has been purchased through an authorized reseller. Returns and/or warranty replacements must be processed at the original place of purchase.

USTOMER SERVICE

For questions regarding this product, please e-mail us at info@stonepointledlighting.com.