



# Dog Cage

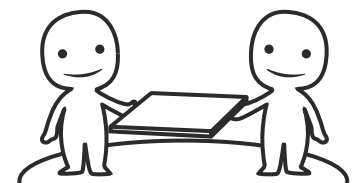


ASSEMBLED BY 2 ADULTS

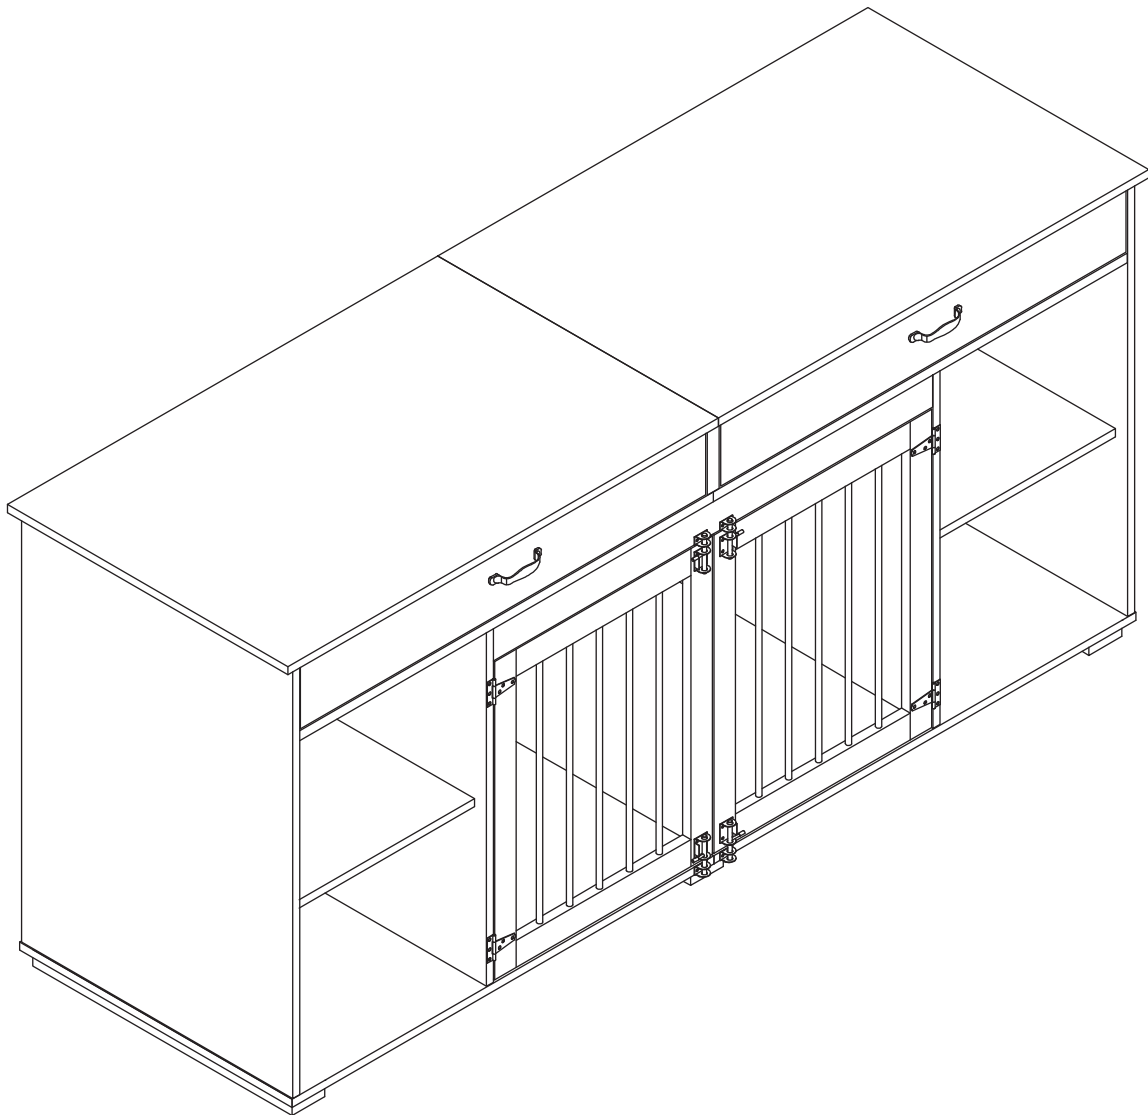

### **IMPORTANT INFORMATION!**

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

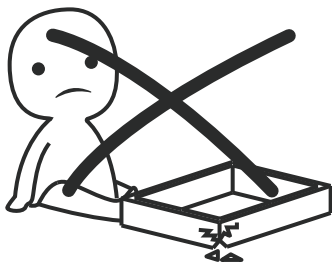



### **AVOID SCRATCHES!**

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.



### **IMPROVE EFFICIENCY !**

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

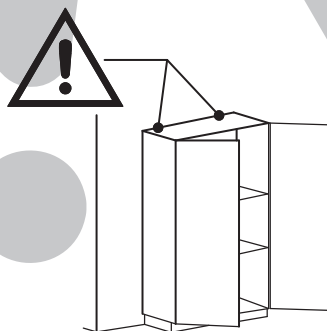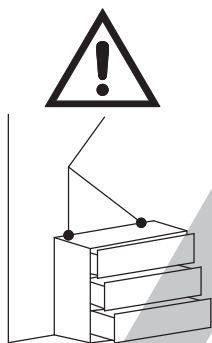

### **ANTI-TOPPLE WARNING !**


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

### **IMPORTANT !**



It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

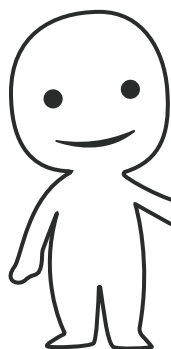


Please prepare the following tools

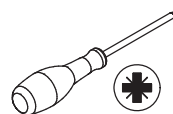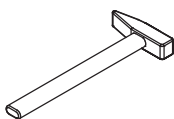

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

|                                      |                                     |                                     |                                      |                                    |
|--------------------------------------|-------------------------------------|-------------------------------------|--------------------------------------|------------------------------------|
| <p>A x 6 0 +6</p> <p>Ø 6 x 35 mm</p> | <p>B x 56+4</p> <p>Ø 15 x 12 mm</p> | <p>C x 4+2</p> <p>Ø 15 x 9.5 mm</p> | <p>D x 4 2 +5</p> <p>Ø 6 x 30 mm</p> | <p>E x 16+6</p> <p>Ø 3 x 14 mm</p> |
| <p>F x 1</p> <p>Ø 4 x 20 mm</p>      | <p>G x 12</p> <p>Ø 4 x 40 mm</p>    | <p>H x 2 2</p> <p>Ø 6 x 35 mm</p>   | <p>J x 2</p> <p>Ø 4 x 22 mm</p>      | <p>K x 4</p> <p>Ø 6 x 10 mm</p>    |
| <p>L x 2</p> <p>350 mm</p>           | <p>M x 2</p> <p>350 mm</p>          | <p>N x 52</p> <p>Ø 20 mm</p>        | <p>P x 4</p> <p>Ø 6 x 40 mm</p>      | <p>Q x 20</p> <p>Ø 3 x 16 mm</p>   |
| <p>R x 4</p> <p>Ø 3.5 x 14 mm</p>    | <p>S x 1</p>                        | <p>T x 4</p> <p>Ø 3.5 x 14 mm</p>   | <p>U x 6</p> <p>Ø 25 mm</p>          |                                    |

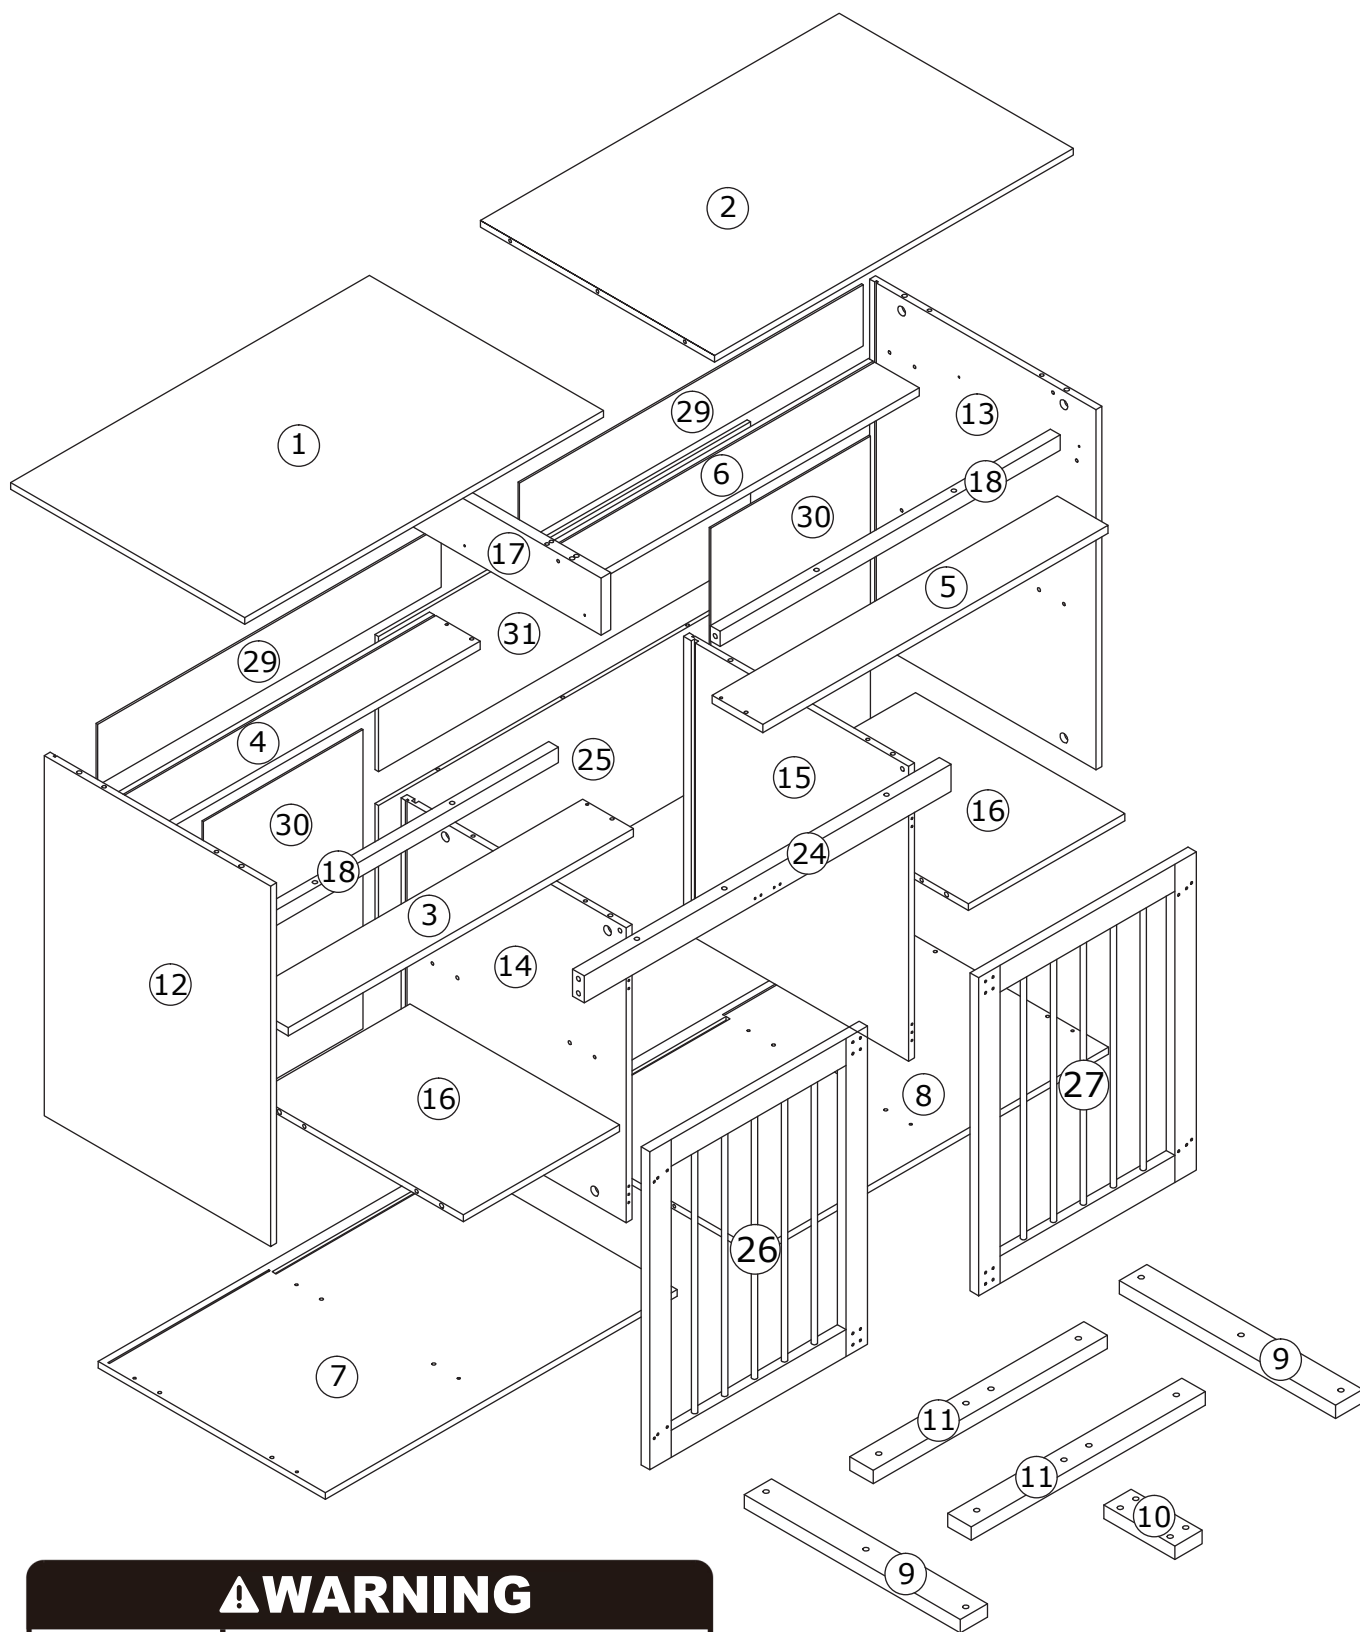


## ⚠ WARNING



**Children have died from furniture tipover. To reduce the risk of furniture tipover:**

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.


*This is a permanent label.  
Do not remove!*

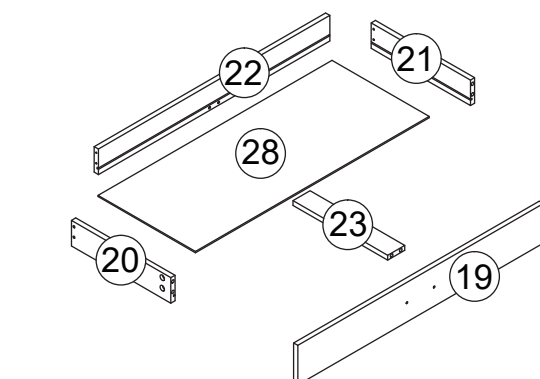




x2

# 1


D x 4

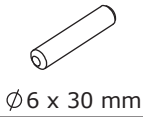


H x 18

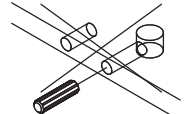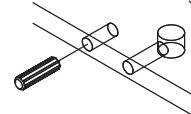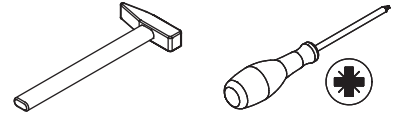


Connect board 8 to board 7  
using wooden dowel(D) at first.  
Fix board 9, 10 and 11 to board  
7 and 8 with screw(H) as shown.

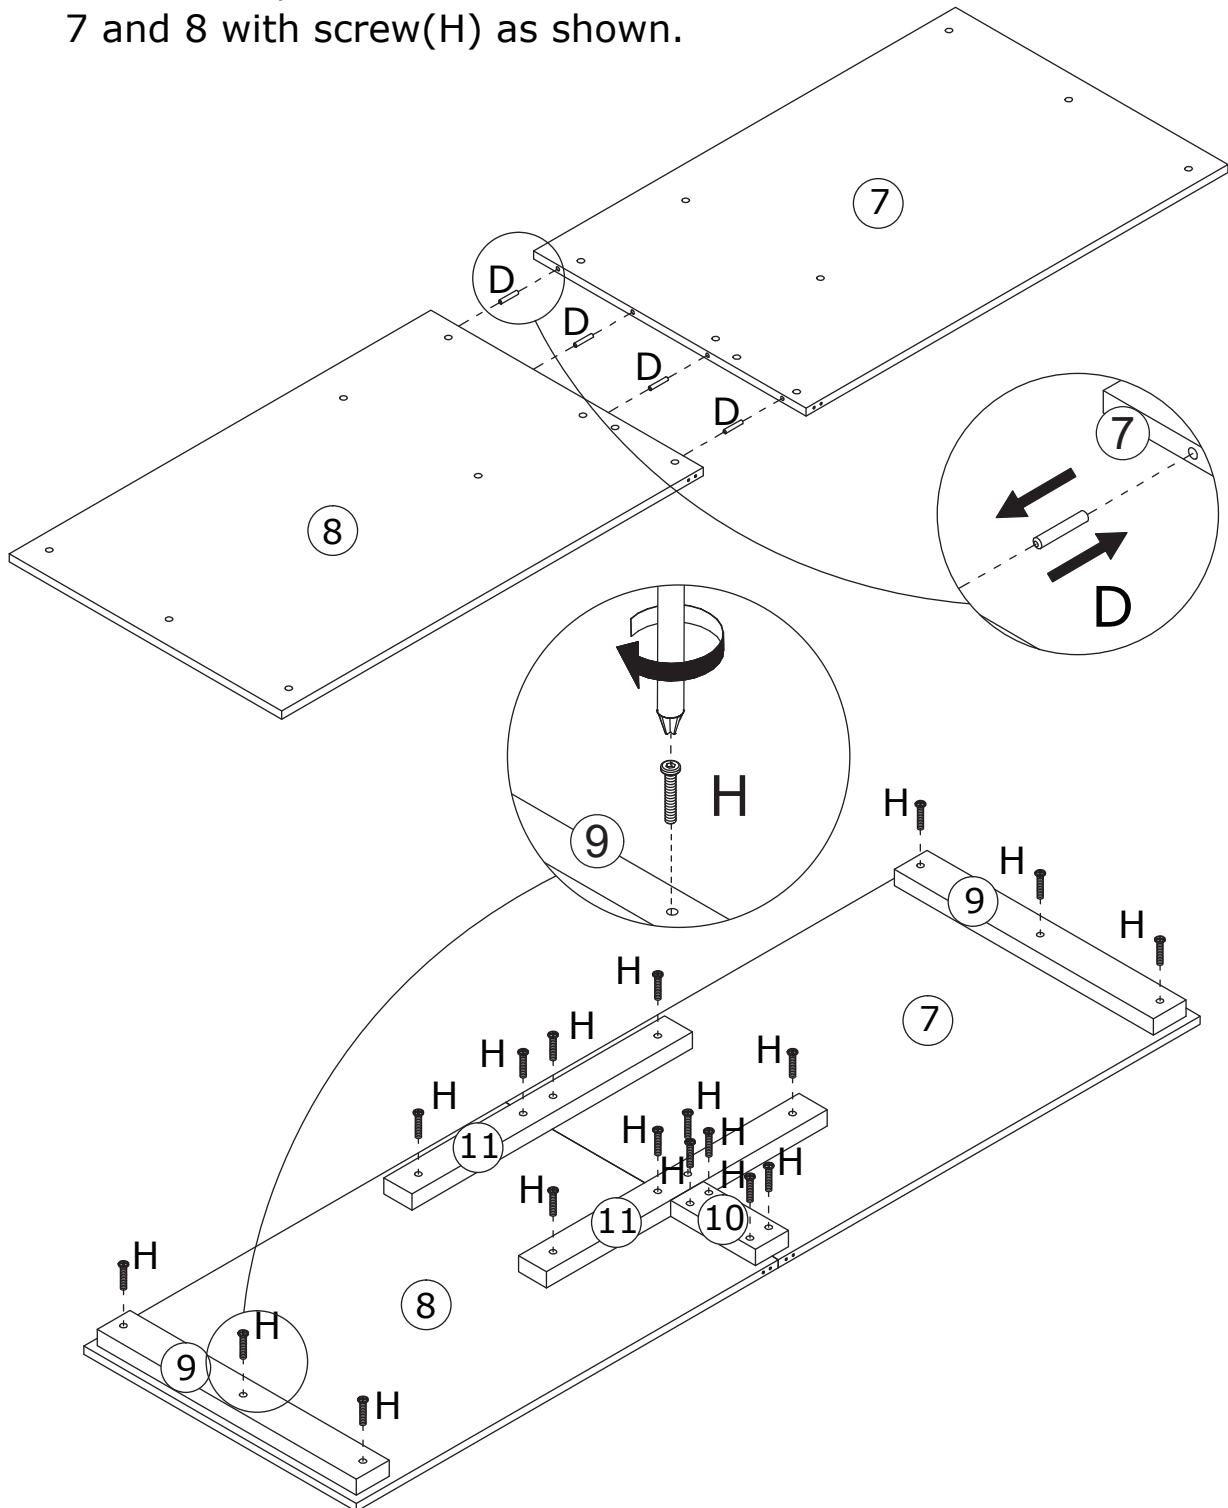

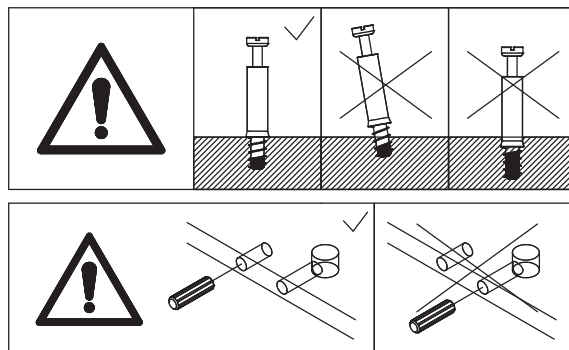





2




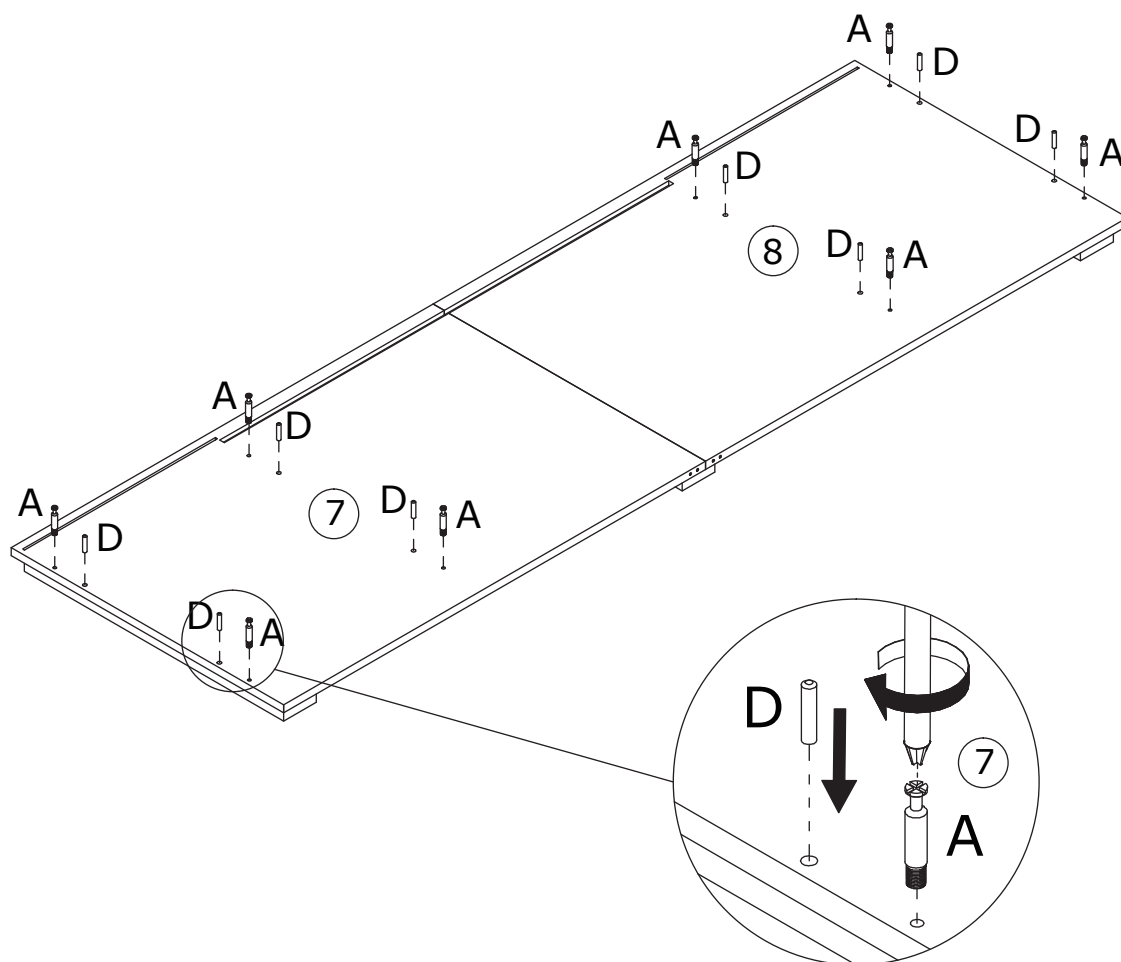


Screw eccentric rod(A) and insert wooden dowel(D) into board 7 and 8 as shown.

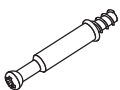


# 3
 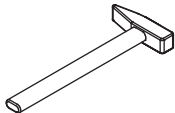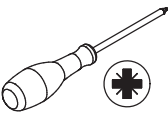
|   |   |   |  |   |
|---|---|---|--|---|
| <p>A x 4</p>  <p>Ø 6 x 35 mm</p> | <p>D x 4</p>  <p>Ø 6 x 30 mm</p> | <p>F x 1</p>  <p>Ø 4 x 20 mm</p> | <p>S x 1</p>  |   |
|---|---|---|--|---|

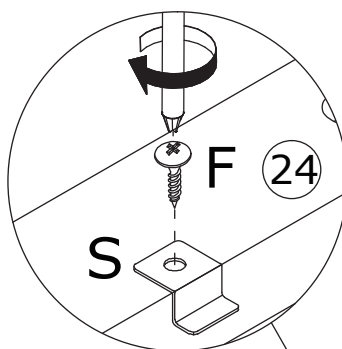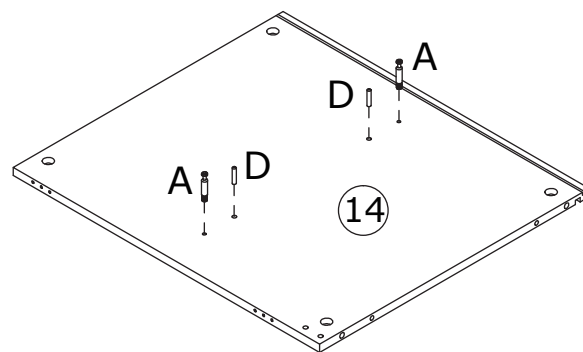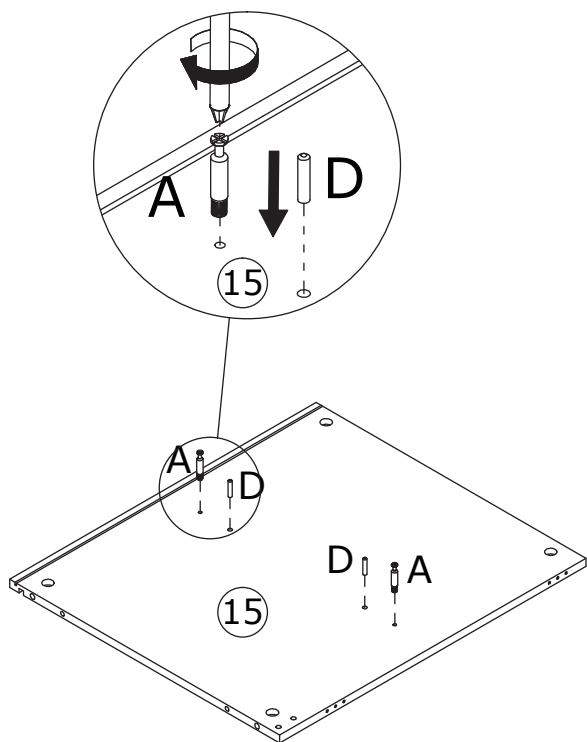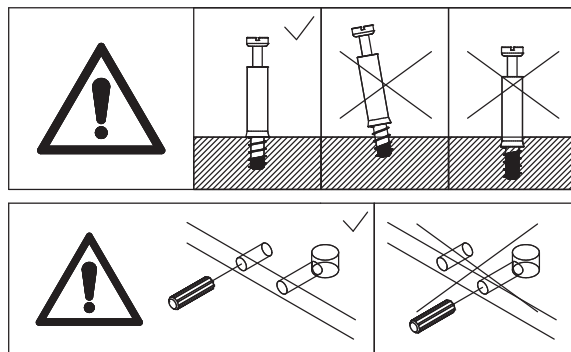

Screw eccentric rod(A) and insert wooden dowel(D) into board 14 and 15 as shown. Fix iron sheet(S) to board 24 with screw(F) as shown.

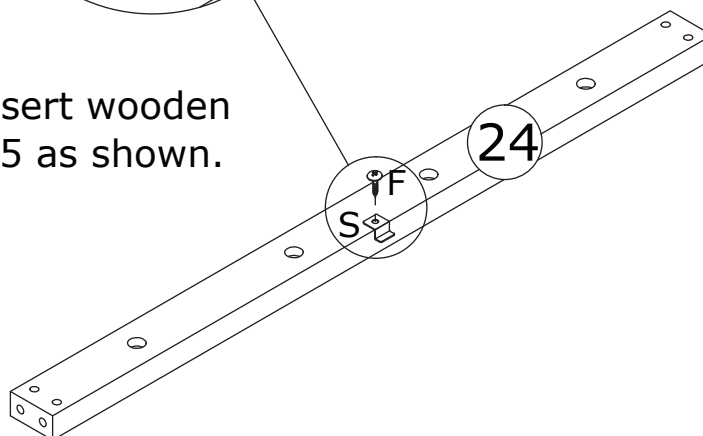

4

P x 4




Ø6 x 40 mm


K x 4



Ø6 x 10 mm

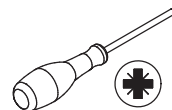

Add nut(K) into board 24 at first.  
Fix board 14 and 15 to board 24  
with screw(P) as shown.


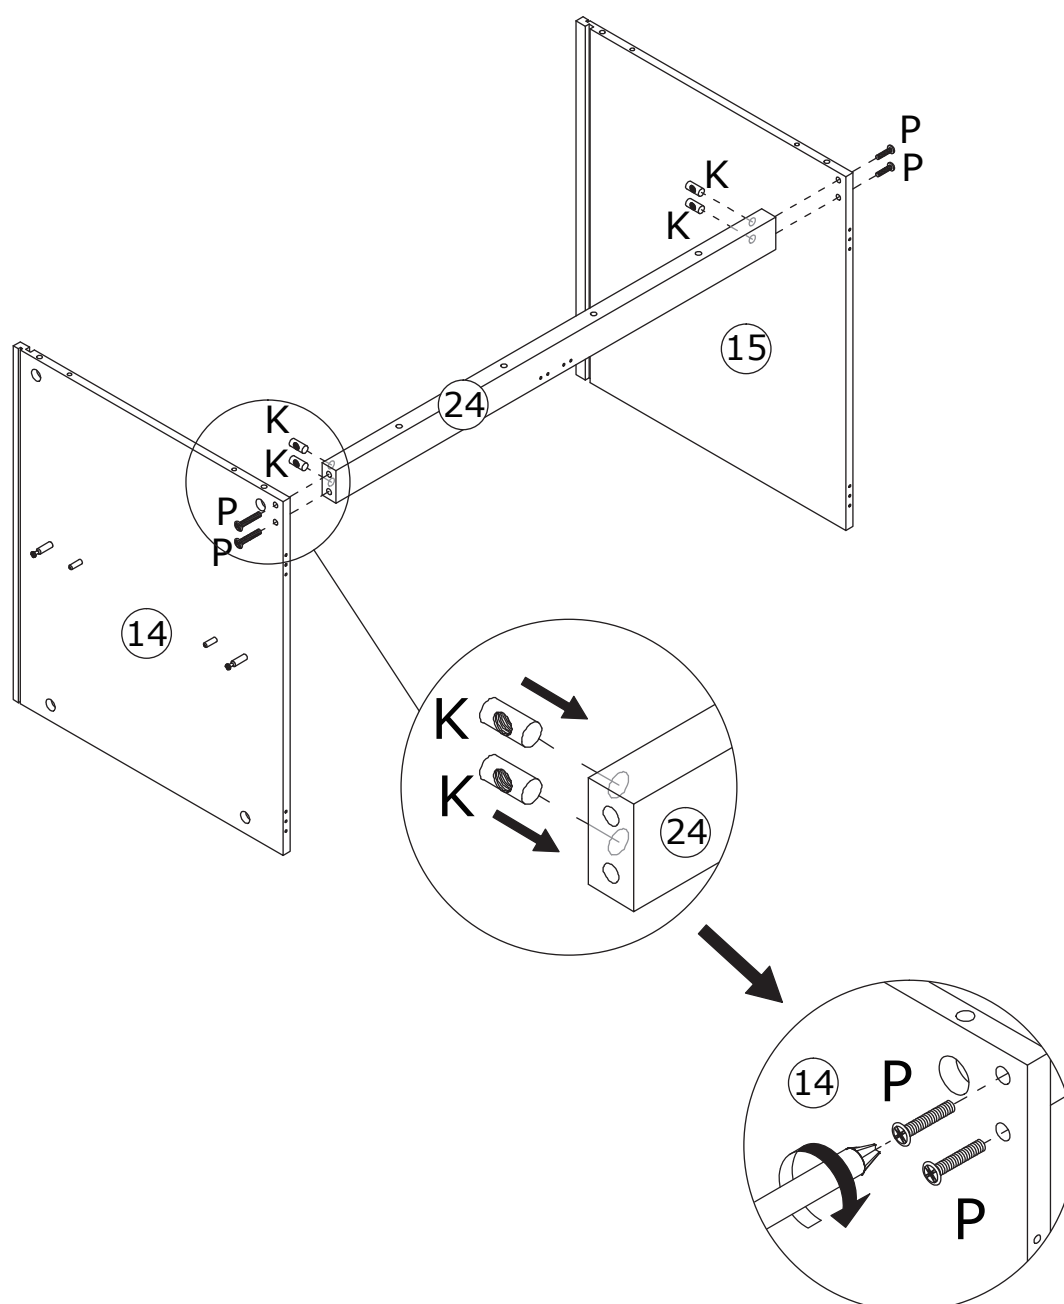


5


B x 4







Ø 15 x 12 mm

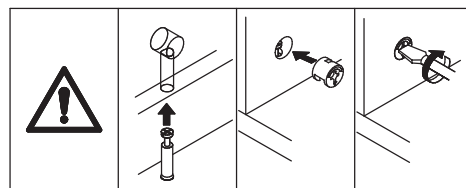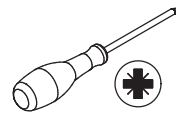

Attach board 14 and 15 to board 7,  
add cam lock(B) into board 14, 15  
and turn clockwise to tighten as shown.

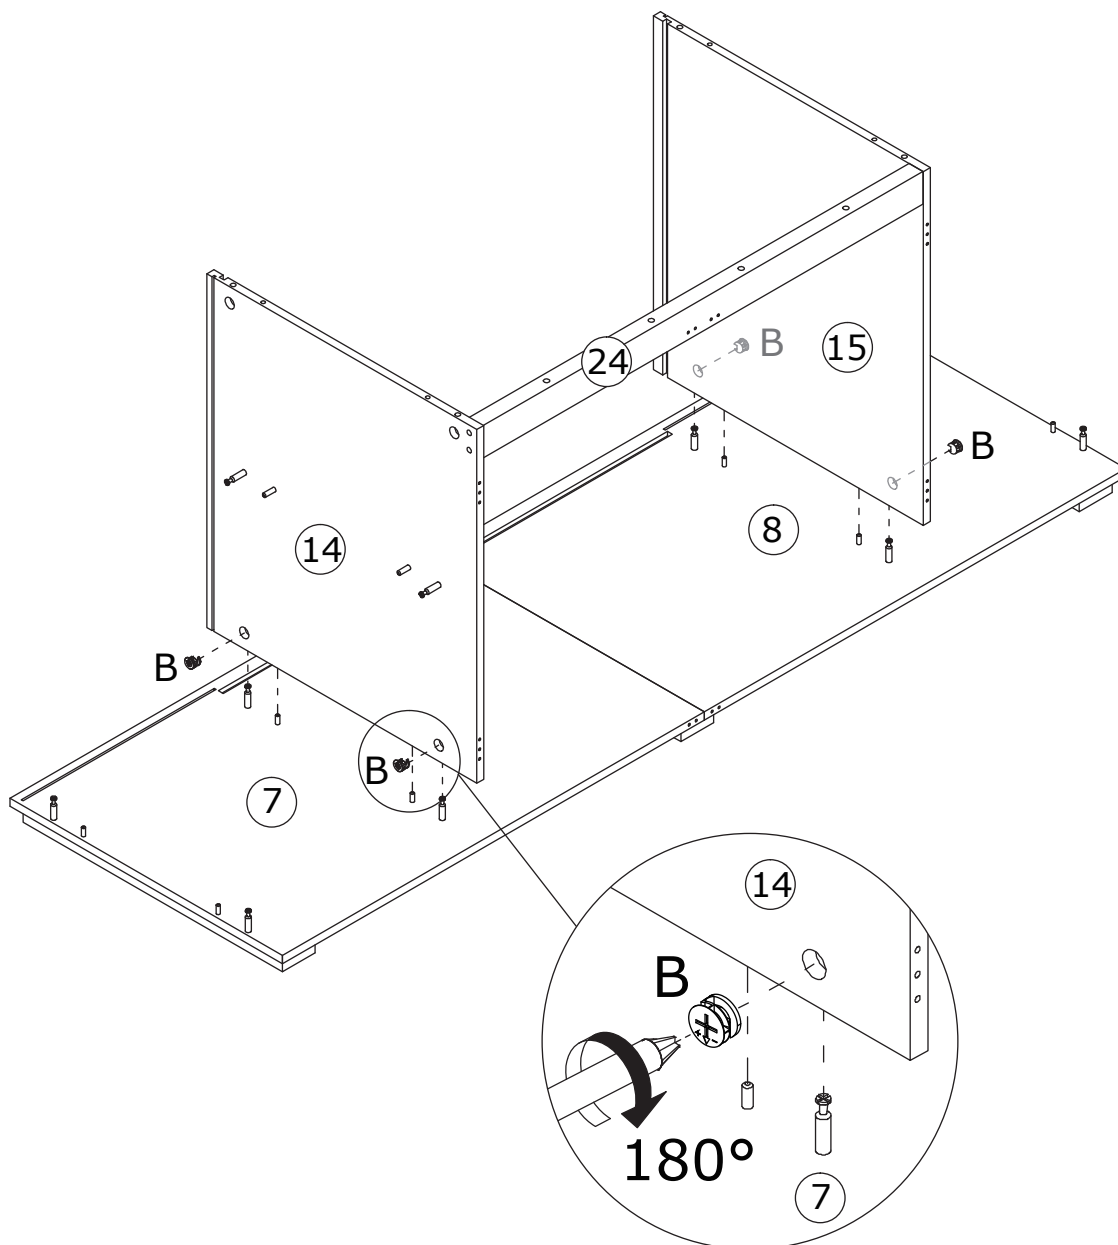


6

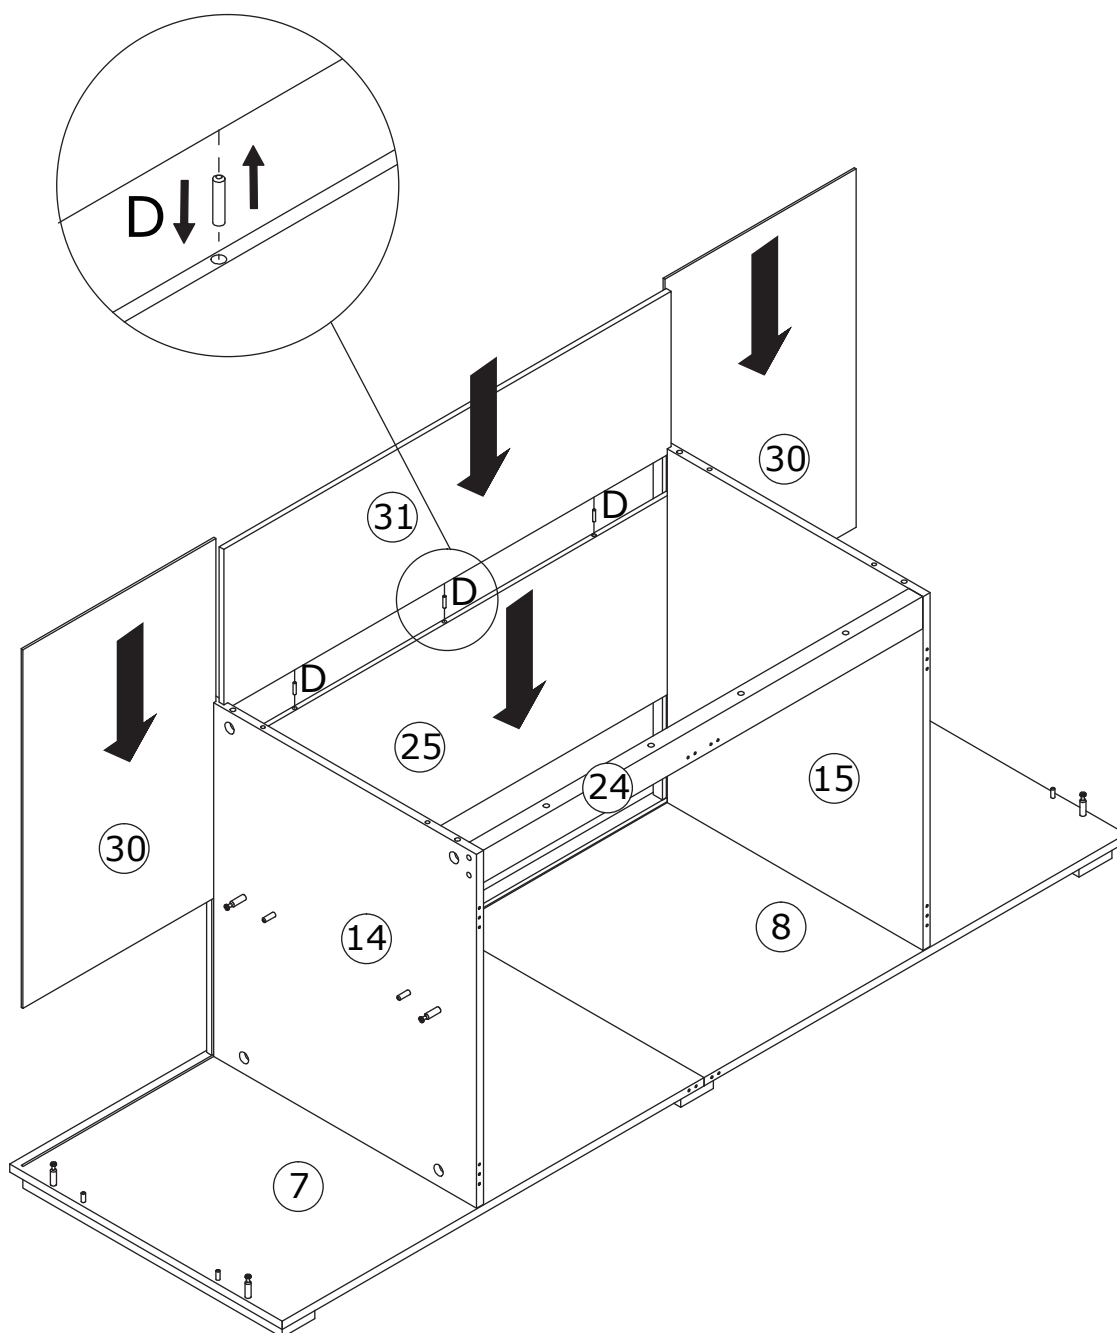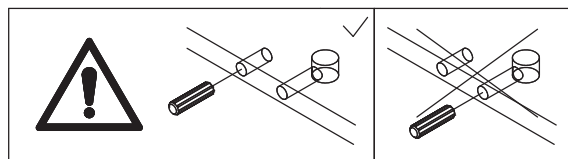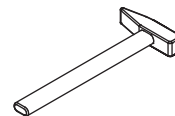
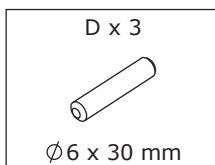


Connect board 31 to board 25 using wooden dowel(D) at first.  
Insert back board 30, 31 and 25 along available grooves as shown.




7

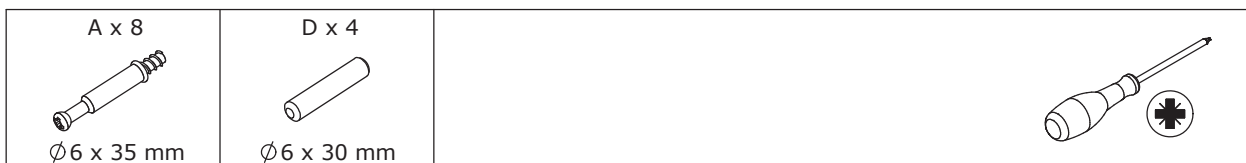


Screw eccentric rod(A) and insert wooden dowel(D) into board 3, 4, 5 and 6 as shown.

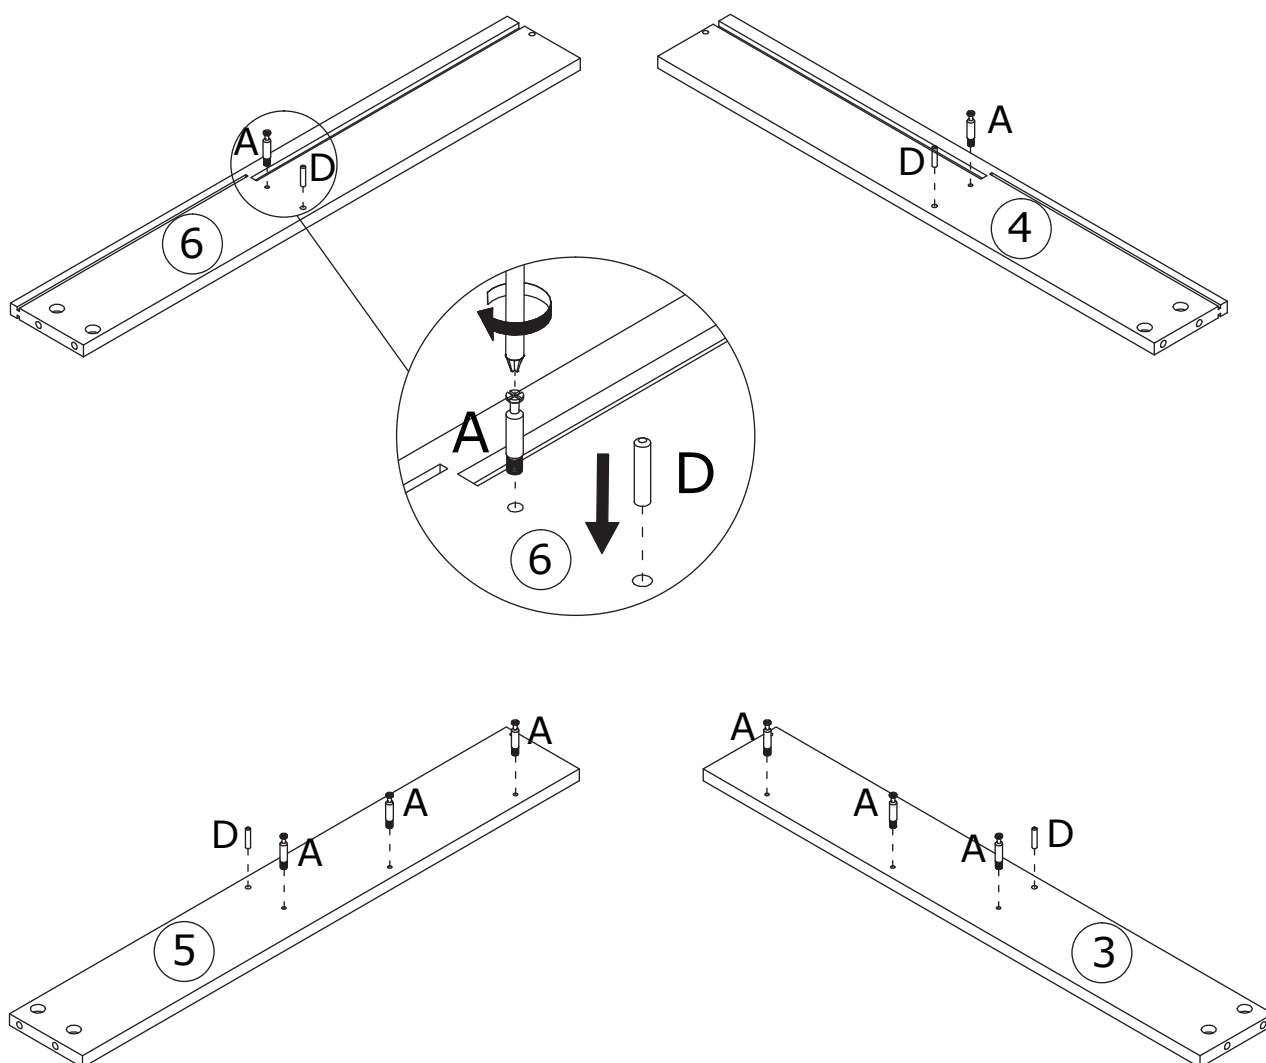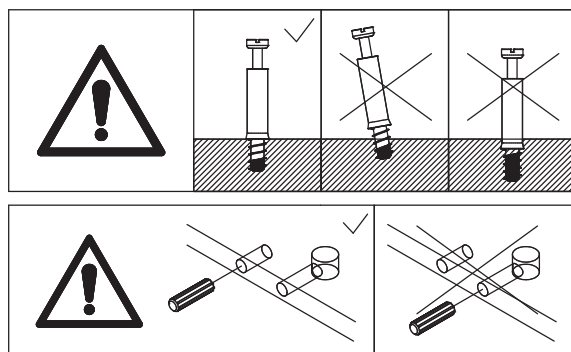


8

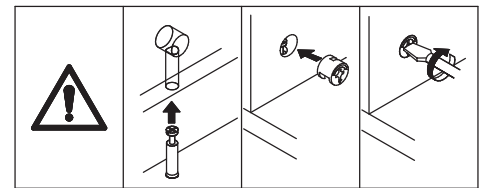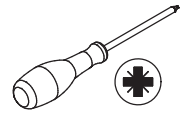
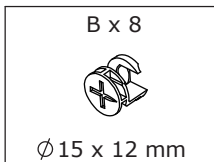


Attach board 4 and 6 to board 14 and 15, add cam lock(B) into board 14,15 and turn clockwise to tighten as shown.  
Attach board 3 and 5 to board 14, 24 and 15, add cam lock(B) into board 14,24,15 and turn clockwise to tighten as shown.

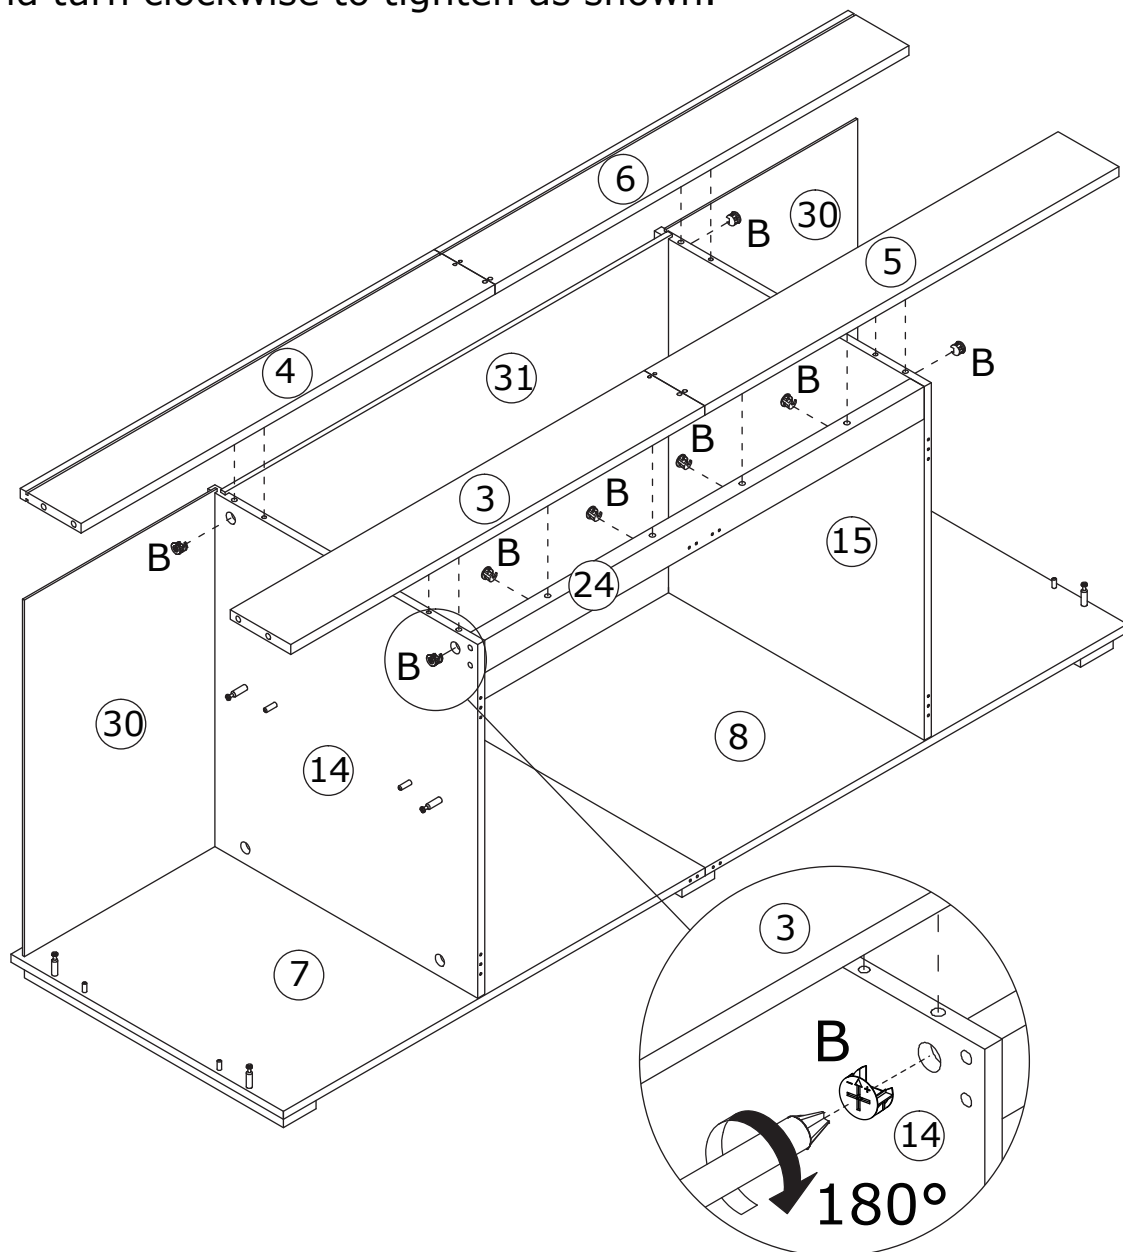


9

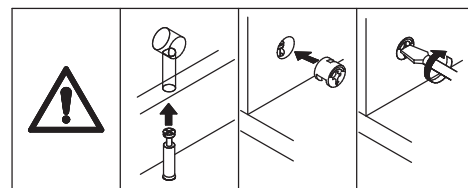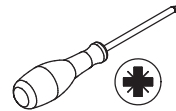






B x 4  
  
 Ø 15 x 12 mm

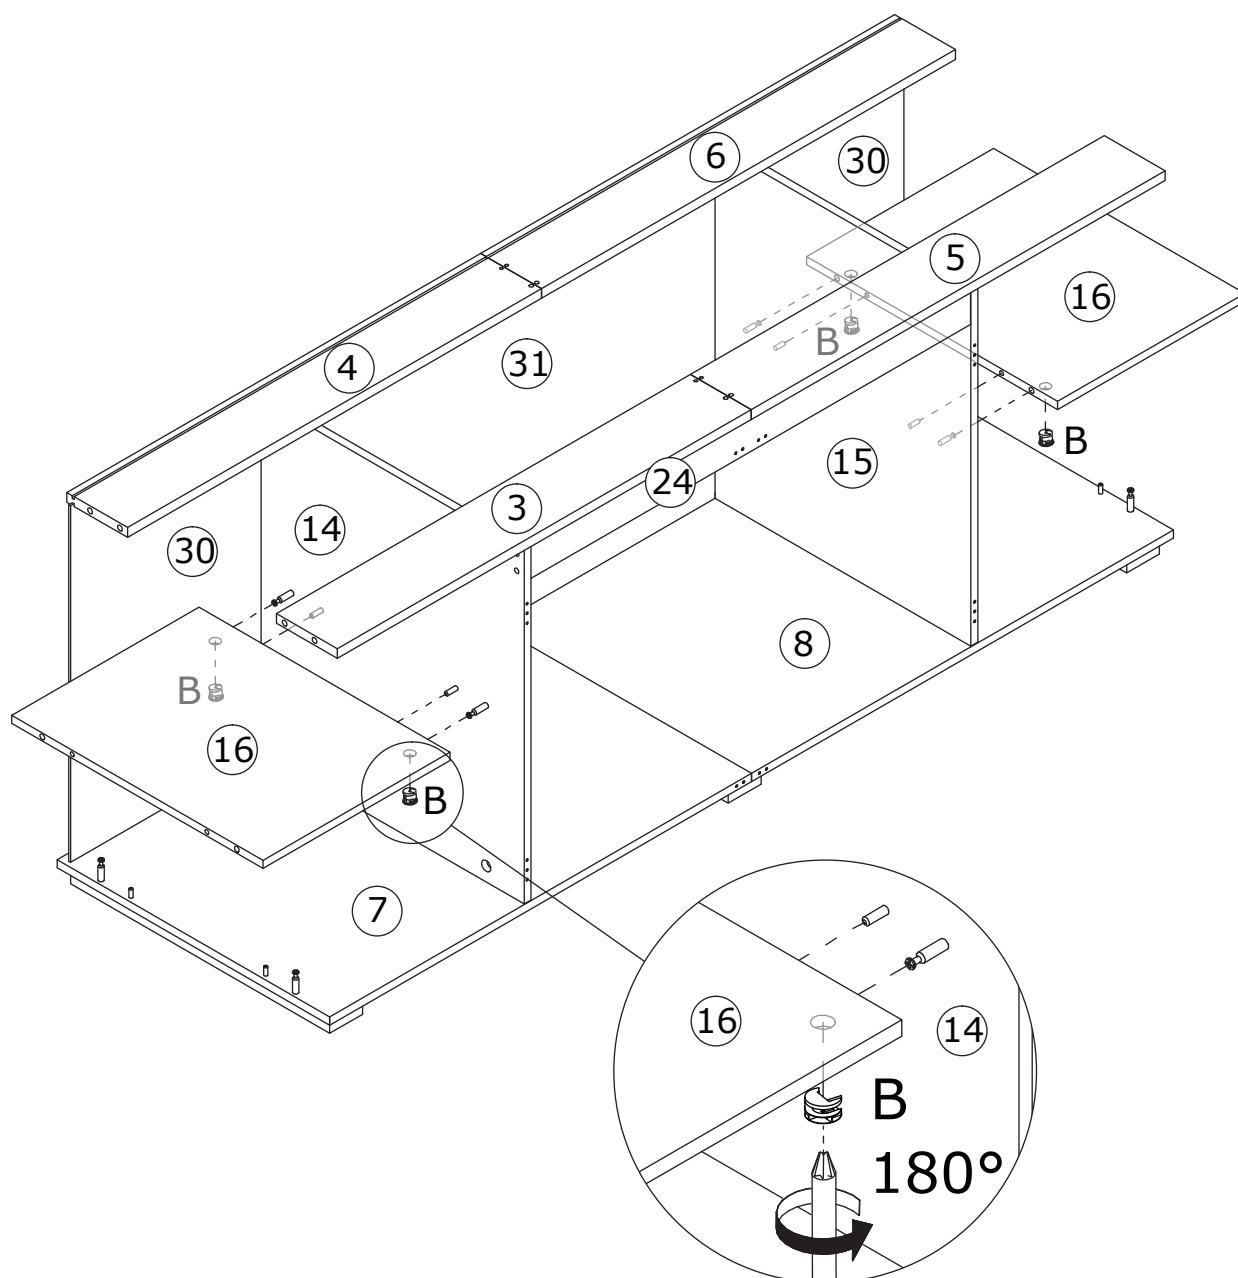





Attach board 16 to board 14 and 15,  
 add cam lock(B) into board 16 and  
 turn clockwise to tighten as shown.

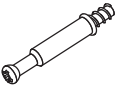

# 10

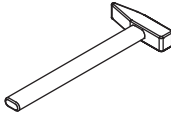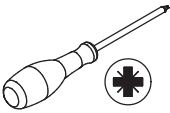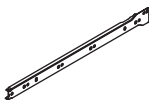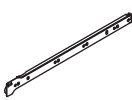
|   |  |  |   |
|---|--|--|---|
| <p>A x 16</p>  <p>Ø6 x 35 mm</p> | <p>D x 4</p>  <p>Ø6 x 30 mm</p> | <p>E x 8</p>  <p>Ø3 x 14 mm</p> |   |
| <p>L x 2</p>  <p>350 mm</p>      | <p>M x 2</p>  <p>350 mm</p>     |  |   |

Fix rail(L) and (M) to board 12 and 13 respectively with screw(E) , screw eccentric rod(A) and insert wooden dowel(D) into as shown.

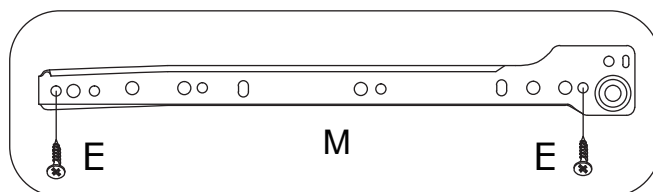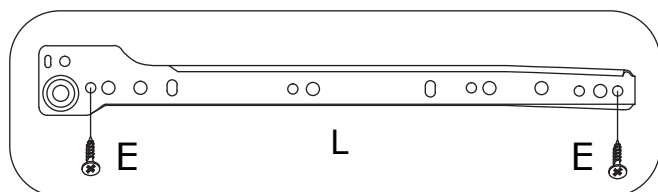
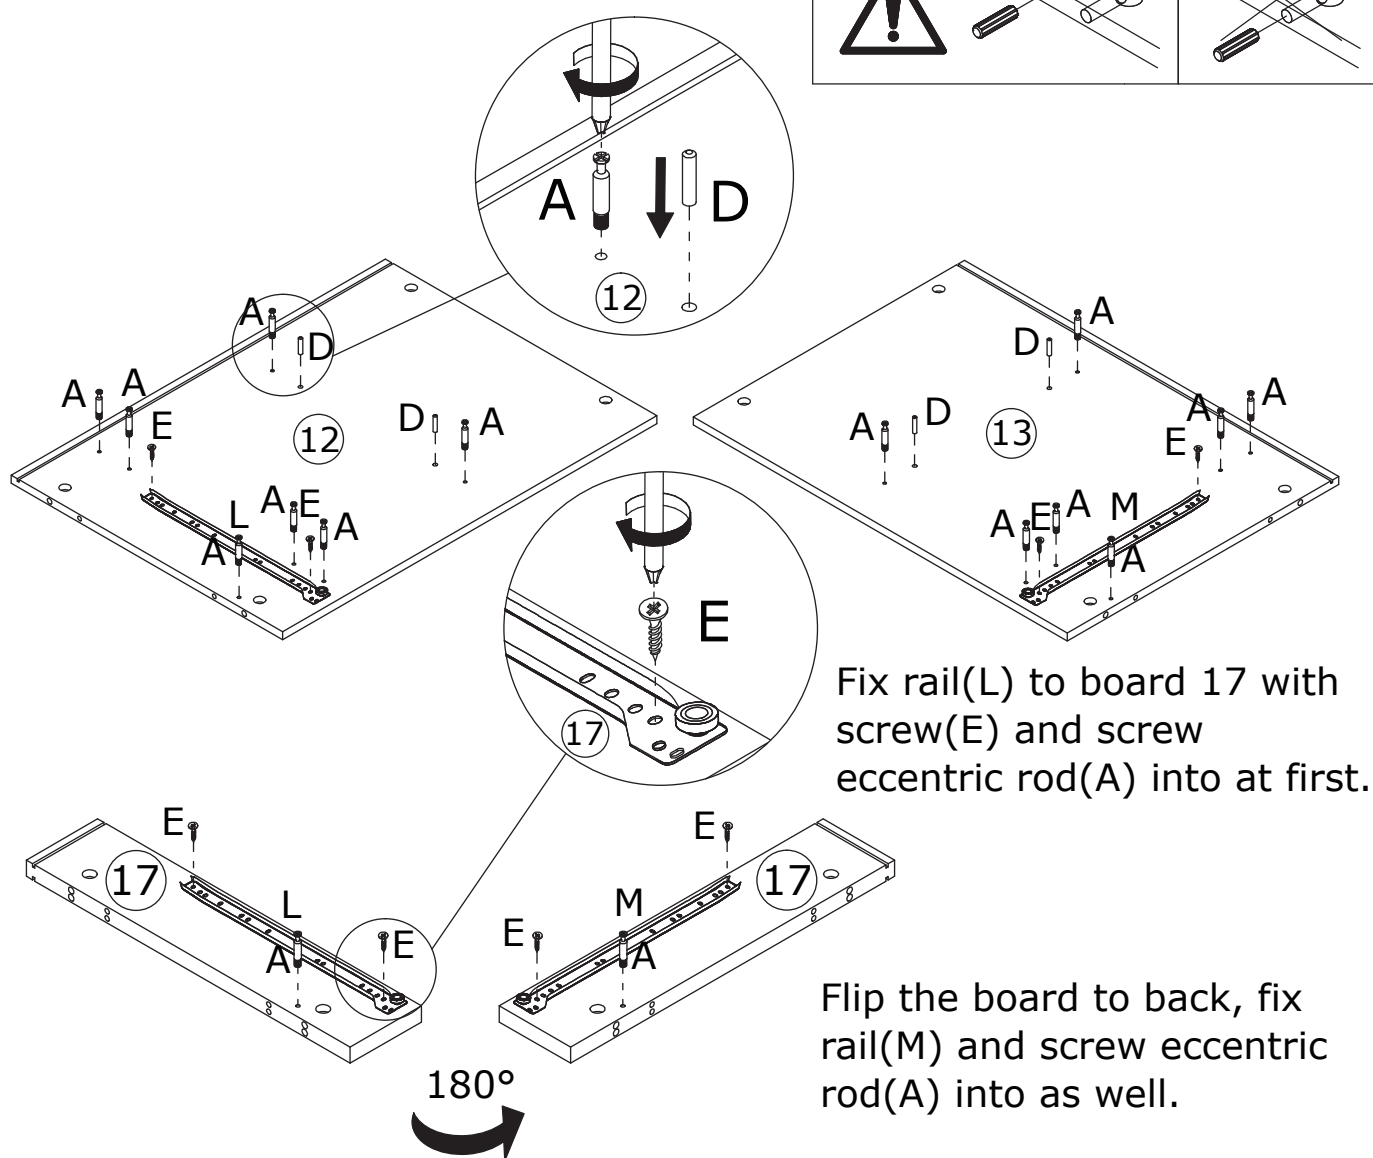
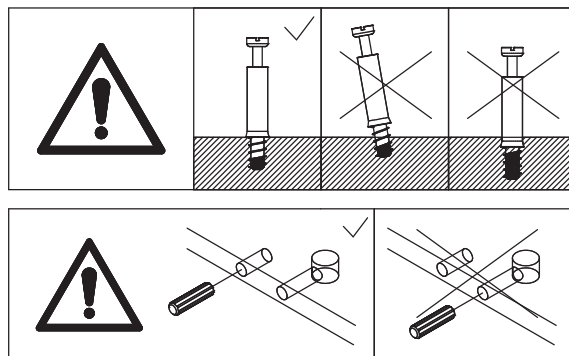


# 11


D x 4

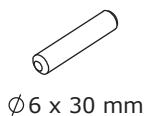

G x 4

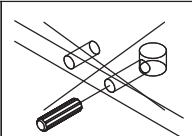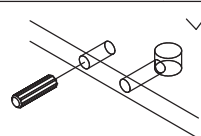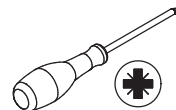

Attach board 17 to board 3, 5, 4 and 6 using wooden dowel(D), and fix with screw(G) as shown.

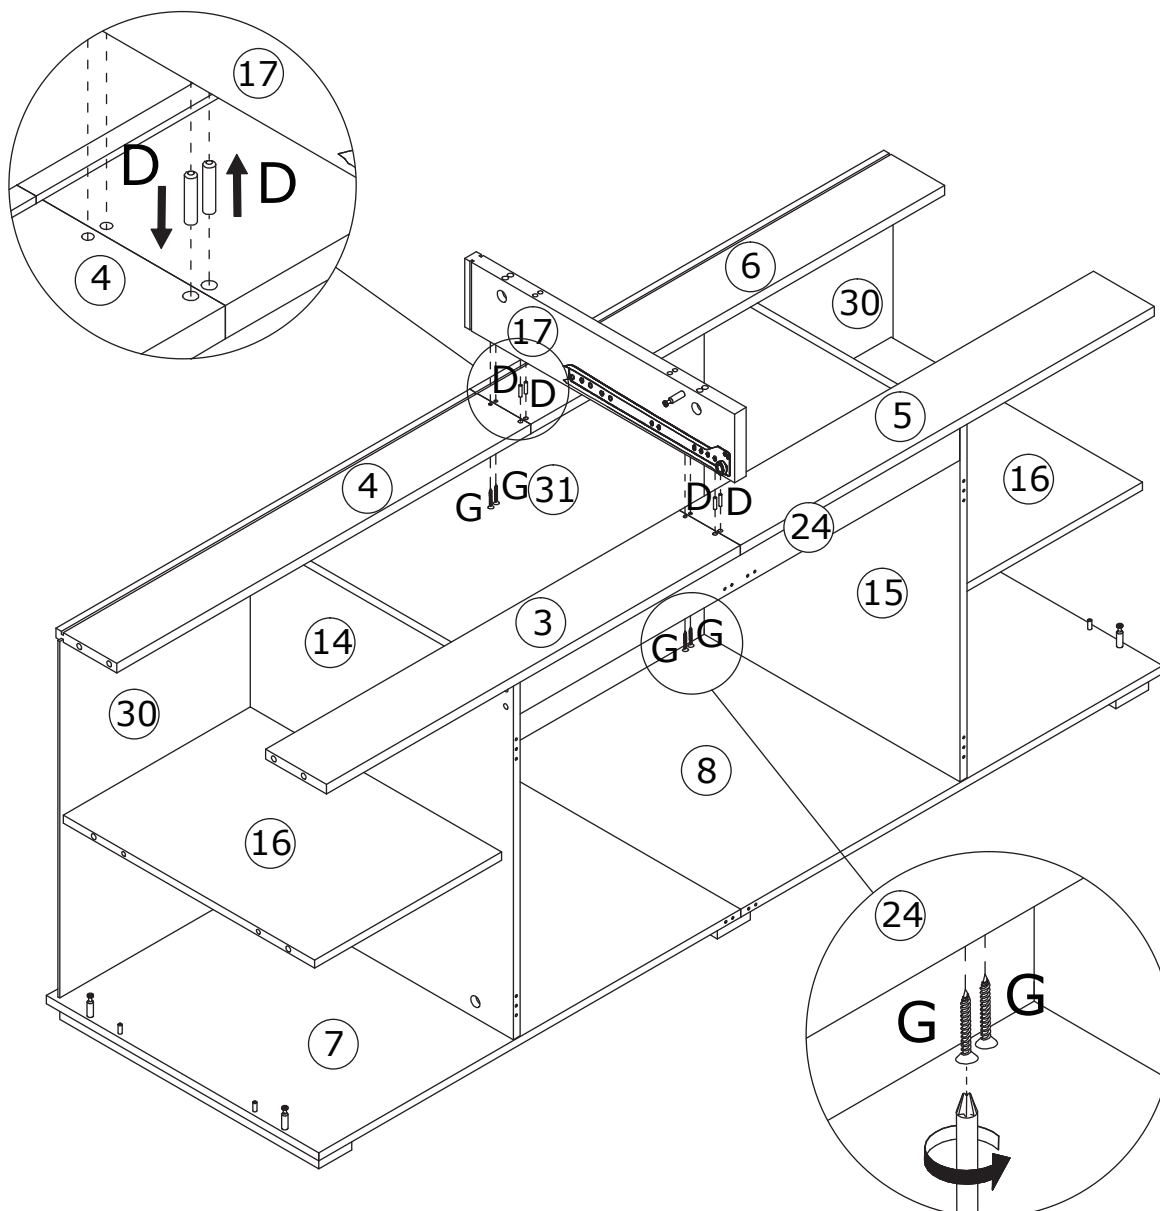


# 12


B x 2




Ø 15 x 12 mm

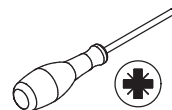



Attach board 18 to board 17, add cam lock(B) into board 18 and turn clockwise to tighten as shown.

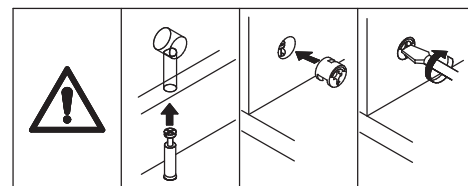

Big hole facing downwards

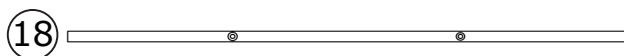

Small hole facing upwards

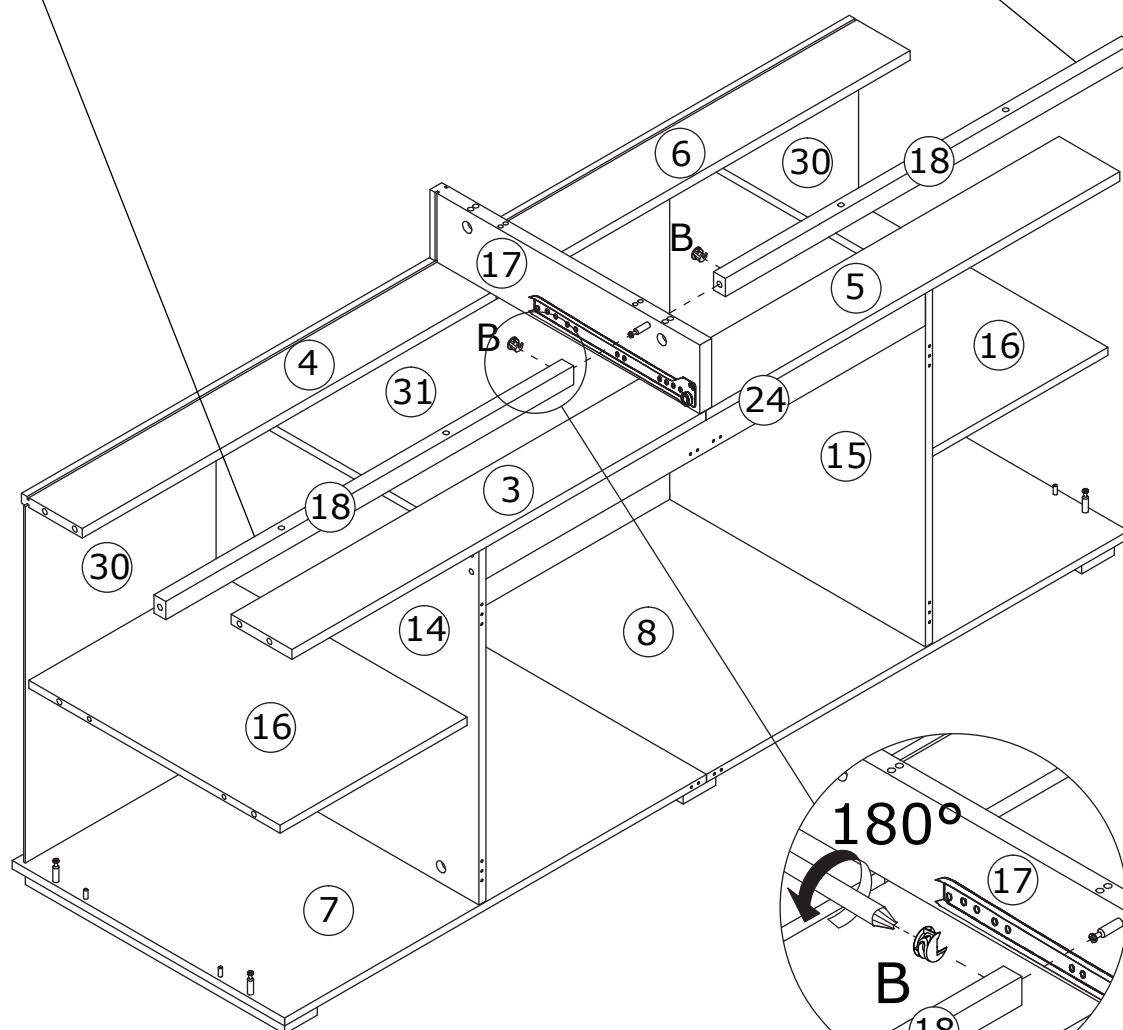
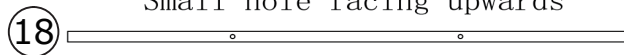


# 13


B x 18





Ø 15 x 12 mm

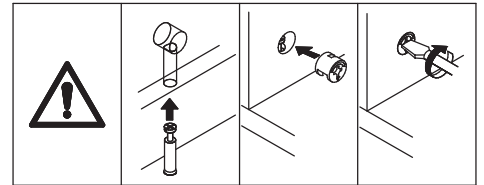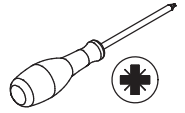

Attach board 12 and 13 to the component, add cam lock(B) into and turn clockwise to tighten as shown.


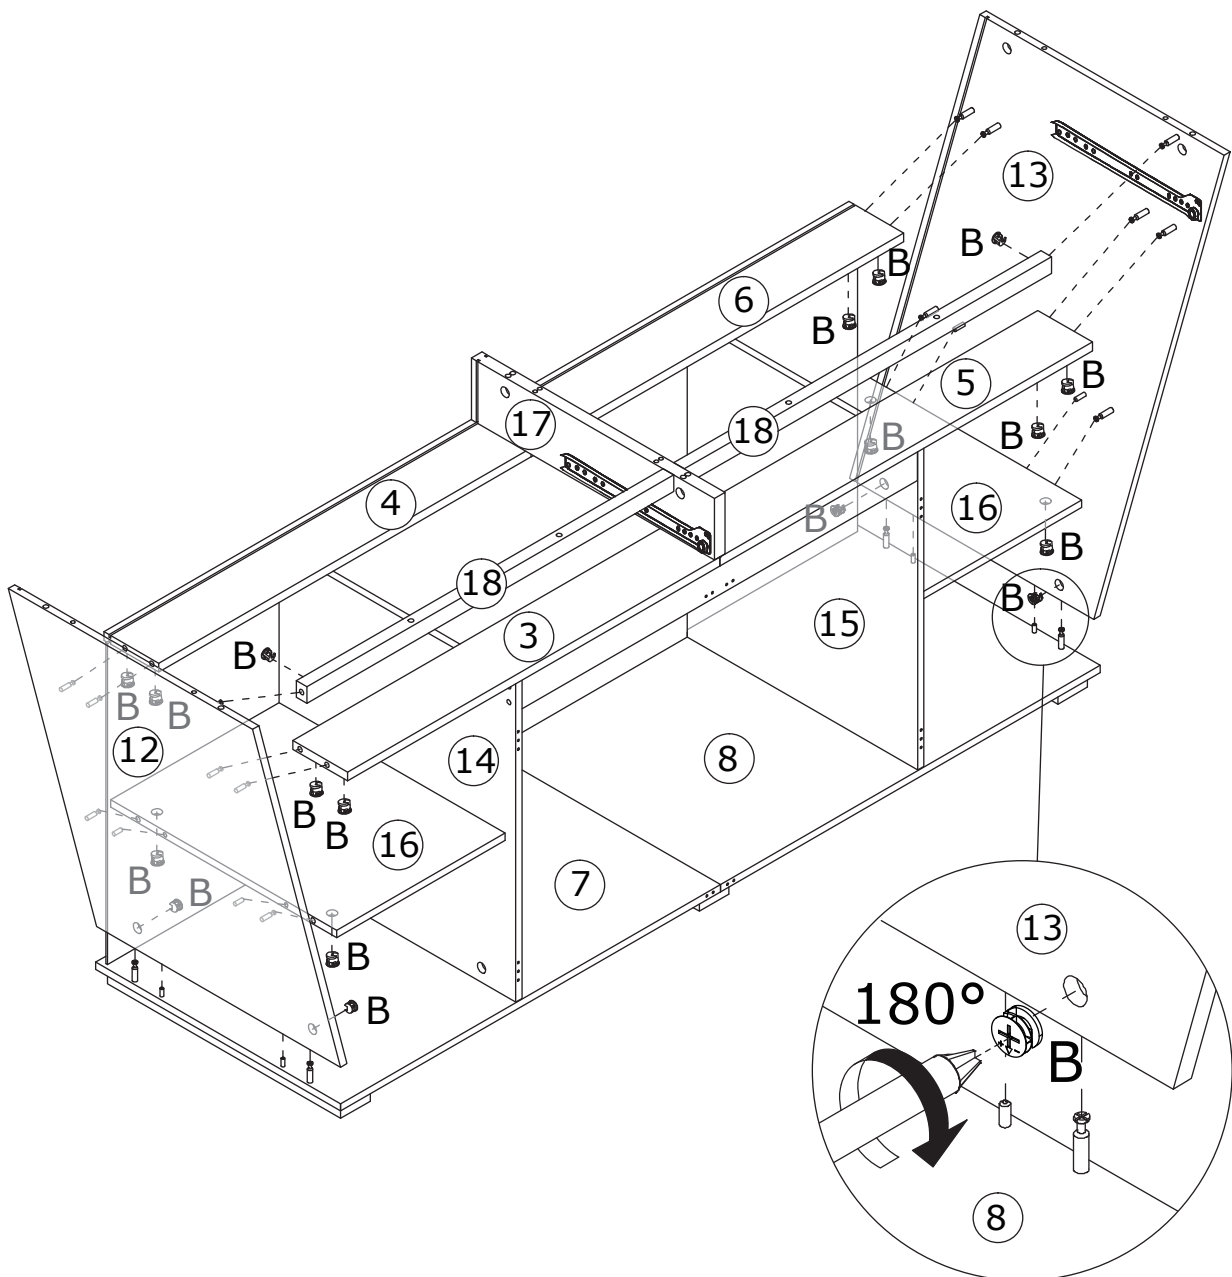


# 14

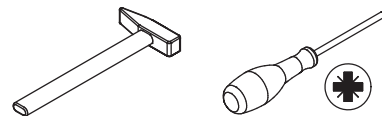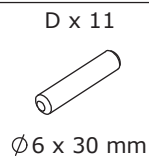


Connect board 1 to board 2 using wooden dowel(D) at first.

Screw eccentric rod(A) and insert wooden dowel(D) into board 2 and 1 as shown.

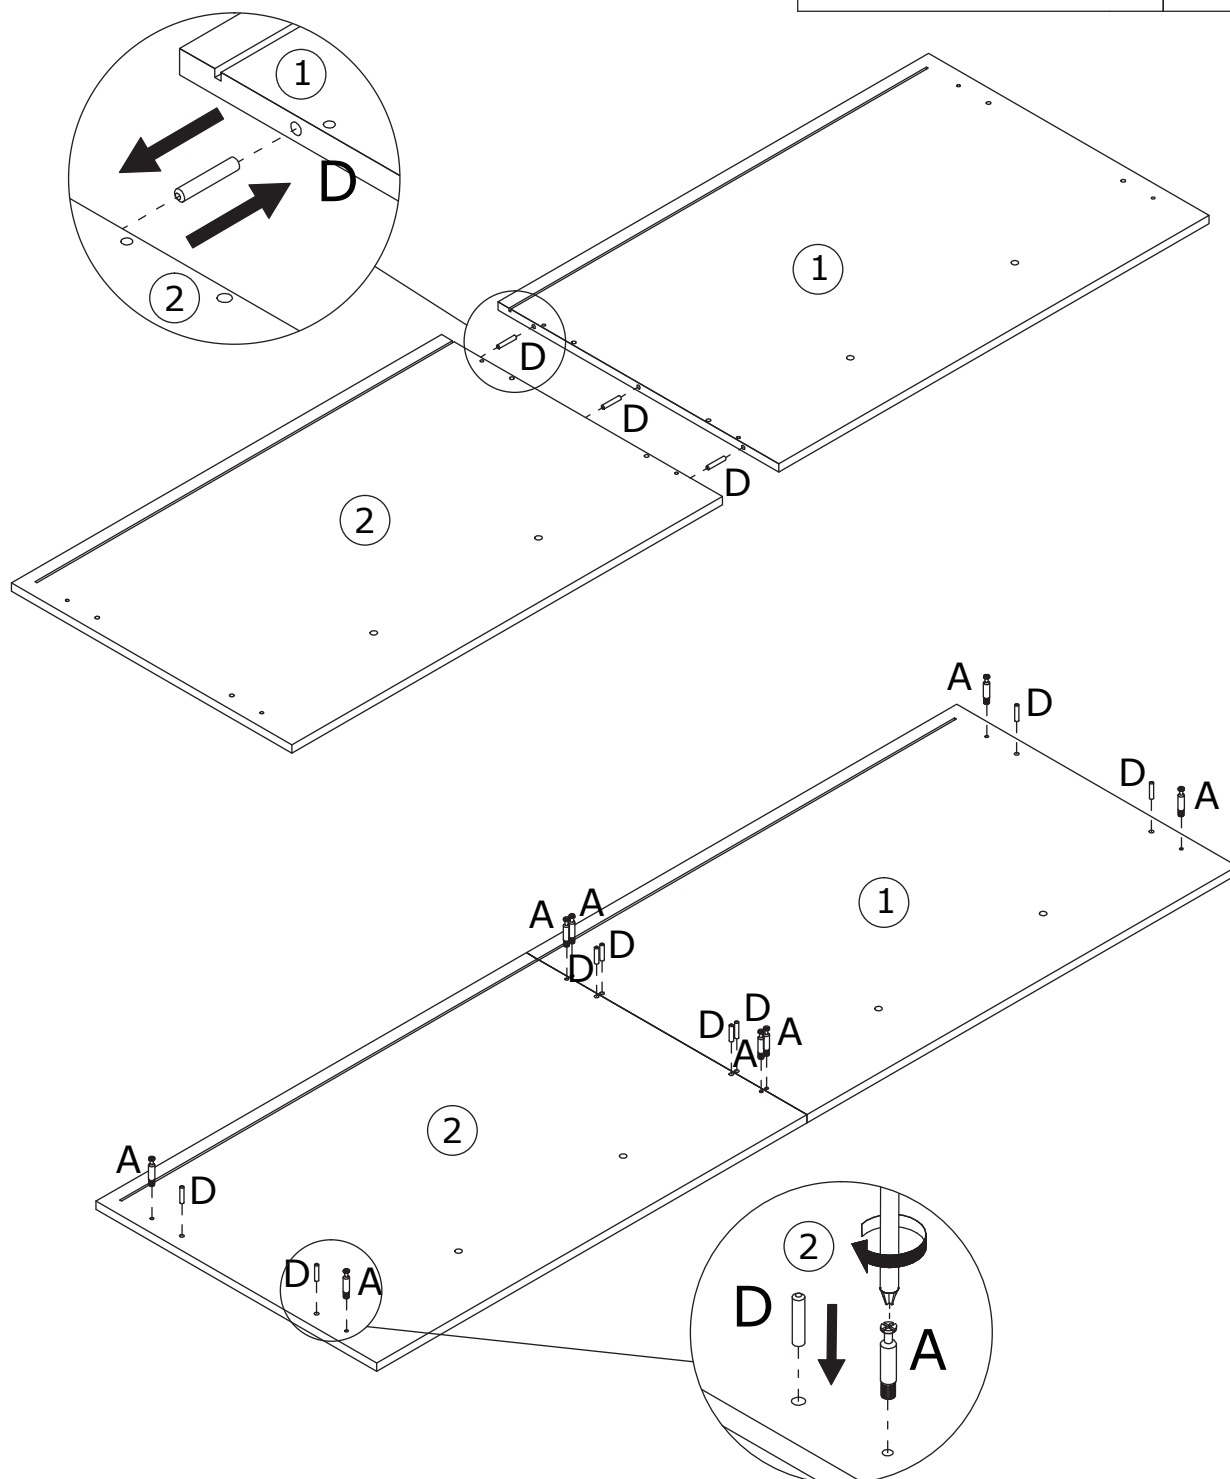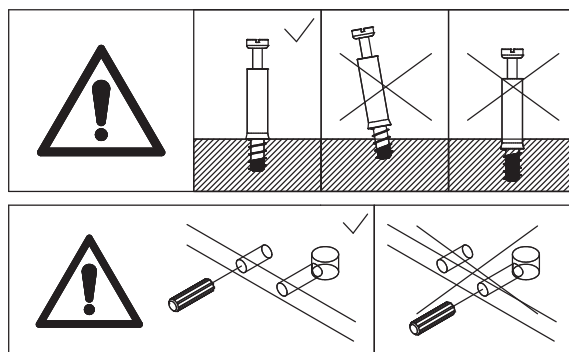

# 15

Insert back board 29 along available grooves as shown.

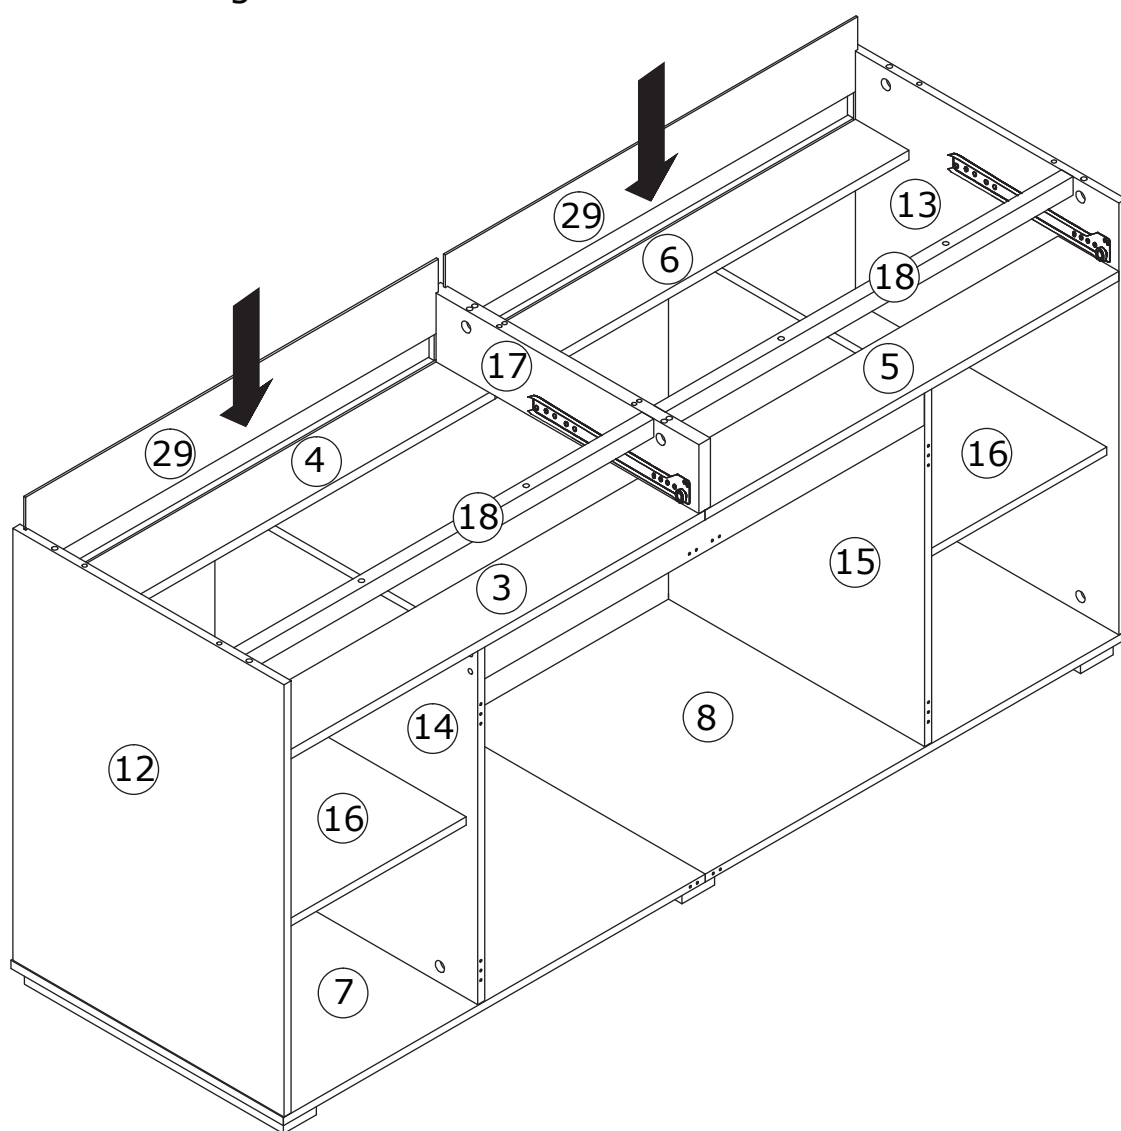

# 16

B x 4



Ø 15 x 12 mm

C x 4







Ø 15 x 9.5 mm


H x 4




Ø 6 x 40 mm

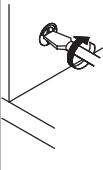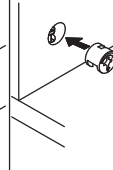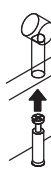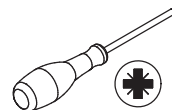


Cover board 1 and 2 to the top, add cam lock(B) into board 12,13 and add cam lock(C) into board 17, turn clockwise to tighten as shown.  
Fix board 1 and 2 to board 18 with screw(P) as shown.

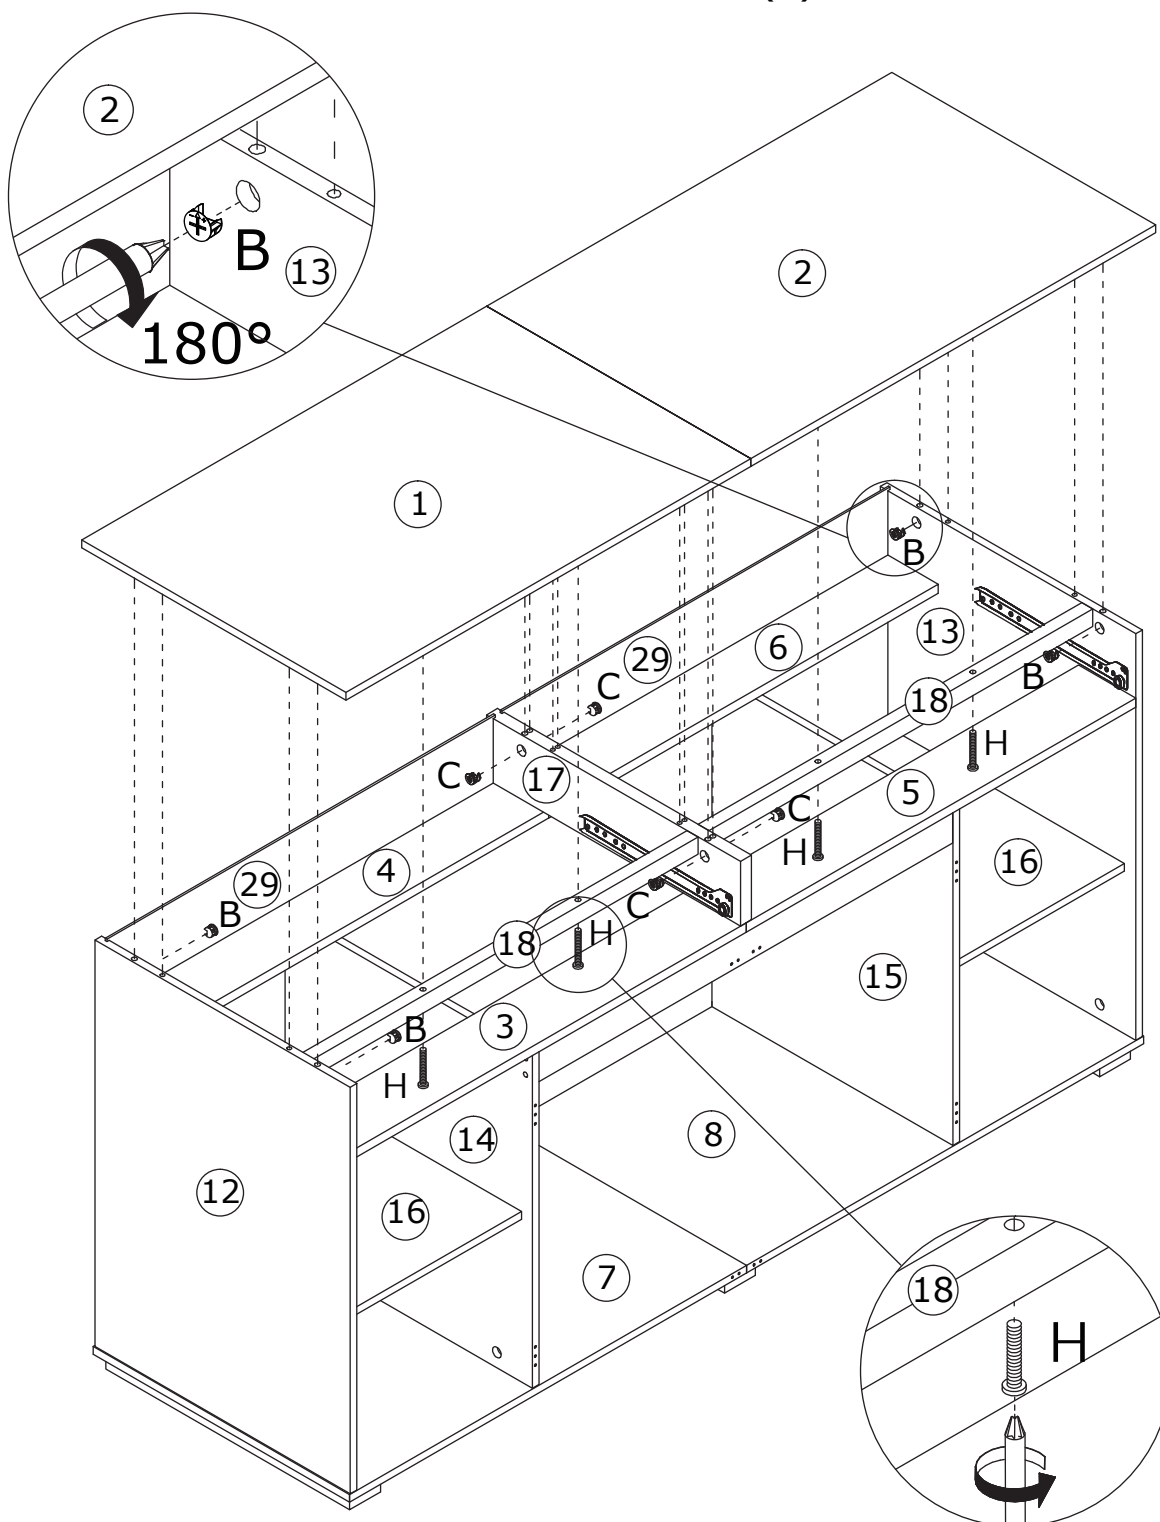


# 17




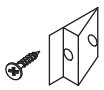
Q x 20  
  
 Ø3 x 16 mm

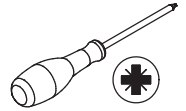


Insert buckle(Q) into back slots  
 and fix to tighten as shown.

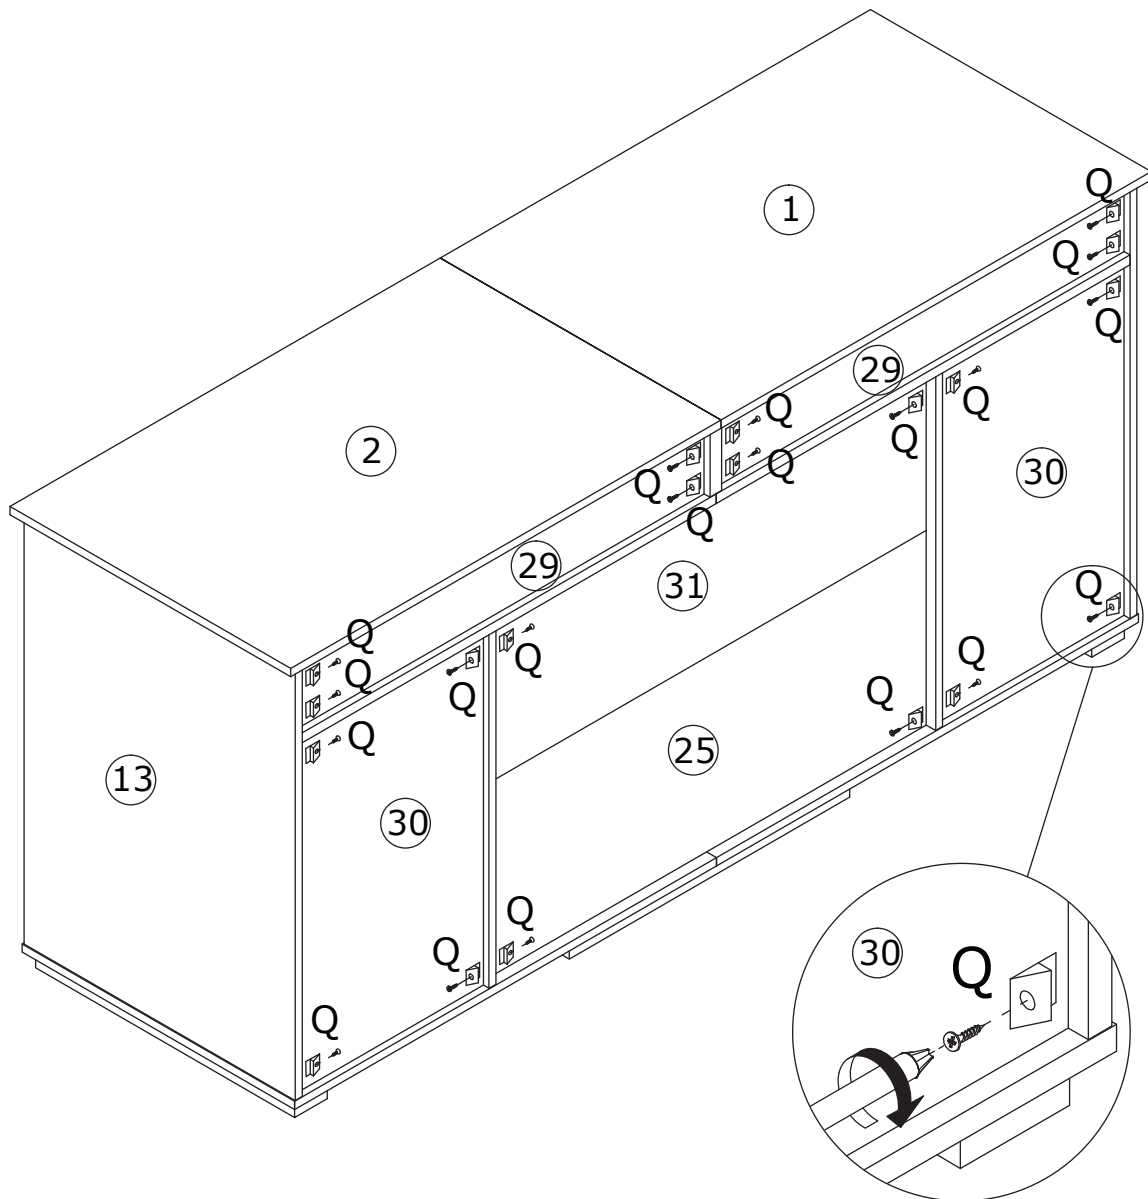

# 18

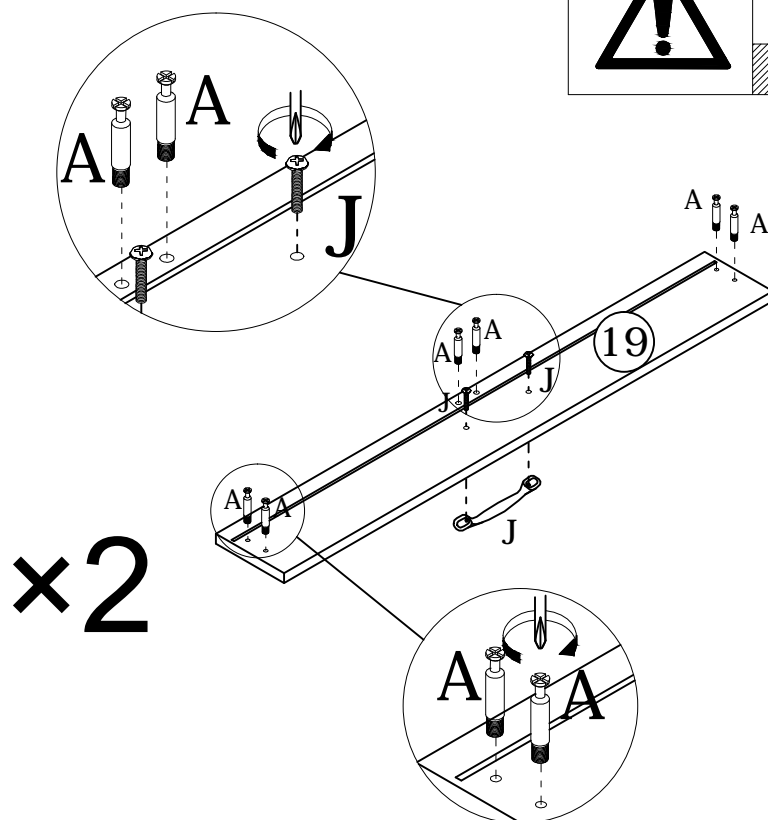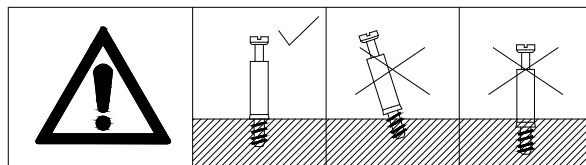
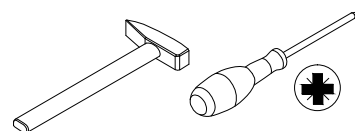
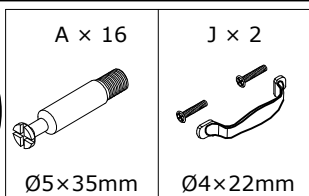


Screw on eccentric rod(A) on plates 19 and 22 as shown in the figure. Fix handle(J) to board 19. Insert wooden dowel(D) into board 22 as shown.

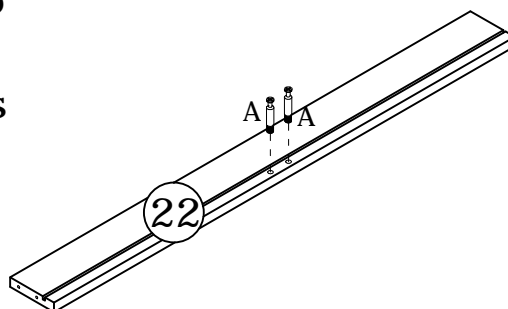


x2

# 19

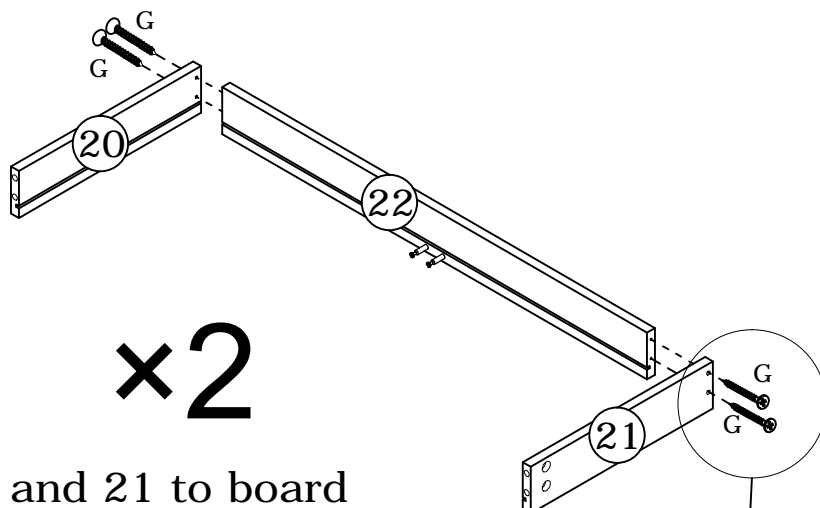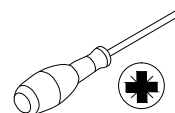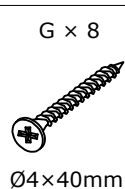

Fix board 20 and 21 to board 22 with screw(G) as shown. Attach board 23 to board 22, add cam lock(B) into board and turn clockwise to tighten as shown.





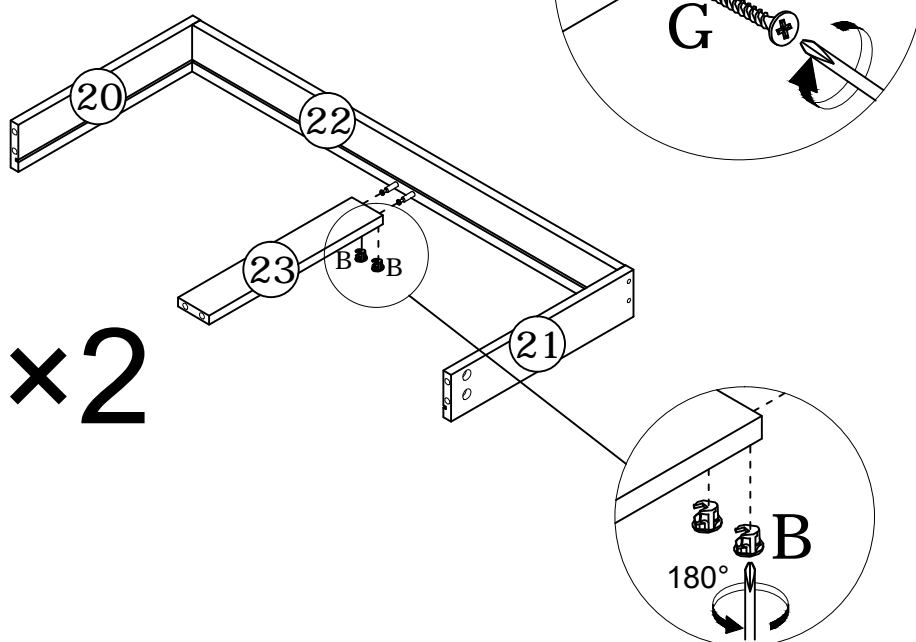


# 20



B × 12



Ø15×12mm

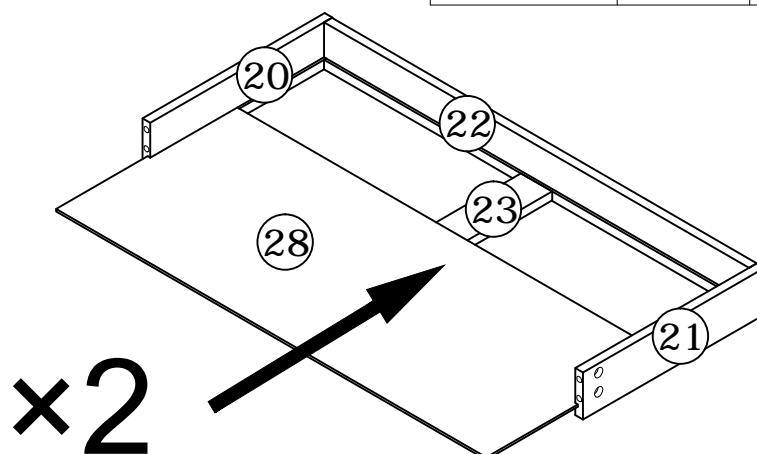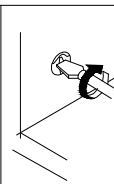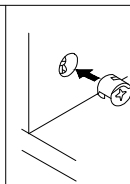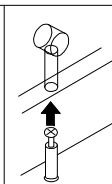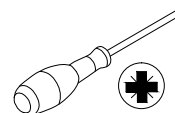

Insert bottom board 28 along available grooves as shown. Attach board 19 to board 20, 21 and 23, add cam lock (B) into board and turn clockwise to tighten as shown.

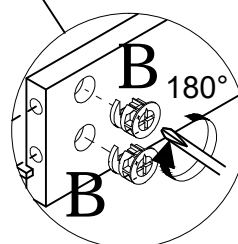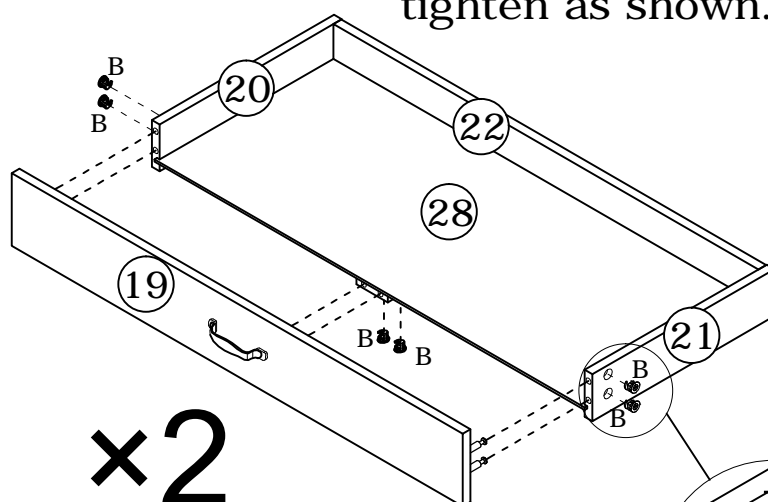

# 21

E x 8



Ø 3 x 14 mm

L x 2




350 mm




M x 2



350 mm

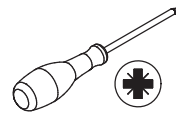


Fix runner(L) and (M) to board 20 and 21 with screw(E) as shown.

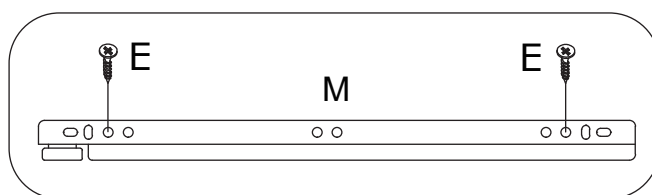
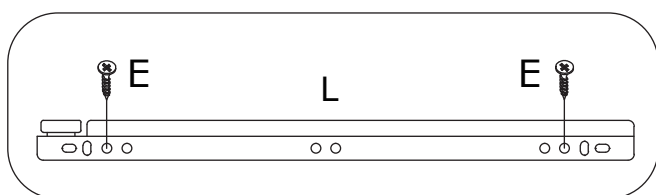
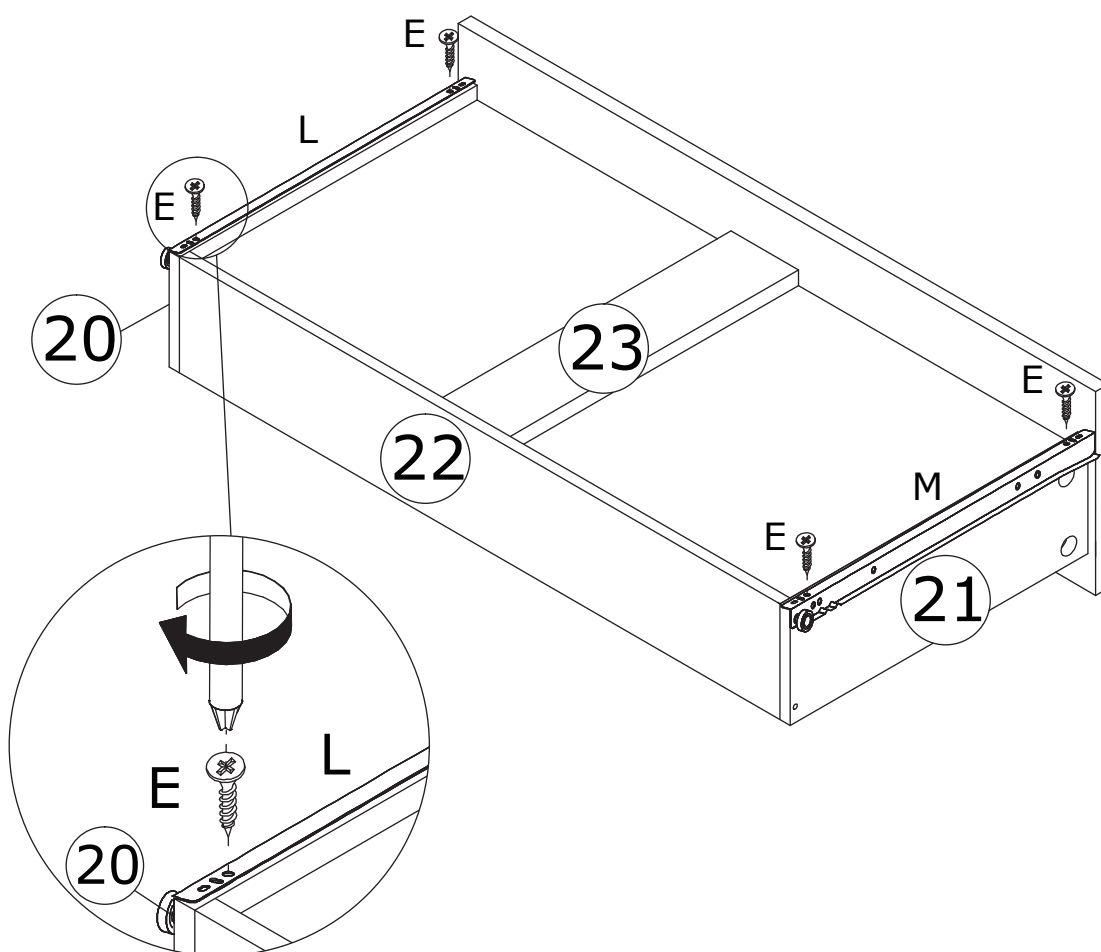


22





Align rails, insert drawers in.

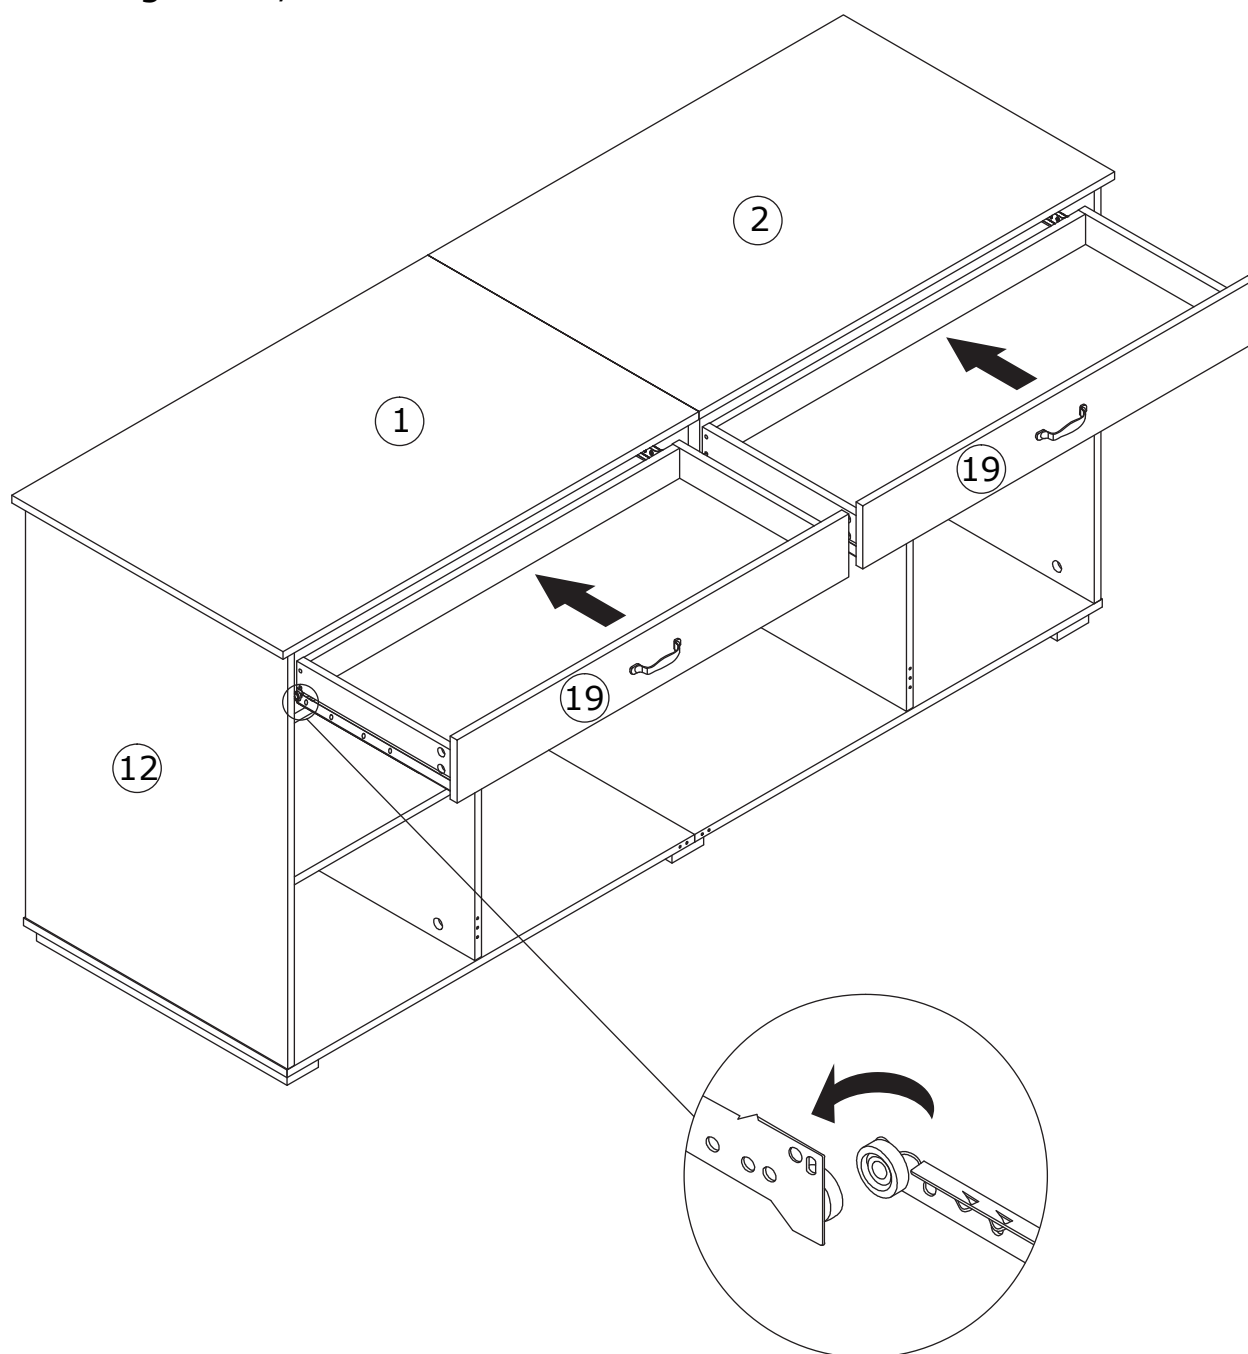


# 23

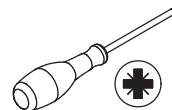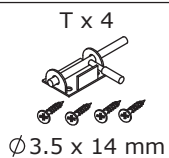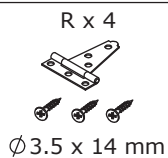


Fix hinge(R) and bolt(T) to board 26 and 27 as shown.

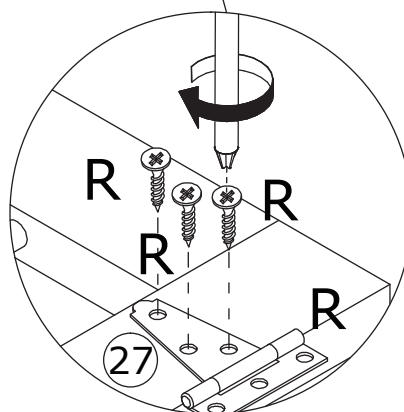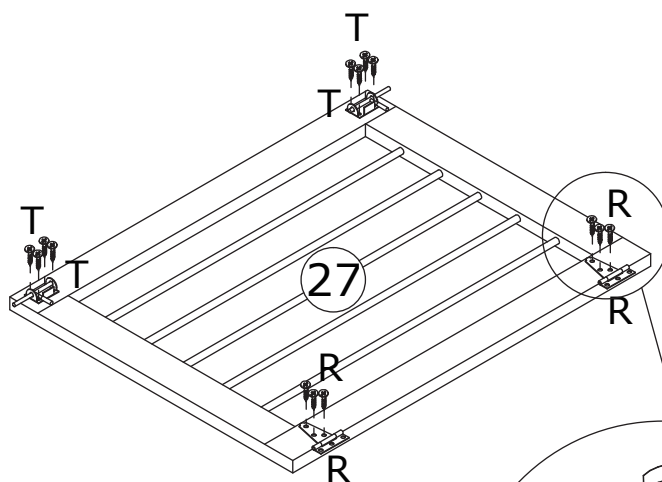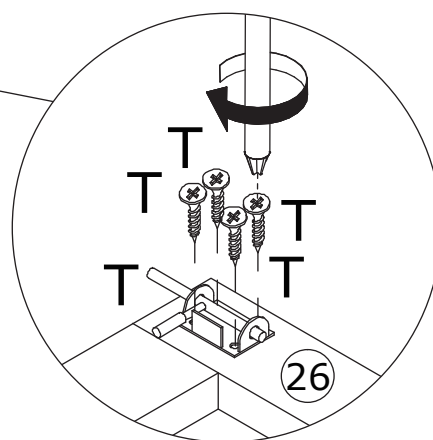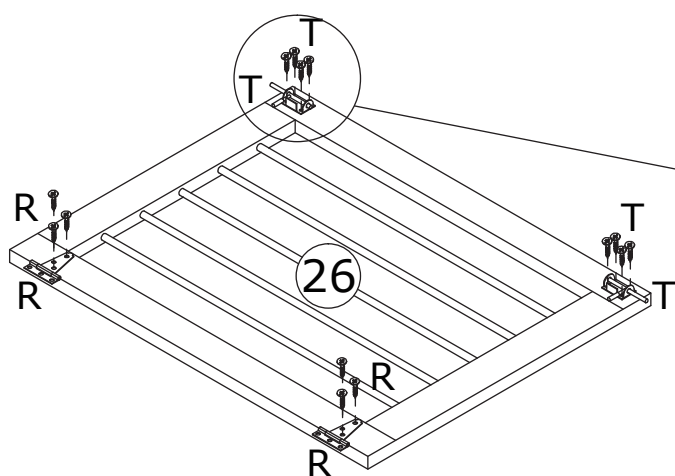


# 24

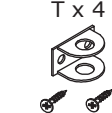T x 4  
  
 Ø3.5 x 14 mm

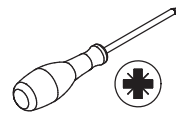

Fix part(T) to board 7,  
 8 and 24 as shown.

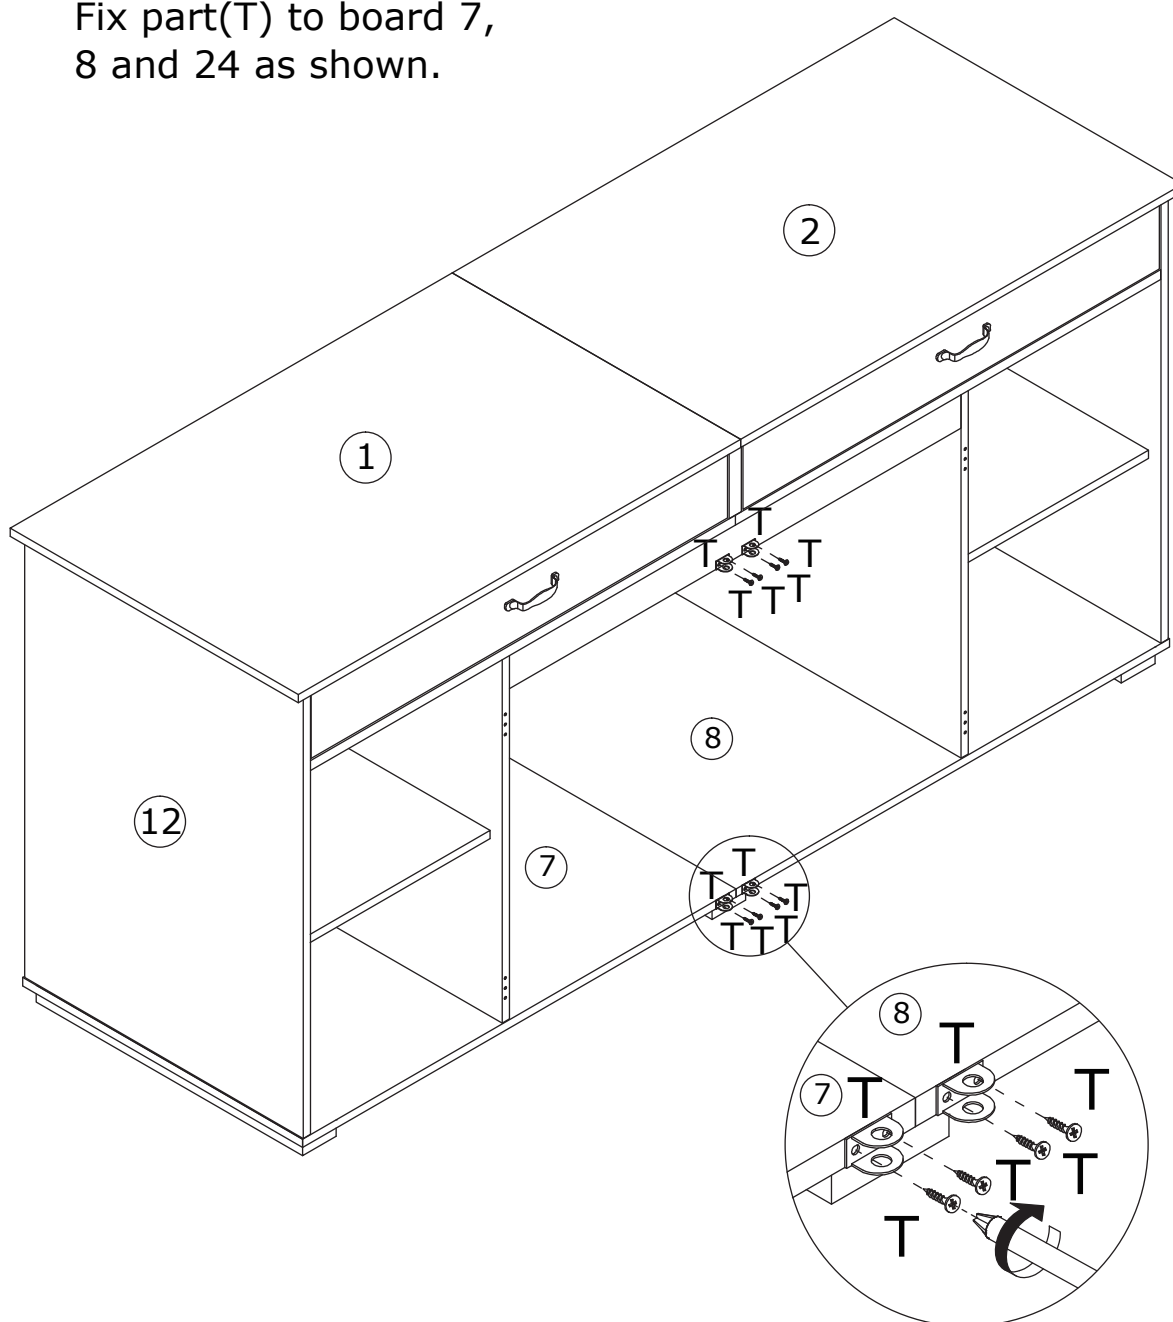


# 25


R x 12



Ø3.5 x 14 mm

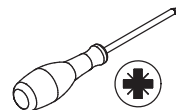




Assemble door 26 and 27 to board 14 and 15 by fixing hinge with screw(R) as shown.

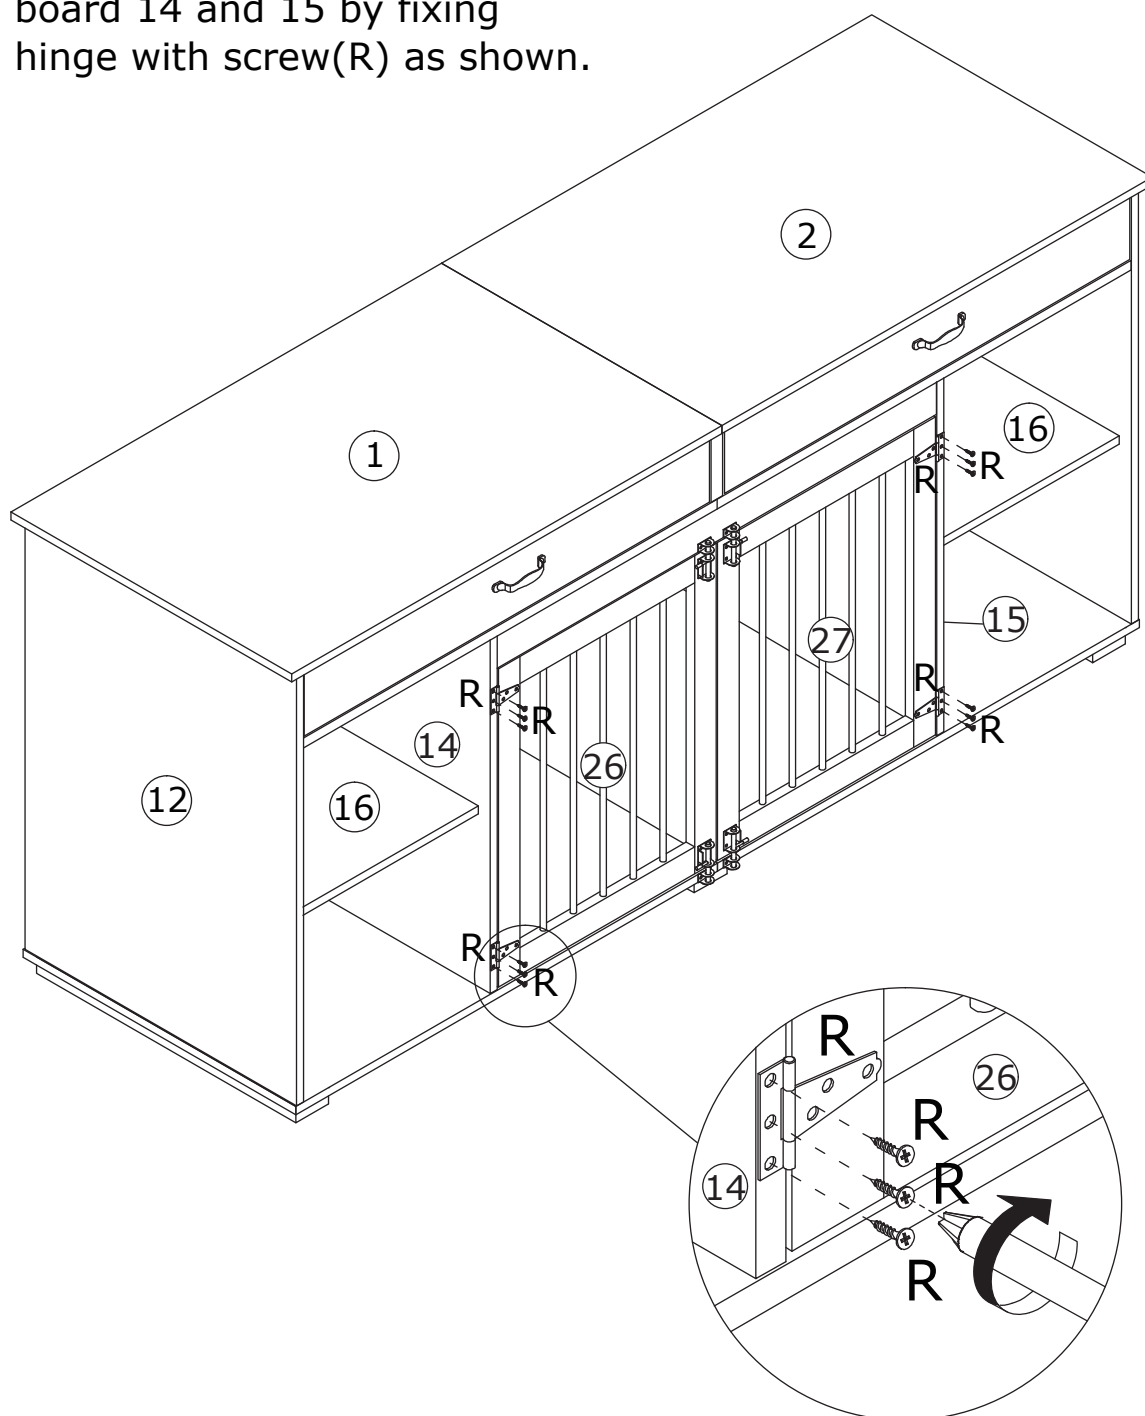

26

|  |   |  |
|--|---|--|
| <p>N x 52</p>  <p>Ø 20 mm</p> | <p>U x 6</p>  <p>Ø 25 mm</p> |  |
|--|---|--|

Stick non-slip mat(U) to the bottom as shown.

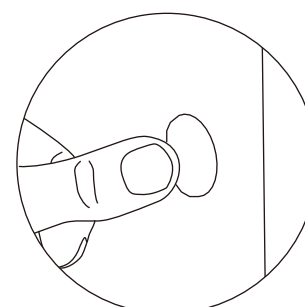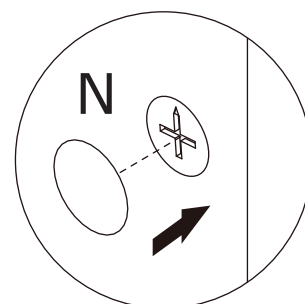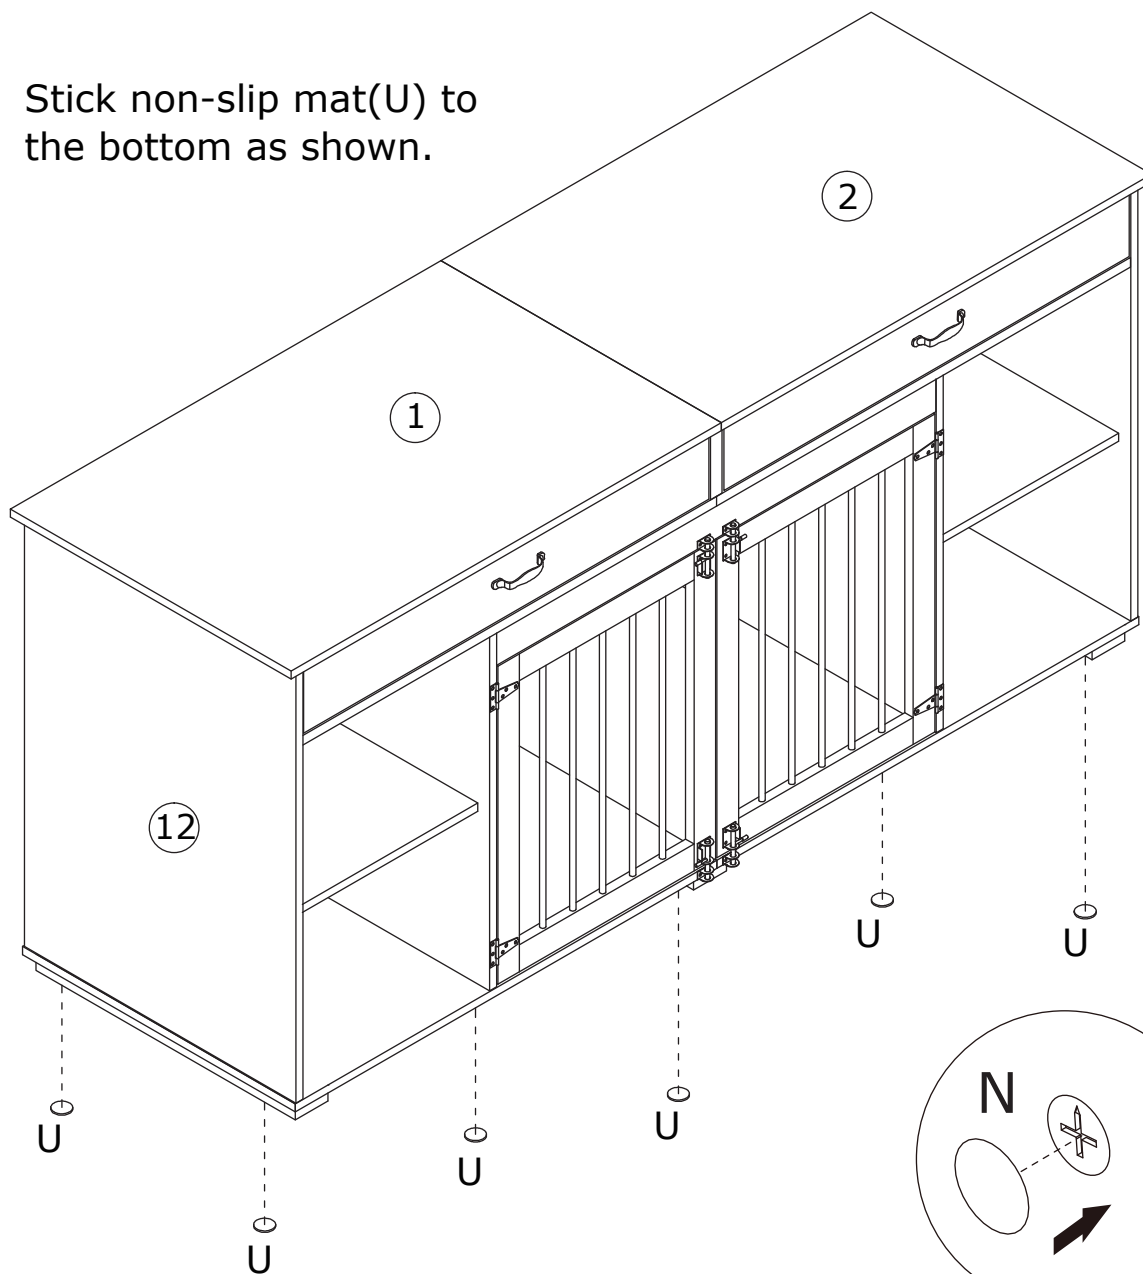

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

# RETURNS

## CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

### PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

### DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

### DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.  
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

### AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387