88 5527 49 Hall Tree Stand (Warm Oak)

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Styles

Casual Attire For Today's Home



Part List



Tools required for assembly : <u>Phillips</u> screwdriver Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319 servicedesk@homestyles-furniture.com

Assembly Instructions 2/6

IMPORTANT

- * Do not tighten up all the screws until each part is properly assembled.
- * You should keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.

STEP 1

Attach Legs (J) to Base (K) with Head Cap Bolts.



STEP 2

Put Cam Lock Screws into the pre-drilled holes of Side Panel (B), (C), (N), (O) Base (K), Top (M) and tighten.



Assembly Instructions 3/6



Slide Back Panel (G) into place.

Attach Front Panel (D) to Side Panel (B) using Cam Locks.

Attach Side Panel (C) to unit using Cam Locks.



Attach Base (K) to unit using Cam Locks.

Assembly Instructions 4/6



Assembly Instructions 5/6



Assembly Instructions 6/6





STEP 9

Attach Hooks to the top of unit with Wood Screws for Hooks. (see Figure 2)



Wood Screw for Hook