

SMOKELESS FIRE PIT USE & CARE GUIDE

Outdoor use only. Use only on hard, level surfaces. Do not use on asphalt, or directly on a stone, wooden or composite wood deck. May cause discoloration to a concrete surface. We recommend placing the fire pit on flat concrete pavers or concrete patio stones to avoid damage to any surface. This fire pit should not be left outside uncovered when not in use. Store your fire pit in a dry location out of the weather to ensure continued use. Exposure to weather, heavy use and UV rays may cause this product to developed a rusted patina.

See the owner's manual for important safety information.