

# INSTRUCTIONS

**SAFETY WARNING:** Remove all plastic fasteners and tags. These are part of the packaging and should be discarded.

**SAVE THESE INSTRUCTIONS** — This manual contains important safety and operating instructions for power units.

## WARNING

**ELECTRIC PRODUCT.** Keep away from children. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## WARNING

Strobe lights have been known to trigger seizures in people with photosensitive epilepsy.

## WARNING

The light is very bright. Do not shine directly into eyes.


## IMPORTANT SAFETY INSTRUCTIONS

**READ ALL INSTRUCTIONS BEFORE USING (THIS FURNISHING)**

**WARNING: TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS :**

## READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

1. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
2. Do not let lamps rest on the supply cord or on any wire.
3. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
4. Do not cover the product with cloth, paper or any material not part of the product when in use.
5. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
6. This seasonal use product is not intended for permanent installation or use.
7. Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
8. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
9. This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
10. Do not use this product for other than its intended use.
11. Do not hang ornaments or other objects from cord, wire, or light string.
12. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
13. This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace.
14. Read and follow all instructions that are on the product or provided with the product.

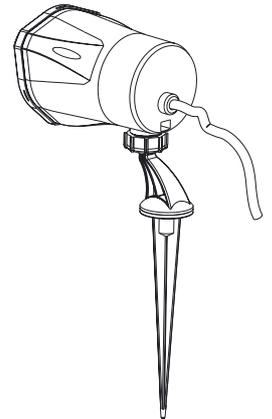

**CAUTION:** To reduce the risk of fire and electric shock:

1. Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal.
2. Do not mount or support wires in a manner that can cut or damage wire insulation.

## SAVE THESE INSTRUCTIONS. TECHNICAL SPECIFICATIONS

Projection™	1 pc
Fuse	2 pcs
Stake	1 pc

## ASSEMBLY INSTRUCTIONS

1. Assemble the light stake parts A & B as shown in illustration 1. Push the A and B parts together until tighten the screws.
2. Push A through the circle, insert the grooves of projection™, and tighten the circle, then adjust the angle of projection™. (See illustration 1)

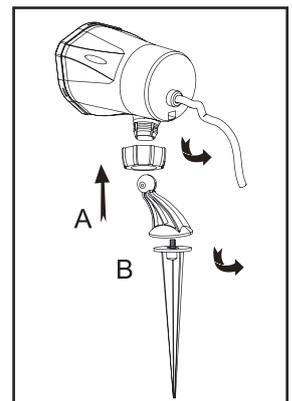


illustration 1

3. Plug power cord into standard wall socket. (See illustration 2)
4. Unplug when not in use.

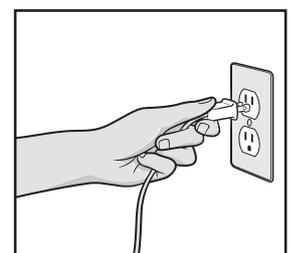


illustration 2


## USER SERVICING INSTRUCTIONS

### Fuse Replacement

**WARNING:** Risk of Fire: Replace only with same size and type of fuse.

**WARNING:** Risk of Fire: Do not replace the attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if attachment plug is damaged.

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on the cord.

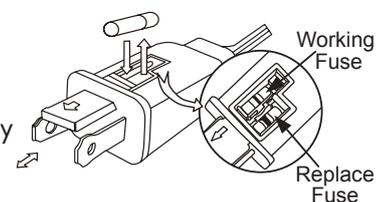

2. Open fuse cover. Slide open the fuse access cover on top of the attachment plug towards blades.(See illustration)
3. Remove fuses carefully.
4. Replace fuse only with 5 Amp Max, 125 Volt fuse.(provided with product)
5. Close the fuse cover.Slide closed the fuse access cover on top of the attachment plug.

## OPERATING DETERMINATIONS

---

This product was designed for indoor and outdoor use.

Do not shake the device. Avoid brute force when operating the device.

Keep away from direct insulation (particularly in cars) and heaters.

Do not permit operation by persons not qualified to operating the device. Most damages are the result of unprofessional operation!

Never use solvents or aggressive detergents in order to clean the device! Rather use a soft and damp cloth.

Please use the original packaging if the device is to be transported.

Unauthorized modifications on the device are unacceptable due to safety reasons!

If this device is operated in any way different from the ways described in this manual, the product may suffer damages and the guarantee becomes void.

## OPERATION

---

- Insert the plug into socket.
- Set this device as a projection™.
- Exirt the plug if not in use. Be careful with the power cord!

## WARNING

---

- The device is for indoor and outdoor use!
- Suitable for outdoor use!
- Please keep away from heaters and other heating sources!

## IMPORTANT

---

Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems. Keep away from heaters and other heating sources! If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. Leave the device switched off until it has reached room temperature. Please note that damages caused by manual modifications on the device or unauthorized operation by unqualified persons are not subject to warranty. Keep young children and amateurs away from the device!

## USE AND CARE INSTRUCTIONS

---

1. When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
2. If the product is placed on a tree, the tree should be well secured and stable.
3. Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
4. When storing the product, carefully remove the product from wherever it is placed, to avoid any undue strain or stress on the product conductors, connections, and wires.
5. When not in use, store neatly in a cool, dry location protected from sunlight.

## WARNING

---

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

## THESE INSTRUCTIONS ARE FOR THESE ITEMS

12781	12794	12863	12869	12884	12923	13101	14382
14523	17993	32972	33166	33697	33840	33842	34270
35395	35475	35477	35560	36026	36389	36629	37297
37403	37404	37405	37406	37407	37551	37900	37901
37902	38418	38483	38484	38656	40070	40071	40074
40078	40080	40169	40170	40175	40177	40181	40183
40184	40663	40664	40667	40668	40670	40673	40675
40697	41688	46040	48224	48225	48229	48362	48621
49233	49274	49286	49287	49289	49342	49369	49376
49377	49380	49460	49583	49620	59459	59460	59561
59562	59658	59659	59678	59679	59716	59916	70231
70232	71168	71170	72506	72550	72687	72688	72726
72734	72823	72904	73080	73086	73087	73088	73102
73111	73117	73120	73281	73283	73376	73544	73546
73554	73556	73603	74220	74338	74381	74383	74391
74392	74393	74504	74532	74534	74536	74809	74877
74885	74946	74962	75013	75025	75029	75043	75046
75149	80730	80735	80751	81839	81846	82424	85713
85714	85980	86399	86731	87196	87198	88269	110063
110065	110067	110473	110752	110843	110860	110860	110862
110864	110866	110885	110964	110985	111072	111083	111173
111234	111994	111995	111996	111999	112000	112001	112611
112725	112997	113461	220046	220367	220374	220380	220417
220813	220814	220850	220851	220901	220997	221182	221183
221197	221296	221410	221537	221540	221554	221555	221566
221823	221825	330033	330040	330049	330056	445070	445071



Visit [WWW.GEMMY.COM](http://WWW.GEMMY.COM) for more information.

©2018 GEMMY INDUSTRIES CORP.  
 117 WRANGLER DRIVE, SUITE 100  
 COPPELL, TX 75019 U.S.A.  
 1 (877) 250-9032  
 MADE IN CHINA  
 PRINTED IN CHINA