
CRAFTSMAN®

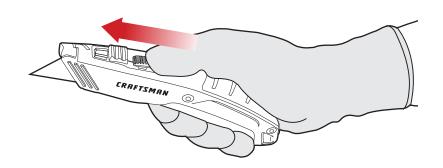


EXTEND SLIDER ON THE SIDE FOR WHICH YOU WANT TO CHANGE THE BLADE




2

PUSH AND HOLD GREY TOGGLE TO THE SIDE FOR WHICH YOU WANT TO CHANGE THE BLADE, PULL OUT BLADE

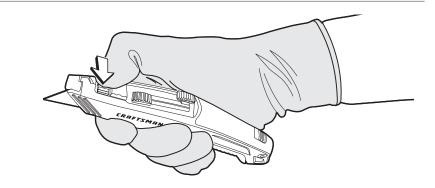


3

PUSH BLADE STORAGE BUTTON DOWNWARD TO ACCESS

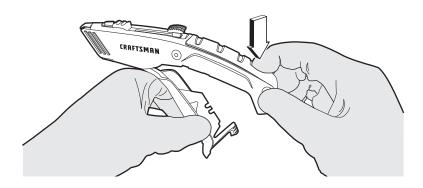

4

PUSH AND HOLD GREY TOGGLE TO THE SIDE FOR WHICH YOU WANT TO CHANGE THE BLADE, INSERT BLADE.

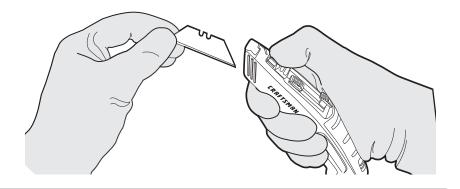

5

RETRACT SLIDER

