 
 
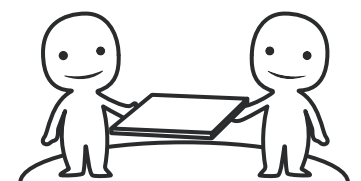 




Wardrobe

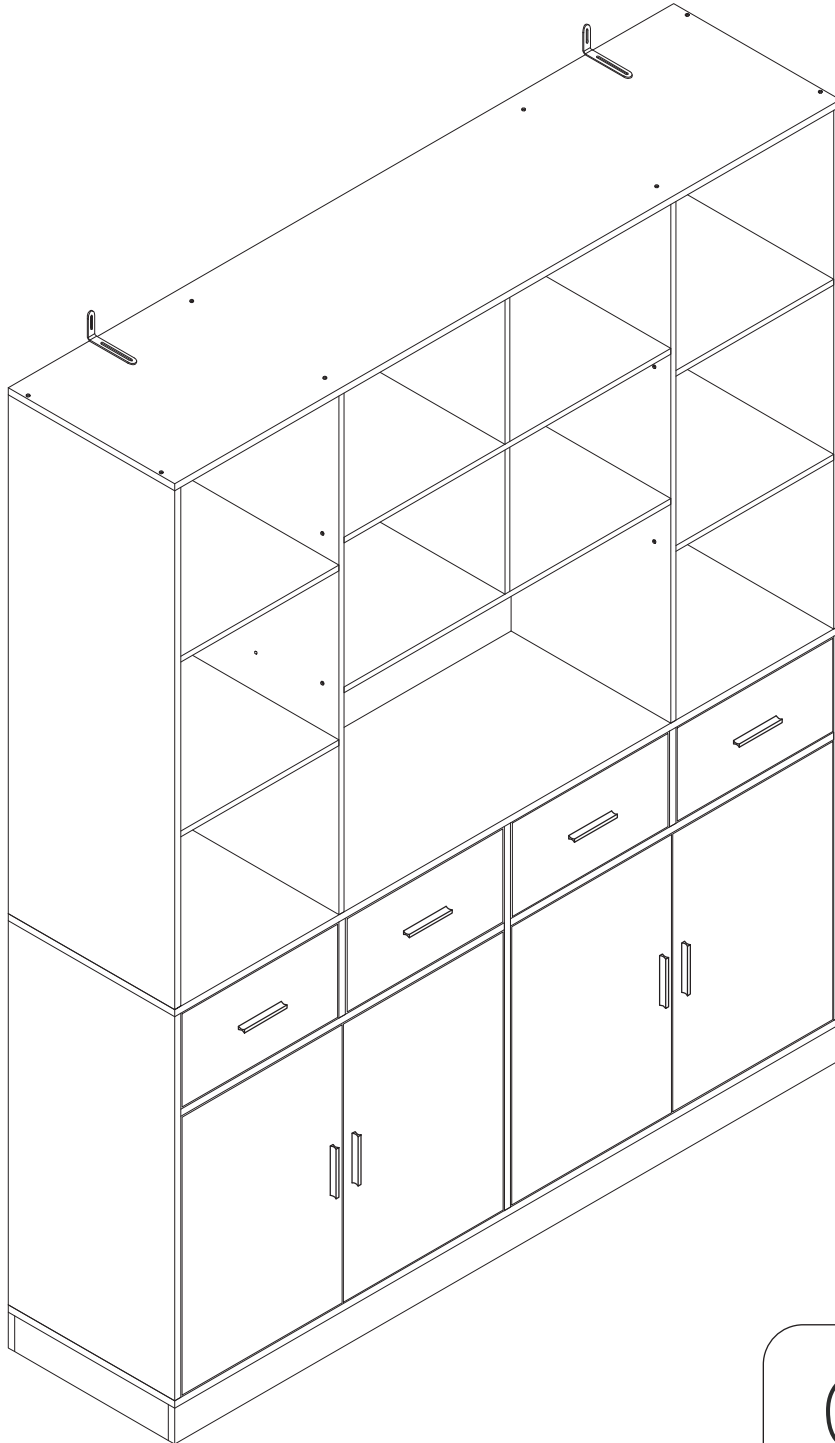

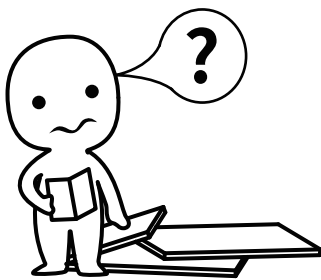


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

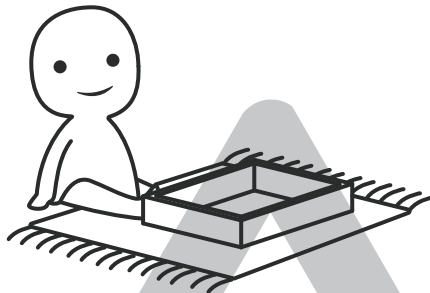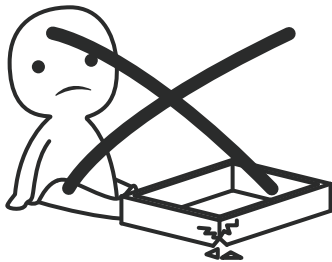



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

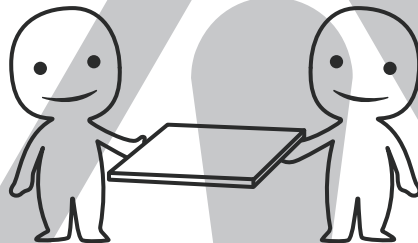

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

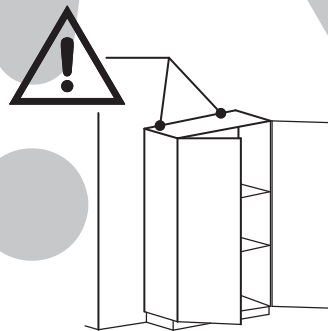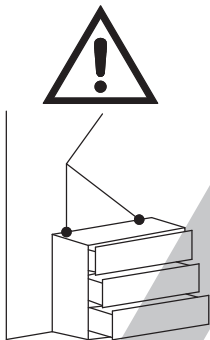

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.











Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

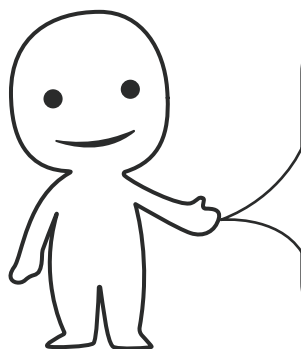


Please prepare the following tools

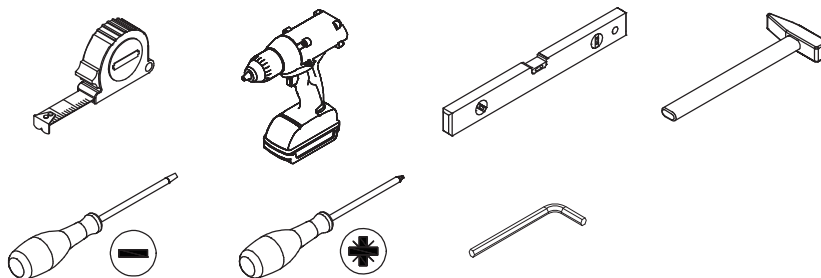 

          When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

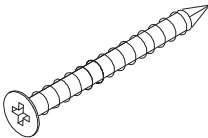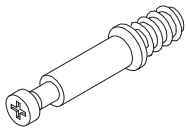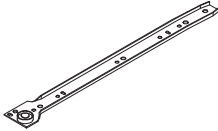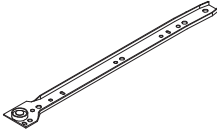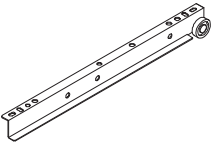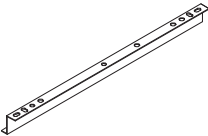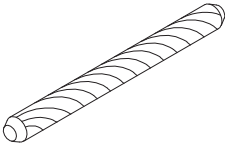
A x 4 +1  ø6 x 35 mm	B x 8 	C x 70 +1  ø6 x 30 mm	D x 42 +1  ø5 x 40 mm
E x 59 +1  ø6 x 35 mm	F x 59 +1  ø15 x 10 mm	G x 2 	H x 50 +1  ø4 x 14 mm
J x 4  L 300 mm	K x 4  L 300 mm	L x 4  L 300 mm	M x 4  L 300 mm
N x 48 +1  ø3 x 12 mm	P x 2  ø6 x 50 mm	Q x 8 	R x 8 

 S x 2




ø4 x 35 mm

 T x 8



U x 16 +1

 

ø4 x 16 mm

V x 16 +1



ø4 x 30 mm

W x 32

 


X x 32 +1




ø3 x 14 mm


Y x 2



x 1

 


①

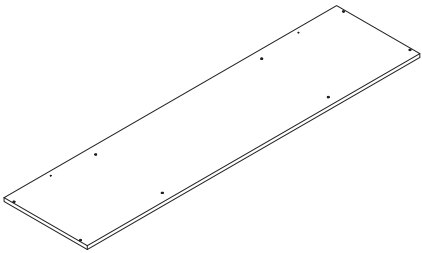 


1PC

 ②

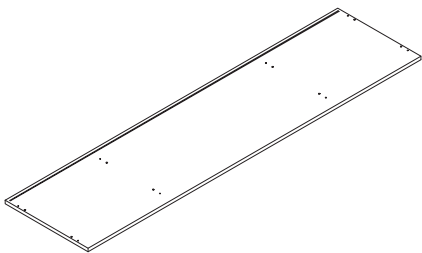


1PC

 ③

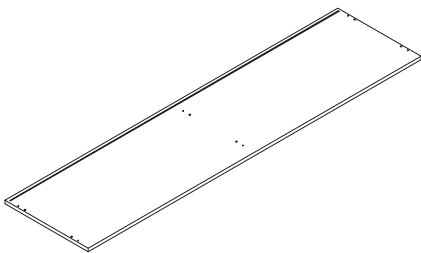


1PC

 ④



1PC

 ⑤




1PC

⑥



1PC

 ⑦




1PC

⑧





















1PC

 ⑨



1PC

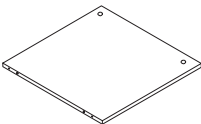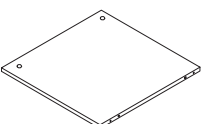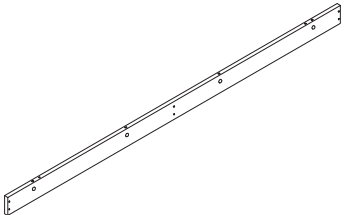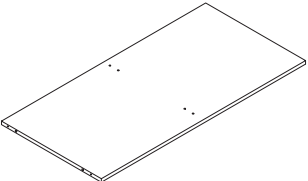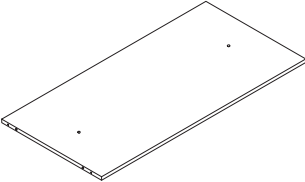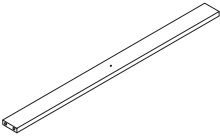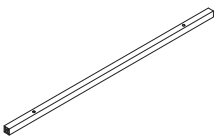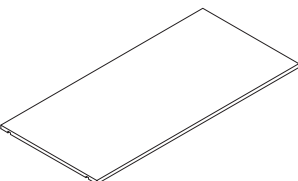             ⑩  1PC	⑪  2PCS	⑫  2PCS
⑬  2PCS	⑭  3PCS	⑮  1PC
⑯  1PC	⑰  2PCS	⑱  4PCS
⑲  2PCS	⑳  1PC	㉑  2PCS
㉒  4PCS	㉓  2PCS	㉔  2PCS
5/35		

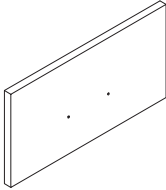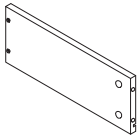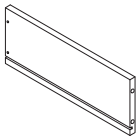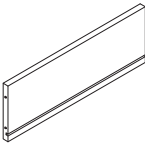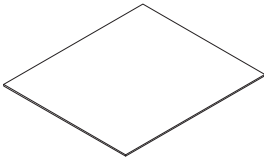     25  4PCS	26  1PC	27  2PCS
28  4PCS	29  4PCS	30  4PCS
31  4PCS	32  4PCS	

 



! WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*

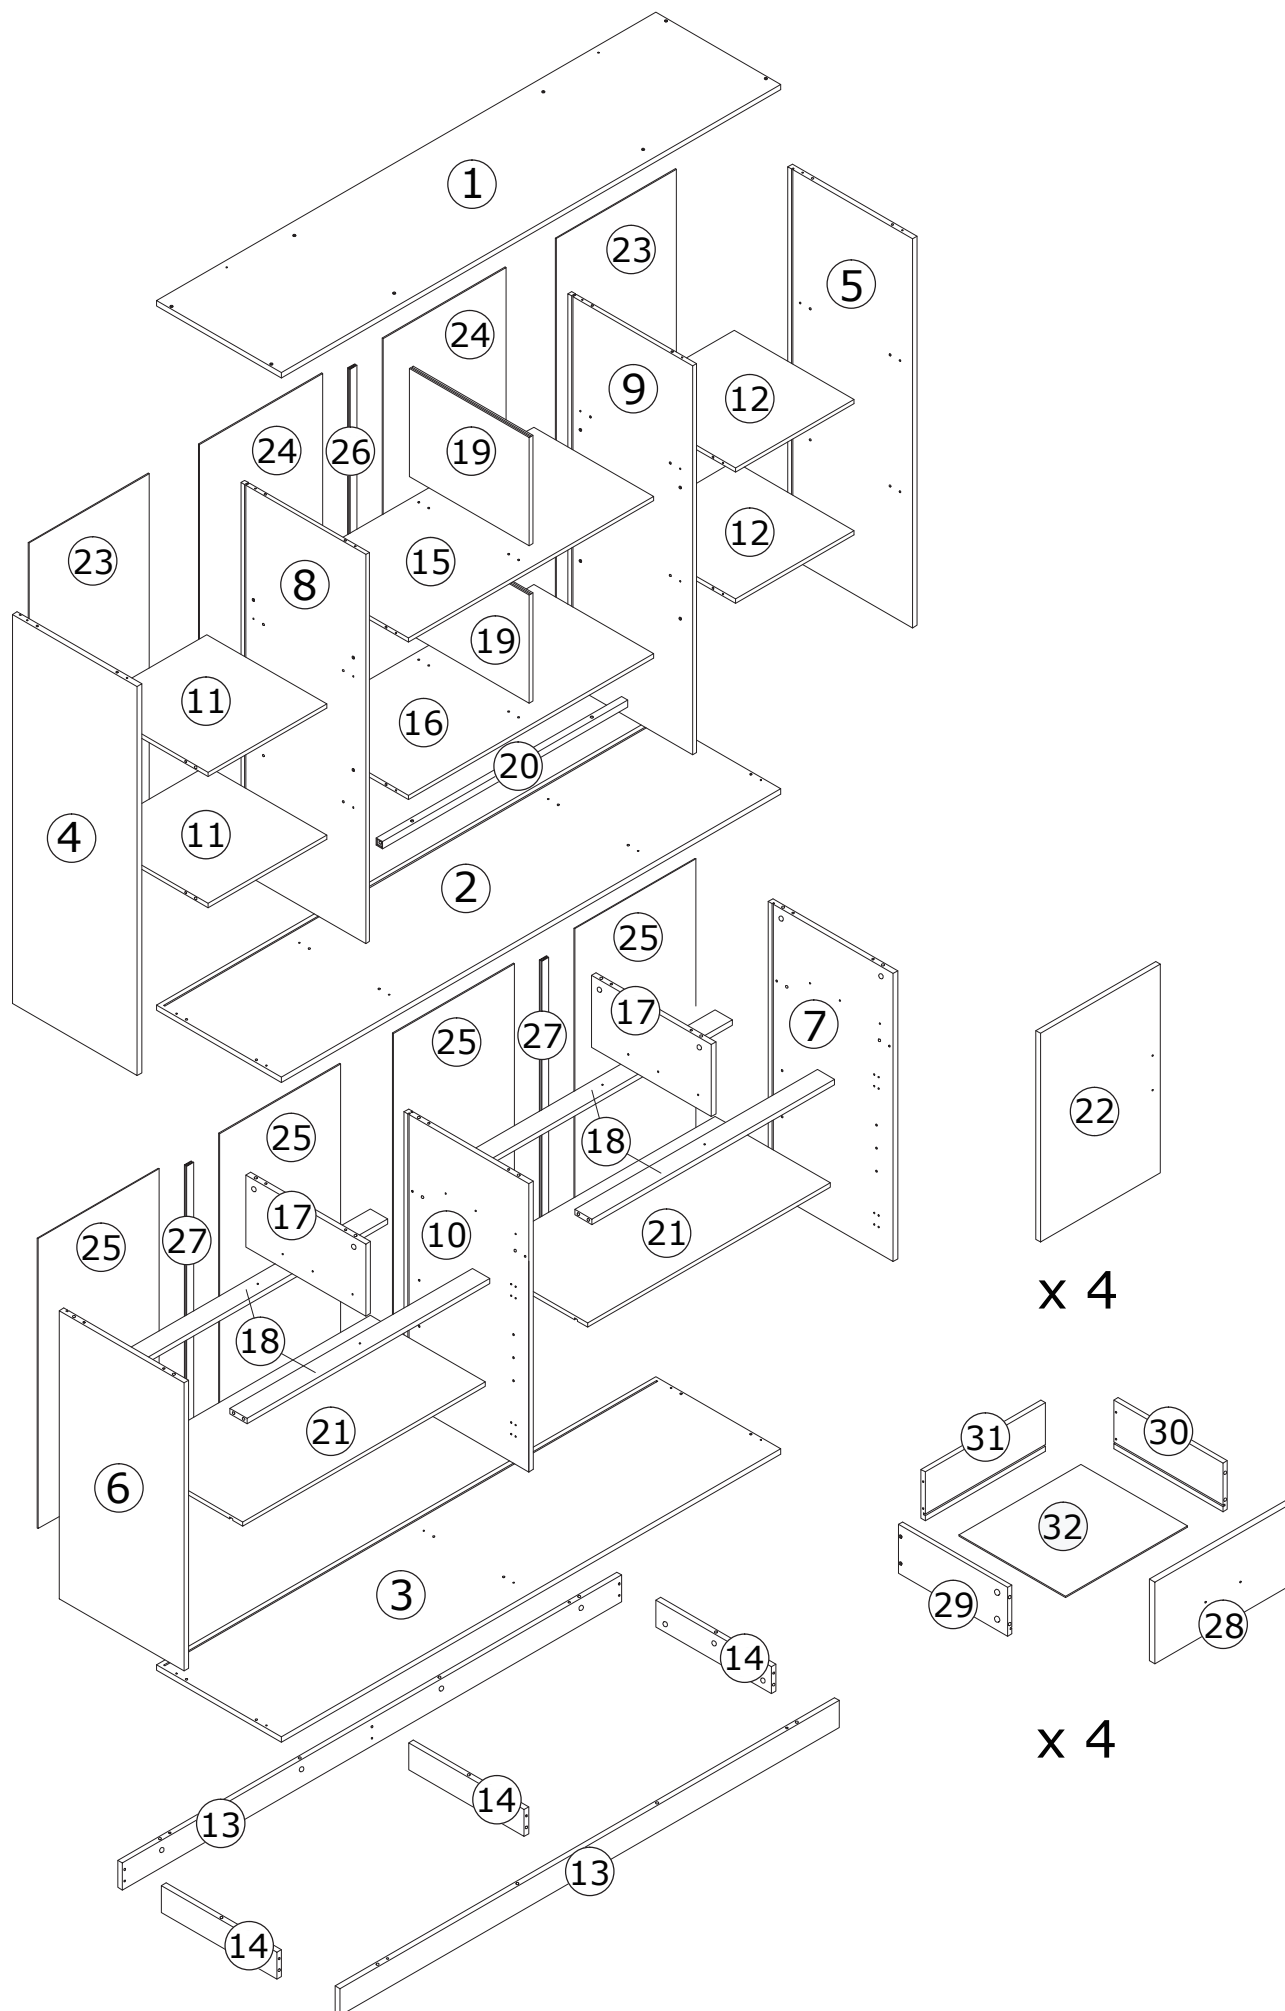

1

A x 2

 


φ6 x 30mm

B x 2



Fix tube 20 to board 16 with screw(A) at first.
Flip the board to back, knock part(B) into
as shown.

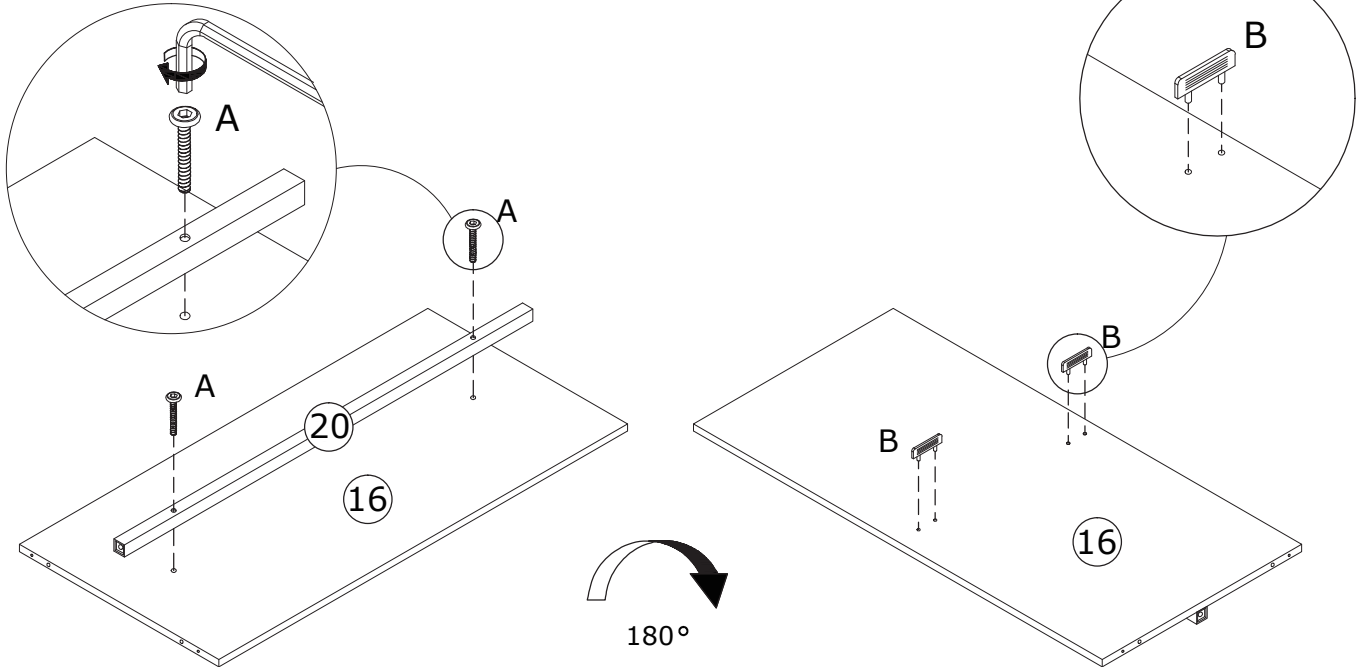


2

B x 4



 Knock part(B) into board 15 at first.
Flip the board to back, knock part(B)
into as well.

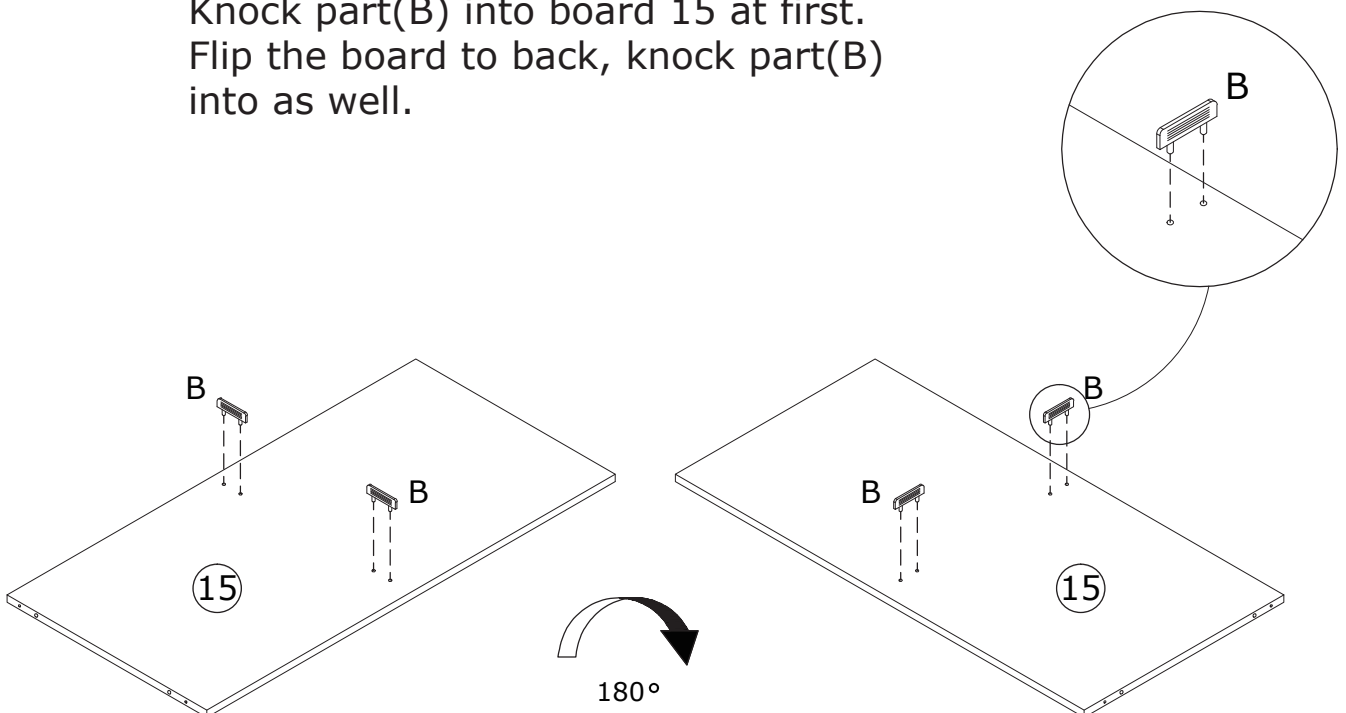

3

C x 8

 


ø6 x 30mm


D x 8



ø5 x 40mm



 Attach board 8 to board 11 using wooden dowel(C), and fix with screw(D) as shown.
Attach board 9 to board 12 using wooden dowel(C), and fix with screw(D) as shown.

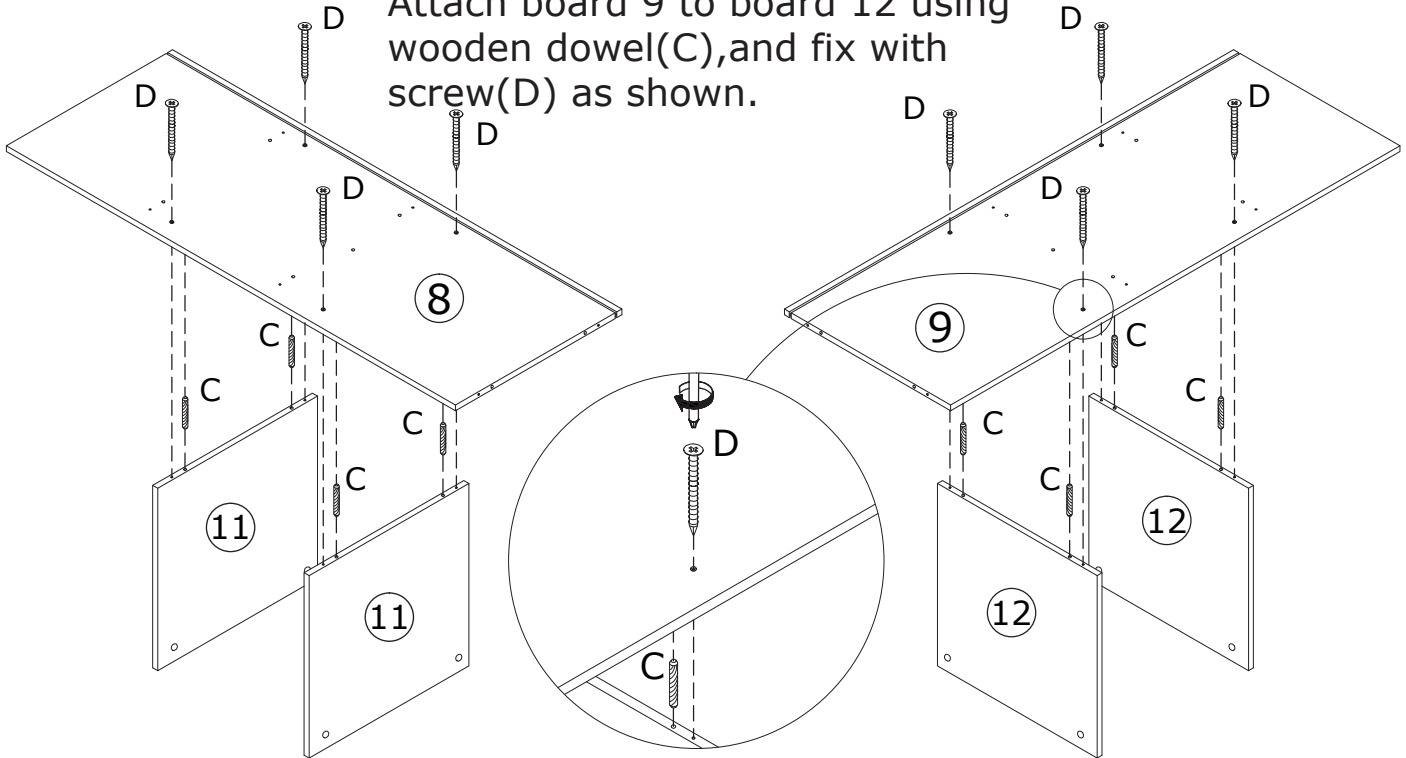

4

A x 2



ø6 x 30mm

C x 8

 


ø6 x 30mm


D x 8



ø5 x 40mm



 Connect board 8 and 9 to board 15 and 16 using wooden dowel(C), and fix with screw(D) as shown.
Fix board 8 and 9 to tube 20 with screw(A) as shown.

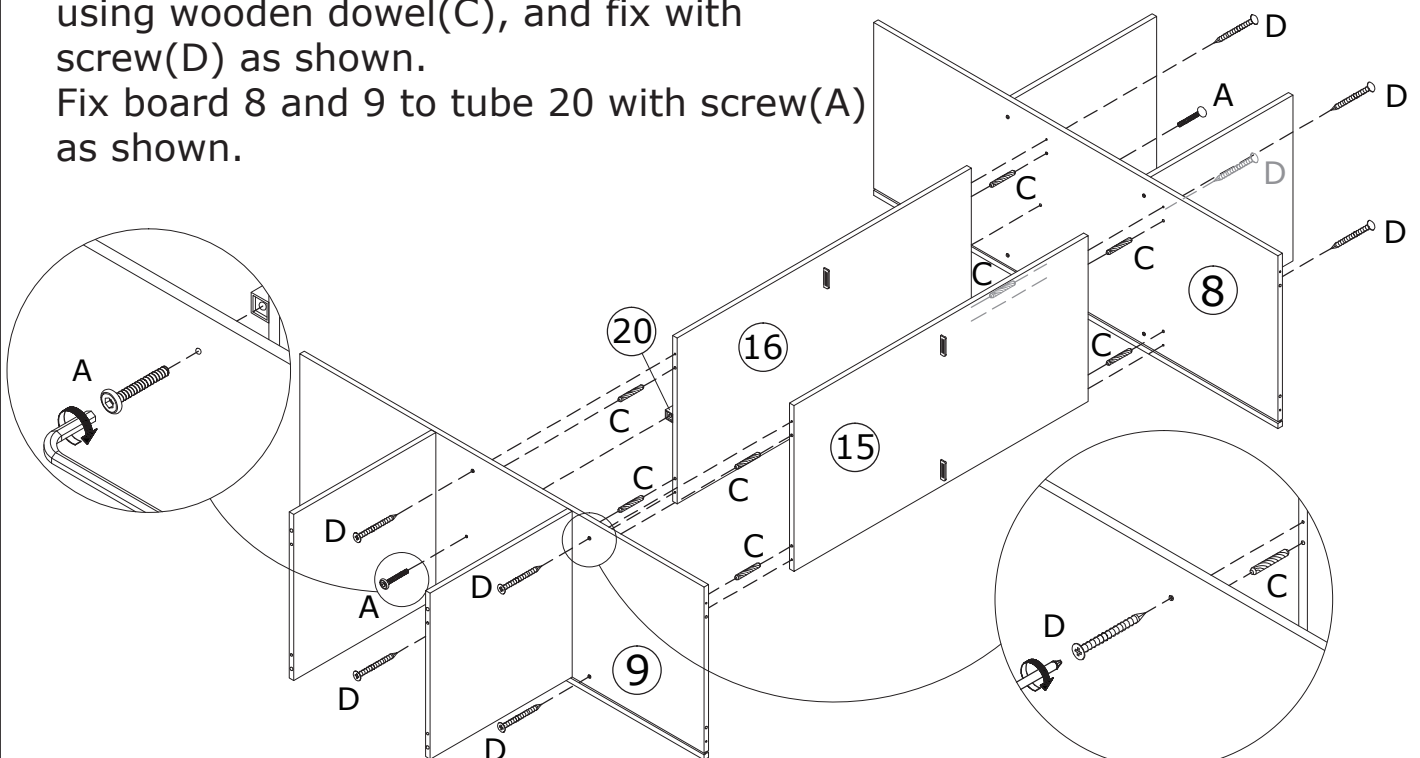


5



E x 8



 Ø6 x 35mm



  Screw eccentric rod(E) into board 4 and 5 as shown.

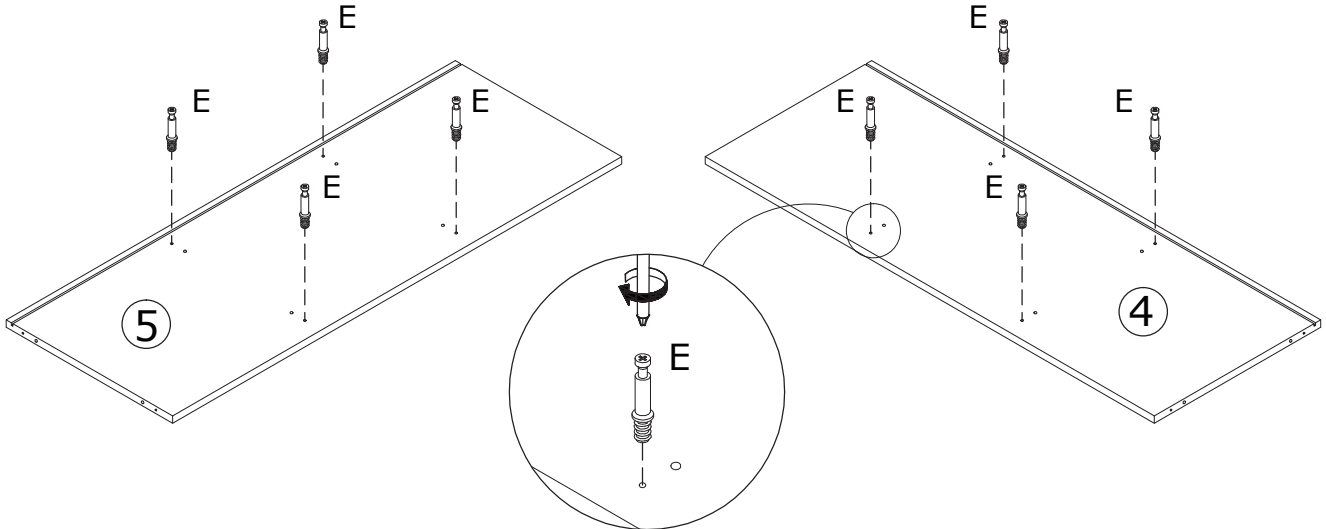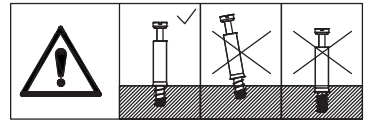

6

C x 4

 
 


Ø6 x 30mm


F x 4



Ø15 x 10mm

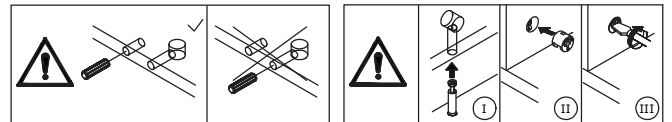

 Connect board 4 to board 11 using wooden dowel(C), add cam lock(F) into board 11 and turn clockwise to tighten as shown.

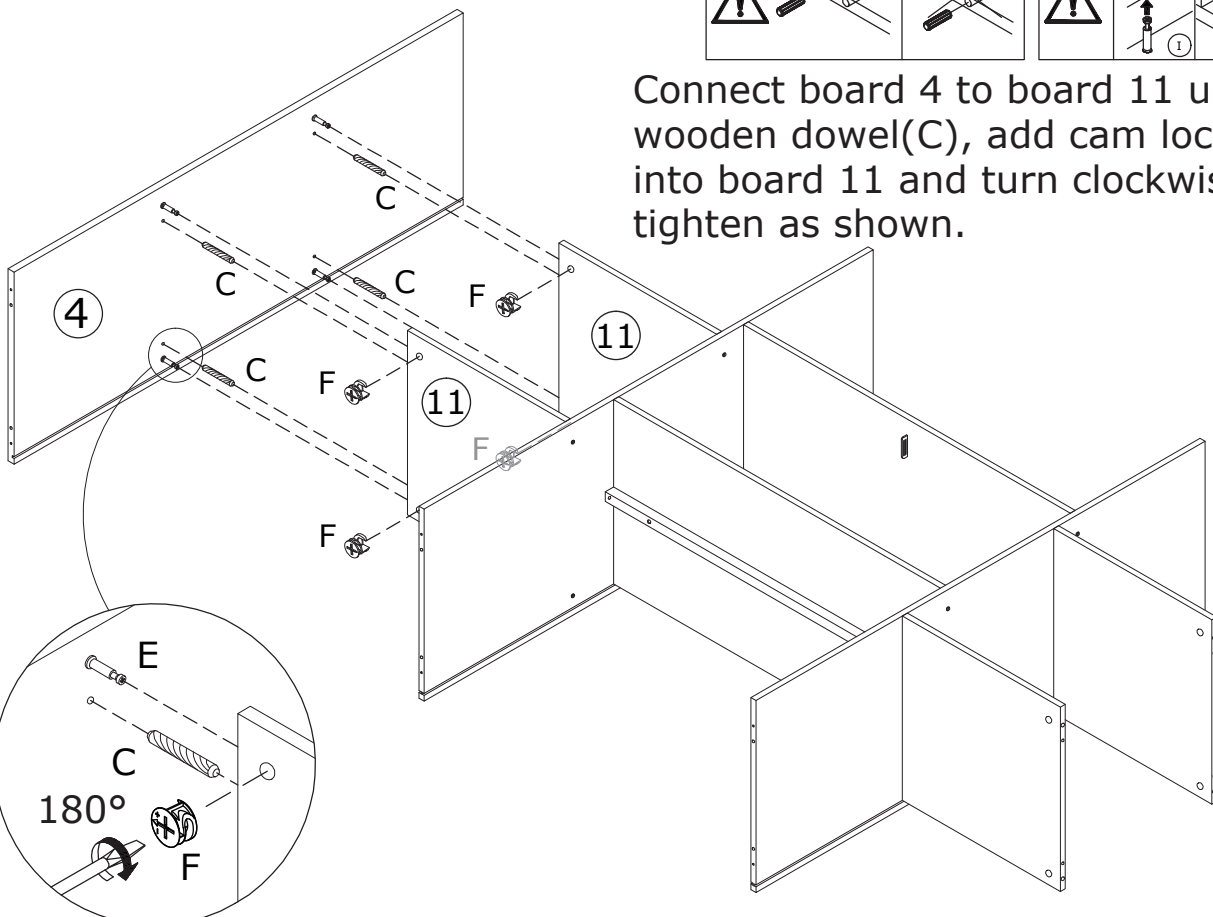

7

C x 4

 
 


Ø6 x 30mm


F x 4



Ø15 x 10mm

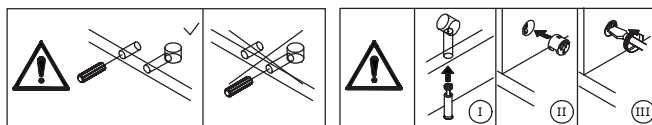

 Connect board 5 to board 12 using wooden dowel(C), add cam lock(F) into board 12 and turn clockwise to tighten as shown.

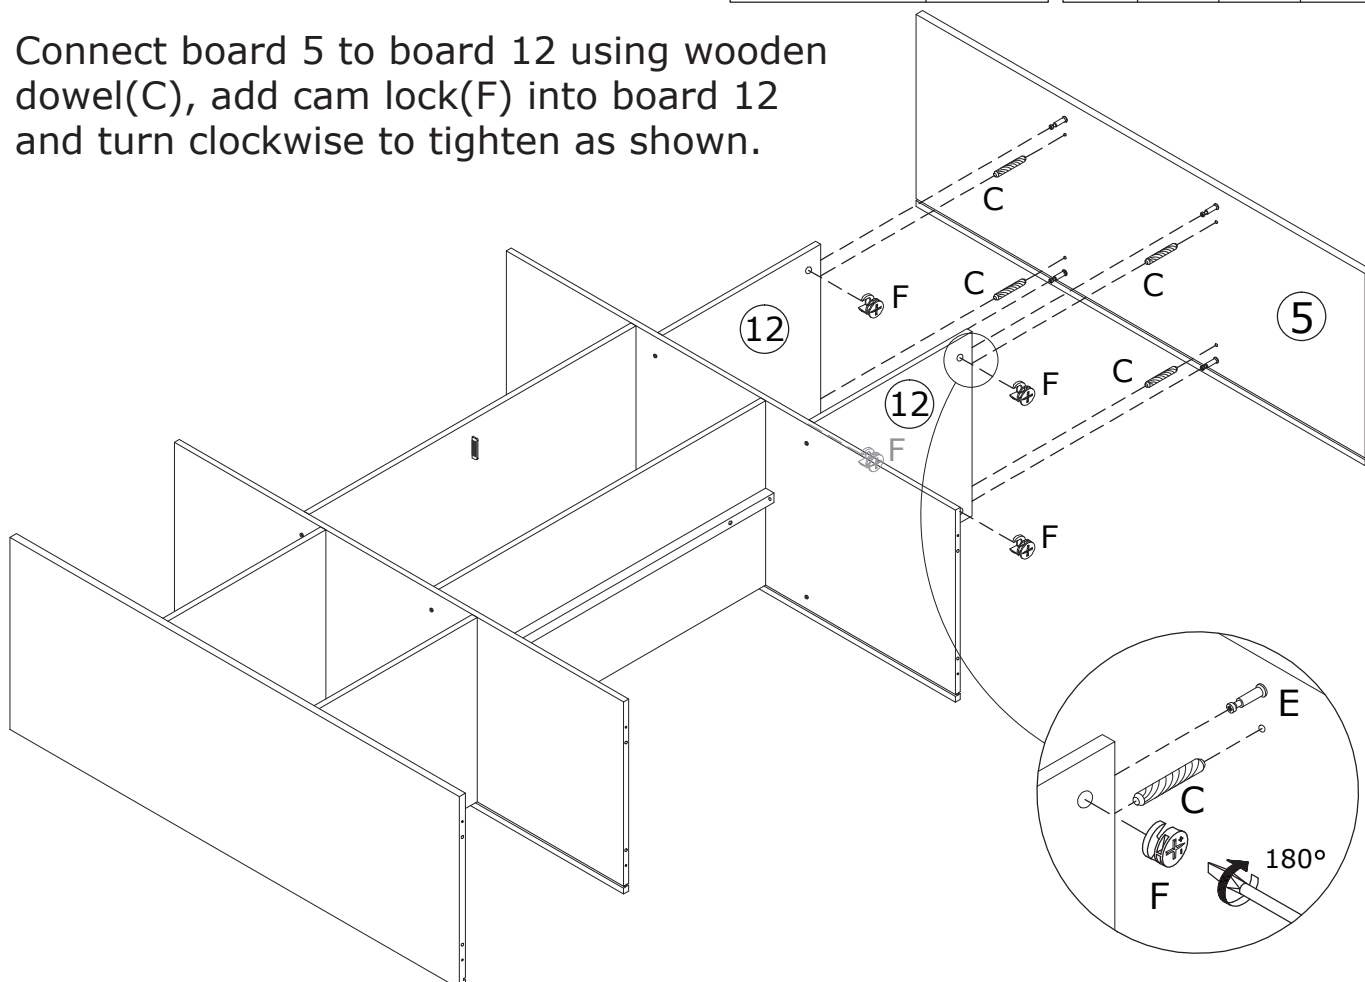


8



E x 10



 Ø6 x 35mm



  Screw eccentric rod(E) into board 2 as shown.

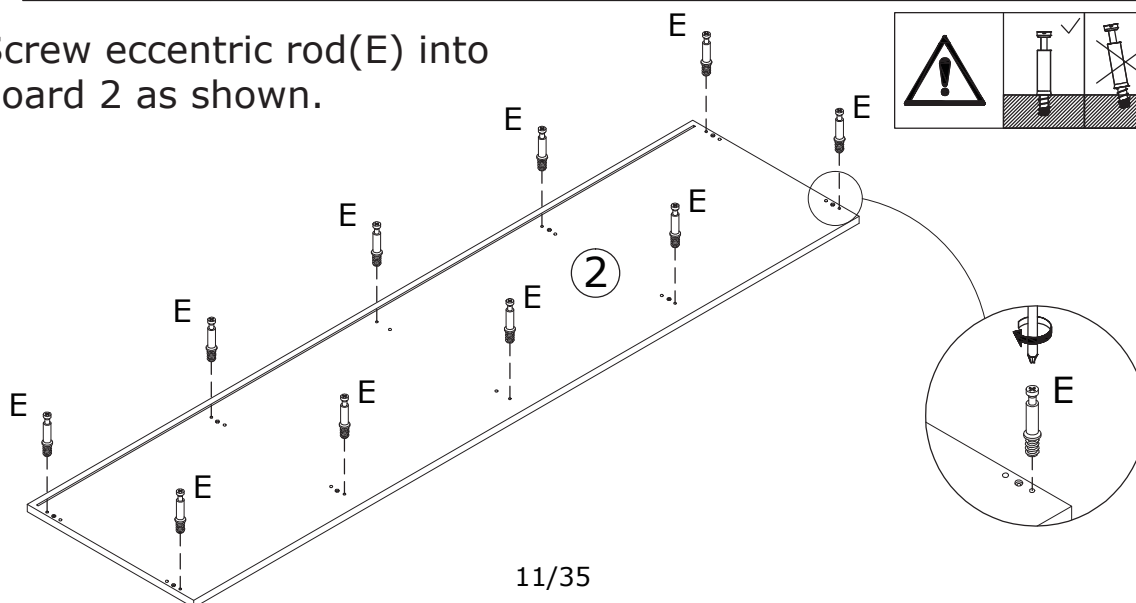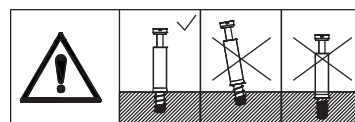

9

C x 8

 


Ø6 x 30mm


D x 8



Ø5 x 40mm




 Cover board 1 to board 5, 9, 8 and 4 using wooden dowel(C), and fix with screw(D) as shown.

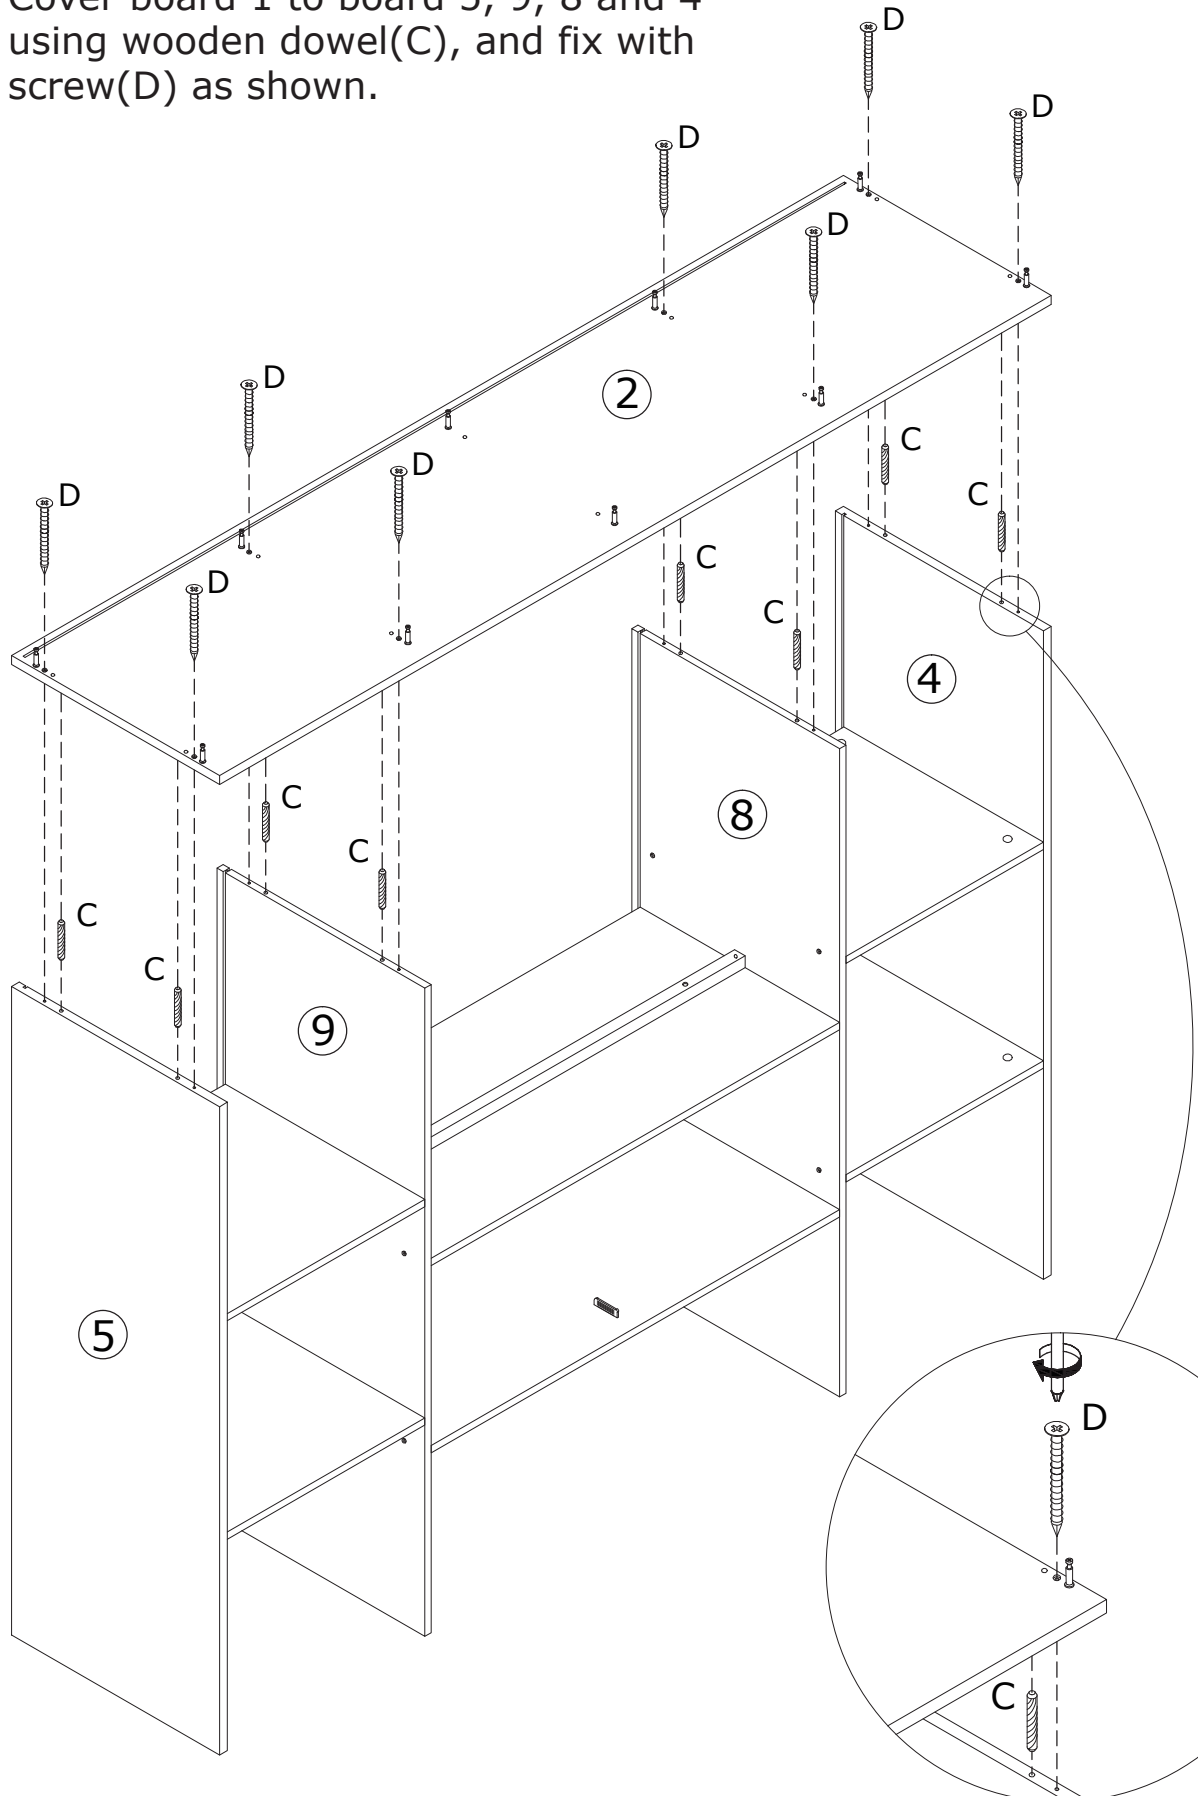

10

 Insert back board 23, 24 and plate 26 along available grooves as shown.

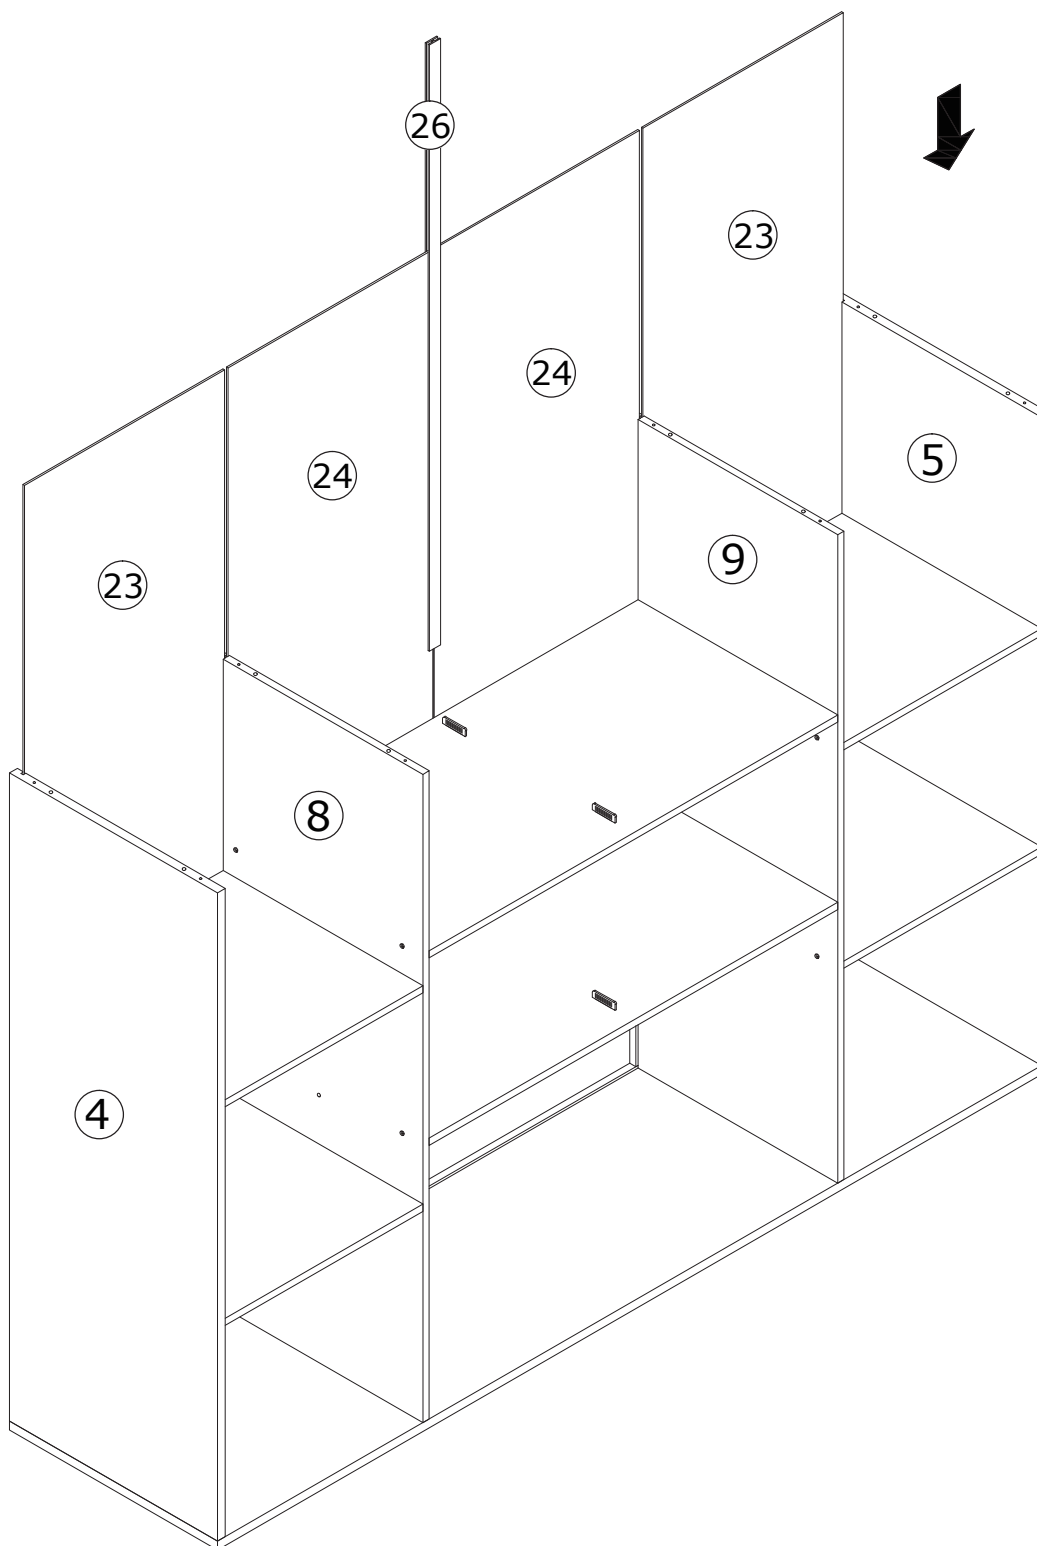

11

B x 2



 
G x 2






H x 2



ø4 x 12mm



   Knock part(B) into board 1 at first.
Flip the board to back, fix part(G)
with screw(H) as shown.

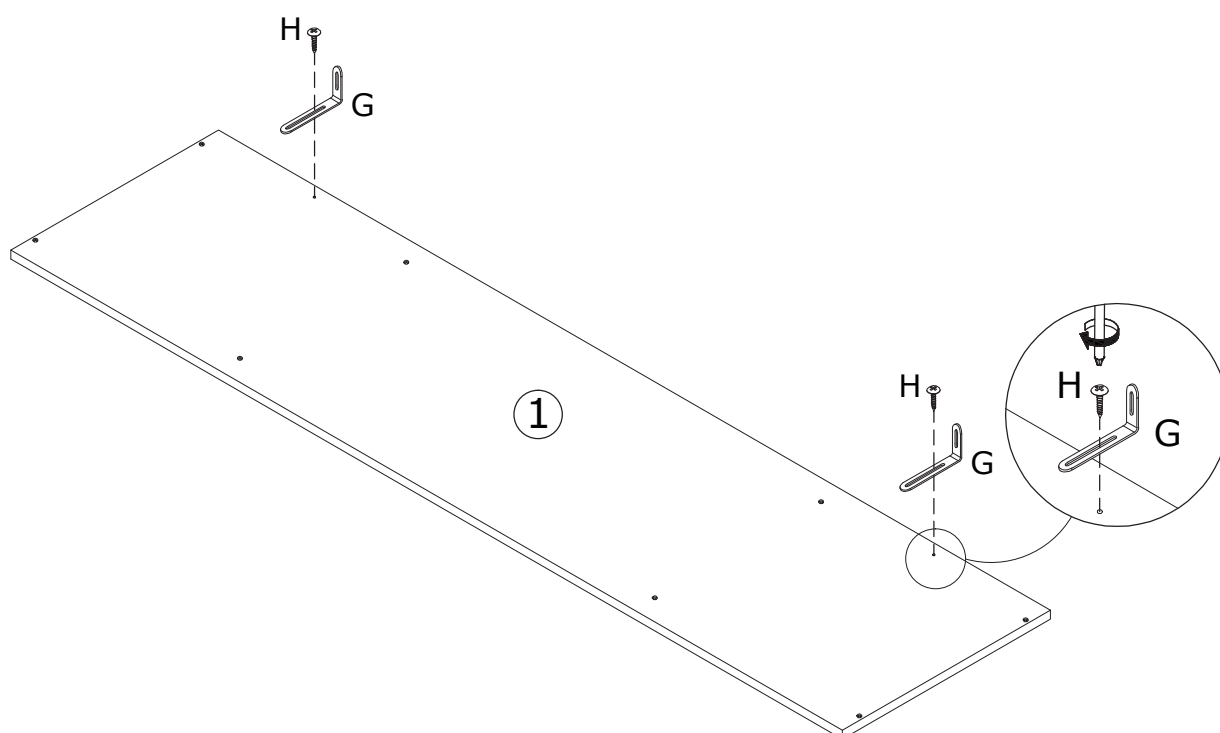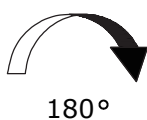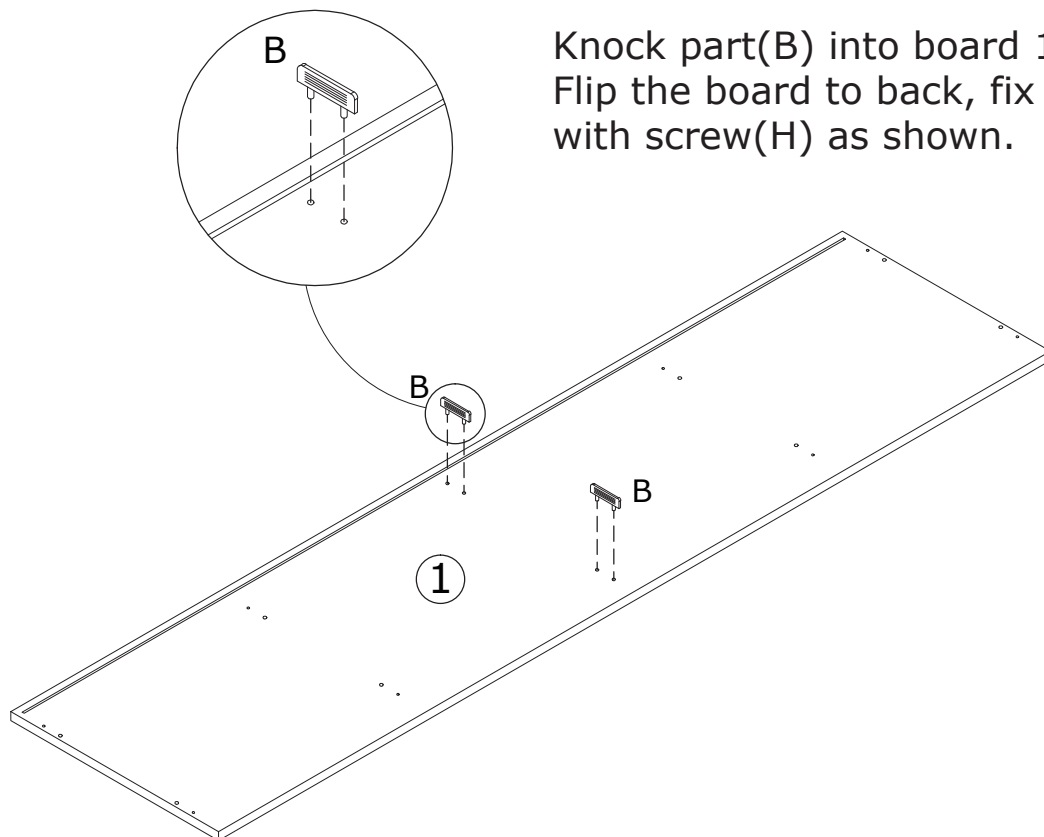

12

C x 8

 


Ø6 x 30mm



D x 8



Ø5 x 40mm




  Cover board 1 to the top using wooden dowel(C),and fix with screw(D) as shown.

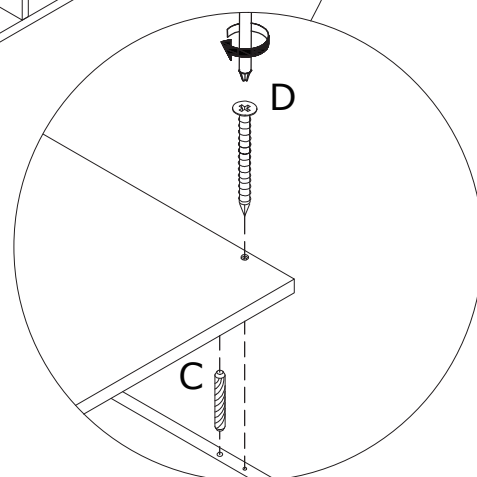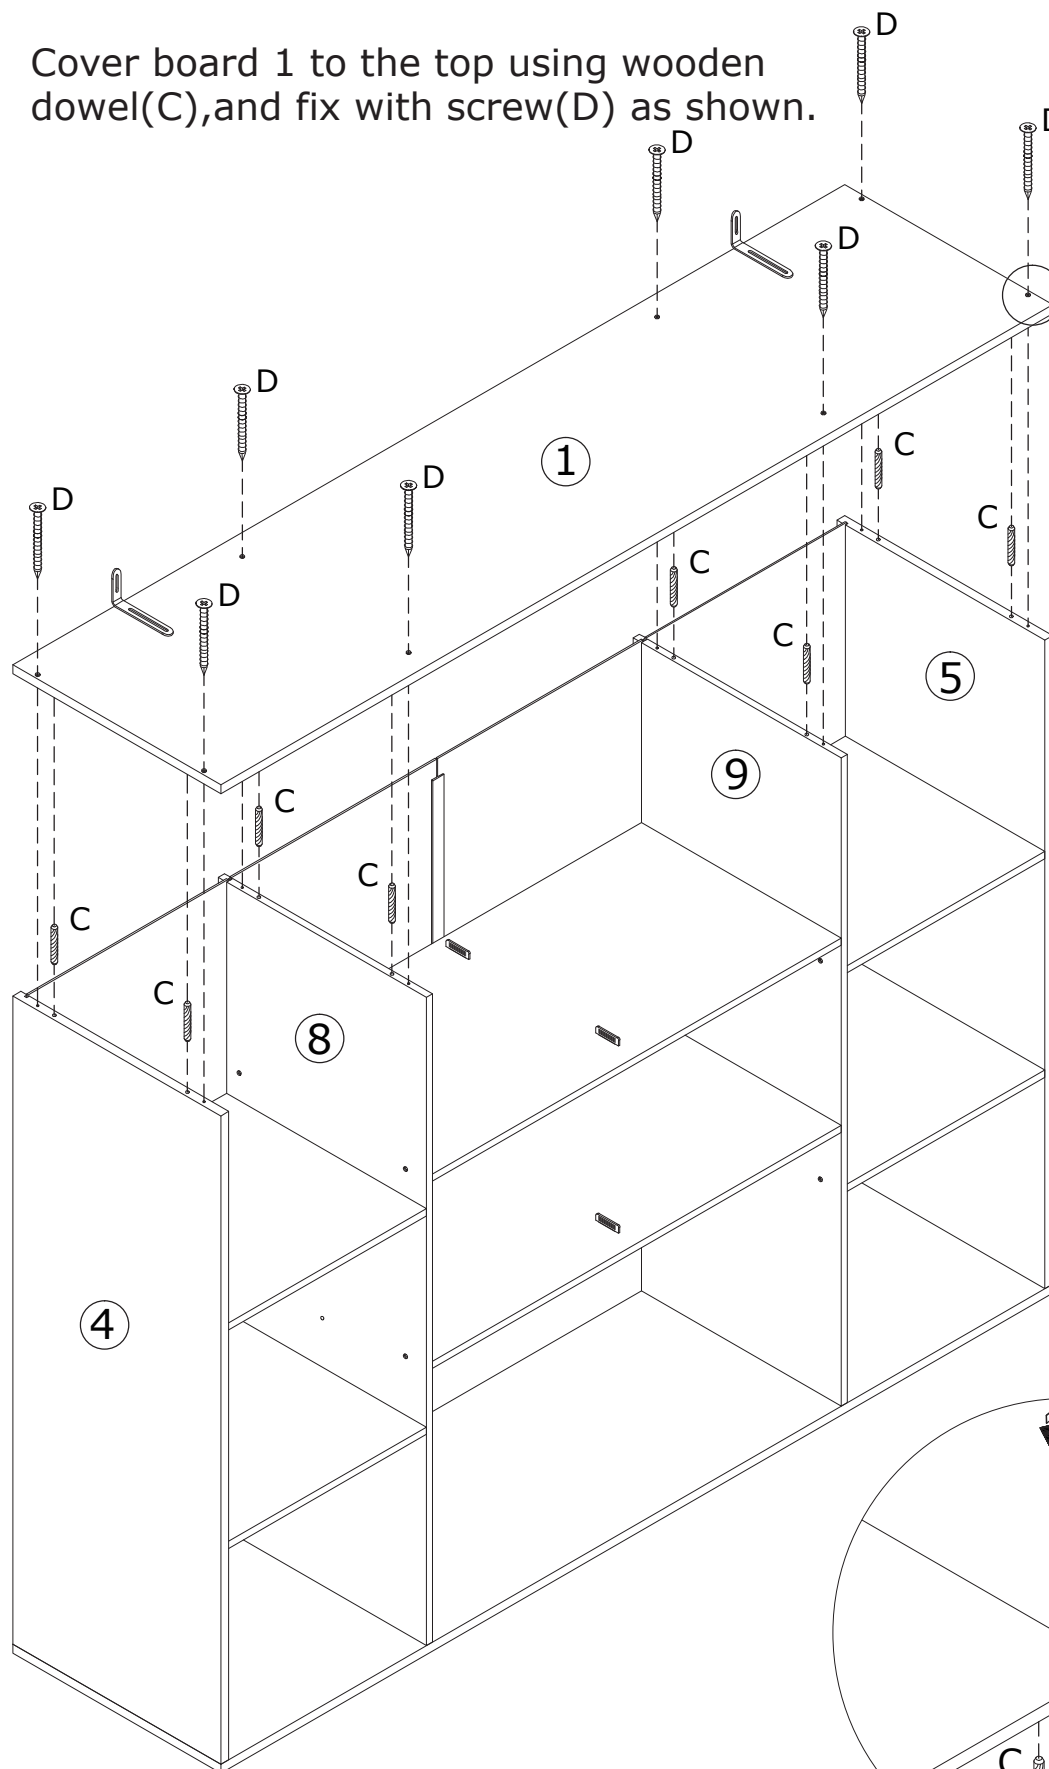


13

 
Insert divider board 19 into as shown.

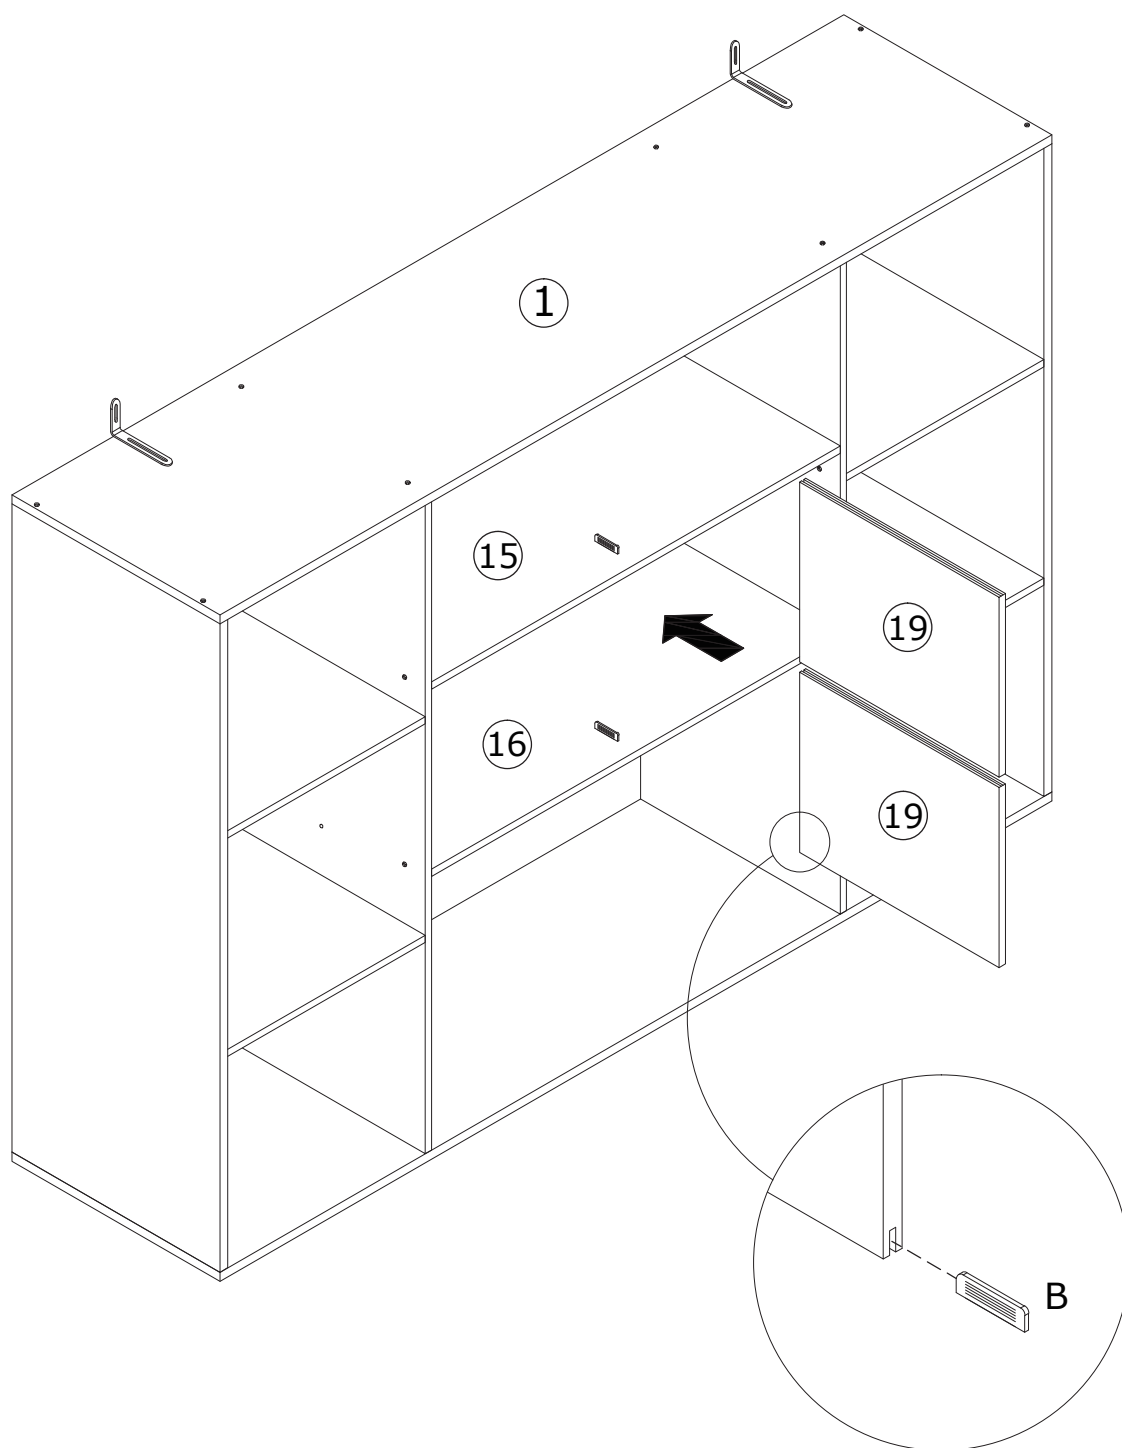

14

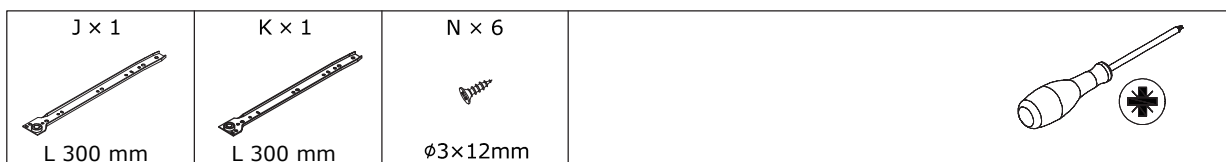 


 
Fix slide rail(J) and (K) to board 6 and 7 with screw(N) as shown.

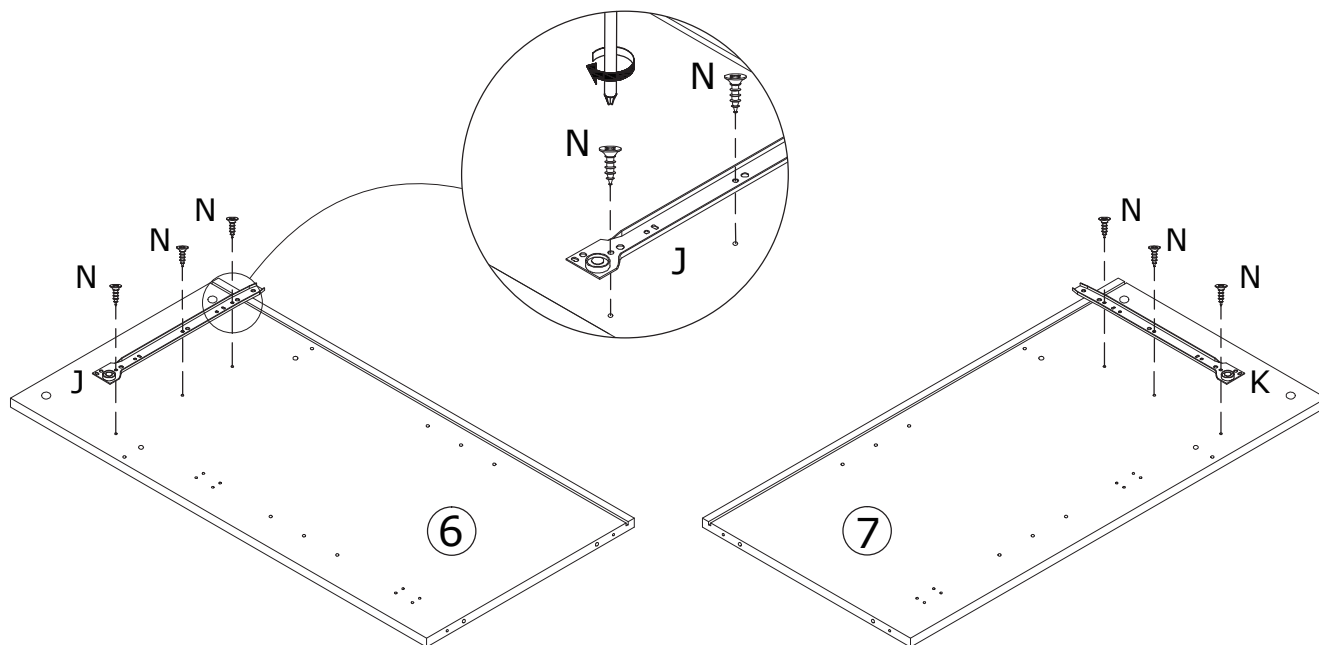



15



  
Screw eccentric rod(E) into board 6 and 7 as shown.

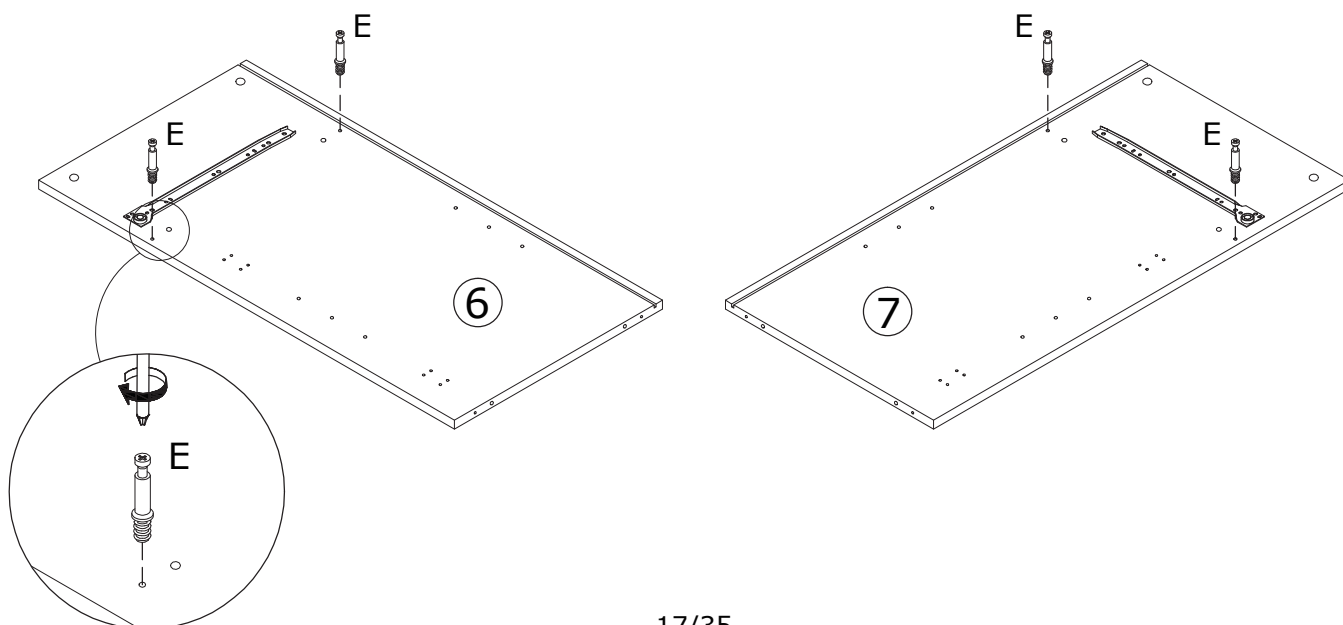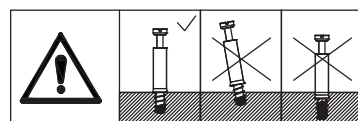


16

  J x 2  L 300 mm	K x 2  L 300 mm	N x 12  Ø3x12mm	
--	--	--	---

 
Fix slide rail(J) to board 17 with screw(N) at first.
Flip the board to back, fix slide rail(K) as shown.

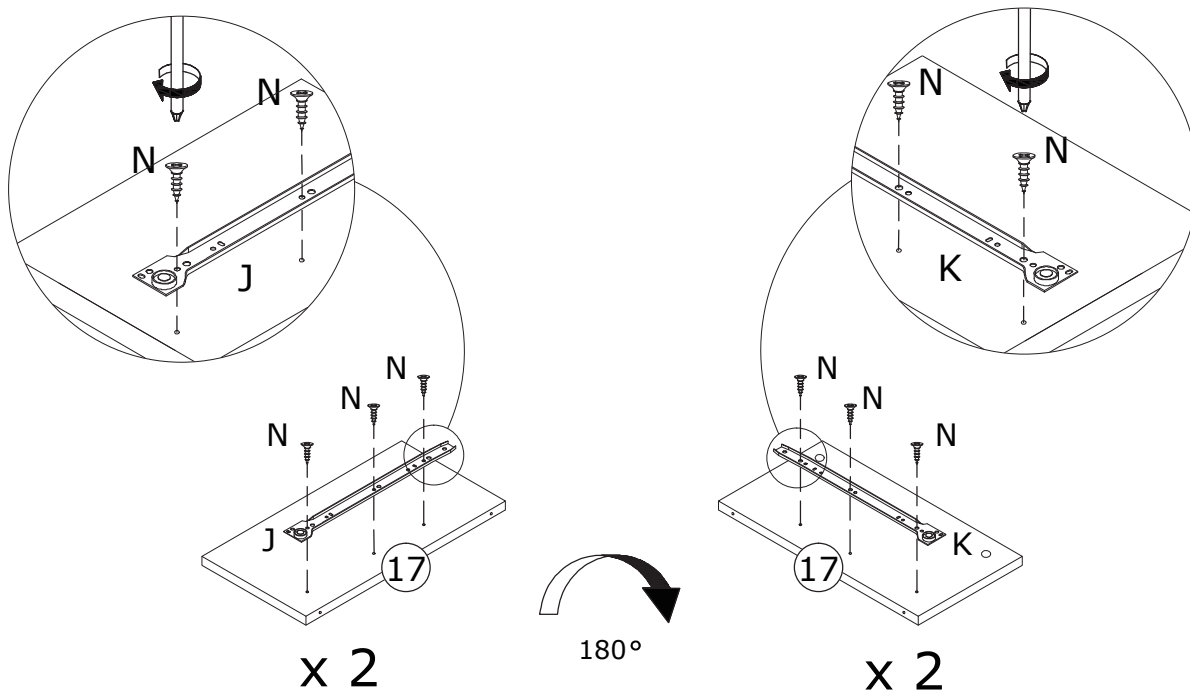




17

 D x 4  Ø5 x 40mm	
---	---

 
Fix board 18 to board 17 with screw(D) as shown.

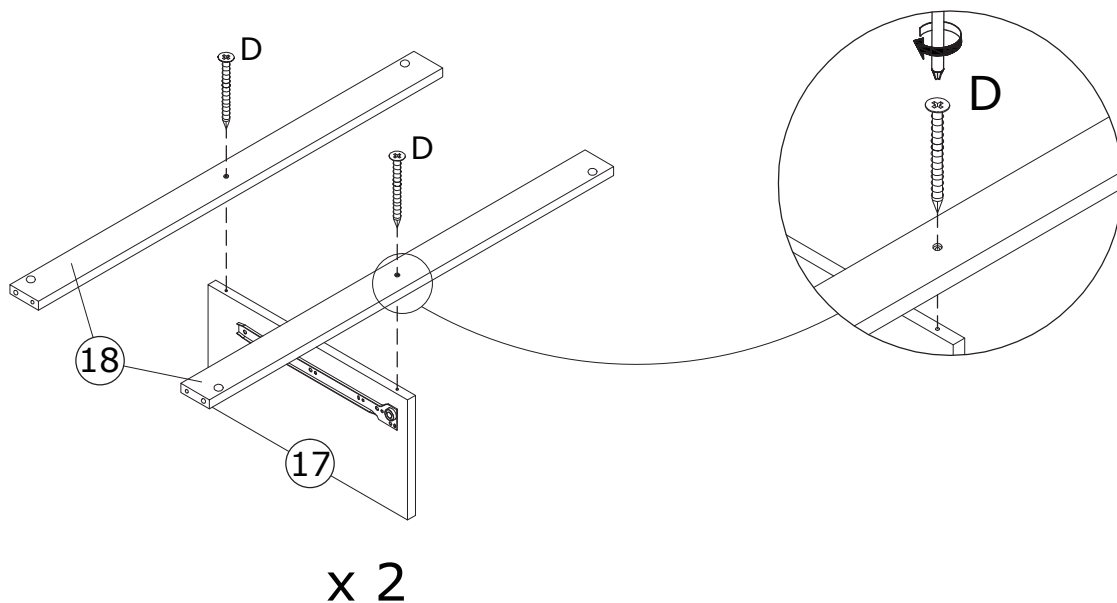


18

   J x 1  L 300 mm	K x 1  L 300 mm	N x 6  Ø3x12mm	
--	--	---	---


 
Fix slide rail(J) to board 10 with screw(N) at first.
Flip the board to back, fix slide rail(K) as shown.

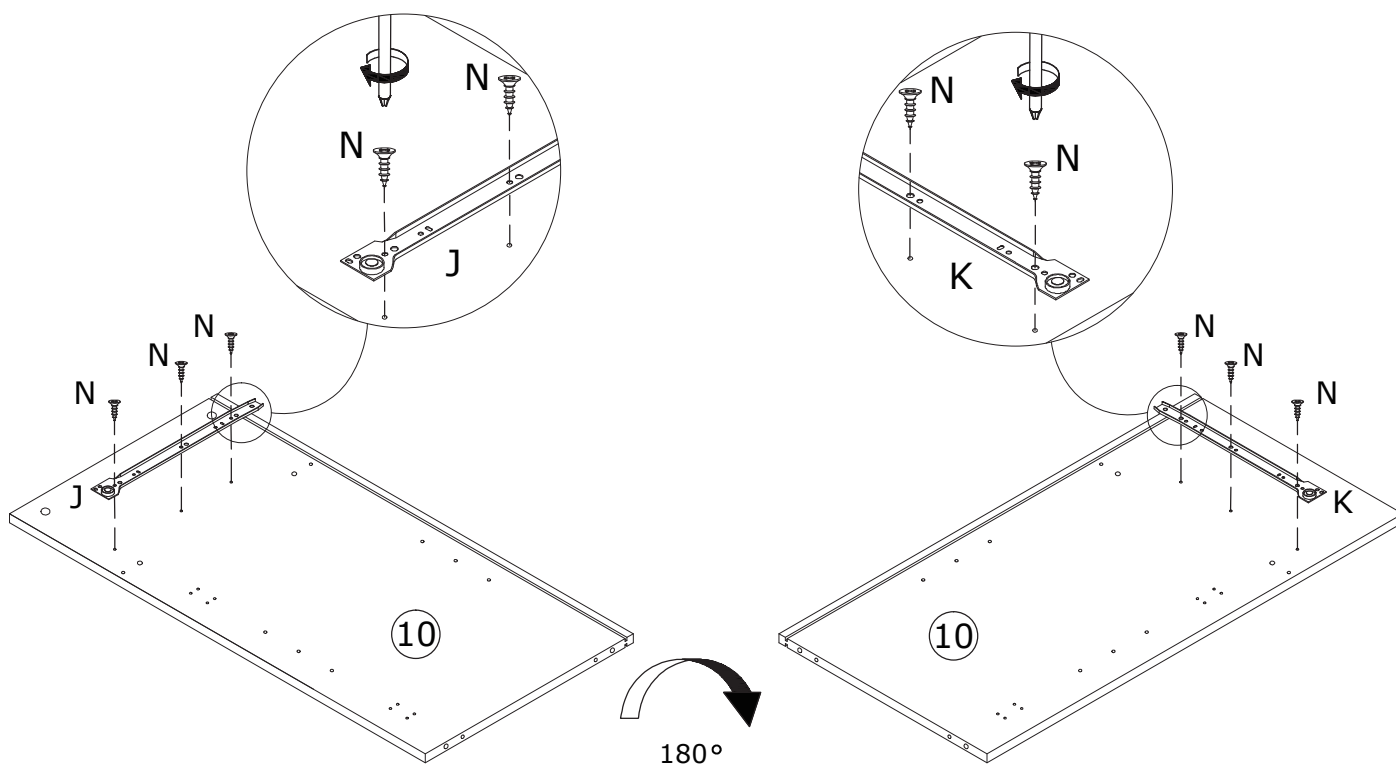

19

 E x 4  Ø6 x 35mm	
---	---

  Screw eccentric rod(E) into board 10 at first.
Flip the board to back, screw eccentric rod(E)
as well.

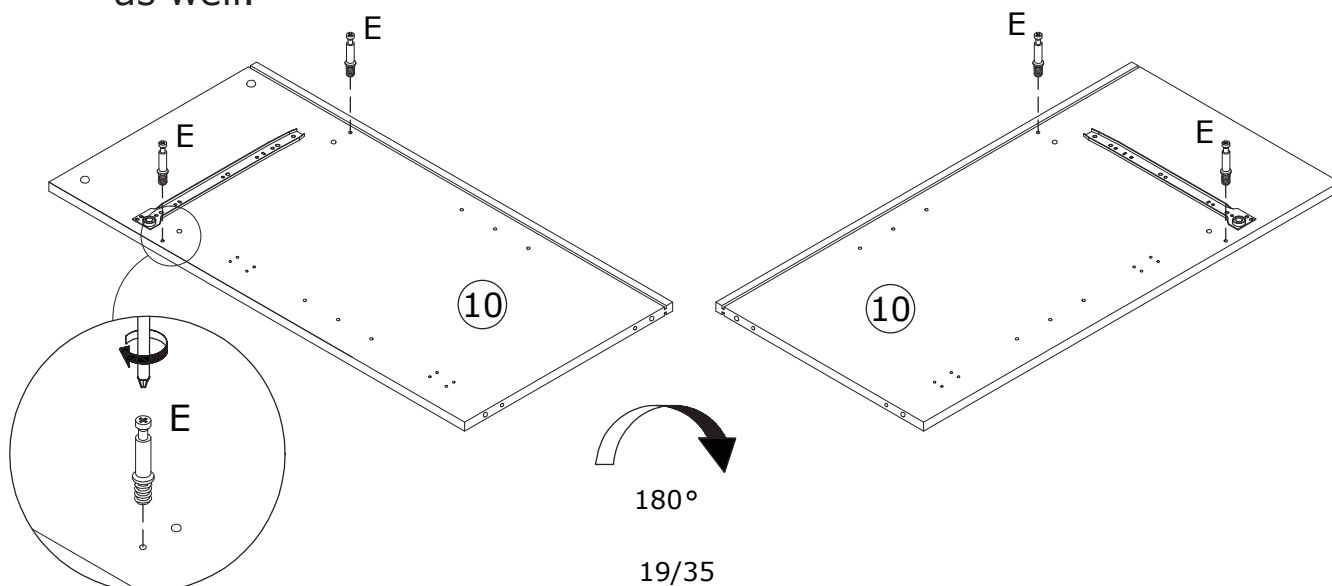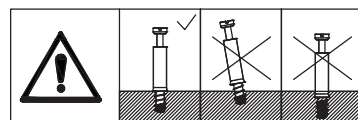


20

P x 2



Ø6 x 50mm

 Insert long wooden dowel(P)
into board 10 as shown.


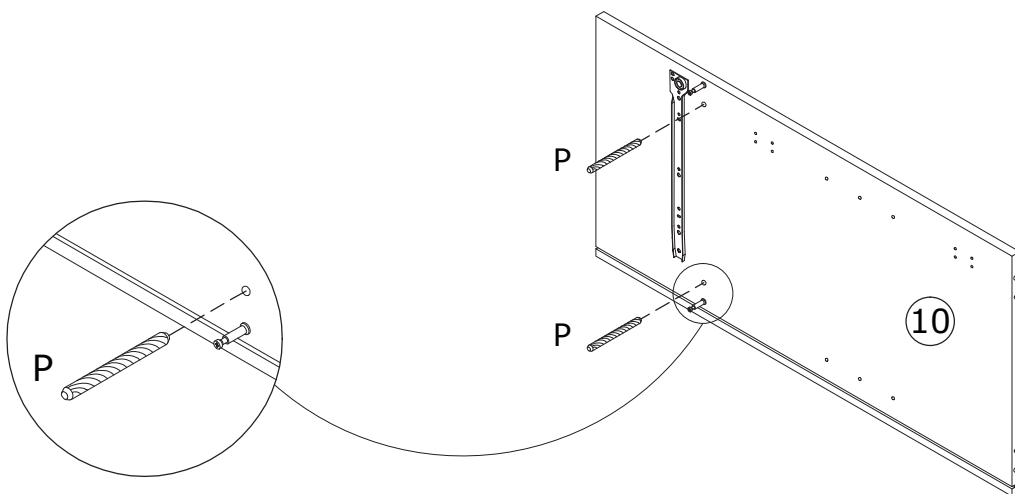


21


F x 4



  Ø15 x 10mm

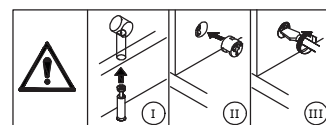

 Connect board 10 to board 18,
add cam lock(F) into board 18
and turn clockwise to tighten
as shown.

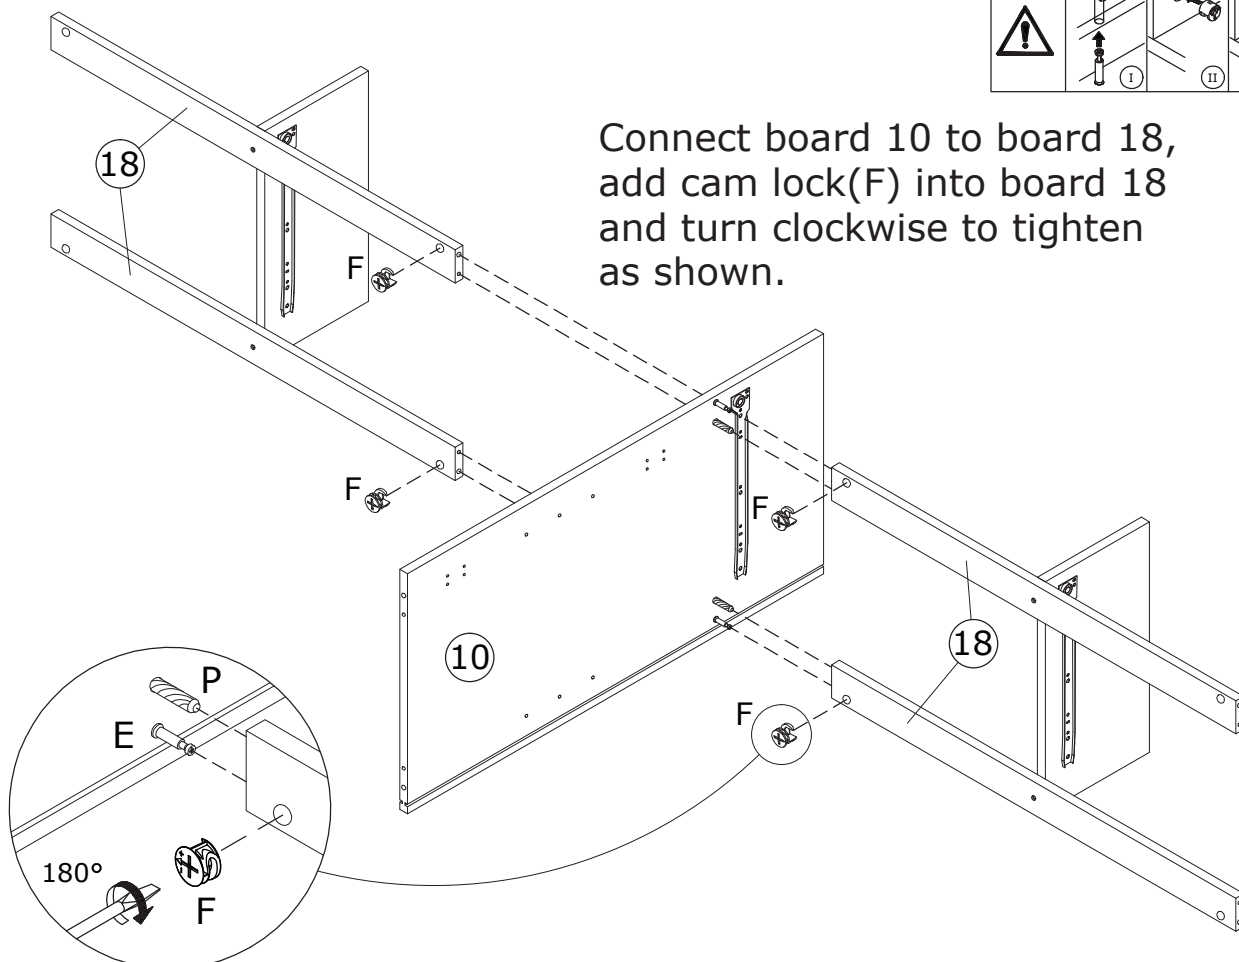

22

C x 4

 
 
 


Ø6 x 30mm

F x 4



Ø15 x 10mm

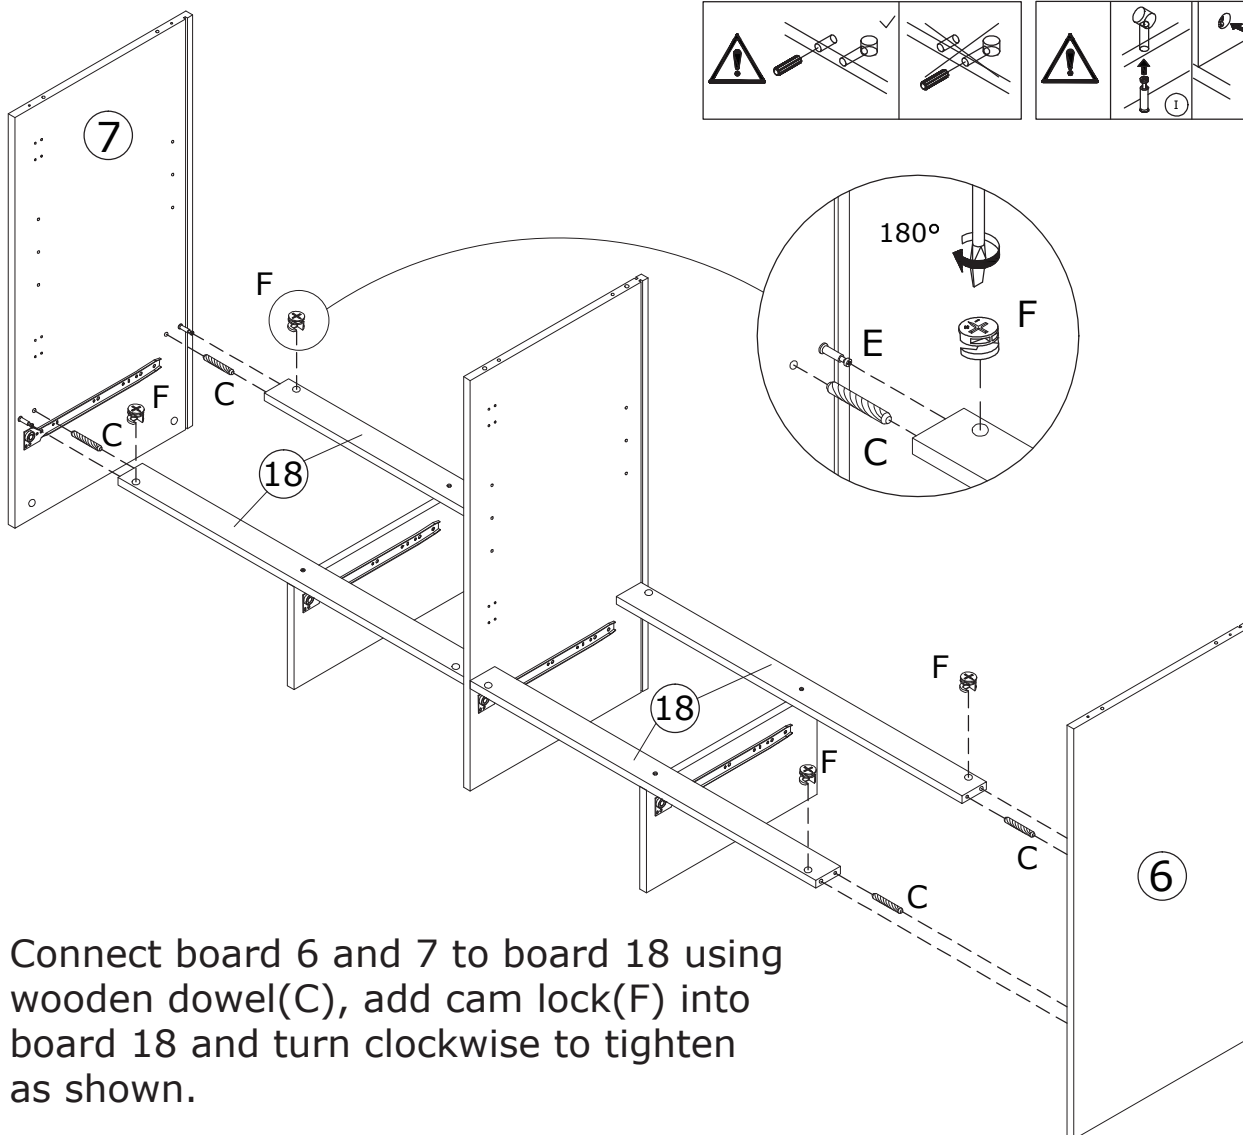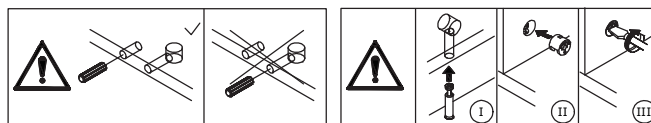



Connect board 6 and 7 to board 18 using wooden dowel(C), add cam lock(F) into board 18 and turn clockwise to tighten as shown.

23


E x 11



  Ø6 x 35mm

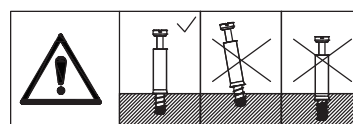

Screw eccentric rod(E) into board 3.

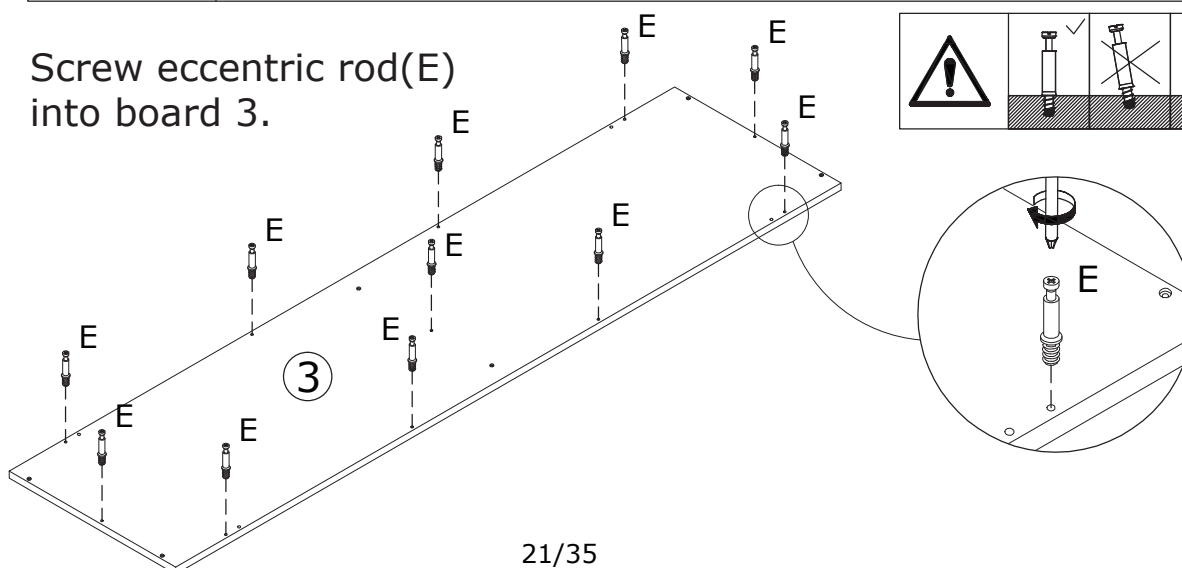 

24

C x 6

 


Ø6 x 30mm



D x 6



Ø5 x 40mm



  Cover board 3 to board 7, 10 and 6 using wooden dowel(C), and fix with screw(D) as shown.


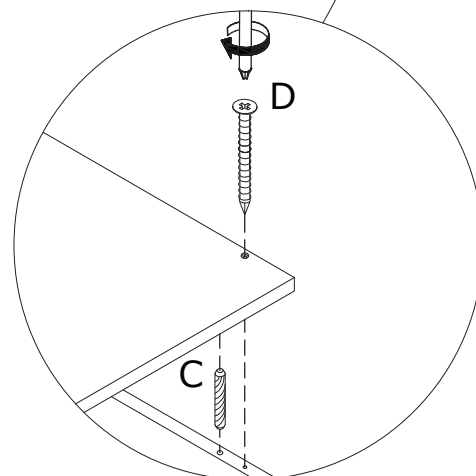
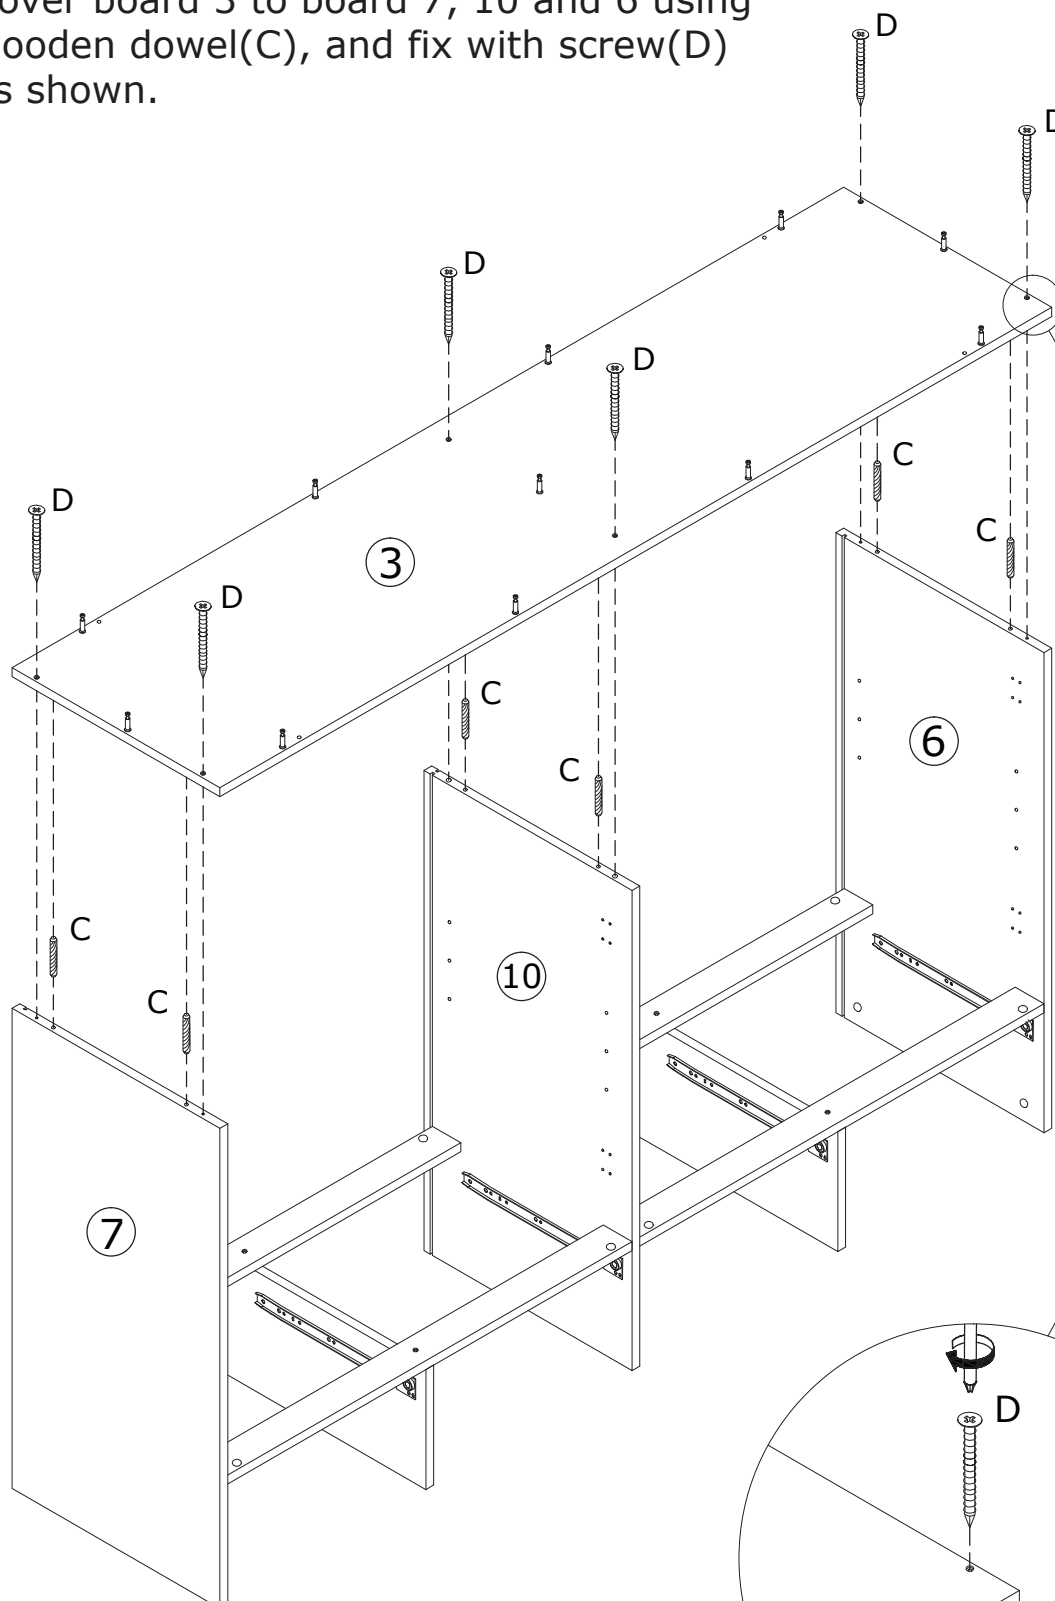


25

E x 6



   Ø6 x 35mm

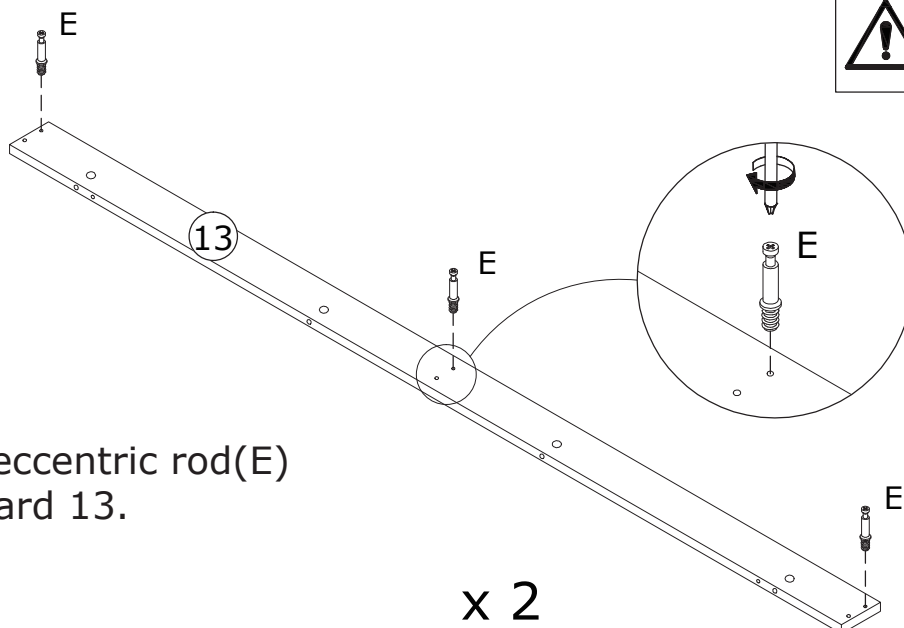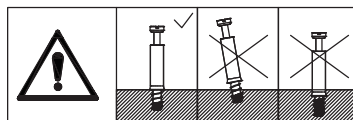

Screw eccentric rod(E)
into board 13.

x 2

26

C x 6

 
 
 


Ø6 x 30mm

F x 6



Ø15 x 10mm

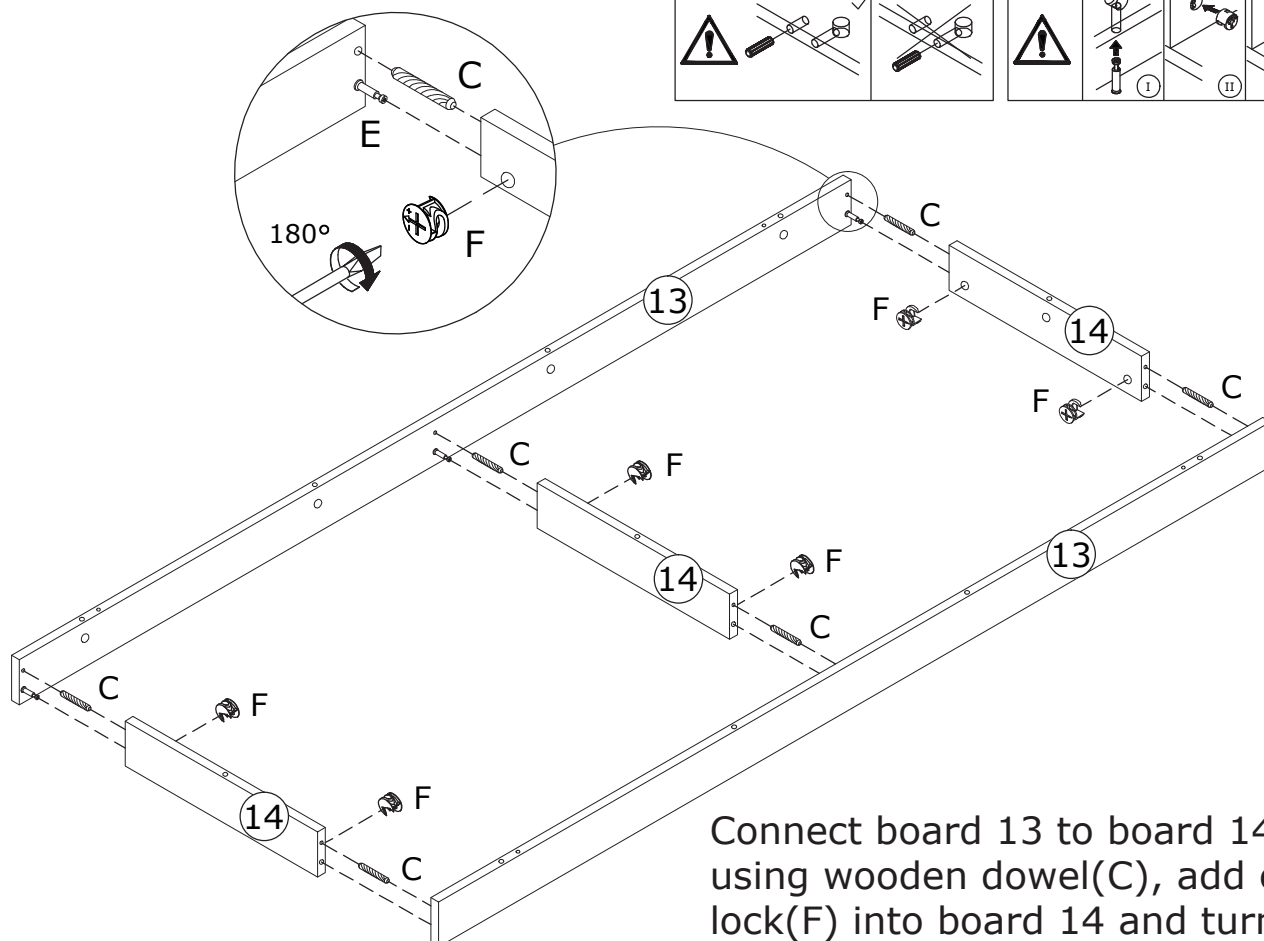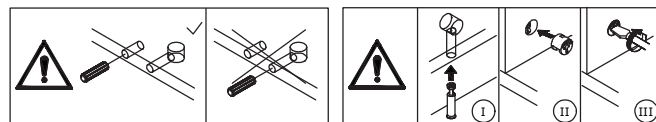

Connect board 13 to board 14
using wooden dowel(C), add cam
lock(F) into board 14 and turn
clockwise to tighten as shown.

27

C x 4

 
 


Ø6 x 30mm



F x 11



Ø15 x 10mm

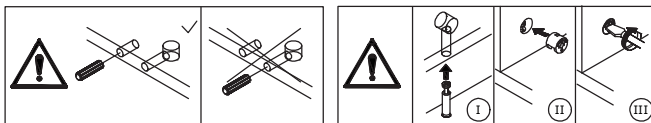


  Attach the part to board 3 using wooden dowel(C), add cam lock(F) into and turn clockwise to tighten as shown.

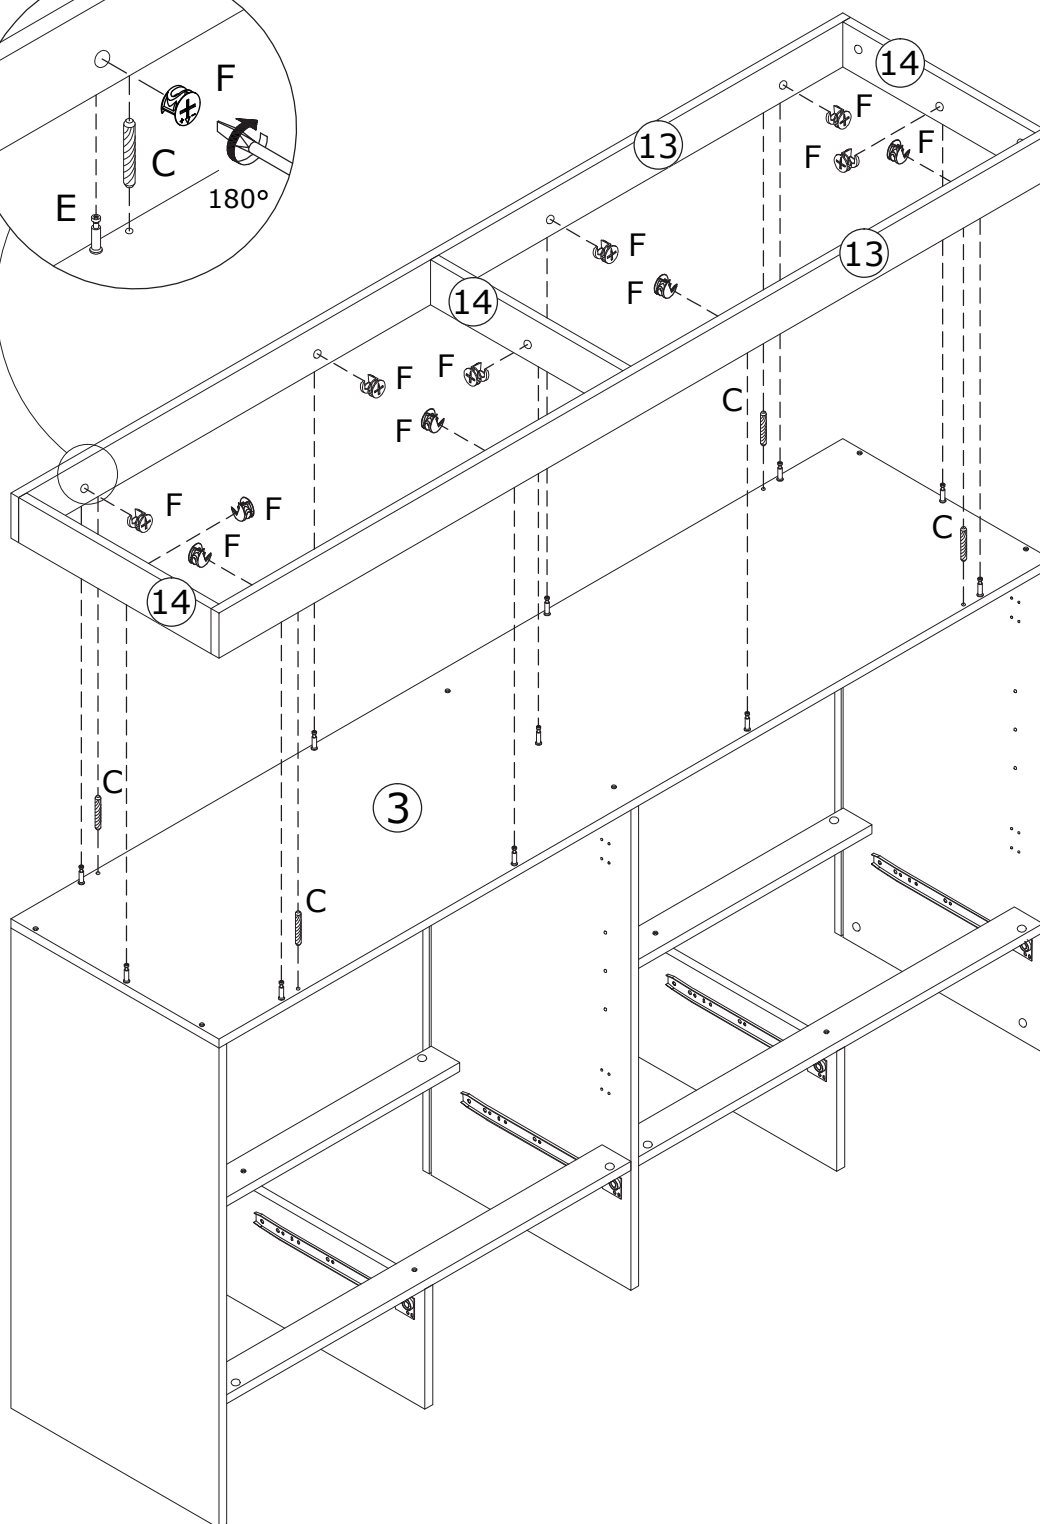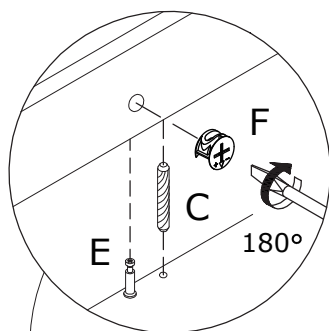

28

 Insert back board 25 and plate 27 along available grooves as shown.

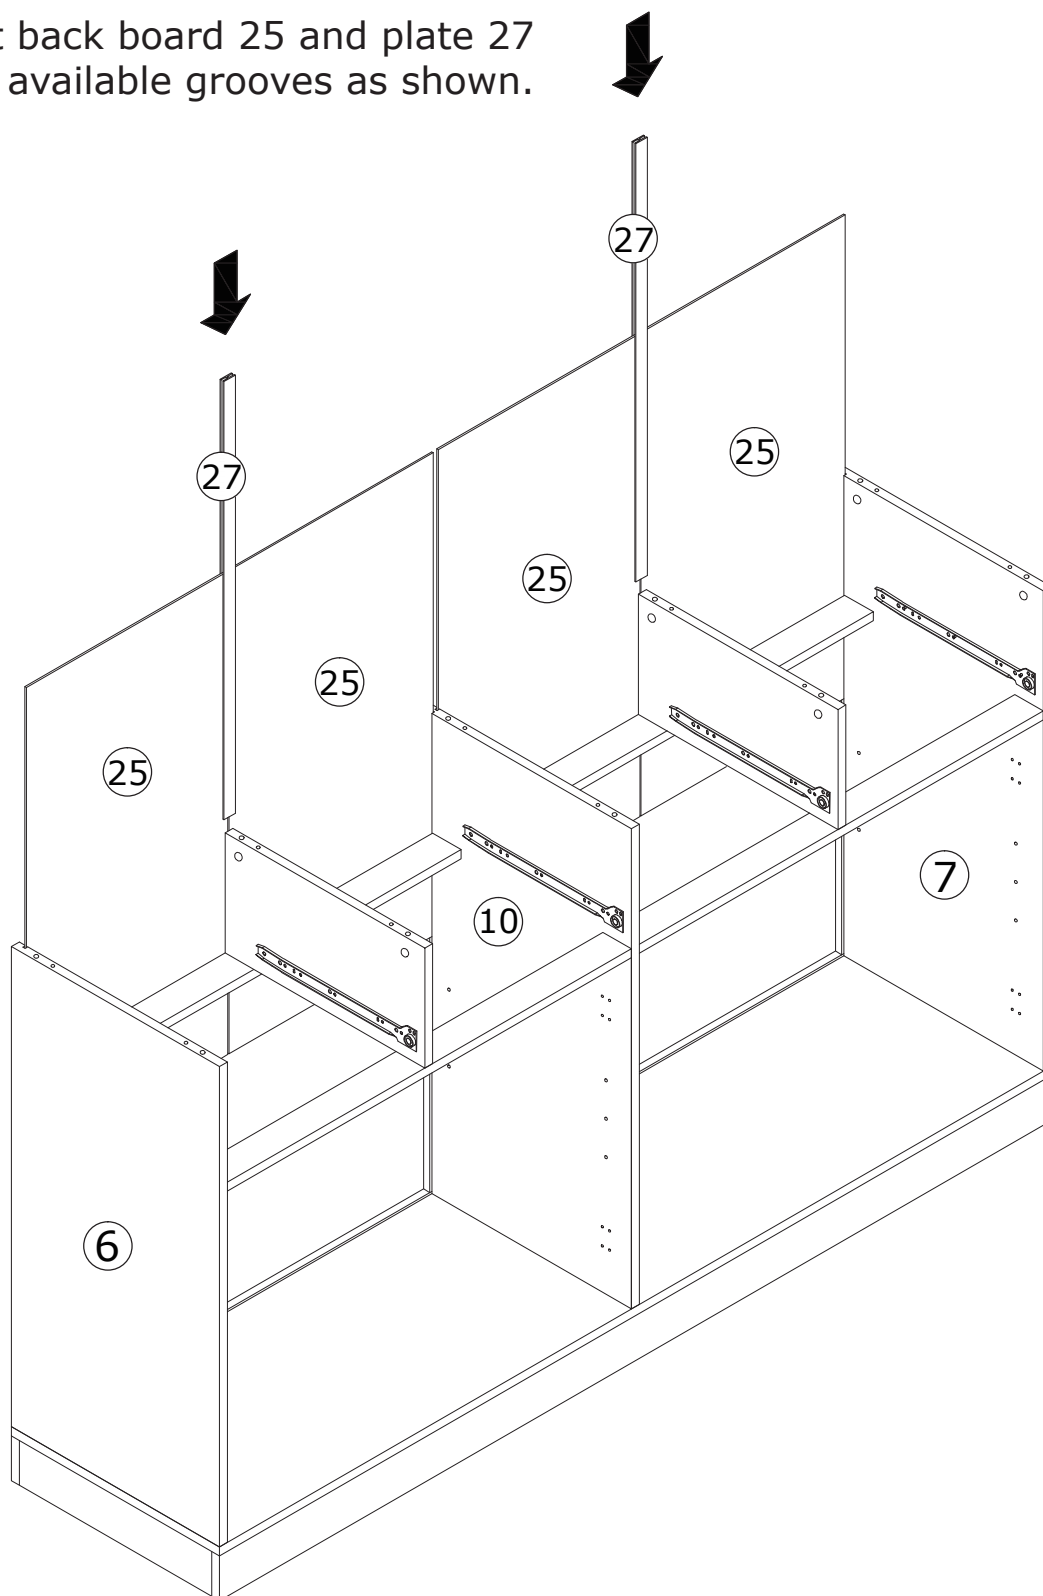

29

C x 10

 


Ø6 x 30mm




F x 10



Ø15 x 10mm



   Connect the two assembled components using wooden dowel(C), add cam lock(F) into and turn clockwise to tighten as shown.

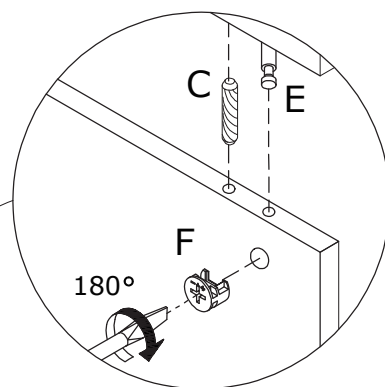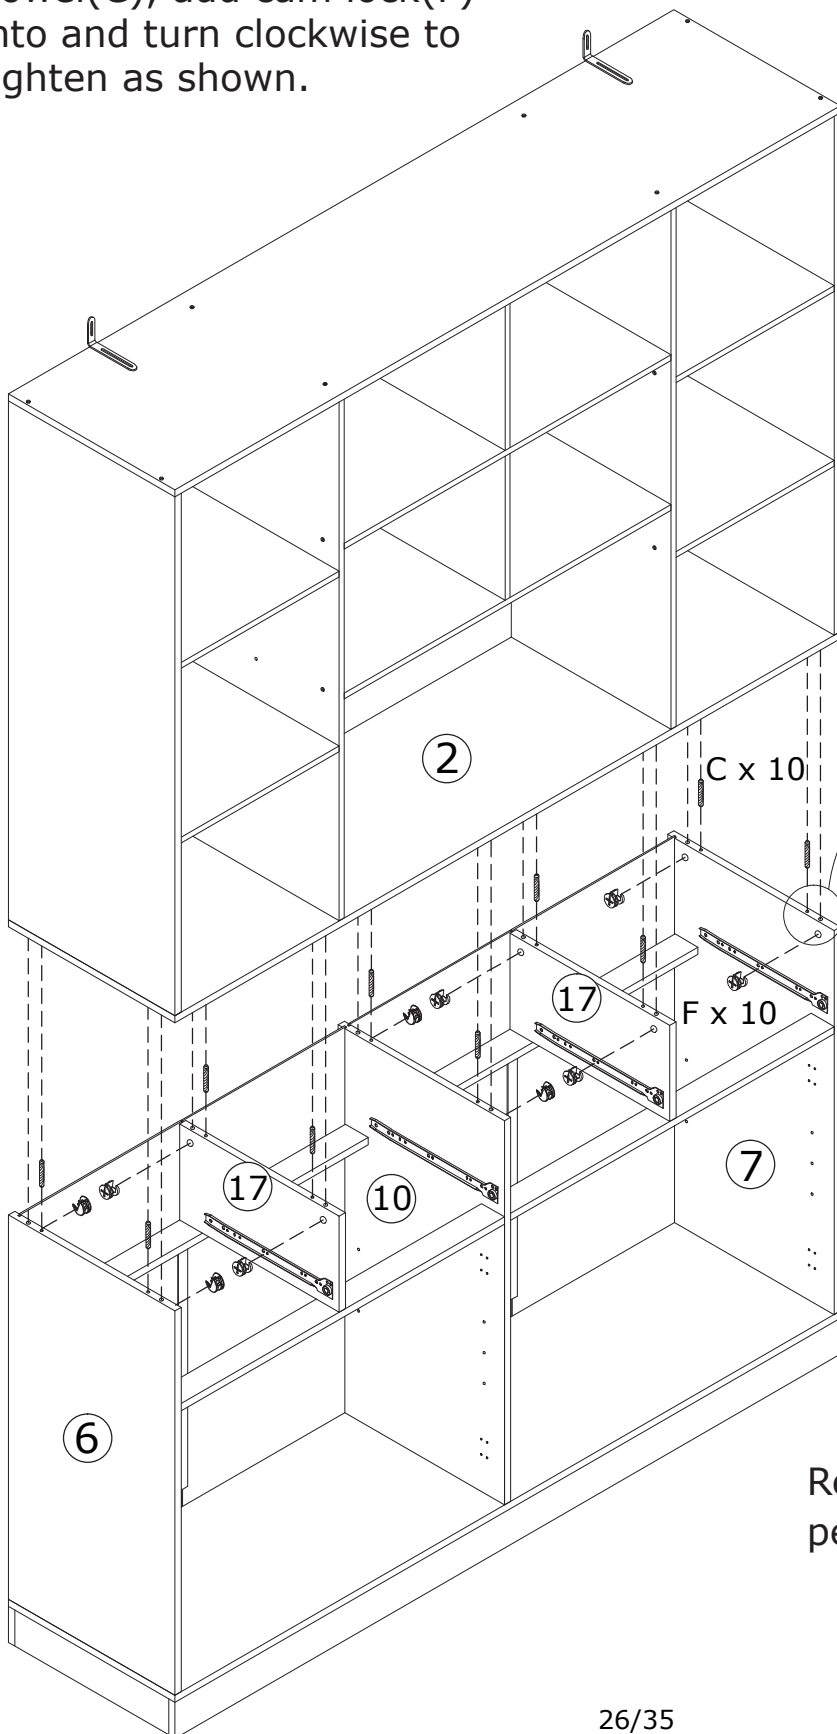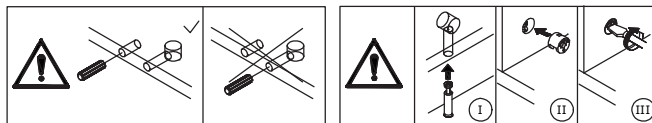


Request more than two people to assemble.

30

Q x 8



 Insert layer pin(Q) into board 6, 10 and 7,
then place shelf board 21 in as shown.

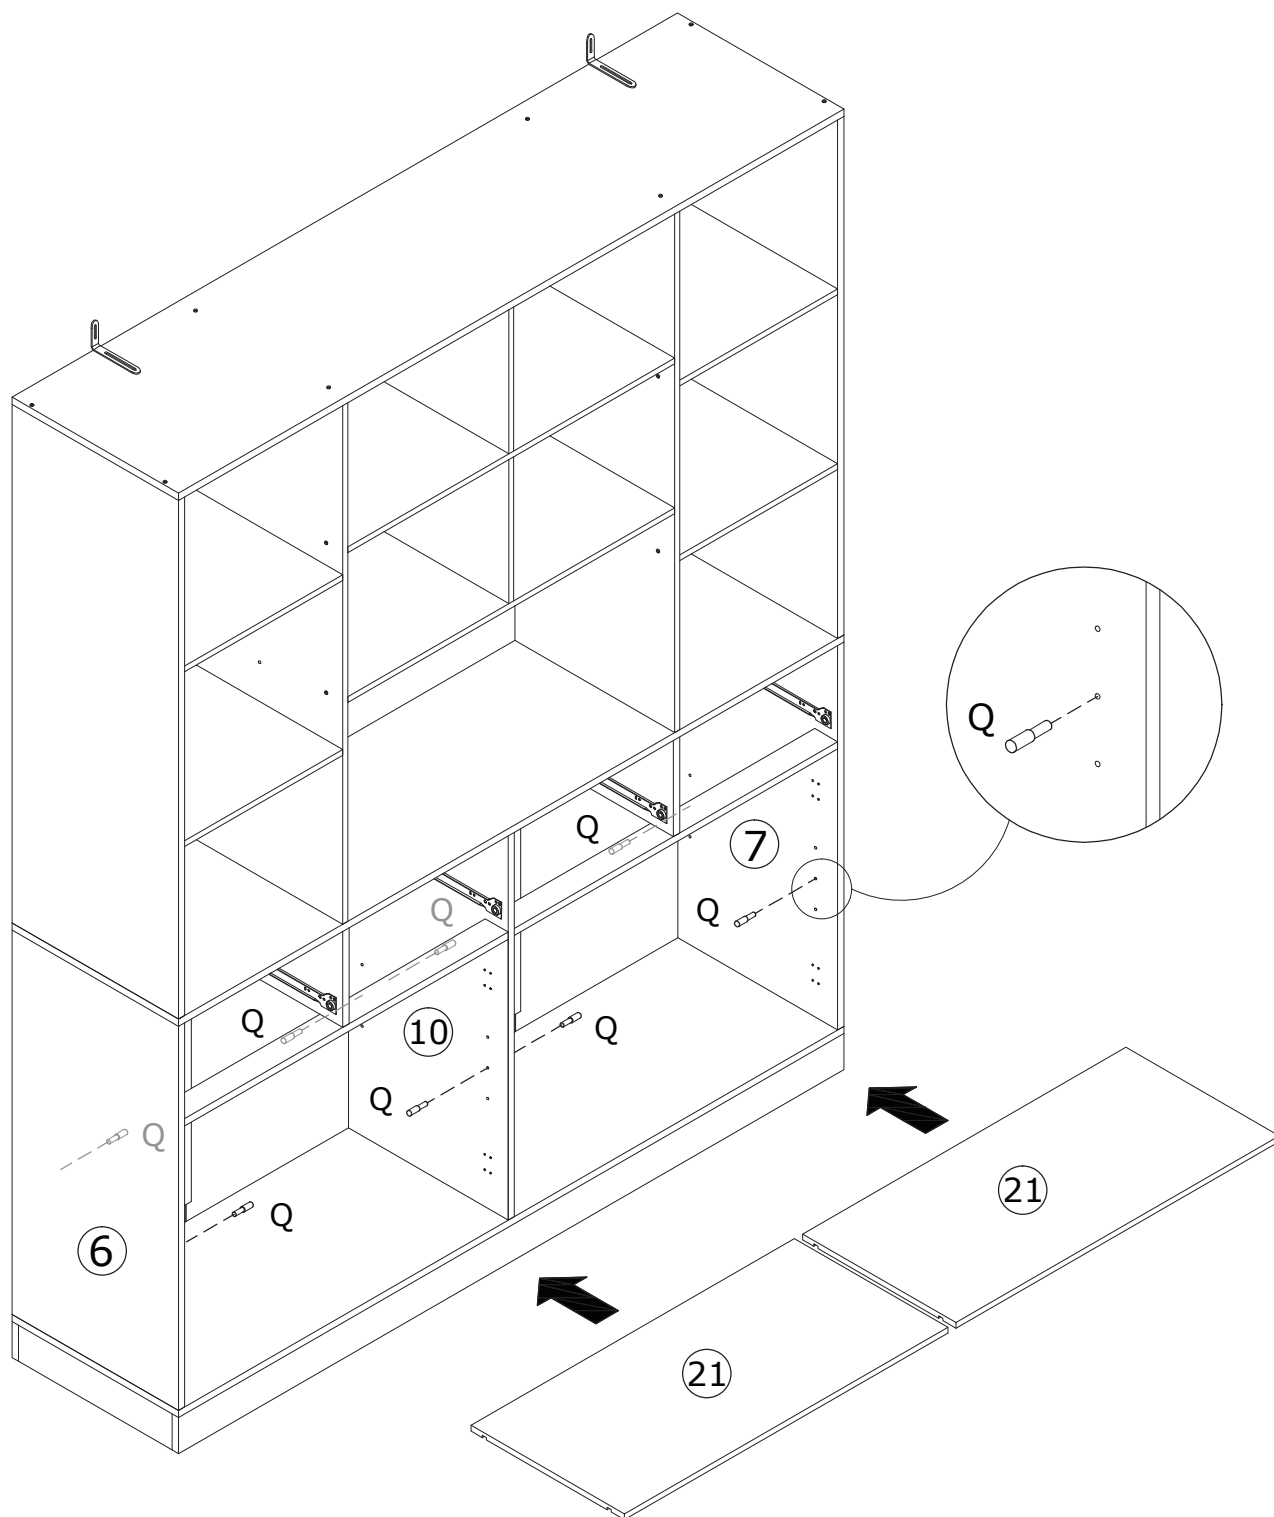


31

H x 16




Ø4 x 14mm

 R x 8



 Fix hinge(R) to board 22 with screw(H) as shown.

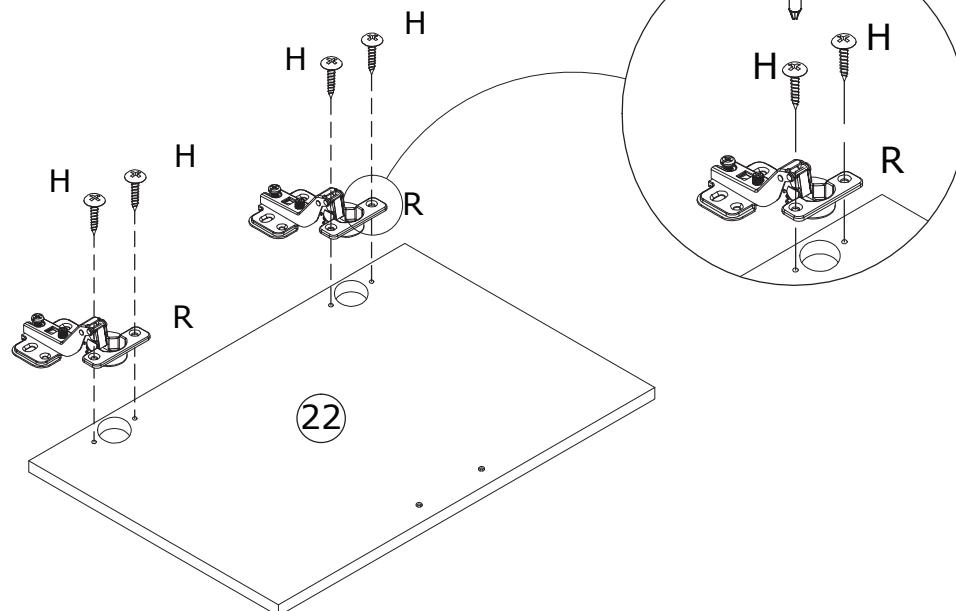

x 4

32

 
T x 4




U x 8



Ø4 x 16mm



 Fix handle(T) to board 22 with screw(U) as shown.

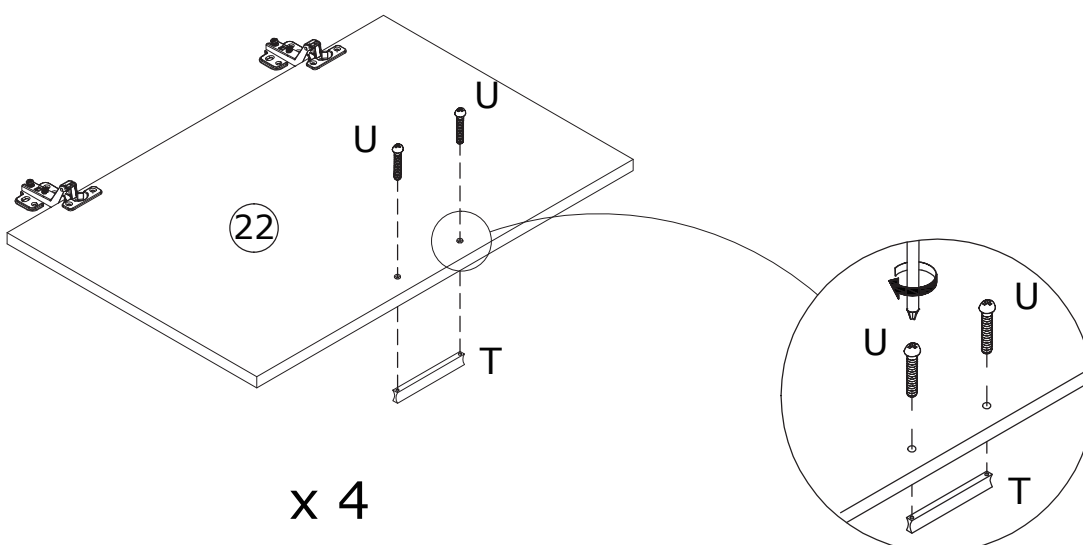


x 4

33


H x 32



 Ø4 x 14mm



 Assemble door 22 to the cabinet
by fixing hinge with screw(H)
as shown.

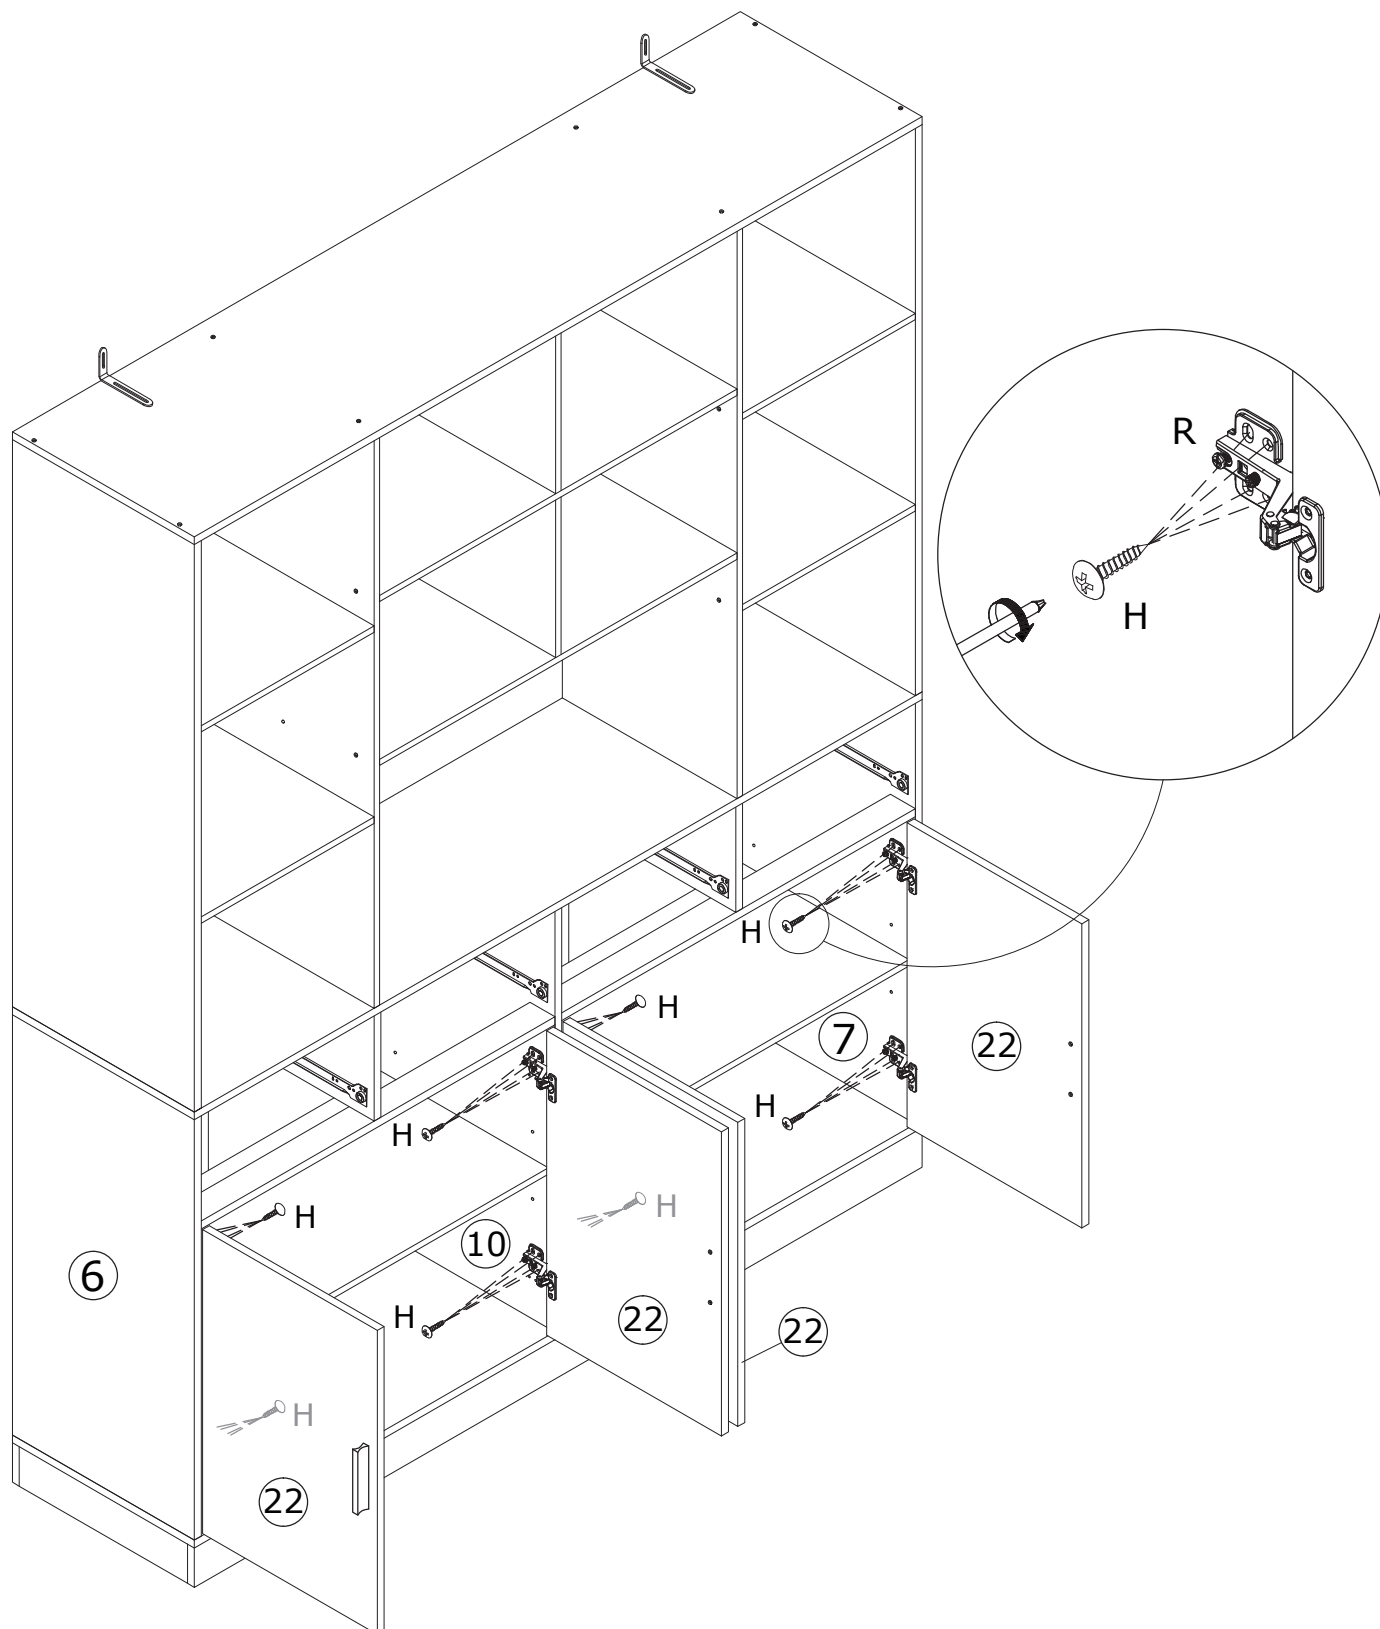

34

E x 16

 
 


Ø6 x 35mm




F x 16



Ø15 x 10mm



   Screw eccentric rod(F) into board 28.
Attach board 28 to board 29 and 30,
add cam lock(F) into and turn
clockwise to tighten as shown.

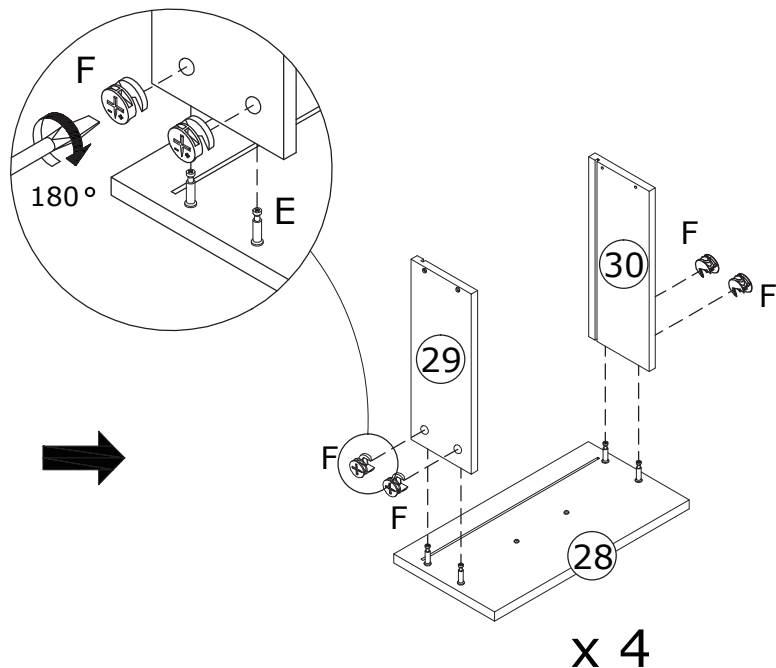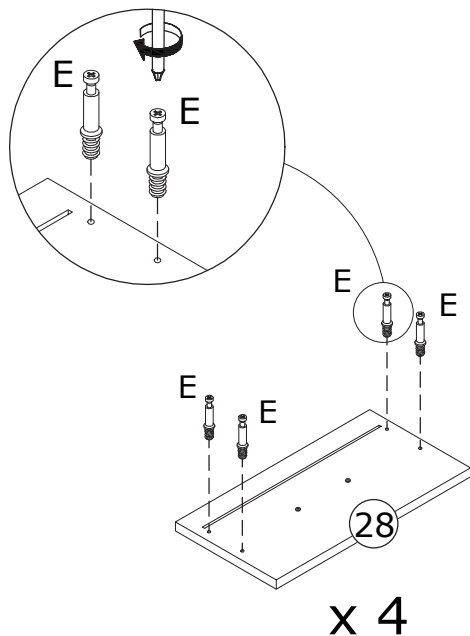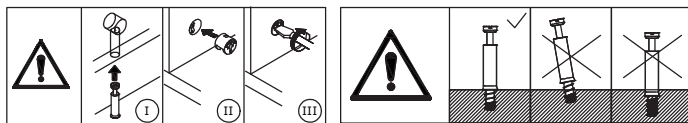


35



V x 16



 Ø4 x 30mm



  Insert bottom board 32 along grooves as shown.
Fix board 31 to board 29 and 30 with screw(V)
as shown.

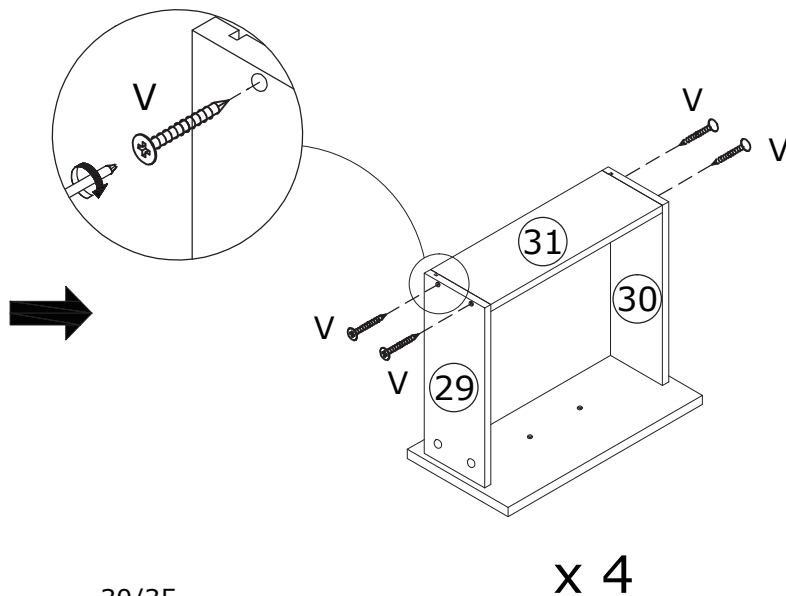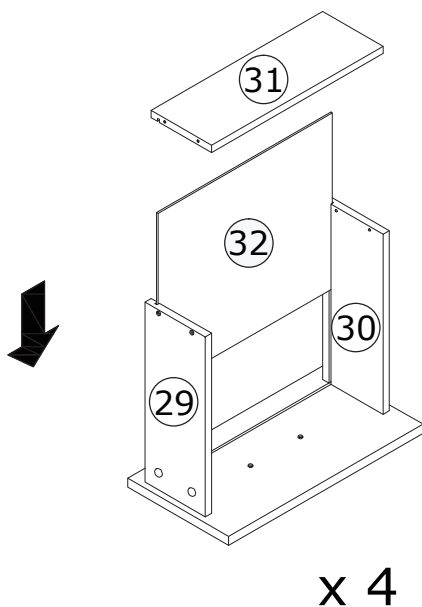

36

 
T x 4




U x 8



ø4 x 16mm



 
Fix handle(T) to board 28 with screw(U) as shown.

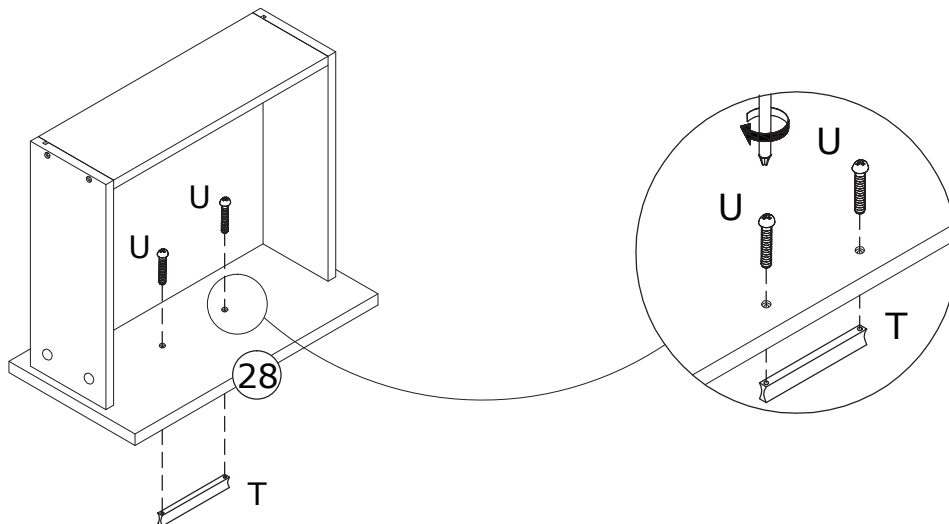

x 4

37

 L x 4



L 300 mm

M x 4

 


L 300 mm


N x 24



ø3 x 12mm



 
Fix runner(L) and (M) to board 29 and 30 with screw(N) as shown.

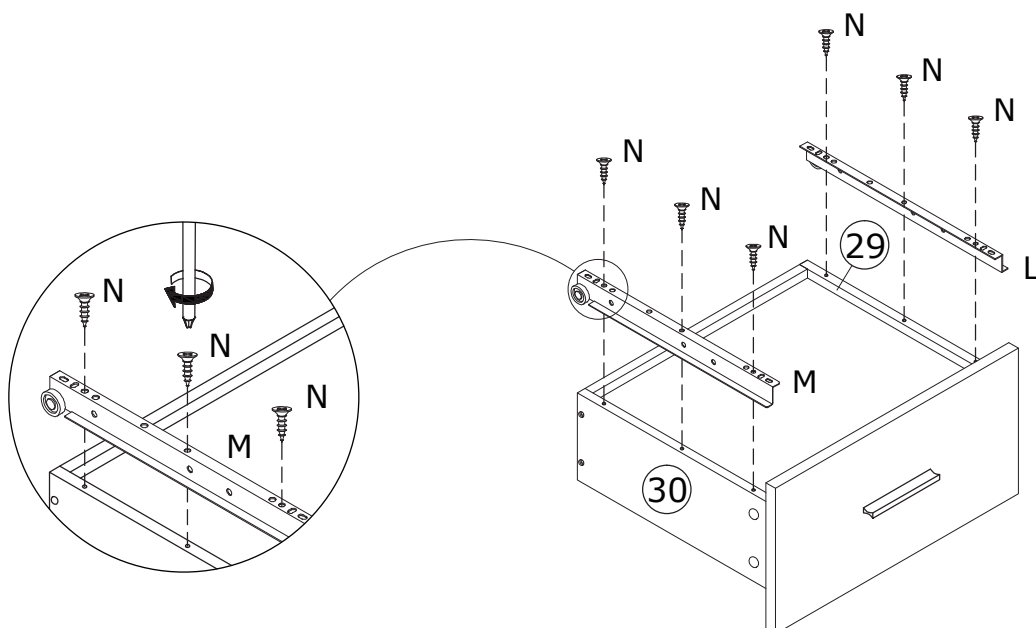


x 4

38










 
 
Align rails, insert drawers in.

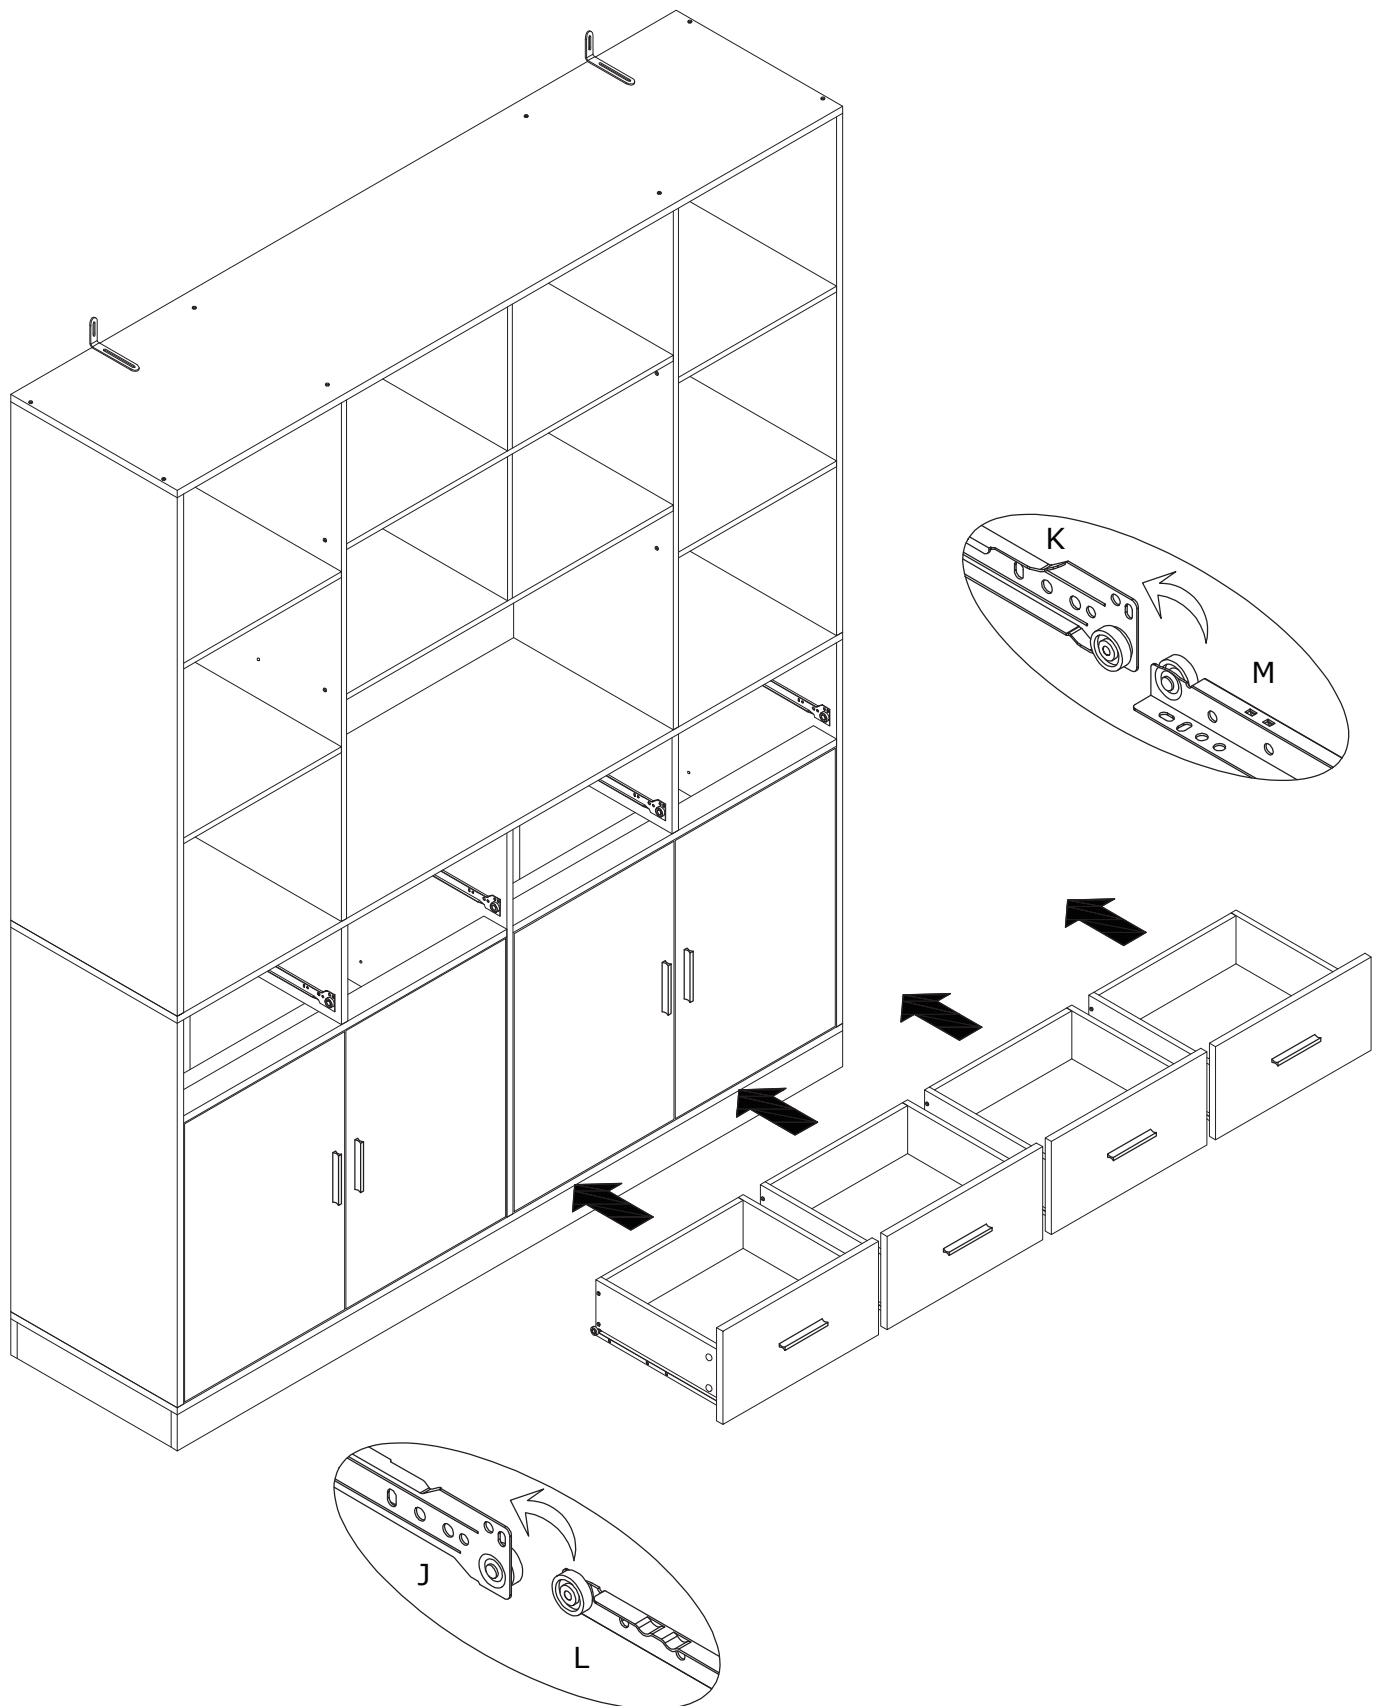



If doors are still not aligned if the hinges are properly correctly, please watch the video.
           
<https://youtu.be/n0Lb36SoODM>

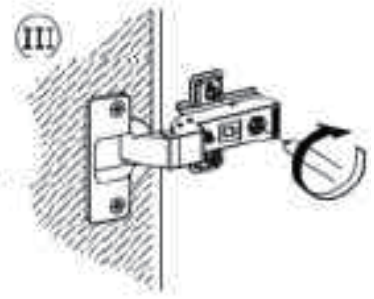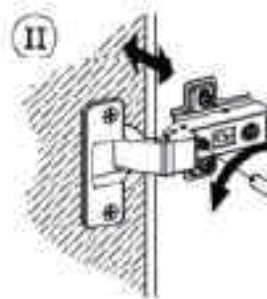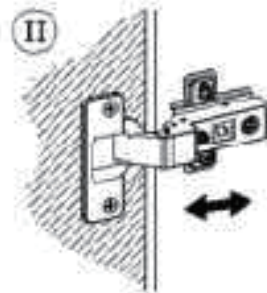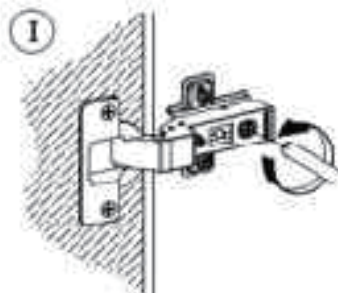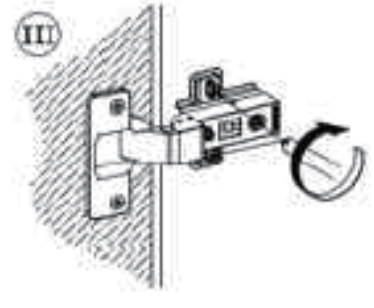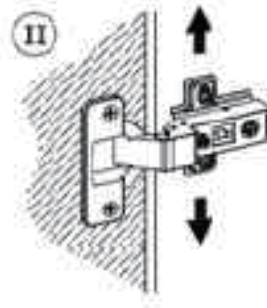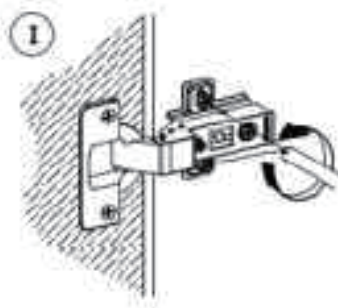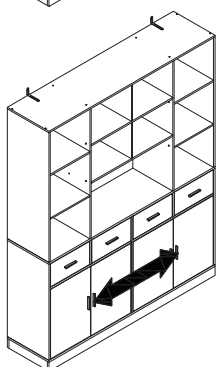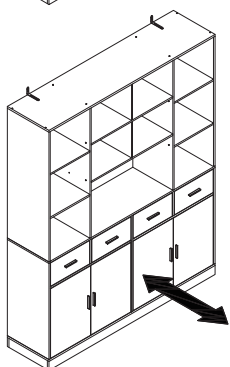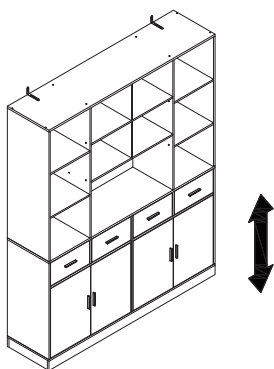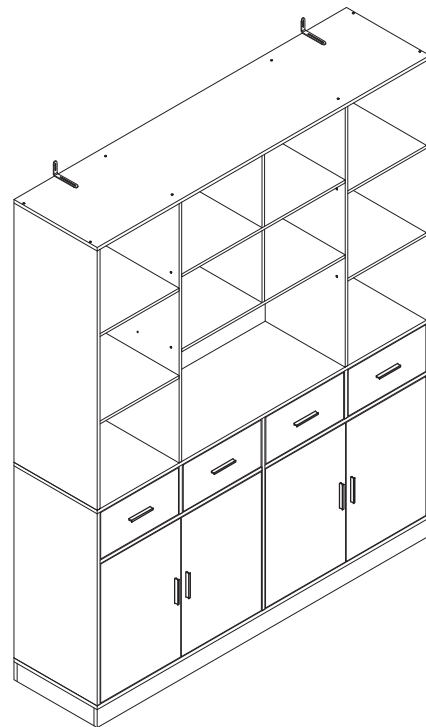

40

 
W x 16




X x 16



ø3 x 14mm



 Insert buckle(W) into back slots and fix with screw(X) as shown.

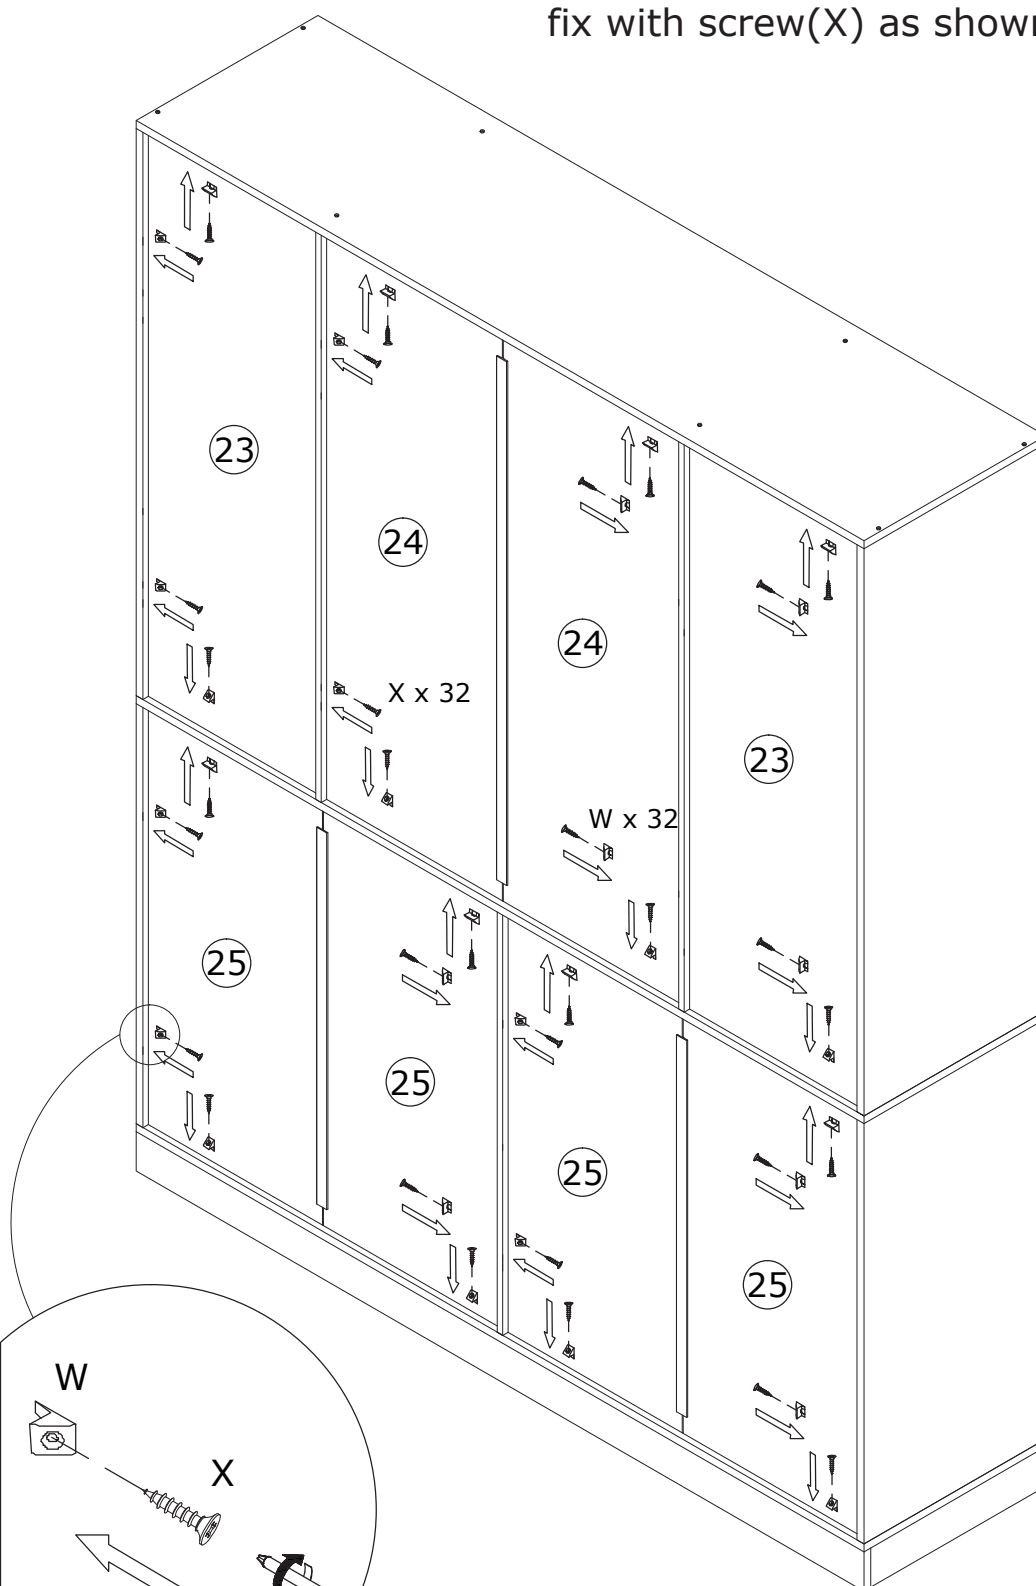



41

S x 2







Ø4 x 35mm

  Y x 2



Install anti-tipping device as shown.

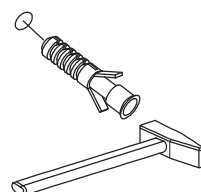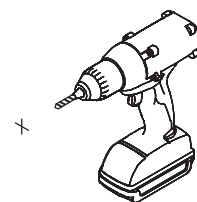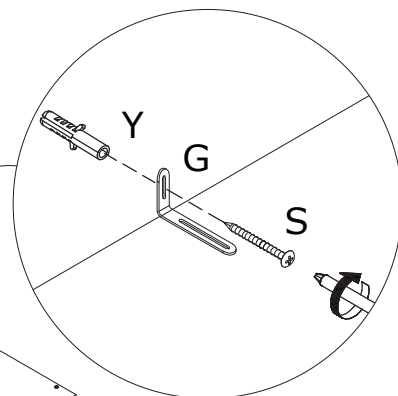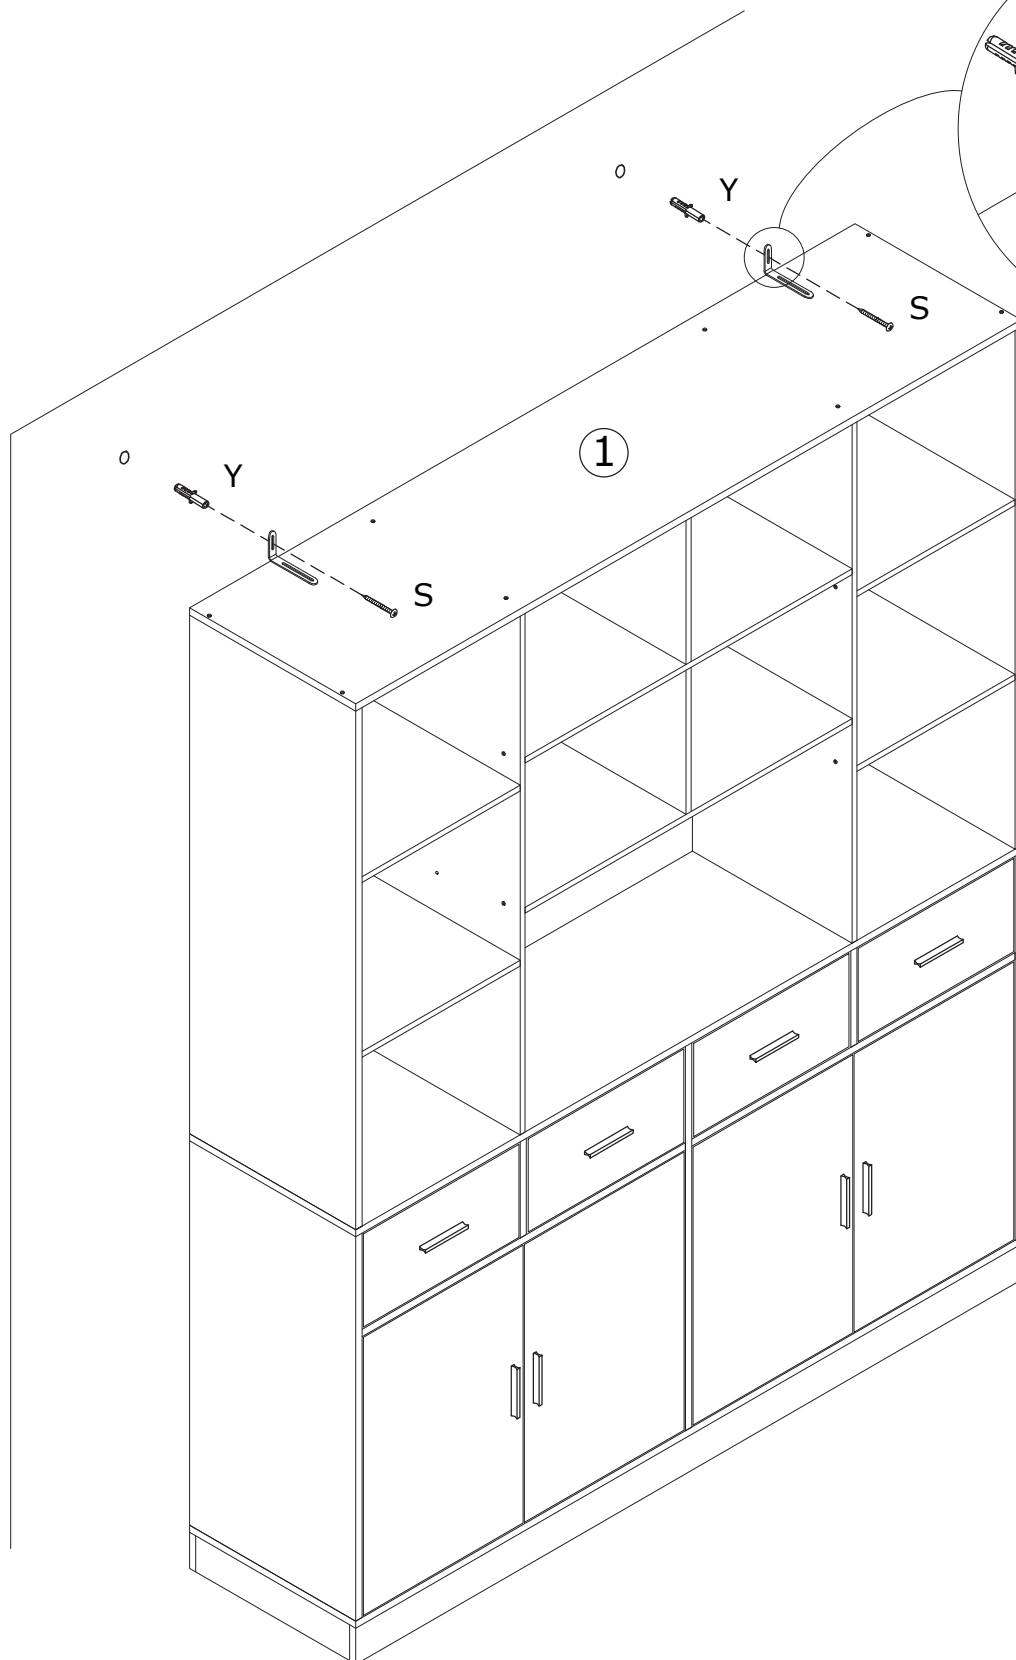    

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer. In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387