 




# Sideboard



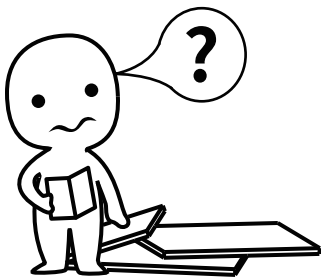


### **IMPORTANT INFORMATION!**

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

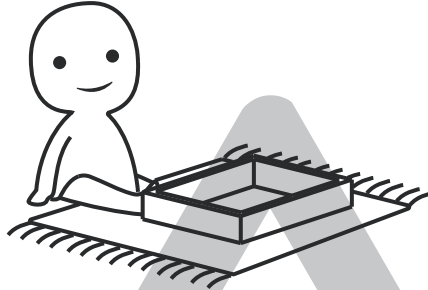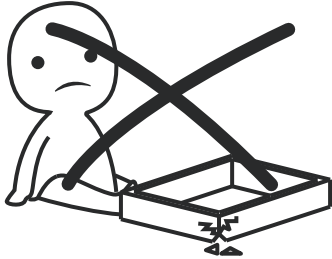



### **AVOID SCRATCHES!**

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

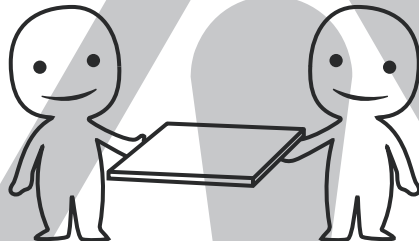

### **IMPROVE EFFICIENCY !**

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

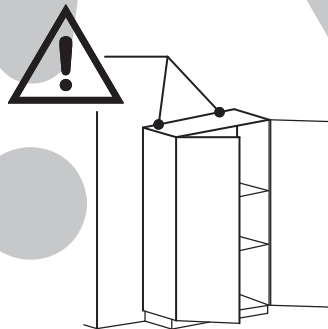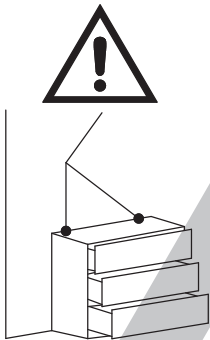

### **ANTI-TOPPLE WARNING !**

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

### **IMPORTANT !**


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

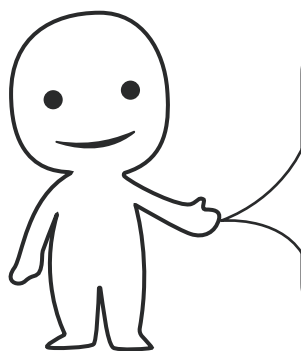


Please prepare the following tools

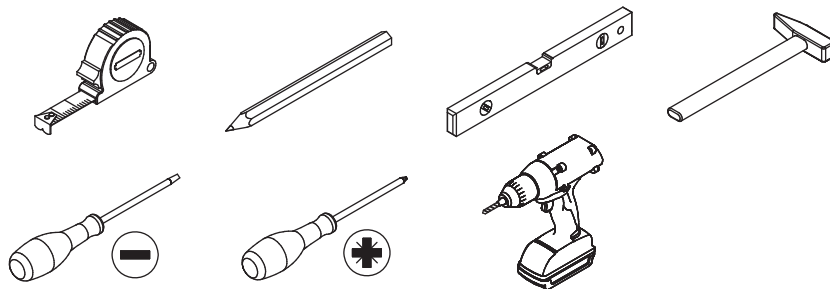 


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 16




B x 63+1

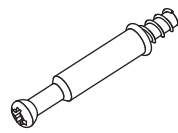 

Ø 6 x 35 mm

 C x 63+1




Ø 15 x 10 mm

D x 2



Ø 4 x 12 mm

 E x 10




Ø 5 x 40 mm

F x 12



Ø 4 x 16 mm

 G x 6



H x 56+1

 


Ø 3 x 12 mm

J x 1



K x 2



Ø 4 x 35 mm

L x 6

 


M x 6




Ø 3 x 14 mm

N x 31+1



Ø 4 x 30 mm

 
P x 2




Q x 2



 CL X 6




CR X 6

 


   
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 

 
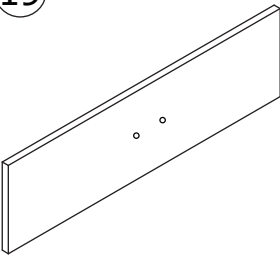 

DL X 6




DR X 6




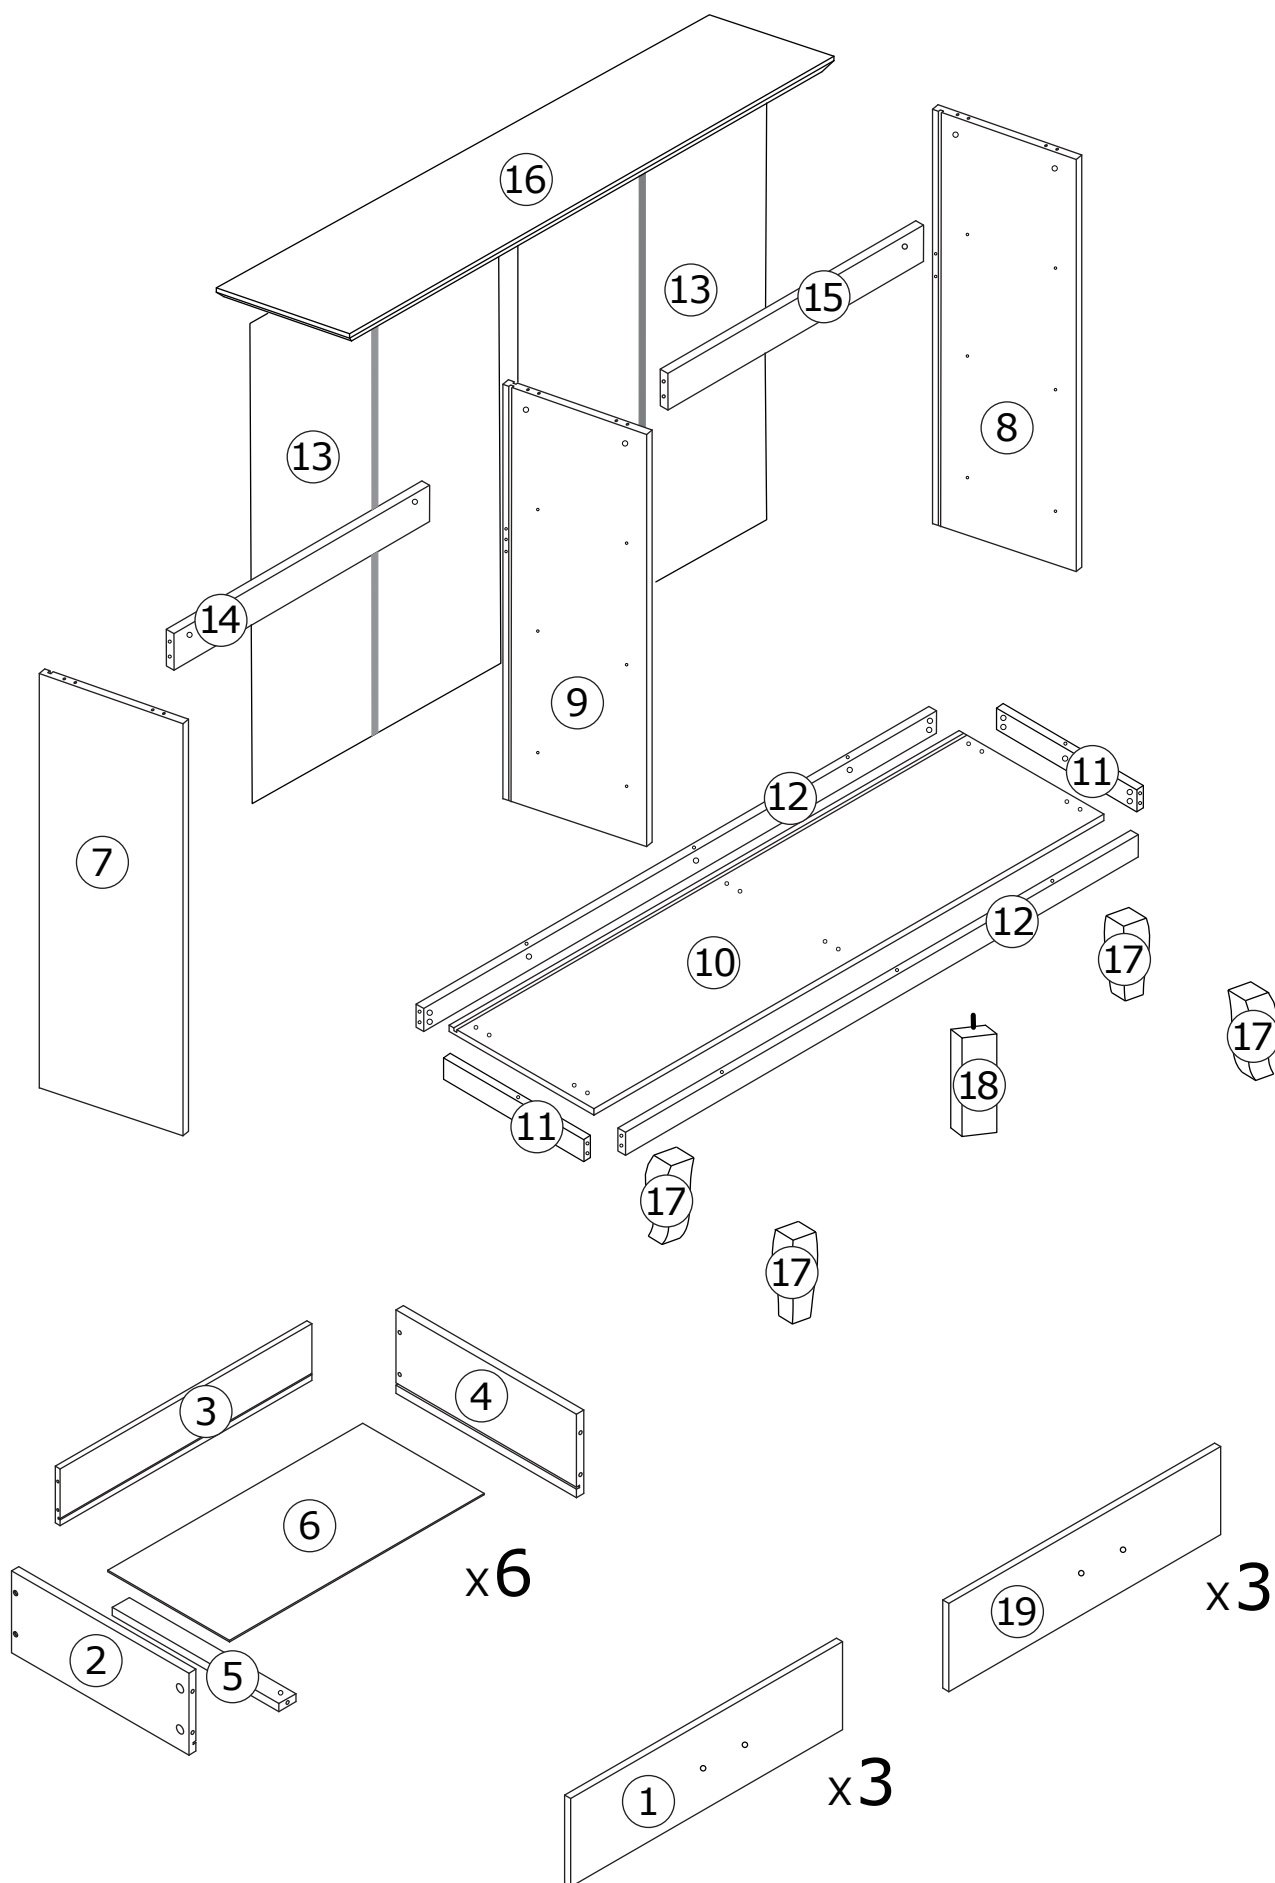

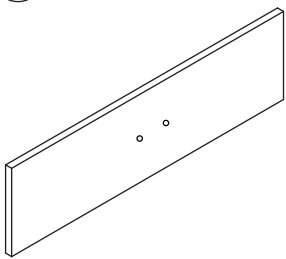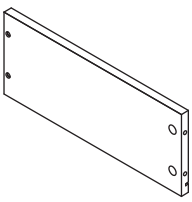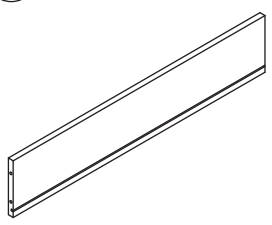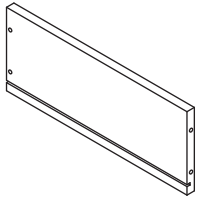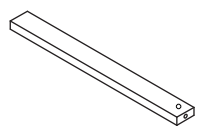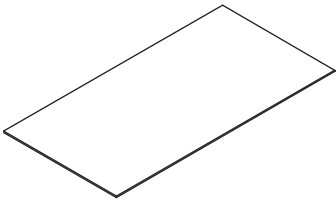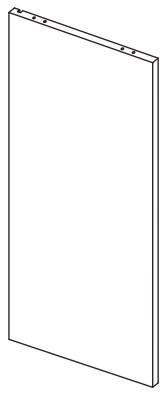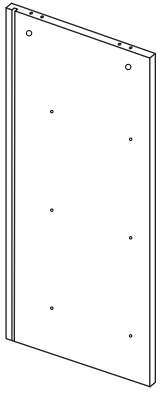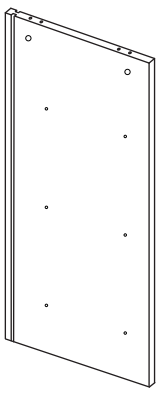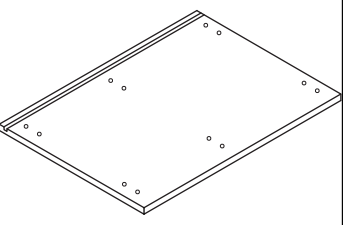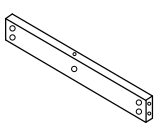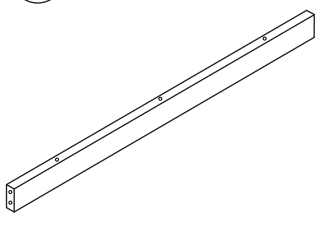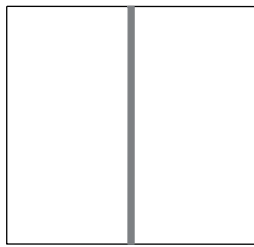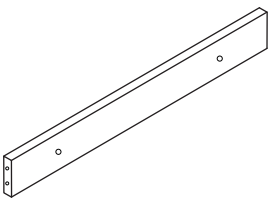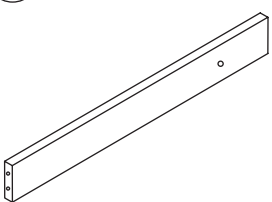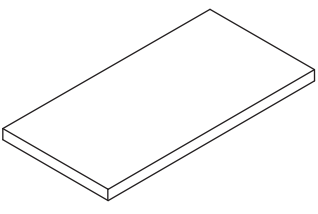
<p>①</p>  <p>3PC</p>	<p>②</p>  <p>6PC</p>	<p>③</p>  <p>6PC</p>	<p>④</p>  <p>6PC</p>
<p>⑤</p>  <p>6PC</p>	<p>⑥</p>  <p>6PC</p>	<p>⑦</p>  <p>1PC</p>	<p>⑧</p>  <p>1PC</p>
<p>⑨</p>  <p>1PC</p>	<p>⑩</p>  <p>1PC</p>	<p>⑪</p>  <p>2PC</p>	<p>⑫</p>  <p>2PC</p>
<p>⑬</p>  <p>2PC</p>	<p>⑭</p>  <p>1PC</p>	<p>⑮</p>  <p>1PC</p>	<p>⑯</p>  <p>1PC</p>
<p>⑰</p>  <p>4PC</p>	<p>⑱</p>  <p>1PC</p>	<p>⑲</p>  <p>3PC</p>	<p>⑳</p> 

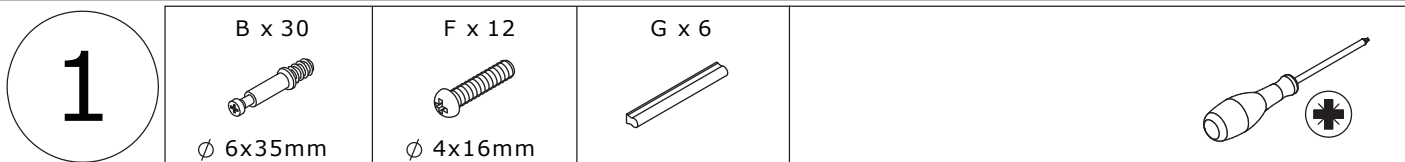 

 Insert quickfit screw(B) into corresponding holes in board 1 and 19 with a screwdriver as shown.

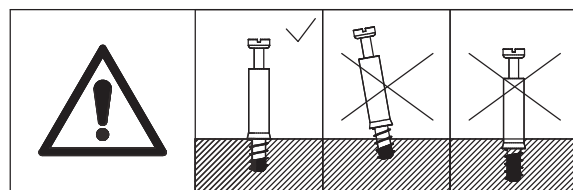

Fix handle(G) with screw(F) as shown.

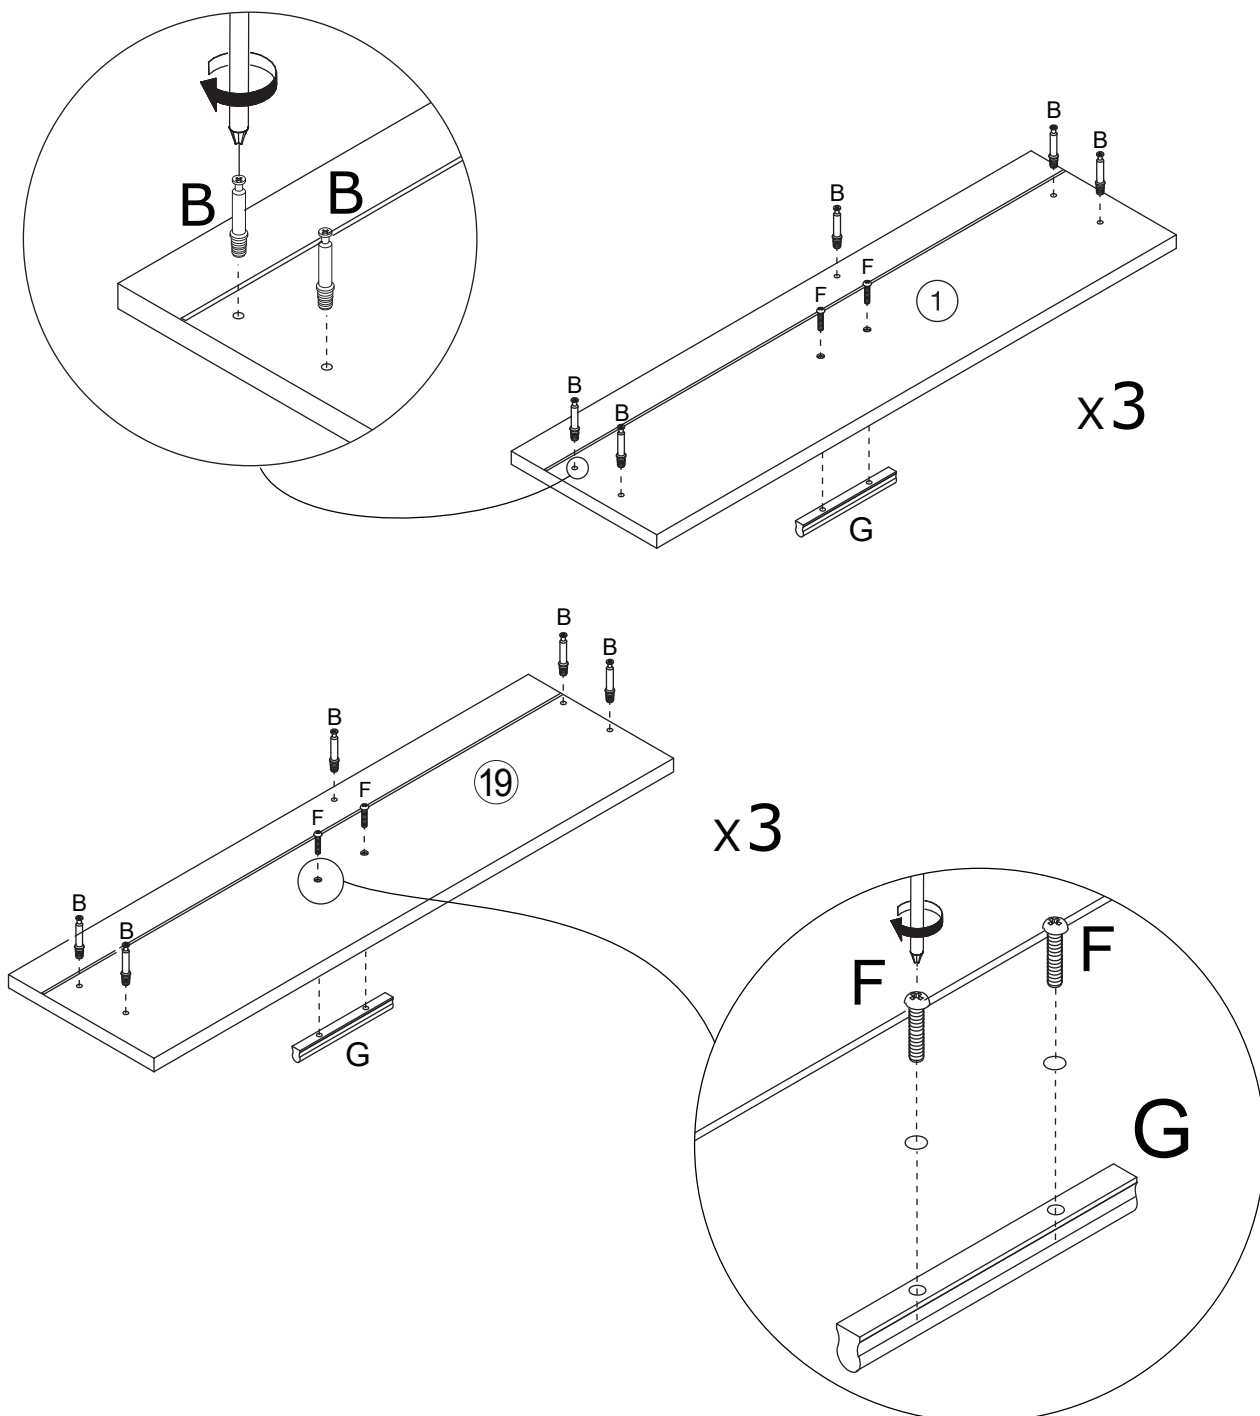 


2

N x 30



 Ø 4x30mm




When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size


Attach board 2,5,4 to board 3 with screw(N) and slide board 6 into available slots as shown.



 
Ø 5 x 40 mm




Ø 4 x 35mm

 

Ø 4 x 30mm




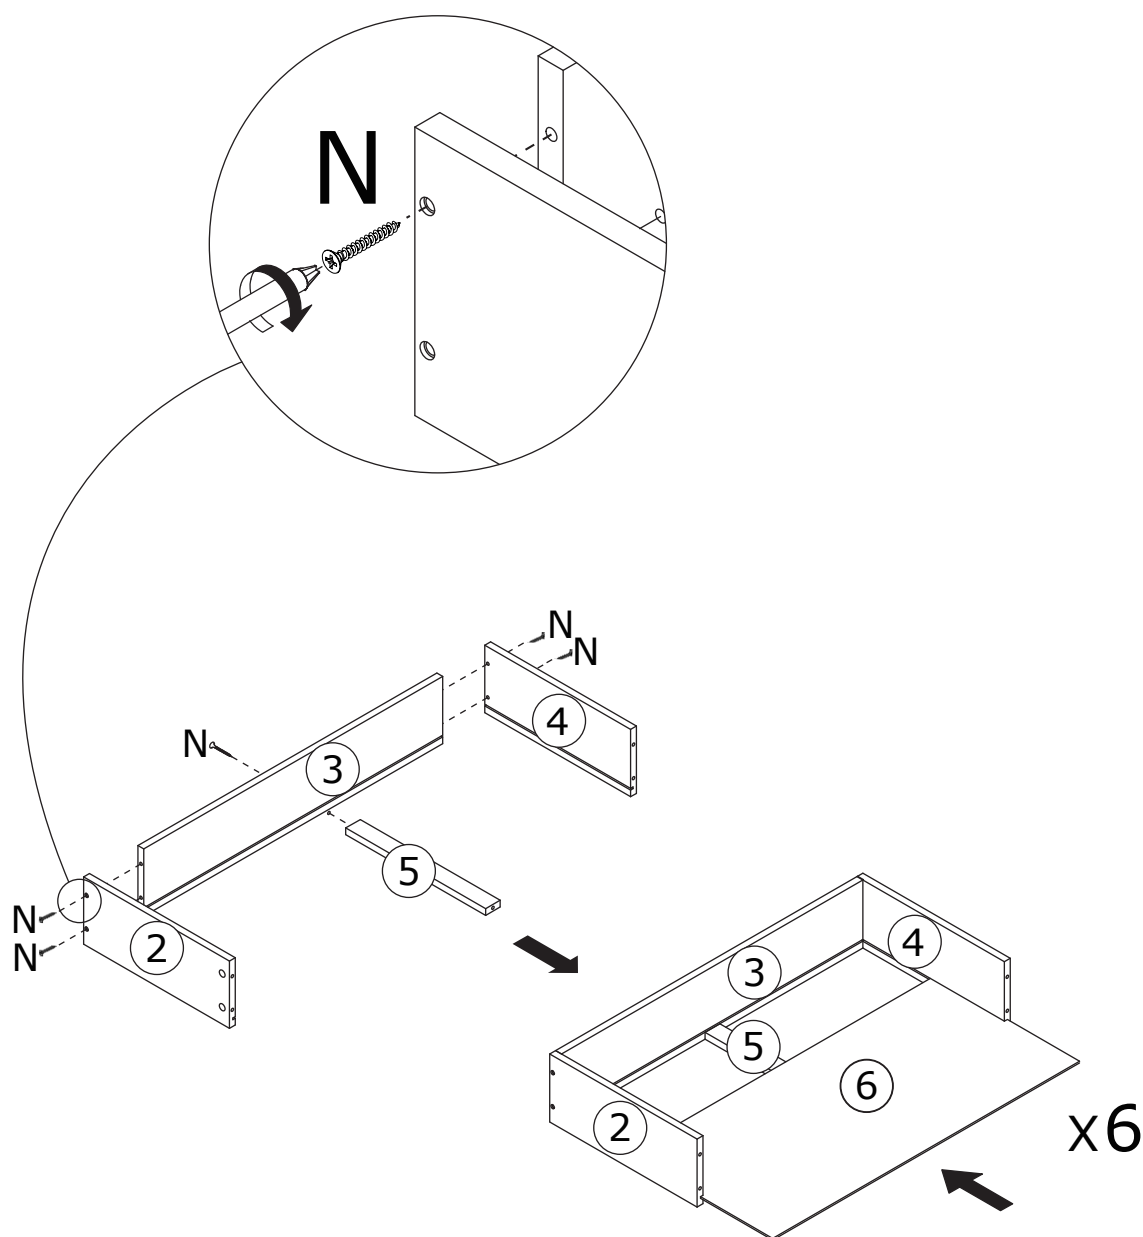 


# 3

C x 30  
  
 Ø 15x10mm



    Attach board 1 and 19 to the component respectively, turn cam lock(C) clockwise to tighten as shown.

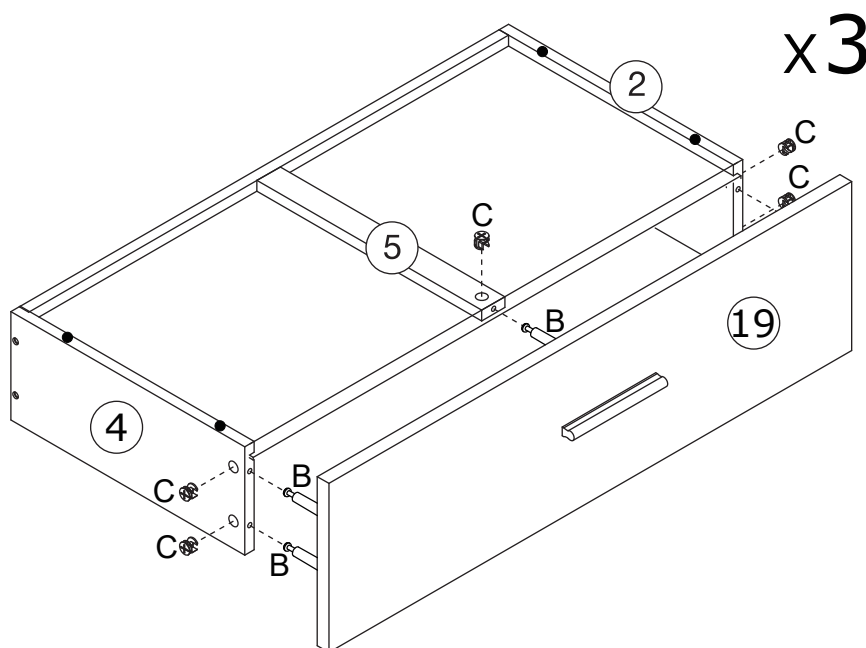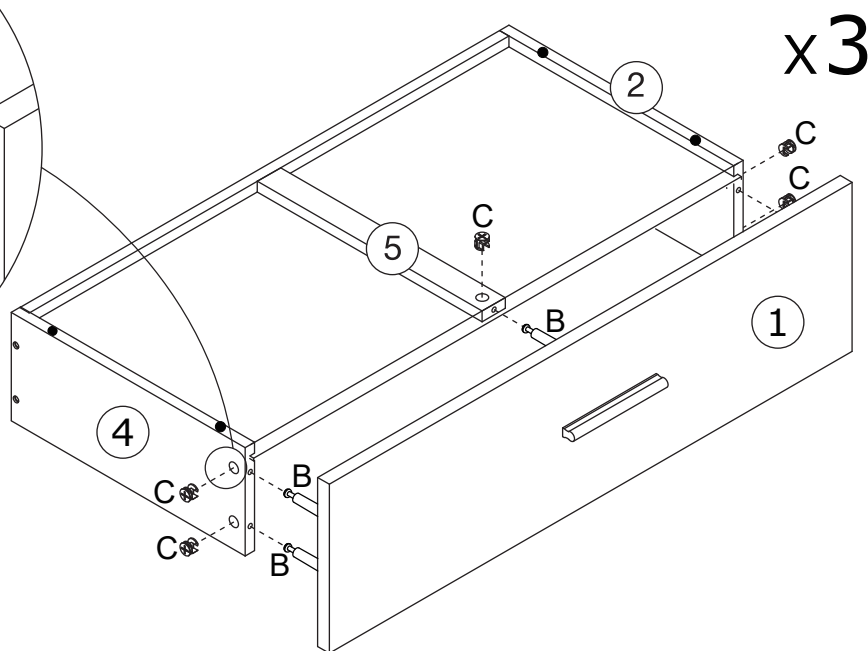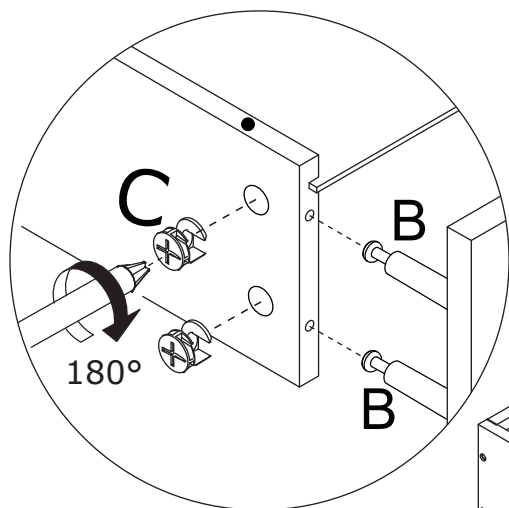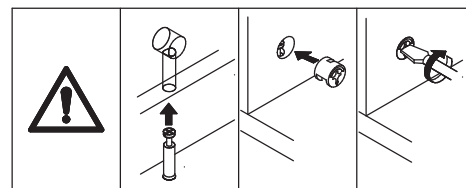




4

Hx 24





Ø 3 x 12mm

 DL x 6



DR x 6

  

Fix runner(DL) and (DR) to board 2 and 4 respectively with screw(H) as shown.

Please pay attention to the holes where the accessories are inserted.



H

 
 
 
 


Ø 3 x 12 mm

M



Ø 3 x 14mm

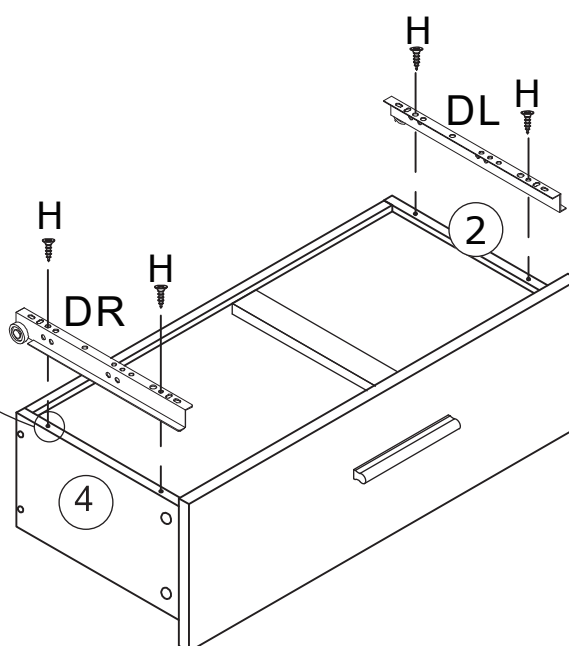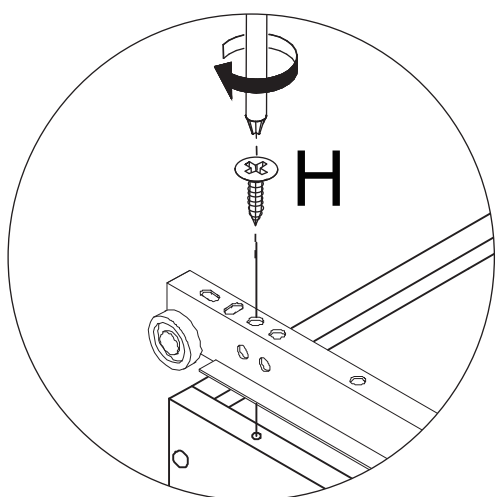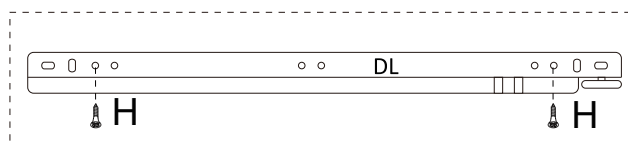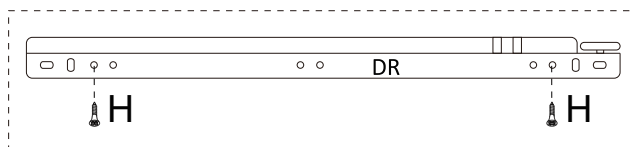

x6

 
5

H x 12





Ø 3x12mm

CL x 3



CR x 3

  

Fix slide rail(CL) and (CR) to board 7 and 8 respectively with screw(H) as shown.



H



 
 
 
 
 
 
Ø 3 x 12 mm

M




Ø 3 x 14mm

Please pay attention to the holes where the accessories are inserted.

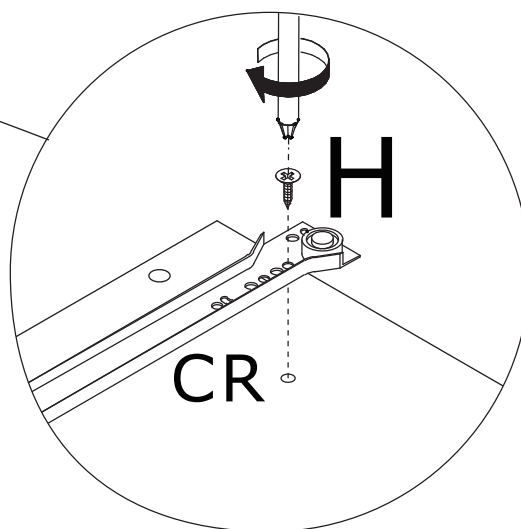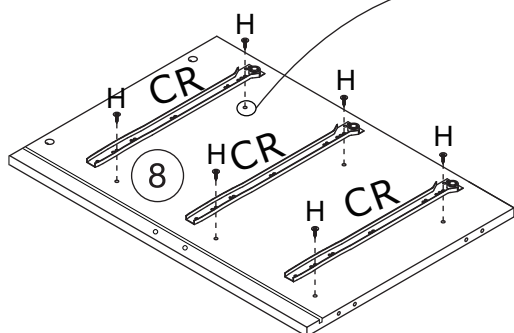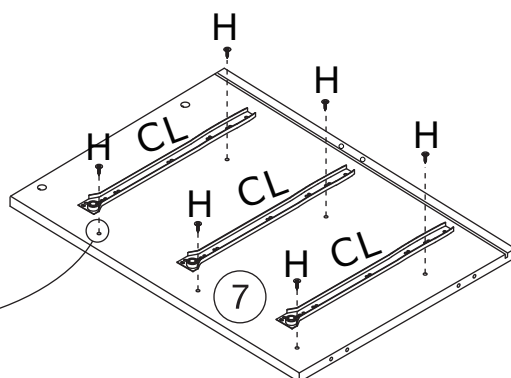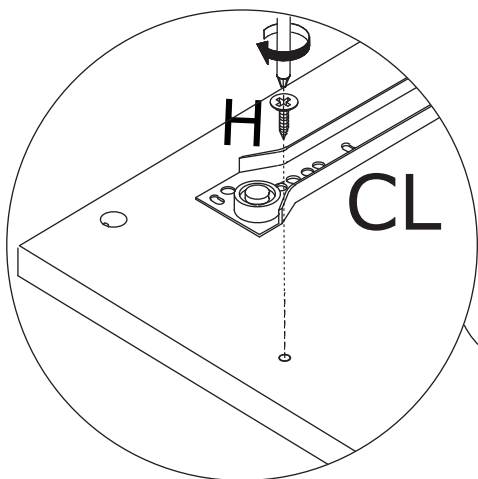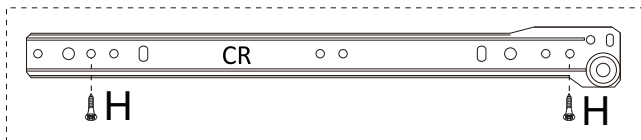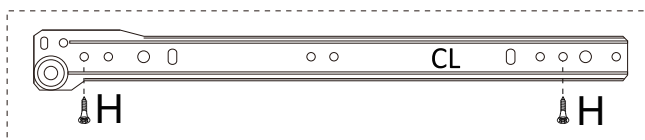


6


 
H x 12



CL x 3

 

CR x 3

  

Fix slide rail(CL) and (CR) to both sides of board 9 with screw(H) as shown.



H



 
 
 
 
 
 
 
Ø 3 x 12 mm

M



Ø 3 x 14mm

Please pay attention to the holes where the accessories are inserted.

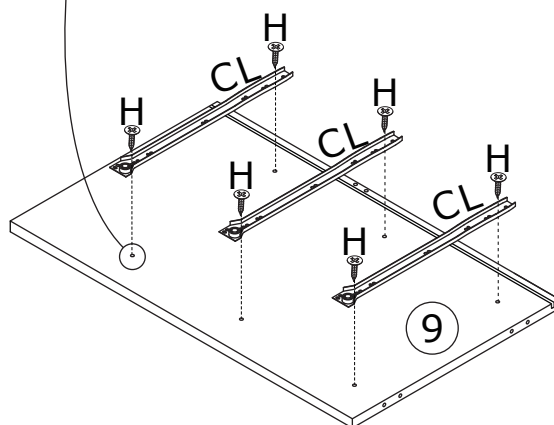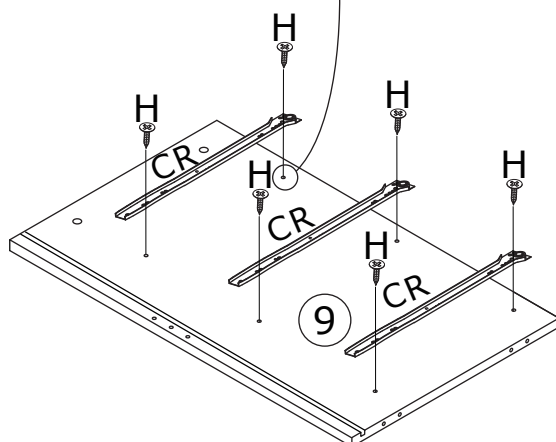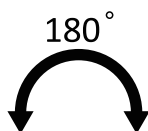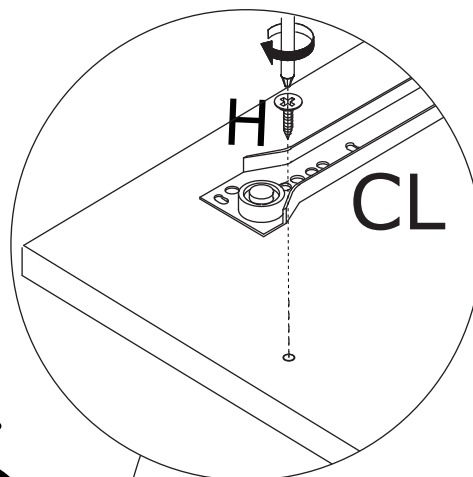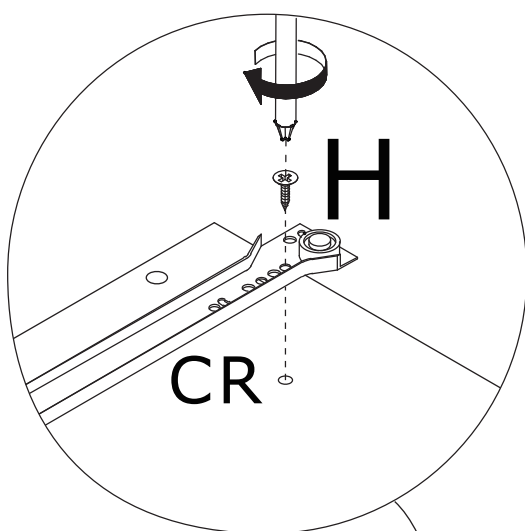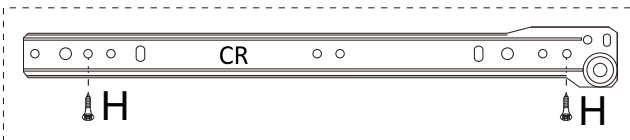
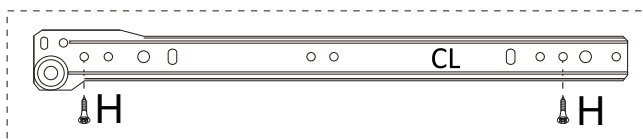


7





B x 3



  Ø 6x35mm

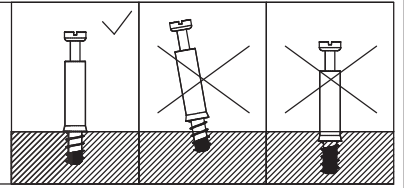

    Insert quickfit screw(B) into corresponding holes in board 7,8,9 with a screwdriver as shown.

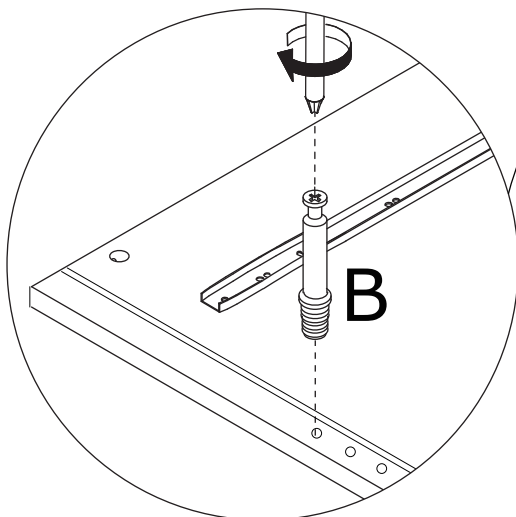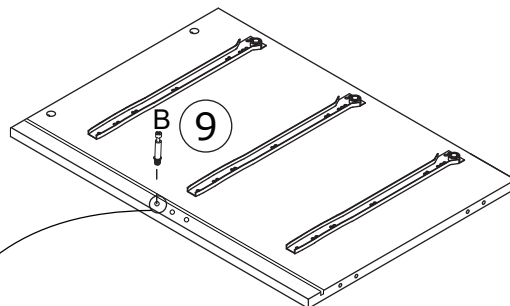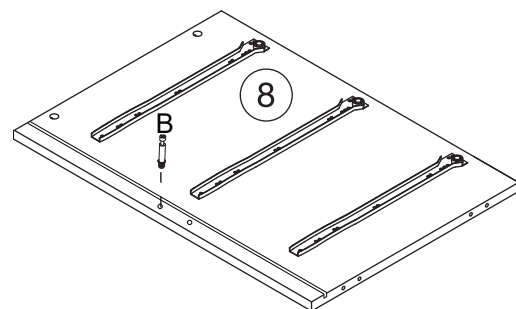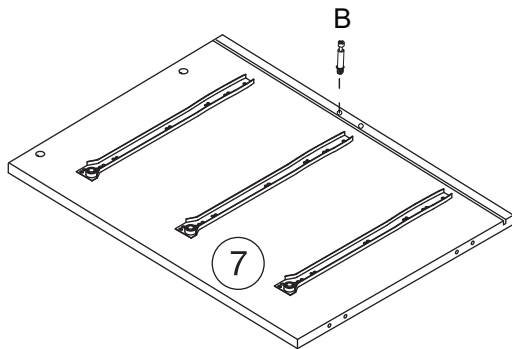

8

A x 2

 


C x 1









Ø 15x10mm

R x 1




Ø 4x30mm

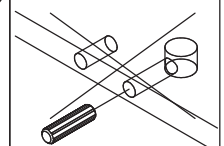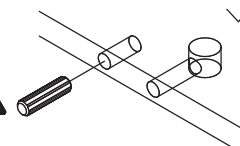      

Connect board 8 and 9 with board 15 using wooden dowel(A) and turn cam lock(C) clockwise to tighten as shown.

 Fix No.9 with No.15 using screw(R) as shown.

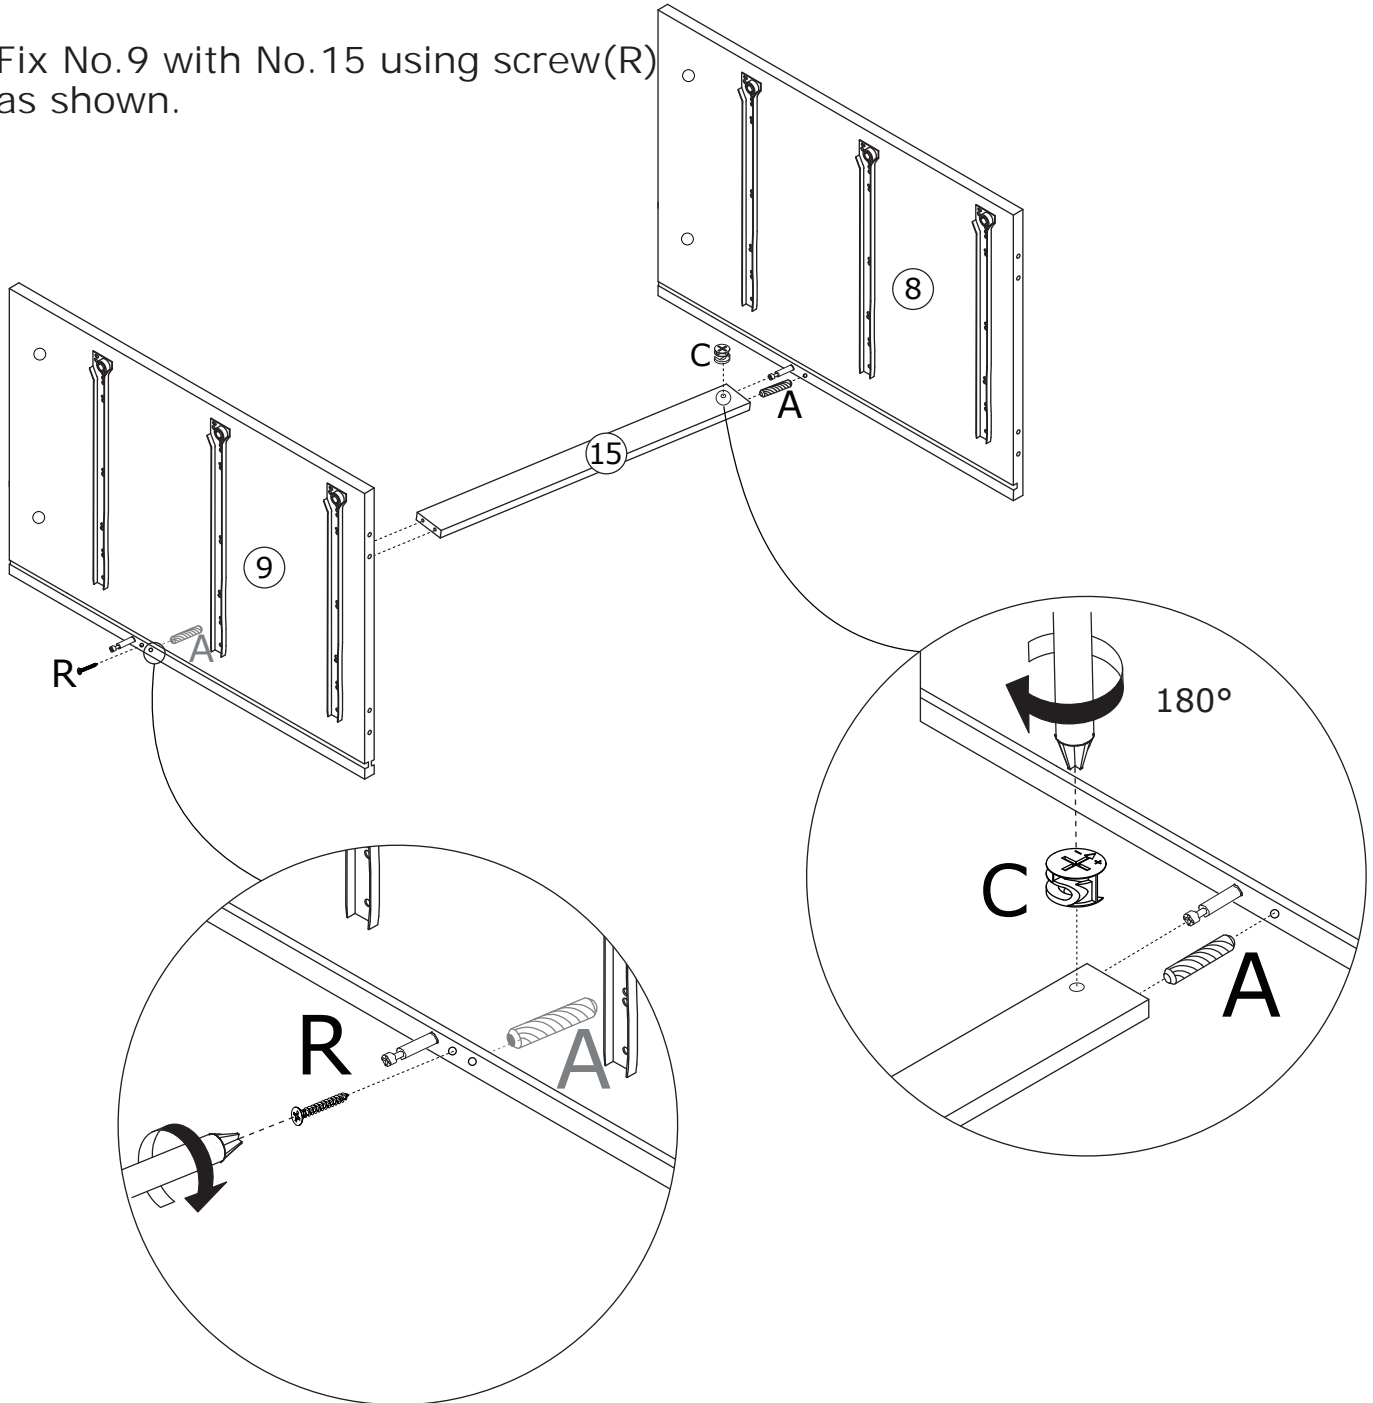

9

 
 
 
 
 
A x 2




C x 2






Ø 15x10mm

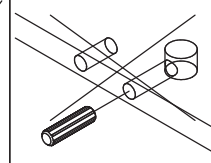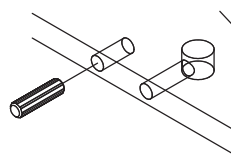

 
Connect board 7 and 9 with board 14 using wooden dowel(A) and turn cam lock(C) clockwise to tighten as shown.

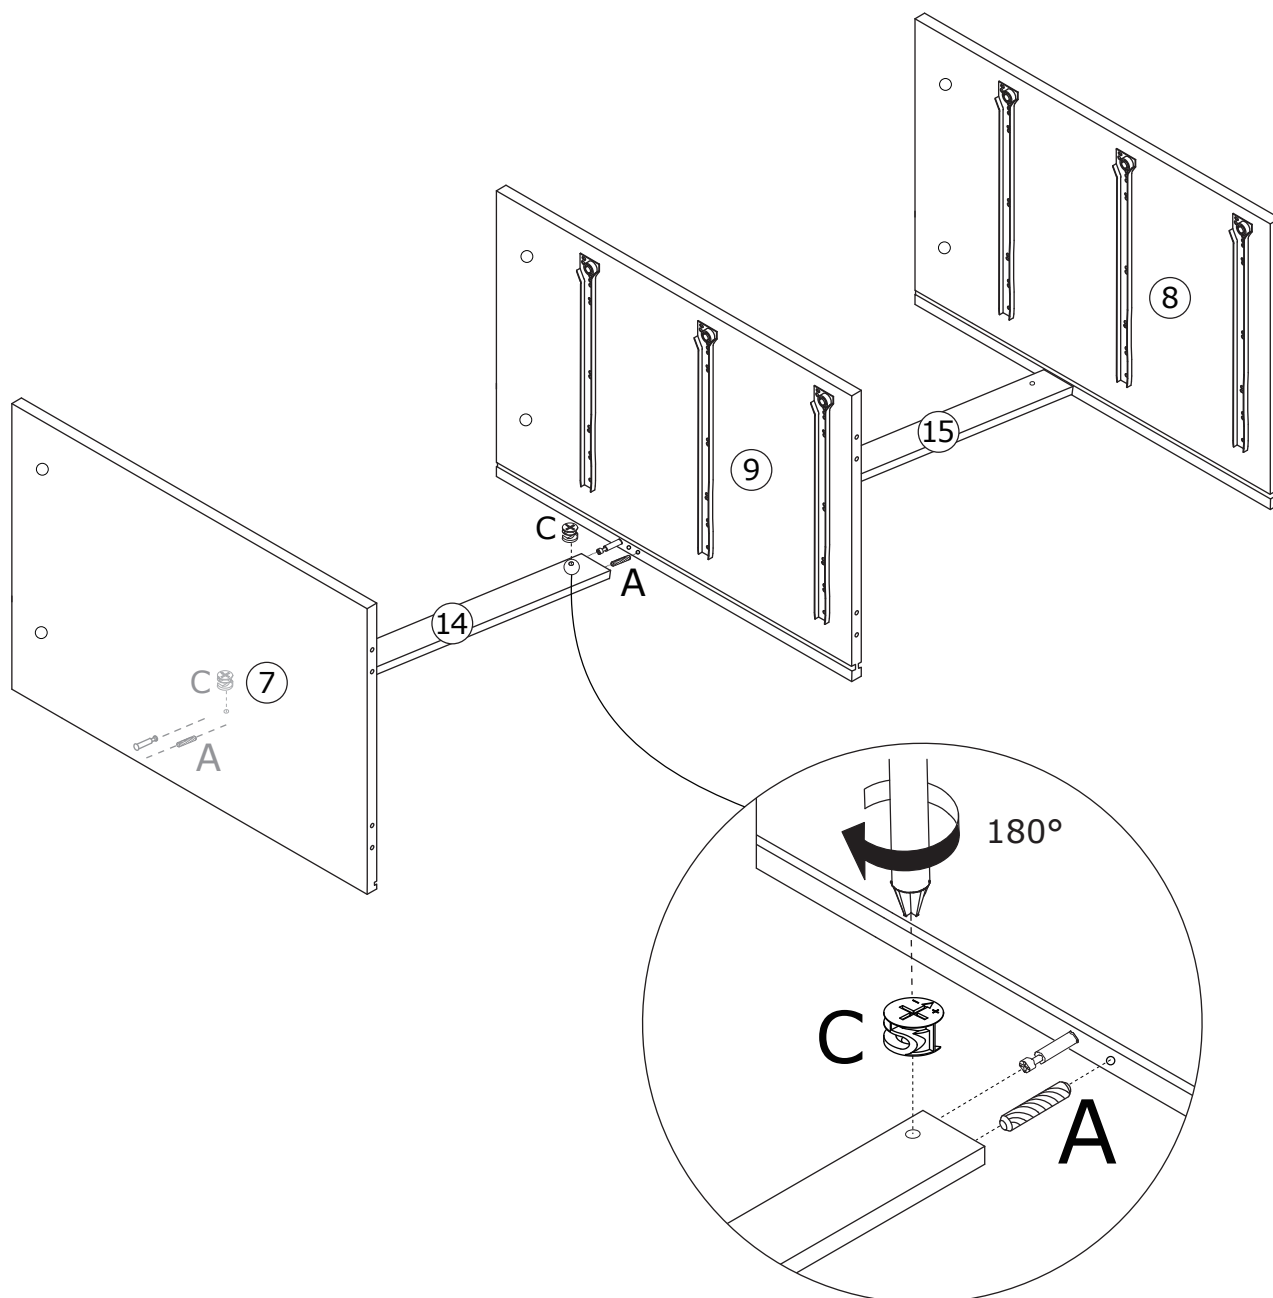

10

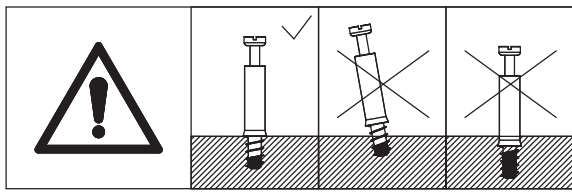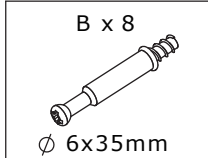   


 Insert quickfit screw(B) into corresponding holes in board 10 with a screwdriver as shown.

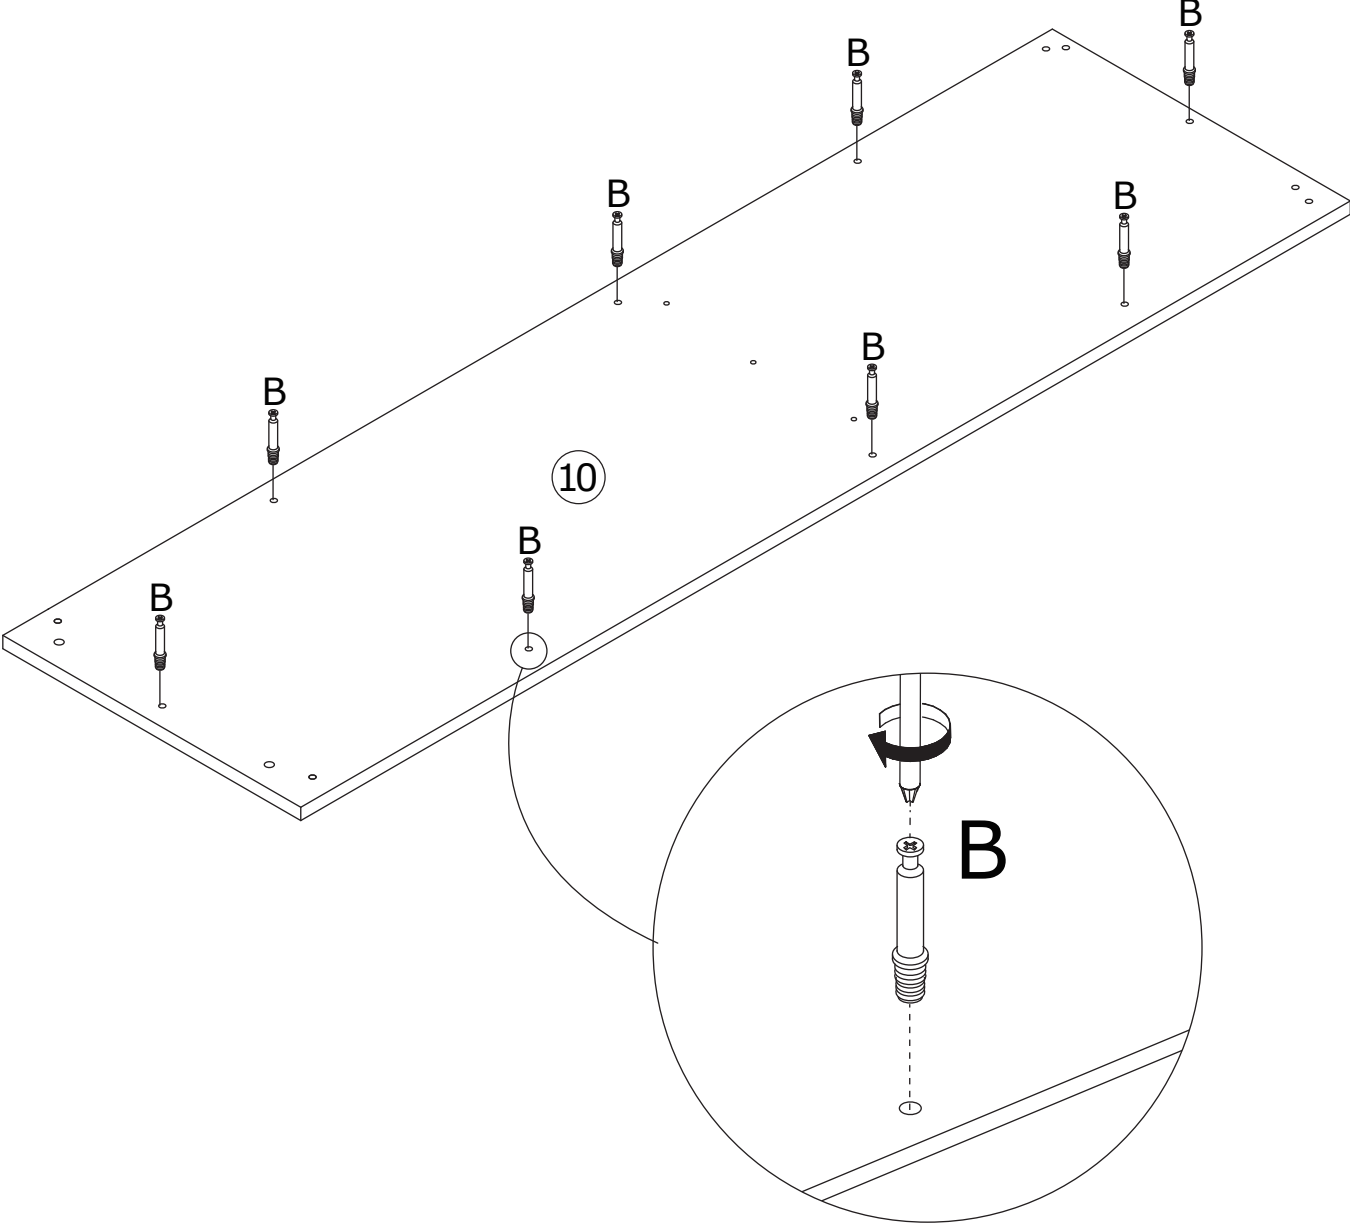

# 11

 A x 6





E x 6



Ø 5 x 40 mm

 
 
J x 1

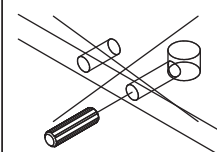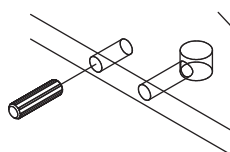

Attach board 10 to the assembled component with wooden dowel(A) and then fix with screw(E) as shown.

Rotate leg support 18 into board 10 as shown.

  18

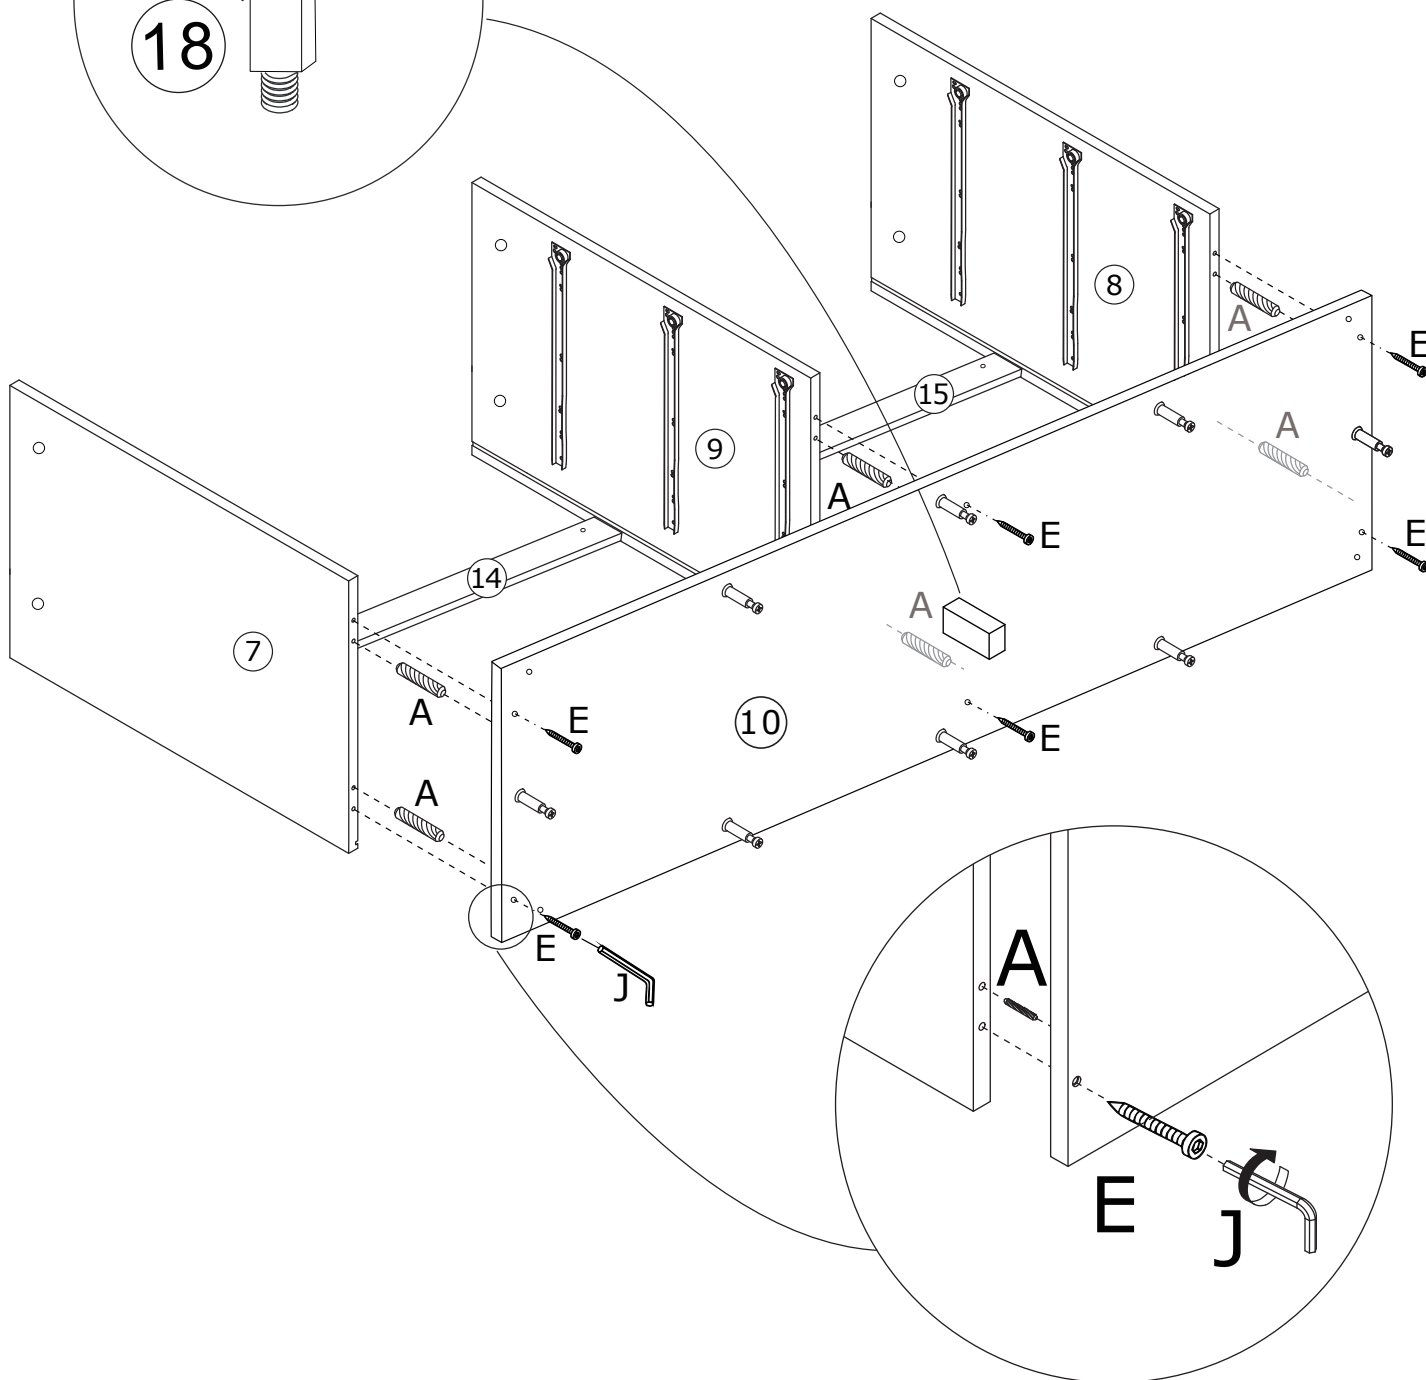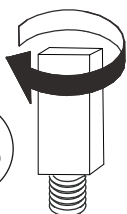




12



B x 16



 Ø 6x35mm



  Insert quickfit screw(B) into board 17 with a screwdriver as shown.

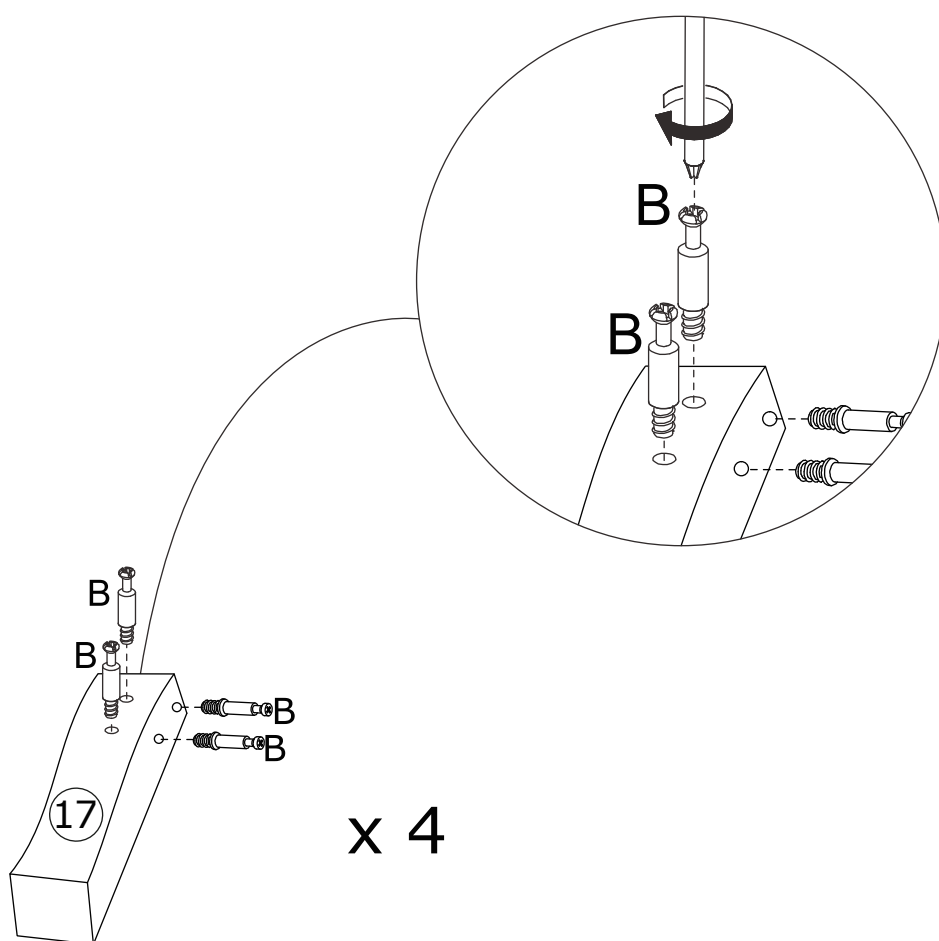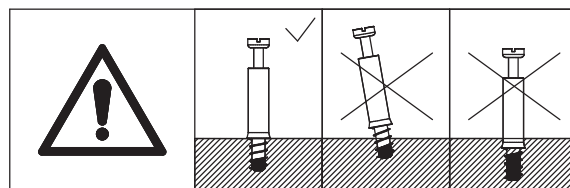


# 13



C x 8



 Ø 15x10mm



  Connect board 17 with board 11, turn cam lock(C) clockwise to tighten as shown.

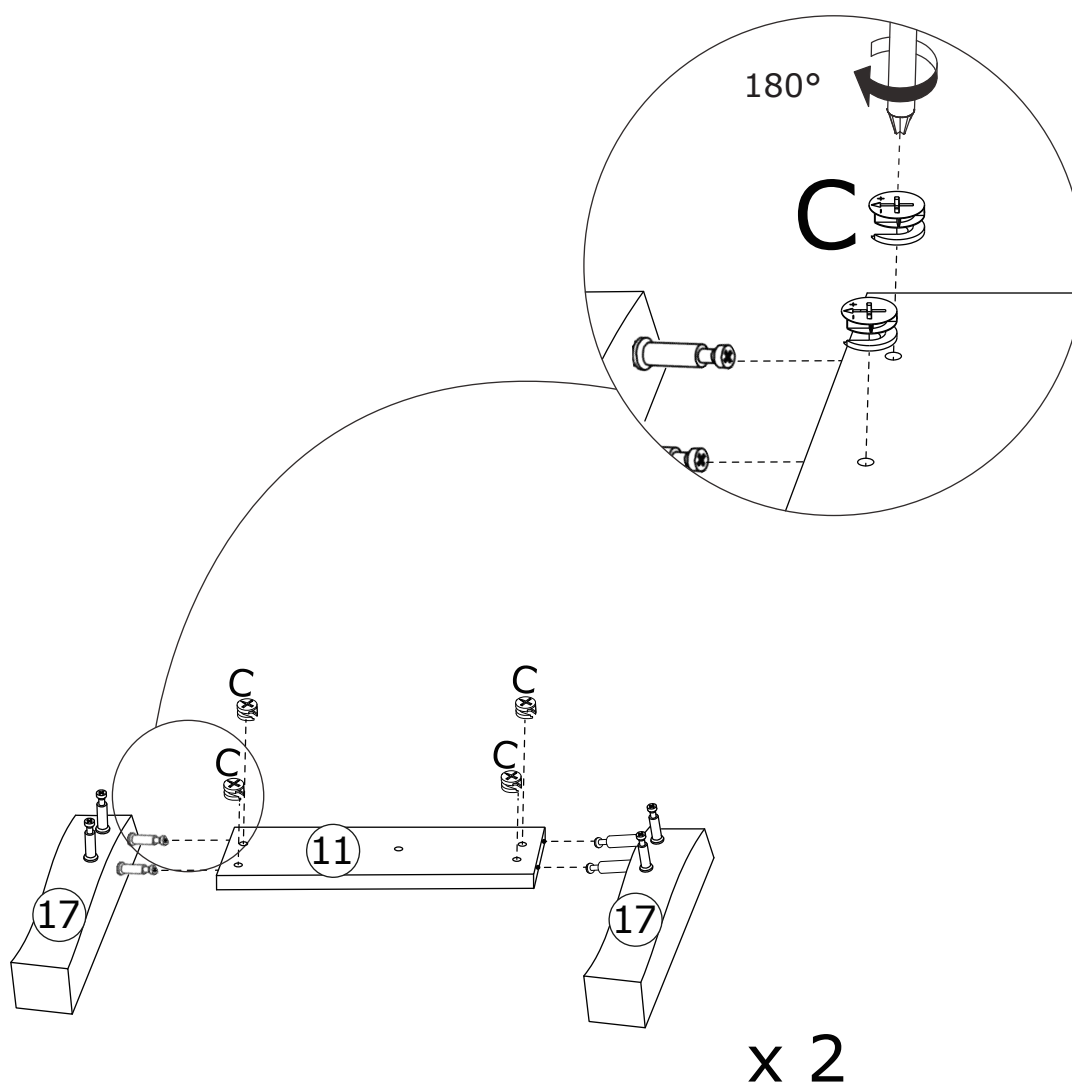
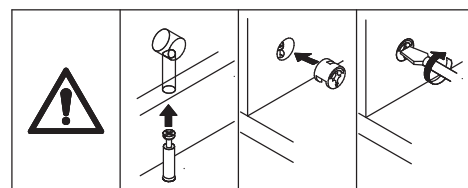


# 14


C x 8



  Ø 15x10mm

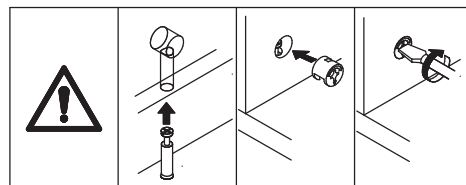

 Connect board 17 with board 12, turn cam lock(C) clockwise to tighten as shown.


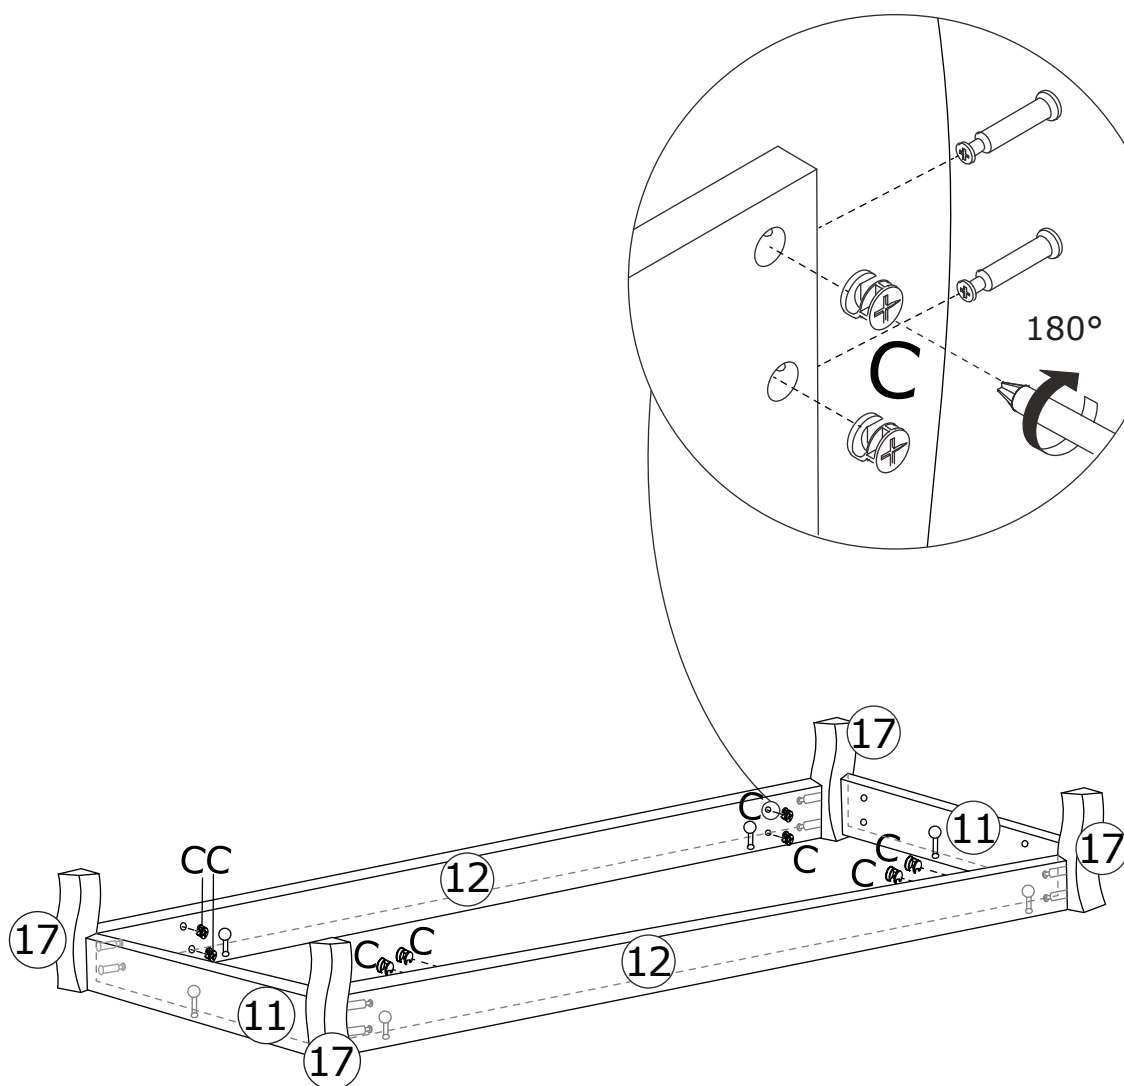


# 15


C x 8



  Ø 15 x 10 mm

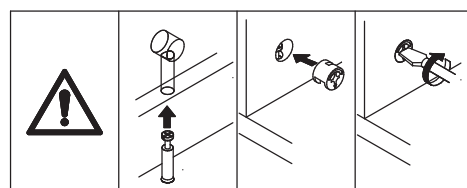

 Fix the base component to board 10,  
turn cam lock(C) clockwise to tighten  
as shown.

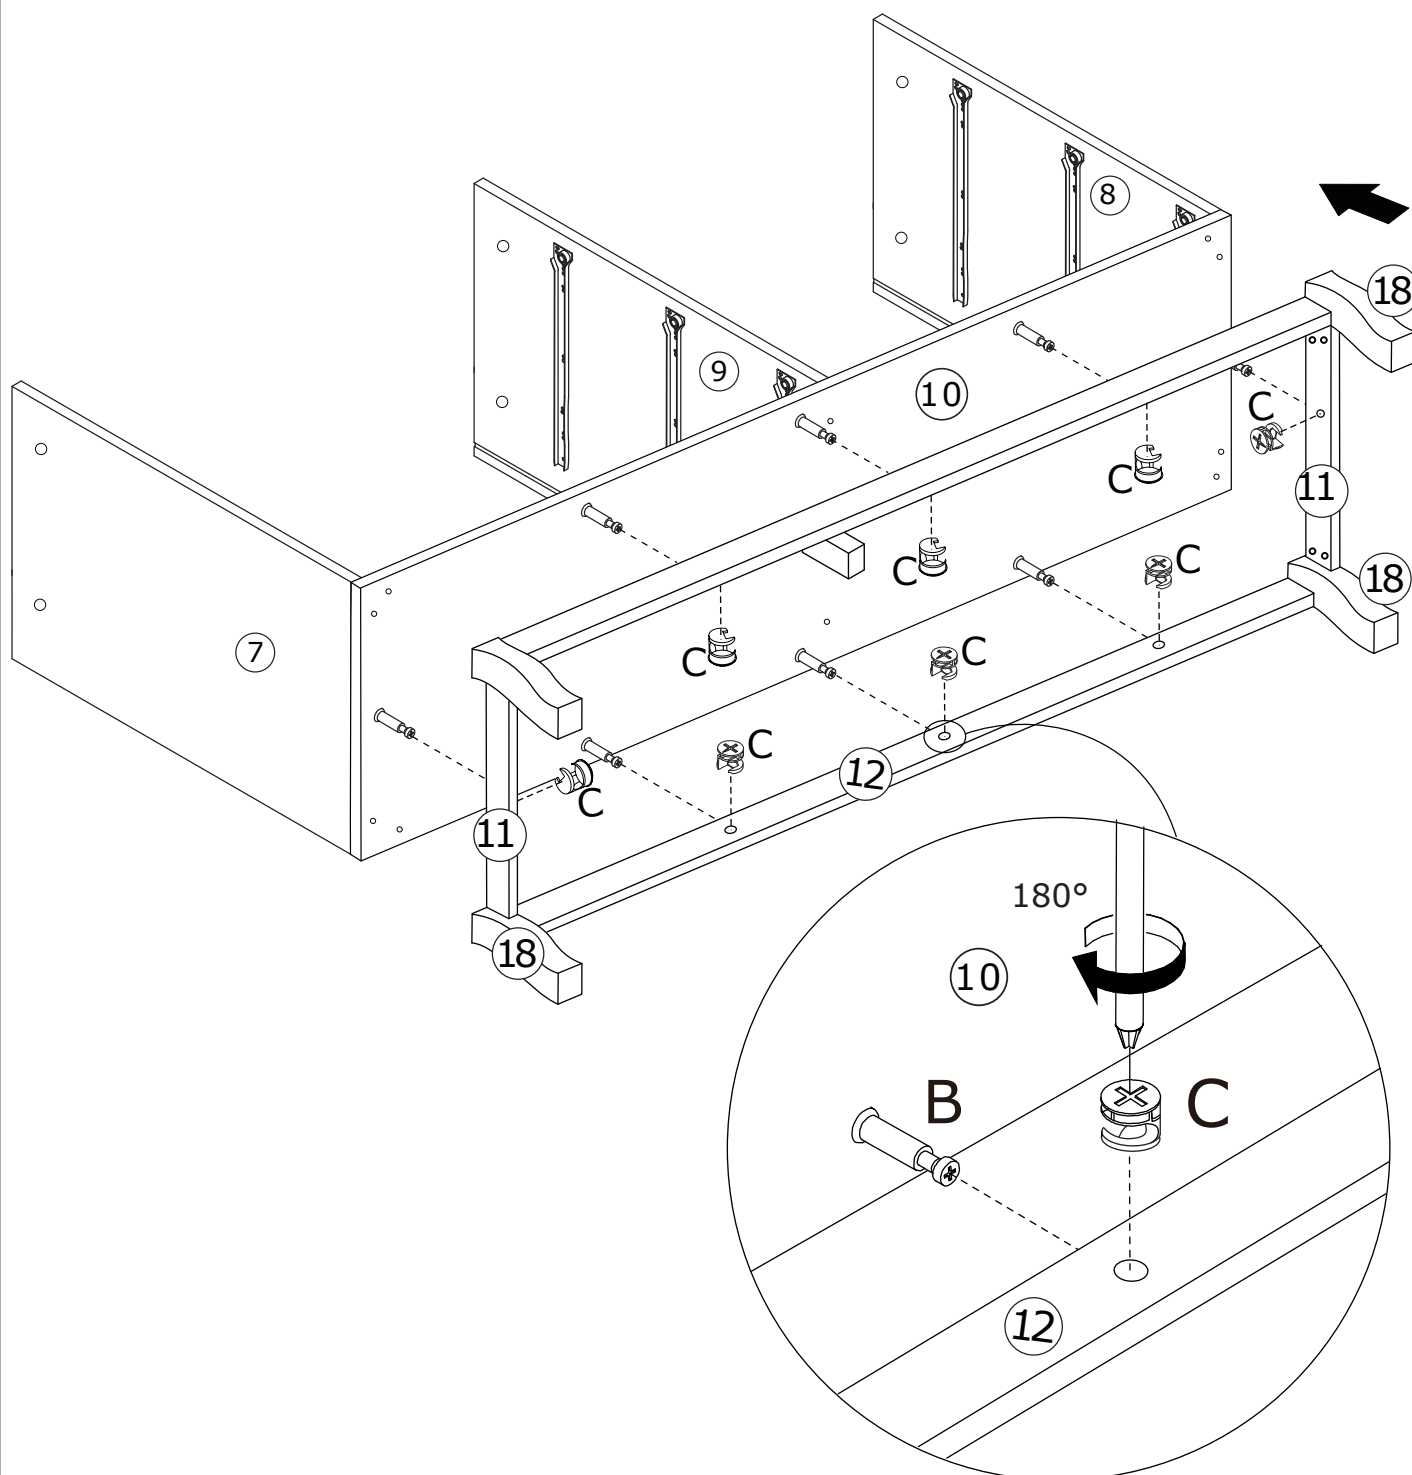


# 16

E x 4



 Ø 5 x 40 mm



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size



E



 
 
Ø 5 x 40 mm

K




Ø 4 x 35mm

Fix board 10 with the base using screw(E) as shown.

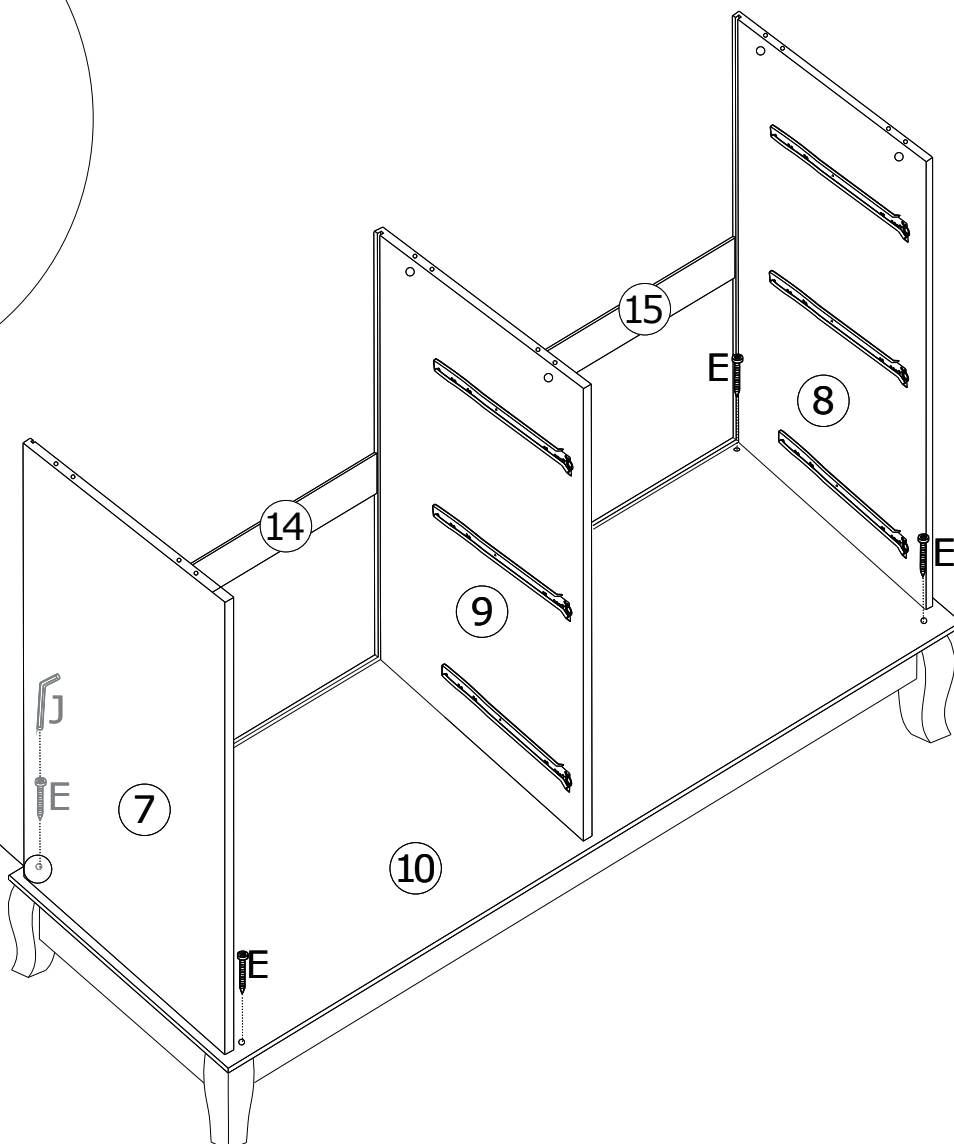
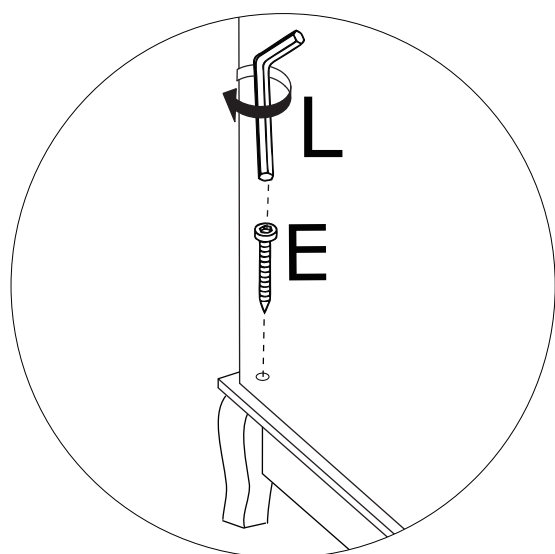


17


 
Slide board 13 into available slots as shown.

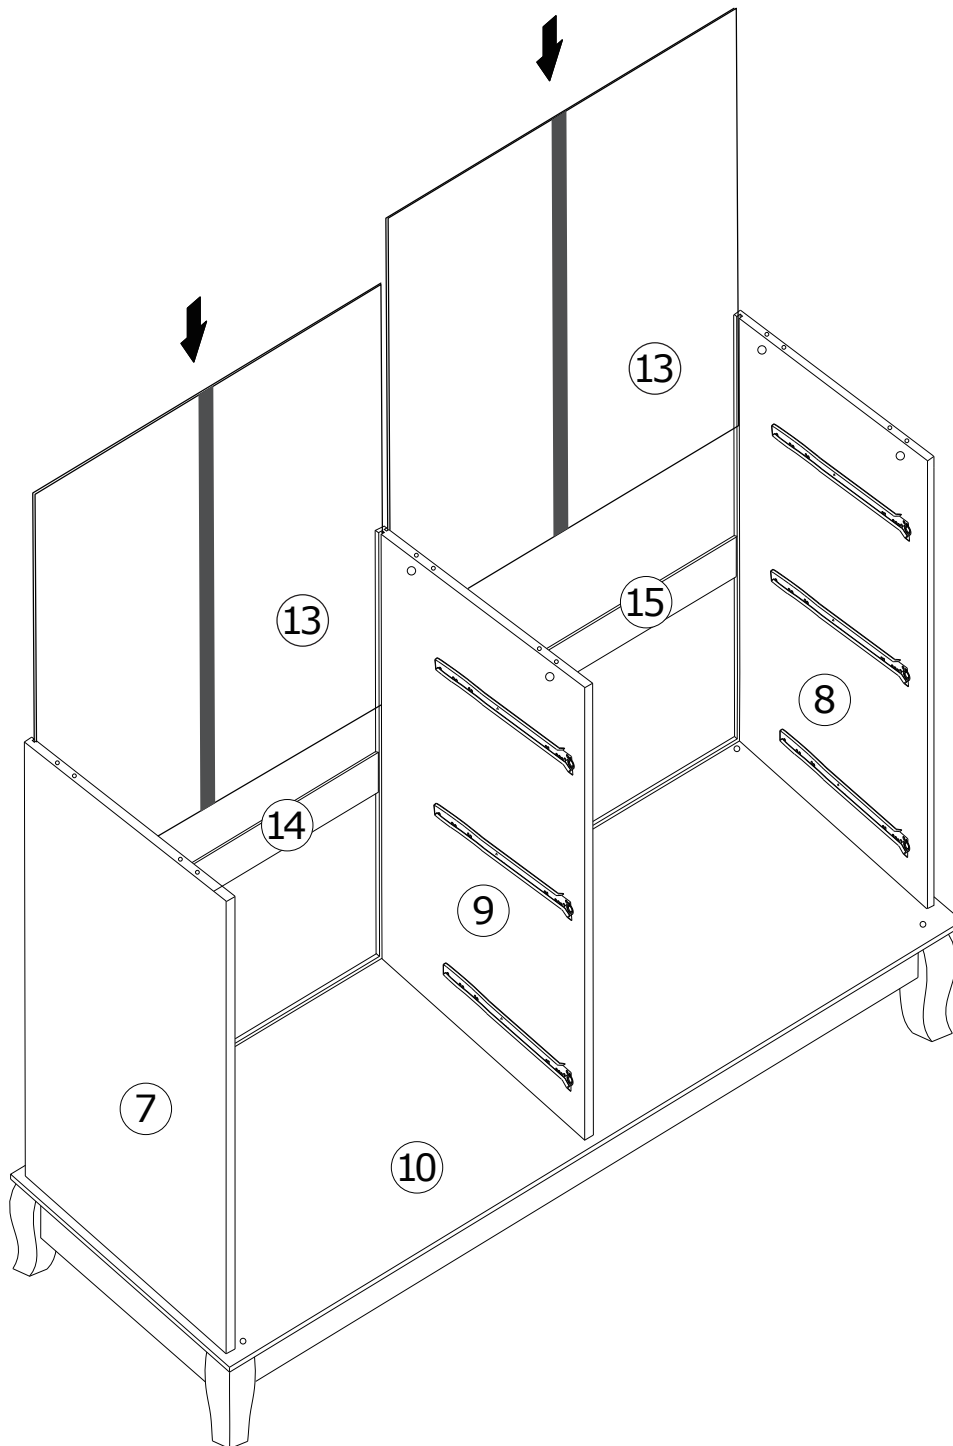

# 18

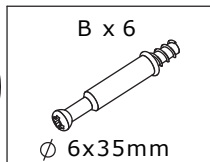  


  Insert quickfit screw(B) into corresponding holes in board 16 with a screwdriver as shown.

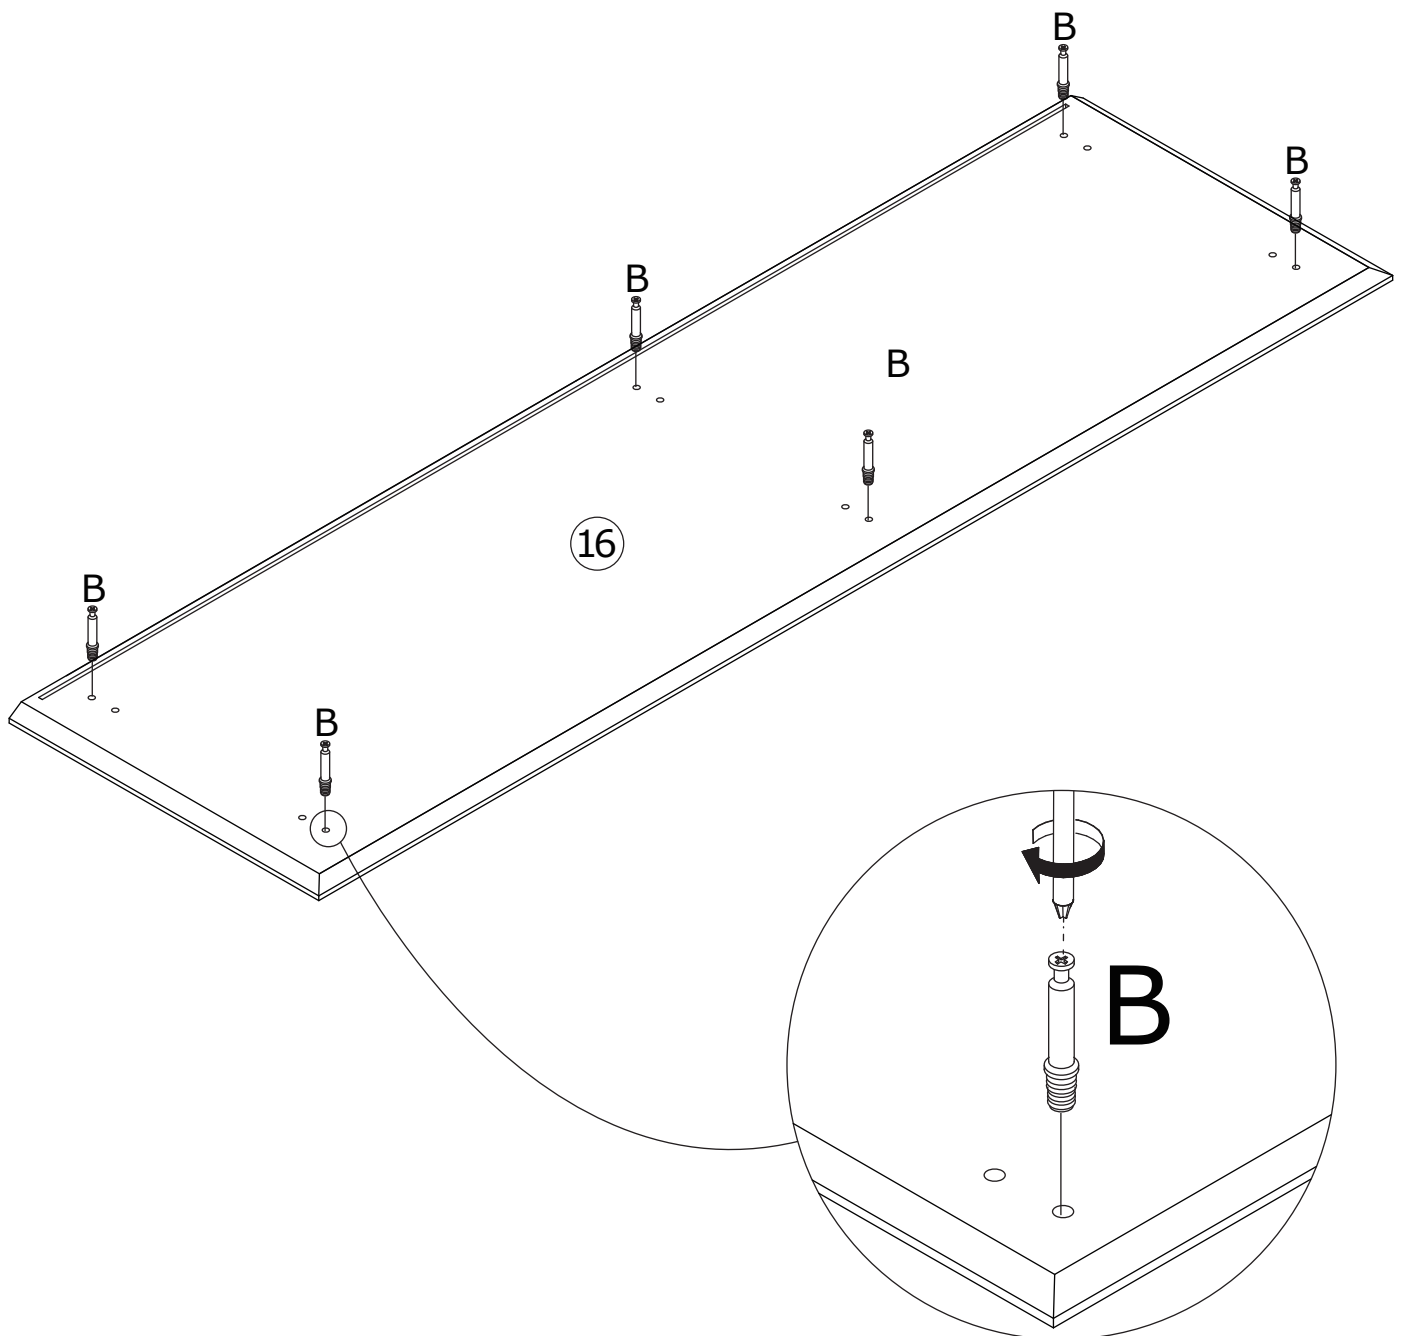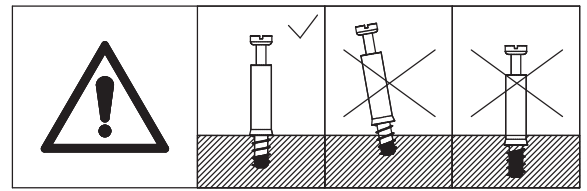

# 19




 
A x 6




C x 6



    Ø 15 x 10 mm

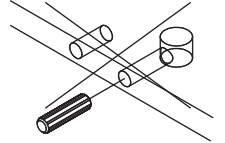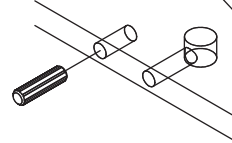

  
Cover board 16 to the assembled component with wooden dowel(A) and turn cam lock(C) clockwise to tighten as shown.

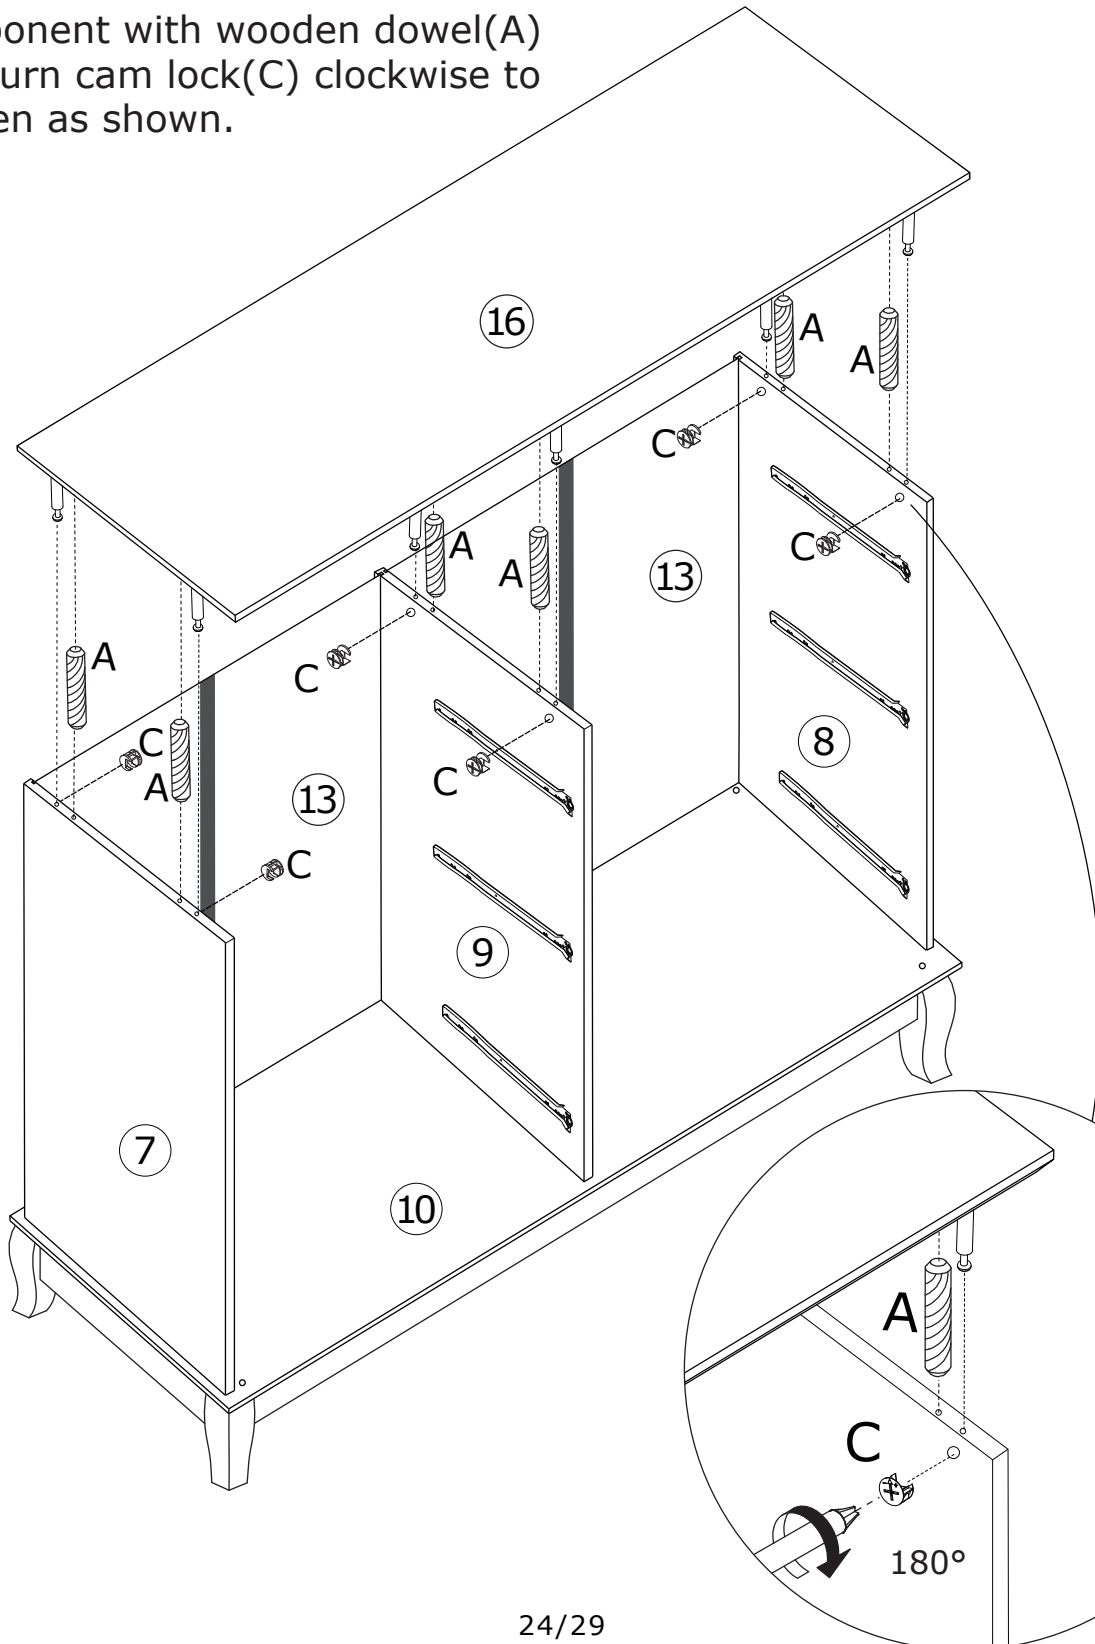





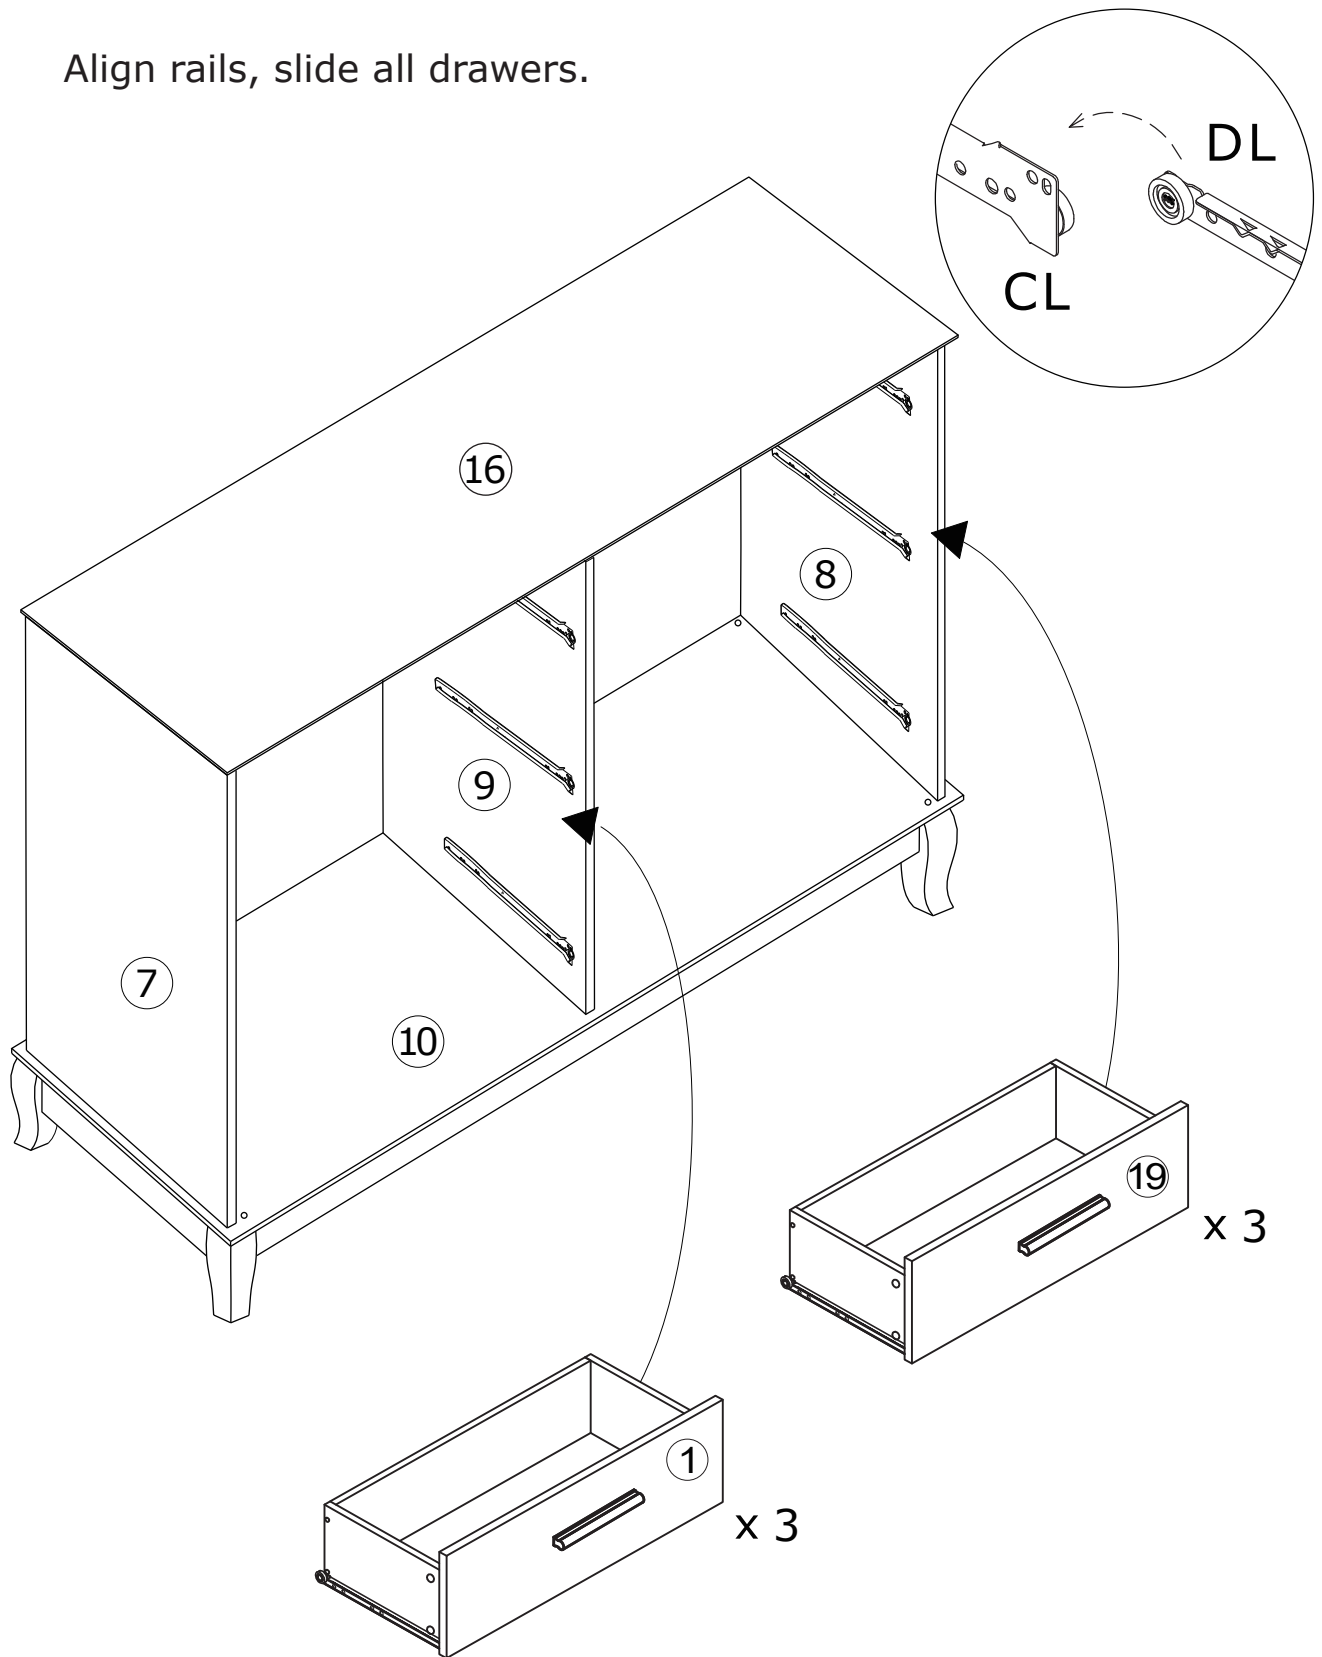


20

Align rails, slide all drawers.



# 21

 
<p>D x 2</p>  <p>Ø 4 x 12 mm</p>	<p>L x 6</p> 	<p>M x 6</p>  <p>Ø 3 x 14 mm</p>	<p>Q x 2</p> 	
---	--	---	---	---





  

 
 
When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

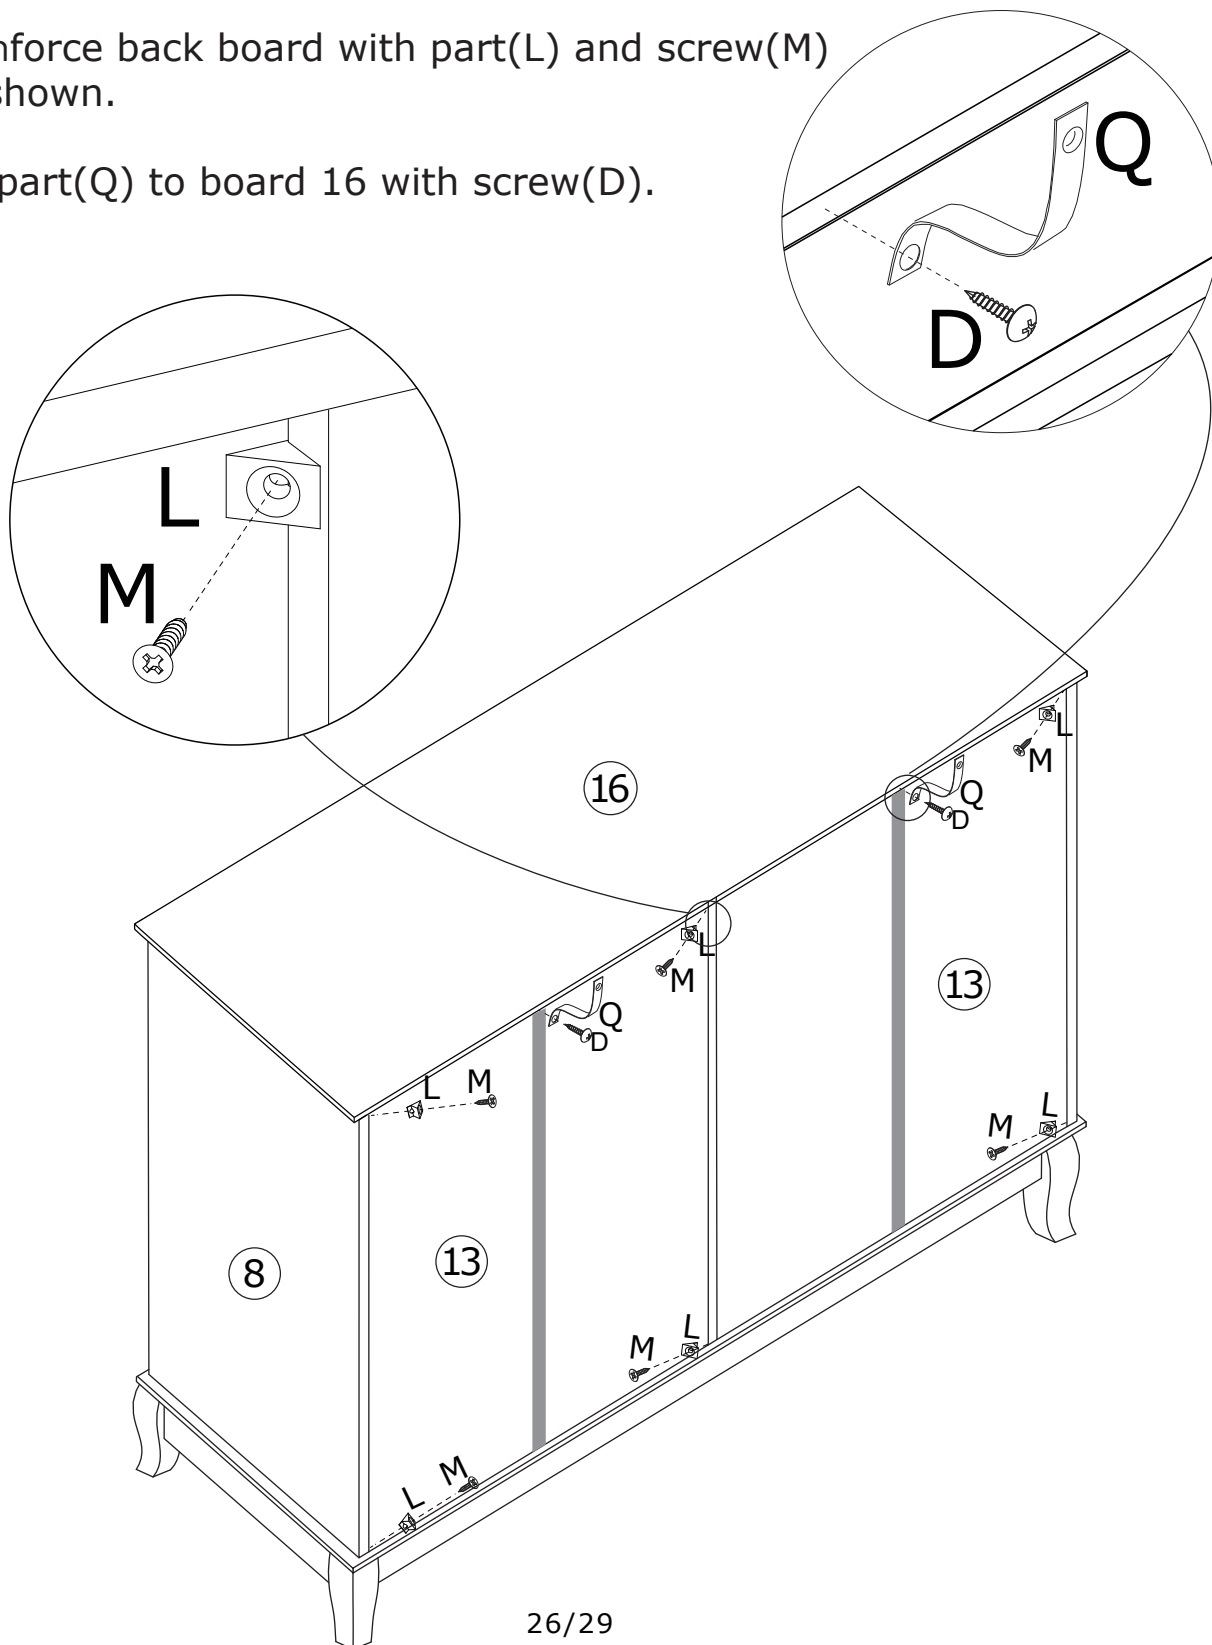

Reinforce back board with part(L) and screw(M) as shown.

Fix part(Q) to board 16 with screw(D).




22

<p>P x 2</p> 	<p>K x 2</p>  <p>Ø 4 x 35 mm</p>				
--	---	---	---	--	---


		<p>When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size</p>
---	---	---

Install anti-tipping device as shown.




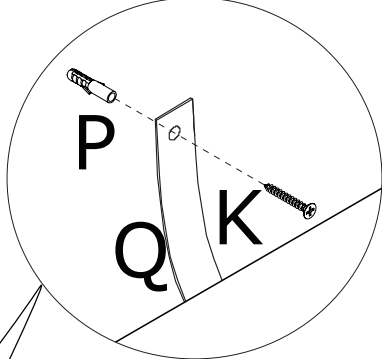 
1

→

 


 
2

 


 


P  
Q  
K

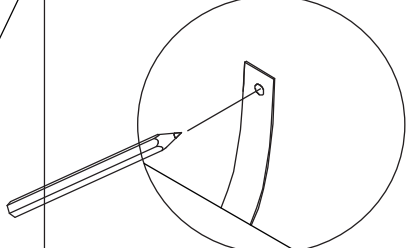

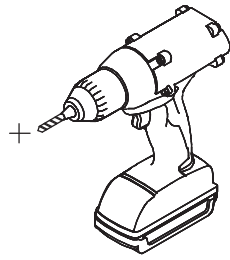

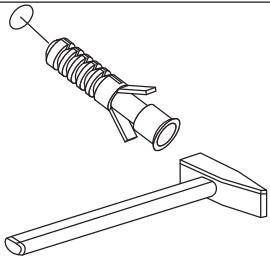

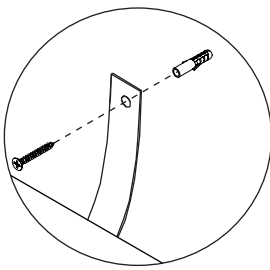

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

# RETURNS

## **CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?**

### **PLEASE FOLLOW THE BELOW INSTRUCTIONS:**

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

### **DEFECTIVE ITEMS**

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

### **DAMAGED ITEMS**

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.  
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.