



HSH-10-005B

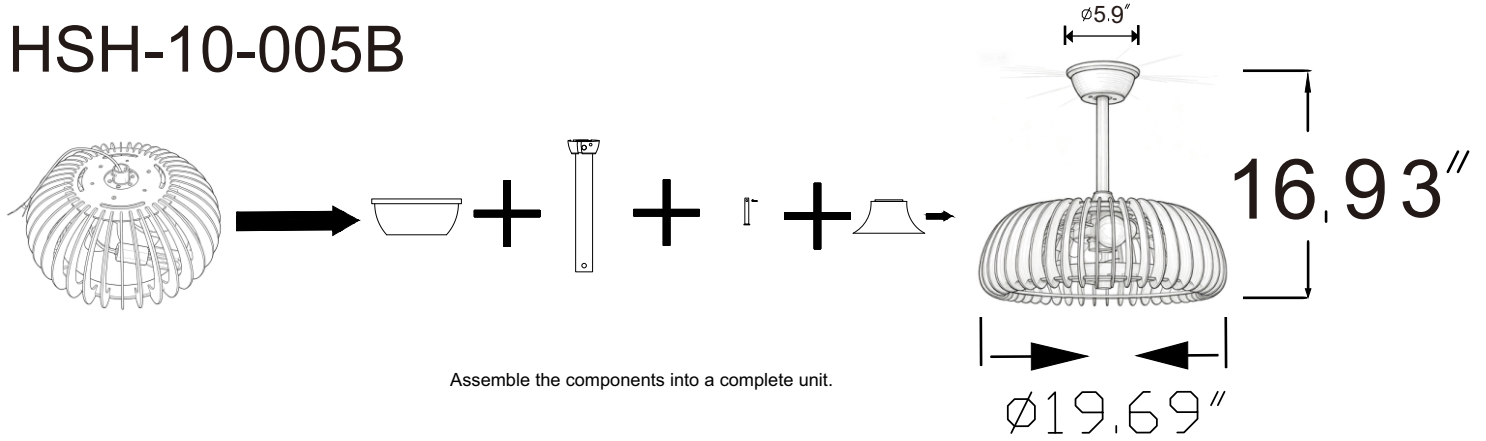


1

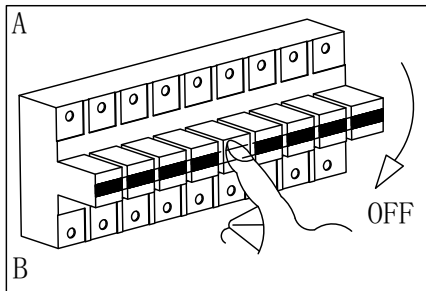


Please ensure the voltage matches the product and disconnect the power at the installation location for safety.

2

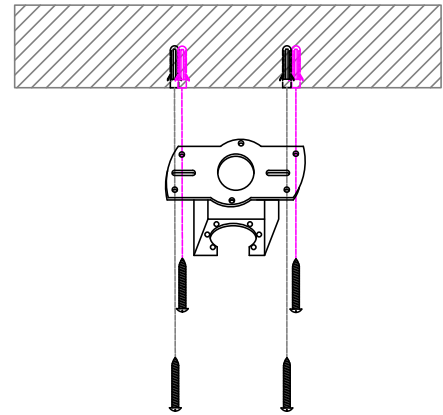


Securely fasten the mounting bracket to the ceiling.

3

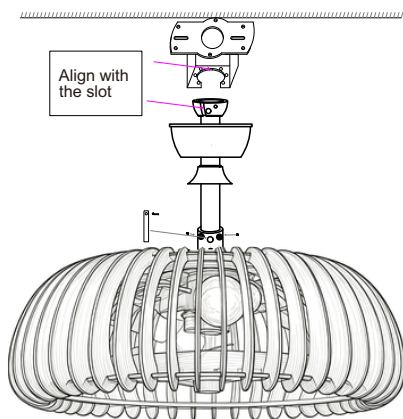


Align and snap the light fixture onto the mounting bracket, ensuring the tabs are seated in the corresponding slots.

4

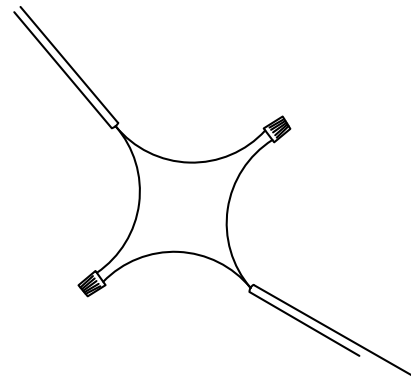


Correctly and securely connect the driver input to the power supply.

5

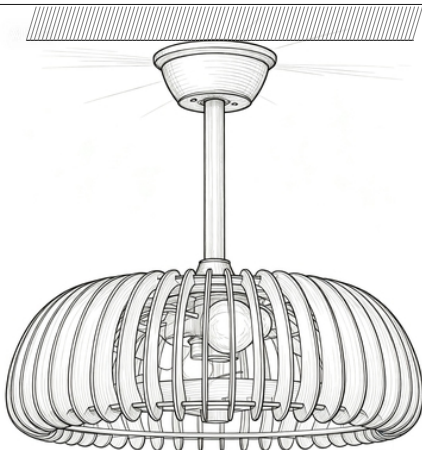

Slide the decorative cover and ceiling canopy over the mounting area, then secure the ceiling canopy in place.

6

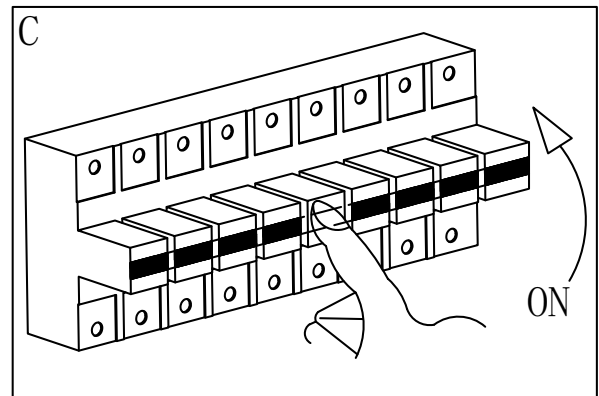


Turn on the power switch.

Fan lamp remote control instructions

Remote control key function:

- ⓐ:Main switch
- ⓑ:Light switch
- ⓕ:rotation
- Ⓢ:Natural wind
- Ⓡ:reversal
- ⓕⓐⓕ:Fan off
- ⓕⓐⓕ:Fan gear key Gear 1-6Forward
- ⓐⓓ:Fixed time 1 hour
- ⓐⓔ:Fixed time 2 hours+pair key
- ⓐⓕ:Fixed time 4 hours

Remote control battery : No. 7 1.5V*2

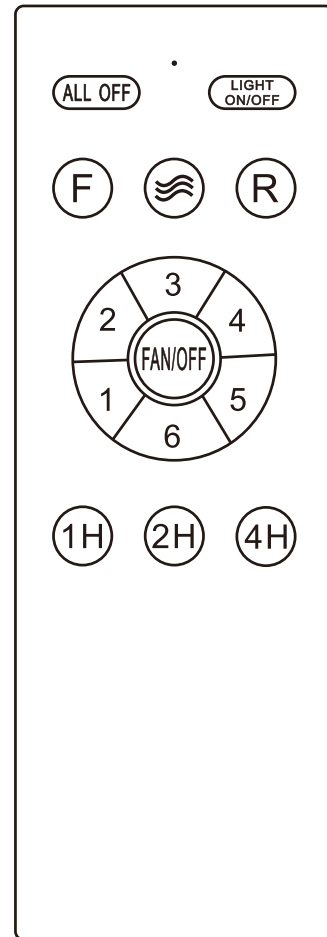

Product introduction :

1. This product adopts 433 wireless digital technology ,

Remote control one-to-one control ,

The workpiece can be controlled from any angle within the allowable space ,

Not limited by direction , Simple and convenient operation ,

Strong anti-interference ability.

2 . Remote control instructions :

① . If the remote control is not used for a long time , Please remove the battery.

② . Remote control matching code :

Turn on the power ,

Press the pair code button within 5 seconds of the light on ,

When you hear two "tick" sound or the light flashes, the code matches successfully.

If you need to match the code again , You need to wait 30 seconds before turning on the power and repeat the above operation.

warning :

This electronic switch product needs to be operated by professionals during installation.

Remote trigger electronic switch ,

The radio frequency of the remote control transmitter is 433M

