

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate www.vevor.com/support

BUFFET SERVER USER MANUAL

MODEL:HD9002C HD9003A

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR[®]

TOUGH TOOLS, HALF PRICE

BUFFET SERVER

HD9002C HD9003A



<Picture Only For Reference >

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:



CustomerService@vevor.com

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS

When using your Buffet Warmer, basic safety precautions should always be followed:

- Read all instructions.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not immerse the appliance in water or any other liquids.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Close supervision is required when using this appliance near children.
- Never leave the appliance within reach of children.
- Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- This appliance is intended for household use only and should not be used for commercial purposes.
- Do not operate the appliance with a damaged plug or cord, after a malfunction, or after being dropped or damaged in any way.
- Do not use the appliance for anything other than its intended use.
- Do not touch hot surfaces, use handle or knobs when working with the unit.
- Never place your hand over the steam vents or cover when the appliance is in operation.
- Ensure the appliance is used on a stable, heat resistant surface.
- Any meat dishes placed in the buffet server must be thoroughly cooked first. Do not place raw meat in the buffet server.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use

of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Keep the appliance and its cord out of reach of children less than 8 years.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Type Y attachment: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments
- The Temperature of accessible surfaces may be high when the appliance is operating.



Surface are liable to get hot during use.

POLARIZATION INSTRUCTIONS

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SHORT CORD

- A A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- B Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- C If a long detachable power-supply cord or extension cord is used,
- 1) The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance, and
 - 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

Do not cook on broken cook-top, If cook-top should break, cleaning solutions and spillovers may penetrate the broken cook-top and create a risk of electric shock. Clean cook-top with caution, If a wet sponge or cloth used to wipe spills on a hot cooking area, be careful to avoid steam burn, some cleaners can produce noxious fumes if applied to a hot surface.

TECHNICAL PARAMETER

MODEL	RATINGS		Capacity	Keep the temperature range
HD9002C	120V/60Hz	200W	2.5qt+2*1.2qt	60°C~80°C (140°F~176°F)
HD9003A		300W	3*2.5qt	

OPERATION INSTRUCTION

How to use the buffet warmer

Note: There will be a faint smell when using the buffet server for the first time but this is quite normal and will fade with use.

WARNING: This appliance will get hot during use, please exercise extreme caution.

- Plug the buffet server into the mains power supply and switch On if switchable. The indicator light will illuminated red and will turn Off when the desired temperature is reached.
 - Place the prepared food into each of the warming pans and adjust the temperature to the desired heat. The indicator light will cycle On and Off whilst maintaining the correct temperature. It is not recommended to keep this appliance On for more than 6-8 hours at any one time.
- After use, unplug the appliance from the mains power supply and allow to cool thoroughly.

How to use the warming plate without warming pans and frame

- Place the warming tray on a stable, heat resistant surface.
- Plug the appliance into the mains power supply and switch On if switchable.
- The indicator light will illuminated red and will turn Off when the desired temperature is reached.
- Pre-heat the appliance for 10 minutes.
- Food warmed on the tray must be pre-cooked and already hot as this appliance is not designed for heating from cold or frozen.
- When you have finished using the appliance, unplug from the mains power supply and allow to cool for approximately 90 minutes before storing.

CLEANING AND MAINTENANCE

- **Caution:** Always ensure the appliance is unplugged from the mains power supply and has thoroughly cooled before cleaning or storing.
- Remove each warming pan, the lid and the frame and wash in warm, soapy

water Rinse well and dry thoroughly.

- Wash the warming tray in a mild detergent with a soft, moist cloth, do not use any abrasive cleaning agents or allow water to spill or seep into the frame. Never immerse the warming, tray cord or plug in water or any other liquid.
- Re-assemble the buffet server and store in a cool, dry place.

ENVIRONMENTAL PROTECTION



This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked with this symbol cannot be discarded with normal household waste but must be taken to an electrical and electronic equipment collection point for recycling.

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support