 


ivation®

SMART FREESTANDING COMPRESSOR WINE COOLER

User Guide

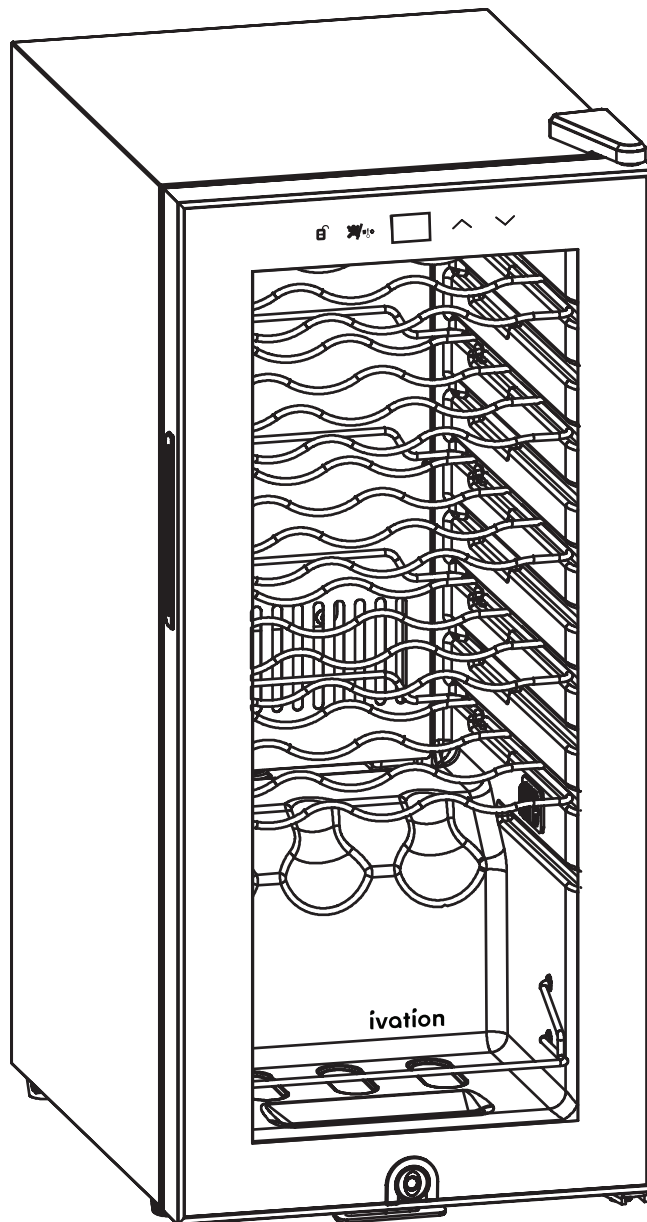

IVFWCC181LBW
Holds 18 bottles

IVFWCC281LBW
Holds 28 bottles

IVFWCC341LBW
Holds 34 bottles

Thank you for purchasing the Ivation® Smart Freestanding Compressor Wine Cooler. This User Guide is intended to provide you with guidelines to ensure that operation of this product is safe and does not pose risk to the user. Any use that does not conform to the guidelines described in this User Guide may void the limited warranty.

Please read all directions before using the product and retain this guide for reference. This product is intended for household use only. It is not intended for commercial use.


This product is covered by a limited one-year warranty. Coverage is subject to limits and exclusions. See warranty for details.

TABLE OF CONTENTS

- 3 FEATURES**
- 4 SAFETY PRECAUTIONS**
- 5 PRODUCT OVERVIEW**
- 7 USAGE**
- 9 CARE**
- 10 SPECS**
- 11 TROUBLESHOOTING**
- 12 WARRANTY**
- 13 GET IN TOUCH!**

YOUR WINE COOLER FEATURES:

 - Control cooler from your smartphone with Wi-Fi® connectivity
- Keeps red and/or white wines at their proper temperature
- One-touch controls and LCD display
- Interior lighting with independent on/off control
- Celsius or Fahrenheit, adjustable by one-degree increments
- Chrome shelves are easy to pull out
- Automatic panel lock
- Tempered smoked glass door protects from UV rays
- Black metal exterior
- CFC-free solid polyurethane foam insulation
- Lockable door for added security and peace of mind

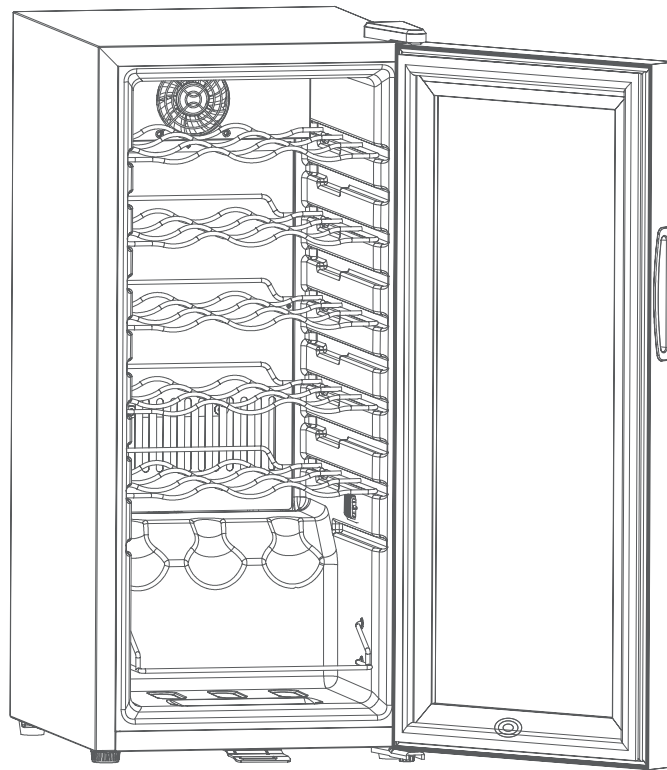

⚠ WARNING: Please read and understand all instructions before operating this appliance.

1. **⚠ WARNING: CHOKING HAZARD – Small parts.** This product contains small parts and is not suitable for children under 3 years old.
2. Remove all packaging before using this device. Please keep all packaging materials out of reach of children and pets.
3. Properly dispose of all packing materials immediately after unpacking product, as the bags used for packaging could present a suffocation or choking hazard.
4. Read all instructions carefully before attempting to operate this device. Improper usage could result in injury or a reduction in efficacy.
5. Never allow children to operate, play with, or crawl inside the appliance.
6. Keep all flammable liquids or materials away from this unit. Failure to do so may result in a fire or explosion.
7. Keep out of direct sunlight and away from heat sources.
8. Do not attempt to repair or replace any parts or service this unit unless specifically recommended in this User Guide.
9. Use only with a properly grounded, standard 115 V 60 Hz electrical outlet to avoid the risk of electrical shock.
10. Do not use with an extension cord.
11. Do not place any objects on the top of the unit.

IMPORTANT SETUP NOTES


- Before plugging in your Wine Cooler, allow it to stand upright for three (3) hours.
- Place only on a flat, level surface that will support the full weight once the wine cooler has been fully loaded. You can ensure the unit is level by placing a small ball on top and checking to make sure it does not roll in any direction.
- Position the cooler in a dry, well-ventilated space with temperatures between 41 °F – 90 °F (5 °C – 32 °C).
- Leave a space of at least 6" in the back of the unit and 10" on both sides.
- Do not use without feet: the unit requires 2" of ground clearance.
- If you are discarding an old unit, remove its door and leave shelves in place to avoid an entrapment hazard.

NOTE: It is normal for your wine cooler to make a whirring sound that will cycle up when the compressor is working harder to chill your wine, and cycle down as the temperature lowers.


GET TO KNOW YOUR WINE COOLER


- | | |
|-------------------------------|-----------------|
| 1 Exterior | 6 Control panel |
| 2 Shelves | 7 Glass door |
| 3 Retainer bar | 8 Door gasket |
| 4 Feet | 9 Security lock |
| 5 Upper door hinge with cover | 10 Bottom hinge |

 IVFWCC181LBW

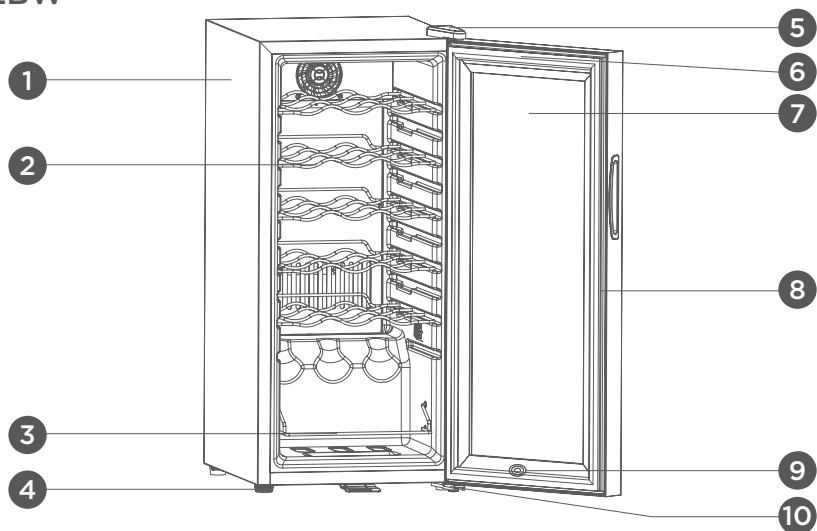

IVFWCC281LBW

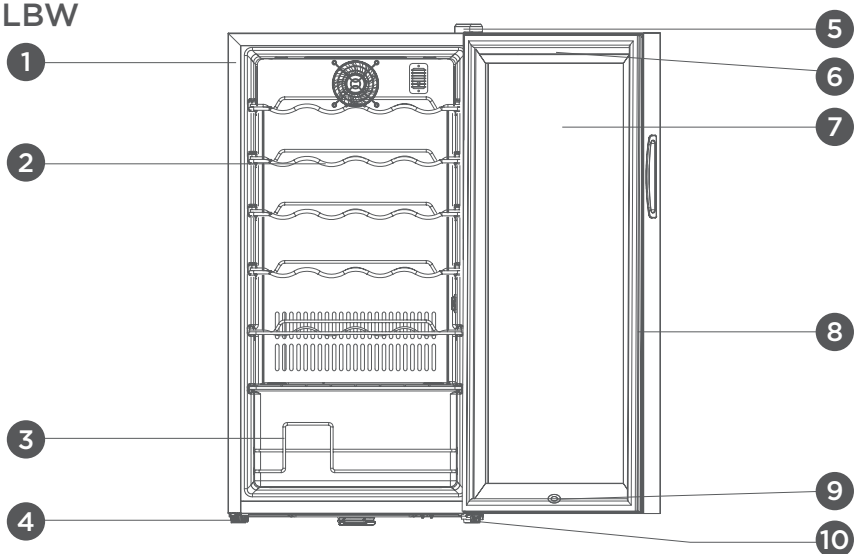 

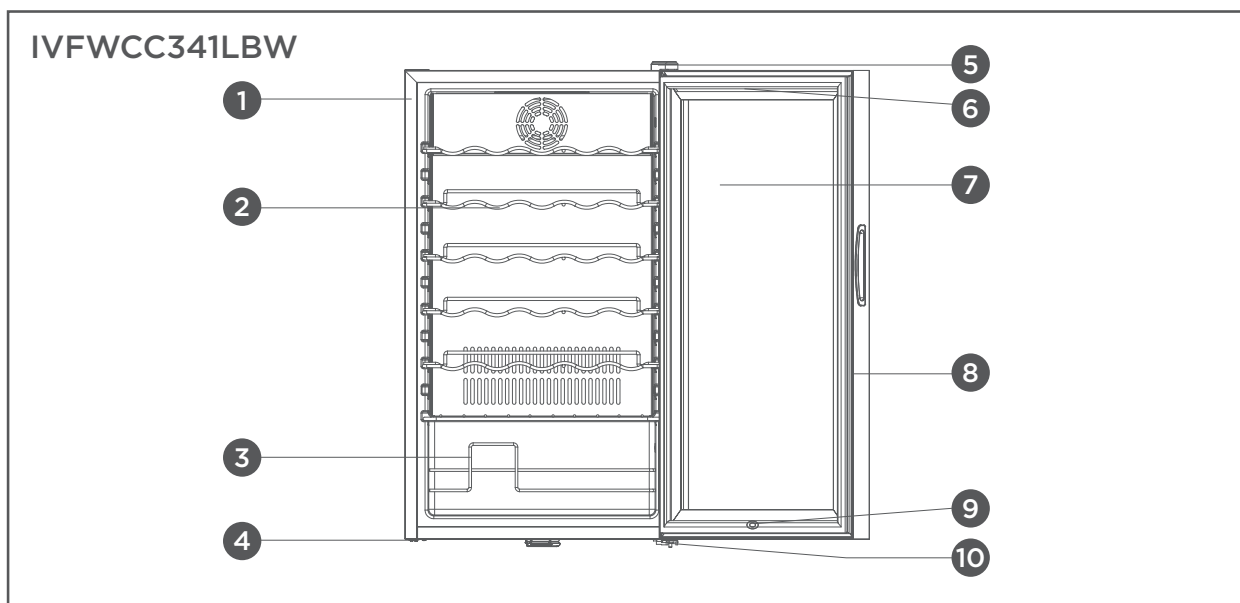 


Model	Storage Capacity	Temperature Range
IVFWCC181LBW	18 Standard Bottles	41 °F - 64 °F (5 °C - 18 °C)
IVFWCC281LBW	28 Standard Bottles	41 °F - 64 °F (5 °C - 18 °C)
IVFWCC341LBW	34 Standard Bottles	41 °F - 64 °F (5 °C - 18 °C)

RECOMMENDED TEMPERATURE

	Fahrenheit	Celsius
Red Wines	57° - 65°	14° - 18°
White Wines, Champagnes and Sparkling Wines, and Dry Varietals	49° - 58°	9° - 14°
Rosé Wines	51° - 53°	10° - 11°

 USING YOUR CONTROL PANEL

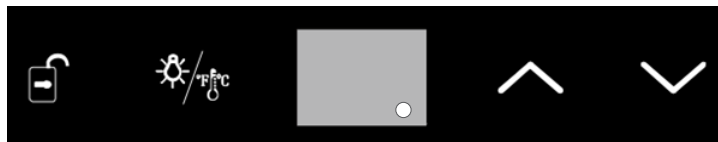

1. Unlock the control panel by pressing and holding the button for two (2) seconds. A beep will alert you that the panel has been unlocked.
2. Adjust the temperature in one (1) degree increments by pressing and holding the (and) buttons until desired temperature is reached.
3. To switch between Fahrenheit and Celsius, press and hold the button for two (2) seconds.
4. You can also turn the interior light on or off by pressing the button. The light will stay on until you turn it off.

SETTING UP WI-FI®

INTERNET ACCESS MODE:

Press and hold the and buttons for more than three (3) seconds to switch to Internet access mode. Then, the indicator will start to blink rapidly.

NOTE: The wine cooler will exit set up mode after three (3) minutes of nonuse.

PREPARATION BEFORE USE:

1. Make sure your wine cooler is on and ensure that your smartphone is connected to 2.4 GHz Wi-Fi network.
NOTE: This device works only on 2.4 GHz Wi-Fi® network.
2. Download the My Ivation® app from the App Store or Google Play™.
NOTE: Authorize the app to access network and location services.
3. If you are using the app for the first time, click the “Sign up” button and register. If you already have an account, click the “Log in” button.

ADD DEVICE TO YOUR SMARTPHONE:

1. From the Home Page, click “Add Device.”
2. You may also add a device by selecting + in the top right corner of the screen. (If you already have a device added to your account, the “Add Device” button will not appear.)

3. Select the wine cooler device you are trying to connect to.
4. When the indicator blinks rapidly, click “Confirm.” Select your Wi-Fi® network. Then, enter your router password.
5. Wait up to 60 seconds for the process to be complete. Once complete, the indicator will stop blinking and remain lit.
6. Once the device is added, you can use the menu to change the name and location of the device.
7. When you are finished, click “Done.”

NOTE: If the indicator light on the wine cooler blinks rapidly, the wine cooler is in EZ mode (default). If the indicator light blinks slowly, the wine cooler is in AP mode (compatibility).

IF YOU HAVE TROUBLE CONNECTING:

1. While the indicator light is blinking rapidly, press and hold the  and  buttons for more than three (3) seconds again to switch to AP mode.
2. Wait for the beep and after a few seconds, the indicator light will start to blink slowly.
3. From the Home Page, click “Add Device.”
4. Click “AP Mode” in the top right corner.
5. Click “Confirm.”
6. Select your Wi-Fi® network.
7. Enter your password.
8. Click “Confirm.” The next screen will say “Connect your mobile phone to the device’s hotspot.”
9. Click “Go to connect.” This will take you to your phone’s settings (or Wi-Fi® list for Android®).
10. Select “SL-Ivation-XXXXX.”
11. Navigate back to the My Ivation App.
12. Click “Next.” Your smartphone will automatically connect.
13. Wait up to 60 seconds for the process to complete. Once complete, the indicator will stop blinking and remain lit.
14. Once the device is added, you can use the menu to change the name and location of the device.
15. When you are finished, click “Done.”

REMOVE DEVICE FROM APP

First method – Removing connection with the wine cooler: Press and hold the  and  buttons for more than three (3) seconds to exit the network connection. The cooler will remove itself from the app and go back to a reset state.

Second method – Removing connection with the app: Open the app and go to the device page. Press and hold the wine cooler device. A message showing “Delete device or dismiss group” will appear.” Press “Confirm”, and the device will be disconnected.

WINE COOLER HOMEPAGE MENU:

Here are the functions featured in the app to operate your wine cooler.

- Set and control the degree in the temperature.
- View the currently set temperature.
- Turn the interior light on and off.

DE-ICING YOUR WINE COOLER

- The unit’s Auto Defrost feature should prevent ice accumulation from occurring.
- However, should ice accumulation occur, you can do the following:
 - Unplug the Wine Cooler
 - Wait for all ice to melt
 - Once melting is complete, remove water from the unit
 - Plug in and restart the unit

HOW TO CLEAN YOUR WINE COOLER

TO CLEAN THE EXTERIOR:

- Unplug before cleaning.
- Do not use abrasive cleaning products.
- Wash the cabinet exterior only with mild soap and water and rinse thoroughly.
- Clean the glass door with glass cleaner or mild soap and water and a soft cloth.
- Wipe the control panel with a damp cloth and dry thoroughly. To avoid damaging the panel, do not use cleaning sprays or over-saturated.

TO CLEAN THE INTERIOR:

- Unplug before cleaning.
- Do not use abrasive cleaning products.
- Cleaning the door gasket:
 - Use mild soap or baking soda solution
 - Rinse well
 - Apply a thin layer of petroleum jelly to the gasket at the hinge side to prevent sticking
- Use a warm water and baking soda solution inside the unit (about one tablespoon of baking soda to one quart of water) to clean and neutralize odors.

TECHNICAL SPECIFICATIONS

IVFWCC181LBW:

Power Supply: 115 V, 60 Hz

Rated Power: 95 W

Unit Dimensions (W x D x H):

13.6" x 17.7" x 30.3" (345 x 450 x 770 mm)

Net Weight: 45.65 lbs. (20.71 kg)

IVFWCC341LBW:

Power Supply: 115 V, 60 Hz

Rated Power: 90 W

Unit Dimensions (W x D x H):

18.7" x 17.3" x 33.1" (474 x 440 x 840 mm)

Net Weight: 55.57 lbs. (25.21 kg)

IVFWCC281LBW:

Power Supply: 115 V, 60 Hz

Rated Power: 95 W

Unit Dimensions (W x D x H):

16.9" x 17.7" x 33.1" (430 x 450 x 840 mm)

Net Weight: 49.6 lbs. (22.5 kg)

TROUBLESHOOTING

If the unit doesn't work:

Check to make sure the power supply has the correct voltage. Also check to make sure there is not a circuit breaker that has been tripped or has blown a fuse.

If the unit isn't getting cold enough:

Make sure the temperature settings are adjusted correctly. If so, the room in which the unit is operating might be too hot. Also check whether the door has been opened too frequently or has not been completely closed. Check the seal on the door to make sure it is intact. Make sure the unit has sufficient clearance on all sides.

If the unit vibrates or makes excessive noise:

Make sure the unit has been placed on a level, stable surface. Also check to make sure the fan is working properly.

If the LED display is not working or shows an error message:

Check to see if the unit is plugged in properly. If so, there may be a problem with the main circuit board that requires professional servicing.

If the buttons don't work:

The control panel may be damaged.

LIMITED WARRANTY TO ORIGINAL CONSUMER

This Ivation® Smart Freestanding Compressor Wine Cooler (“Product”), including any accessories included in the original packaging, as supplied and distributed new by an authorized retailer is warranted by C&A Marketing, Inc. (the “Company”) to the original consumer purchaser only, against certain defects in material and workmanship (“Warranty”) as follows:

To receive Warranty service, the original consumer purchaser must contact the Company or its authorized service provider for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty period(s), MUST be presented to the Company or its authorized service provider in order to obtain the requested service.

Service options, parts availability, and response times may vary and may change at any time. In accordance with applicable law, the Company may require that you furnish additional documents and/or comply with registration requirements before receiving warranty service. Please contact our customer service for details on obtaining warranty service:

Email: info@myivation.com

Phone: 866-849-3049

Shipping expenses to the Company’s Return Facility are not covered by this warranty, and must be paid by the consumer. The consumer likewise bears all risk of loss or further damage to the Product until delivery to said facility.

EXCLUSIONS AND LIMITATIONS The Company warrants the Product against defects in materials and workmanship under normal use for a period of ONE (1) YEAR from the date of retail purchase by the original end-user purchaser (“Warranty Period”). If a hardware defect arises and a valid claim is received within the Warranty Period, the Company, at its sole option and to the extent permitted by law, will either (1) repair the Product defect at no charge, using new or refurbished replacement parts, (2) exchange the Product with a Product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original device, or (3) refund the purchase price of the Product.

A replacement Product or part thereof shall enjoy the warranty of the original Product for the remainder of the Warranty Period, or ninety (90) days from the date of replacement or repair, whichever provides you longer protection. When a Product or part is exchanged, any replacement item becomes your property, while the replaced item becomes the Company’s property. Refunds can only be given if the original Product is returned.

This Warranty does not apply to:

- (a) Any non-Ivation® Smart Freestanding Compressor Wine Cooler product, hardware or software, even if packaged or sold with the Product;
- (b) Damage caused by use with non-Ivation® Smart Freestanding Compressor Wine Cooler products;
- (c) Damage caused by accident, abuse, misuse, flood, fire, earthquake, or other external causes;
- (d) Damage caused by operating the Product outside the permitted or intended uses described by the Company;
- (e) Damage caused by third party services;
- (f) A Product or part that has been modified to alter functionality or capability without the written permission of the Company;
- (g) Consumable parts, such as batteries, fuses, and bulbs;
- (h) Cosmetic damage; or
- (i) If any Ivation® Smart Freestanding Compressor Wine Cooler serial number has been removed or defaced.

This Warranty is valid only in the country where the consumer purchased the Product, and only applies to Products purchased and serviced in that country.

The Company does not warrant that the operation of the Product will be uninterrupted or error-free. The Company is not responsible for damage arising from your failure to follow instructions relating to its use.

NOTWITHSTANDING ANYTHING TO THE CONTRARY AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE COMPANY PROVIDES THE PRODUCT “AS-IS” AND

“AS-AVAILABLE” FOR YOUR CONVENIENCE AND THE COMPANY AND ITS LICENSORS AND SUPPLIERS EXPRESSLY DISCLAIM ALL WARRANTIES AND CONDITIONS, WHETHER EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, QUIET ENJOYMENT, ACCURACY, AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS. THE COMPANY DOES NOT GUARANTEE ANY SPECIFIC RESULTS FROM THE USE OF THE PRODUCT, OR THAT THE COMPANY WILL CONTINUE TO OFFER OR MAKE AVAILABLE THE PRODUCT FOR ANY PARTICULAR LENGTH OF TIME. THE COMPANY FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE.

YOU USE THE PRODUCT AT YOUR OWN DISCRETION AND RISK. YOU WILL BE SOLELY RESPONSIBLE FOR (AND THE COMPANY DISCLAIMS) ANY AND ALL LOSS, LIABILITY, OR DAMAGES RESULTING FROM YOUR USE OF THE PRODUCT.

NO ADVICE OR INFORMATION, WHETHER ORAL OR WRITTEN, OBTAINED BY YOU FROM THE COMPANY OR THROUGH ITS AUTHORIZED SERVICE PROVIDERS SHALL CREATE ANY WARRANTY.

IN NO EVENT WILL THE COMPANY’S TOTAL CUMULATIVE LIABILITY ARISING FROM OR RELATED TO THE PRODUCT, WHETHER IN CONTRACT OR TORT OR OTHERWISE EXCEED THE FEES ACTUALLY PAID BY YOU TO THE COMPANY OR ANY OF ITS AUTHORIZED RESELLERS FOR THE PRODUCT AT ISSUE IN THE LAST YEAR FROM YOUR PURCHASE. THIS LIMITATION IS CUMULATIVE AND WILL NOT BE INCREASED BY THE EXISTENCE OF MORE THAN ONE INCIDENT OR CLAIM. THE COMPANY DISCLAIMS ALL LIABILITY OF ANY KIND OF ITS LICENSORS AND SUPPLIERS. IN NO EVENT WILL THE COMPANY OR ITS LICENSORS, MANUFACTURERS, AND SUPPLIERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA, OR RECORDS) CAUSED BY THE USE, MISUSE, OR INABILITY TO USE THE PRODUCT.

Nothing in these terms shall attempt to exclude liability that cannot be excluded under applicable law. Some countries, states, or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so certain limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

GET IN TOUCH!

✉ info@myivation.com

☎ 1-866-849-3049

IVATION is a trademark of C&A IP Holdings, LLC, in the US, Canada, and the EU.

WI-FI is a trademark of Wi-Fi Alliance in the US and/or other countries.

Apple and App Store are trademarks of Apple, Inc. in the US and other countries.

Google Home and Google Play are trademarks of Google, LLC.

All other products, brand names, company names, and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to connote any sponsorship, endorsement, or approval.

Distributed by C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837

MADE IN CHINA

© 2020. C&A IP Holdings, LLC. All Rights Reserved.