 


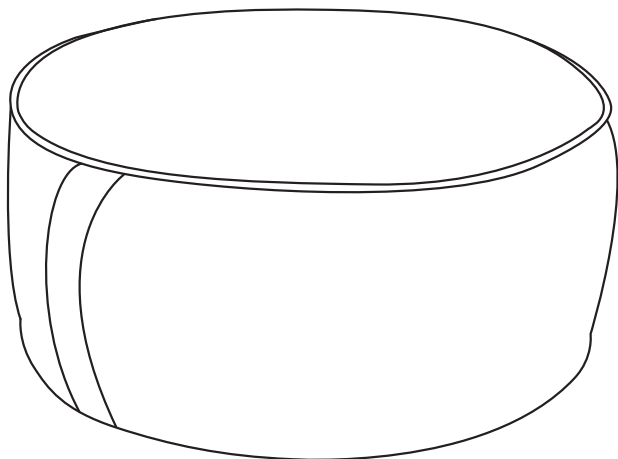


INFLATABLE OTTOMAN

Read the manual carefully and follow the care instructions.
Save this document for future reference.


No.	PARTS	QTY.
A	Ottoman Cover	1
B	Inflatable Insert	1
C	Repair Patch	1

ASSEMBLY

 
AIR PUMP REQUIRED TO INFLATE (NOT INCLUDED)

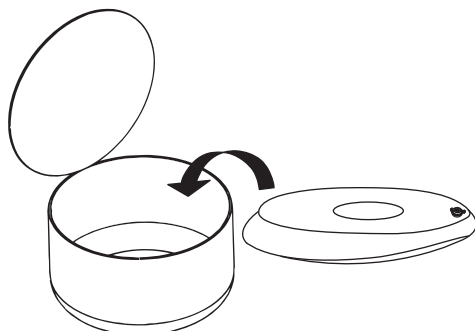

 1. Unzip the fabric cover. Unfold the inflatable ottoman and place it inside the cover, ensuring the valve is accessible.

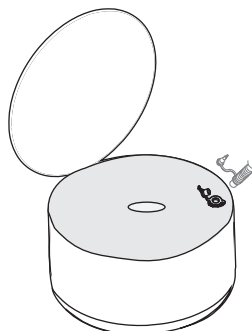

 2. Inflate the ottoman up to 90%. Take care not to overinflate.

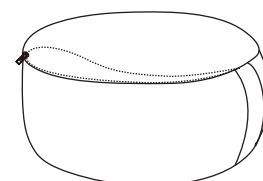


3. Carefully zip the cover closed, ensuring the zipper does not catch on the inflatable insert.

Inflate


CAUTION: To prevent bursting, do not use a high pressure pump such as an air compressor. **!**

 1

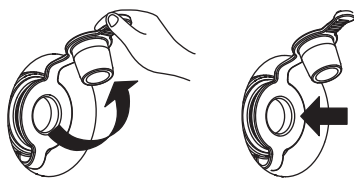

Separate the valve cap from the valve housing and press the valve housing firmly into the exhaust hole.

 2

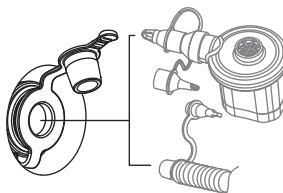

Insert the hose or nozzle of an air pump (**not included**) into the valve housing and inflate approximately 90%.
DO NOT OVERINFLATE!

3



Firmly press the valve cap over the opening, ensuring it is secure.

 
Deflate

1



Carefully pull the valve cap out from the valve housing.

2

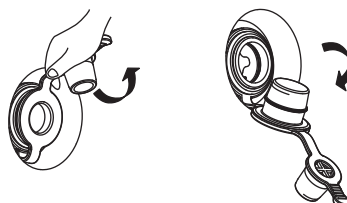

Carefully pull out the valve housing to release air.

3



Replace the inflation valve housing and cap.

Repair

Measure and cut the repair patch to size needed to cover the hole or puncture.

Thoroughly clean the surface surrounding the hole or puncture, taking care not to expand the torn surface.

The area the patch will be applied to must be completely dry. Wait at least 15 minutes after cleaning and drying the surface to help ensure no moisture is present.

Remove the backing from the patch.

Press the patch firmly over the hole or puncture, ensuring there are no air bubbles or wrinkles.

Wait at least 20 minutes before attempting to reinflate.

USE & CARE

- ▶ All fabrics will eventually fade from sun exposure. Maintain the color and integrity of the ottoman and cover by storing indoors when not in use.
- ▶ Inspect for punctures before each use.
- ▶ Keep away from sharp objects. Large cuts may not be repairable and will not be covered by the warranty.
- ▶ In case of incidental damage, a repair patch has been included. Please follow the repair instructions carefully.
- ▶ Always store this item indoors when not in use.

CLEANING



SPOT CLEAN/HAND-WASH ONLY



DO NOT DRY CLEAN



DO NOT USE BLEACH OR SOLVENTS



DO NOT IRON



DO NOT TUMBLE DRY



LINE DRY

1. Remove the fabric cover.
2. Gently wash the inflated ottoman with lukewarm water and a soft cloth. Dry thoroughly with a soft, dry cloth.
3. To clean the cover, dampen a soft cloth with lukewarm water and dab the soiled fabric.
4. Hang the fabric cover and allow it to air dry thoroughly.

STORAGE

- ▶ Store in a clean, dry place at room temperature that is away from direct sunlight.
- ▶ For long-term storage, make sure the ottoman is deflated, and all components are completely dry.
- ▶ Ensure all components are completely dry before storage. Storing while wet can degrade the fabric and may lead to mold and mildew growth.



SAFETY STATEMENTS & WARNINGS



- Follow all safety instructions to avoid serious injury.
- For household/residential use only.
- Do not sit or jump on the ottoman.
- Supervise children at all times around this item — THIS IS NOT A TOY!
- Use on flat surfaces only.
- Do not use on rough ground, abrasive surfaces, or near sharp or pointed objects.
- Keep away from heaters, flames, sparks, or any other heat source.
- Store in a clean, dry place at room temperature (above 50°F/10°C). Storing under 50°F (10°C) and over 100°F (38°C) may affect its performance and will not be covered under warranty.

Any modification to the product or failure to follow recommended care will void the product warranty.



WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.