

Installation Instructions

Step 1 – Figure 1

- Review accessories and confirm all items are present.
- If anything is missing, please contact customer service (see Figure 1).



Acrylic curved plate



Retaining ring



Lampholder

Step 2 – Figure 2

- Partially remove the protective film from each end of the pieces that make up the Acrylic Curved Plate. Each piece measures 3-4cm/1-1.5 Inches.
- Be sure not to completely remove the film yet.
- **Partially remove the protective film from the slot position of the Acrylic Retaining Ring.**



Step 3 – Figure 3

- Insert one end of each Acrylic Curved Piece into each slot on the Lampholder until all slots are taken.
- Insert the other end of each Acrylic Curved Piece into each slot of the Acrylic Retaining Ring until all slots are taken.




Step 4 – Figure 4

- Install the Fan Blade and tighten with the Fixed Cap
- Remove all protective film once assembly is complete.




Step 5 – Figure 5

- In order to use the fan lamp better, please pass the mounting screw through the hole on the most side of the cross and fix it to the ceiling, and then install the fan lamp!!!

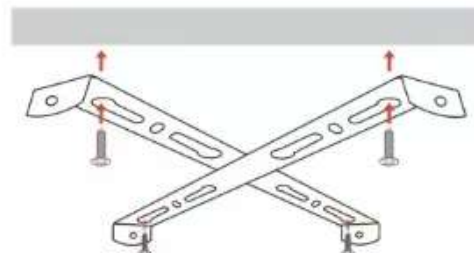



Step 7 – Figure 7

- Thread the screw into the hole above the motor and rotate the entire fanlight. Tighten the screws.

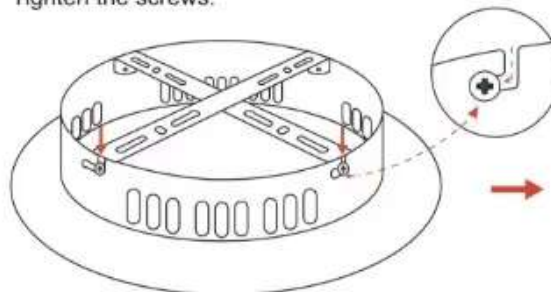

Step 6 – Figure 6

- Connect the LN cable of the product to the LN cable of the home power supply.

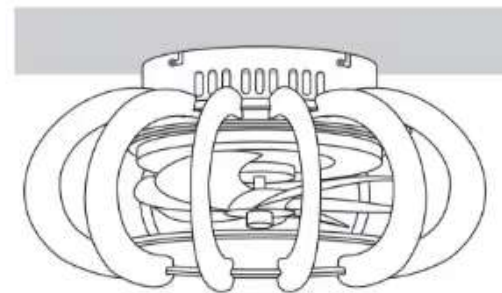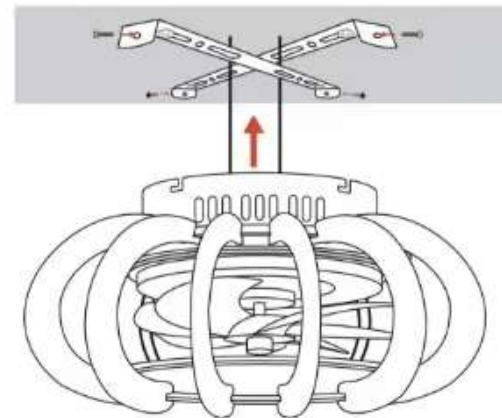

Troubleshoot

1. The fan does not rotate
 - Check whether there is any problem with the fan power line contact.
 - Check whether the fan power supply voltage is normal.
2. The fan is noisy
 - Check whether all screws of the fan are tight.
 - Check whether the motor generates friction with others when it is running.
3. Remote control does not control lights and fans
 - Check that the remote control batteries are installed.
 - Try coding the remote control with the fan light.
4. How to programmed the remote?
 - Turn on the power and within 3 seconds after hearing the "beep". Press and hold the "Fan ON/OFF" button, when the receiver emits "beep", the programming is successful.
 - If the programming is not successful, turn off the power, wait for 1 minute, and then repeat the above operation.