
I - PART AND HARDWARE:

PIECE		PICTURE	QTY
А	Right Leg		3
В	Left Leg		3
С	Back Frame-Bench		1
D	Seat Frame-Bench		1
E	Back Frame-Chair		2
F	Seat Frame- Chair	\bigcirc	2
G	Leg-Table		2
Н	Table Top		1
I	Bolt M6x30		28
J	Bolt M6x15		8
K	Washer	0)	36
L	Plastic Feet		16
М	Cushion- Chair	\bigcirc	2
Ν	Cushion- Bench	\square	1
	Allen Key 4		1

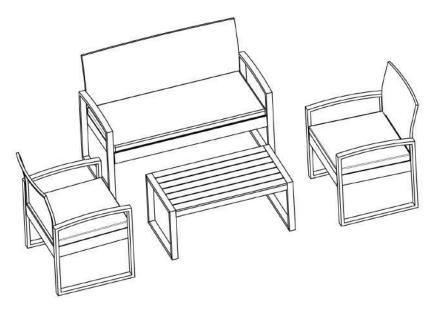


MODEL #LVG1102-4SET JONATHAN Y: OUTDOOR LIVING ROOM SET




If there are any questions related to defects, missing parts, assembly issues or replacements, please send a detailed email to cs@jonathany.com

50% Tighten before fixings all screws, Allen wrench Is recommended instead of an electric drill.
Place the item on a flat ground to adjust and make sure it remains stable.
Tighten up all screws with tools gradually.
If the screws are not aligned with holes during assembly, please loosen all all the other screws to 50% and continue the assembly process.
If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
Note: If one or more screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are disigned to be relatively larger to provide more space for the adjustment of the screws.

II- PRODUCT ASSEMBLY: BENCH "DO NOT TIGHTEN THE SCREWS UNTIL ALL OF PARTS SET INTO CORRECT POSITION"

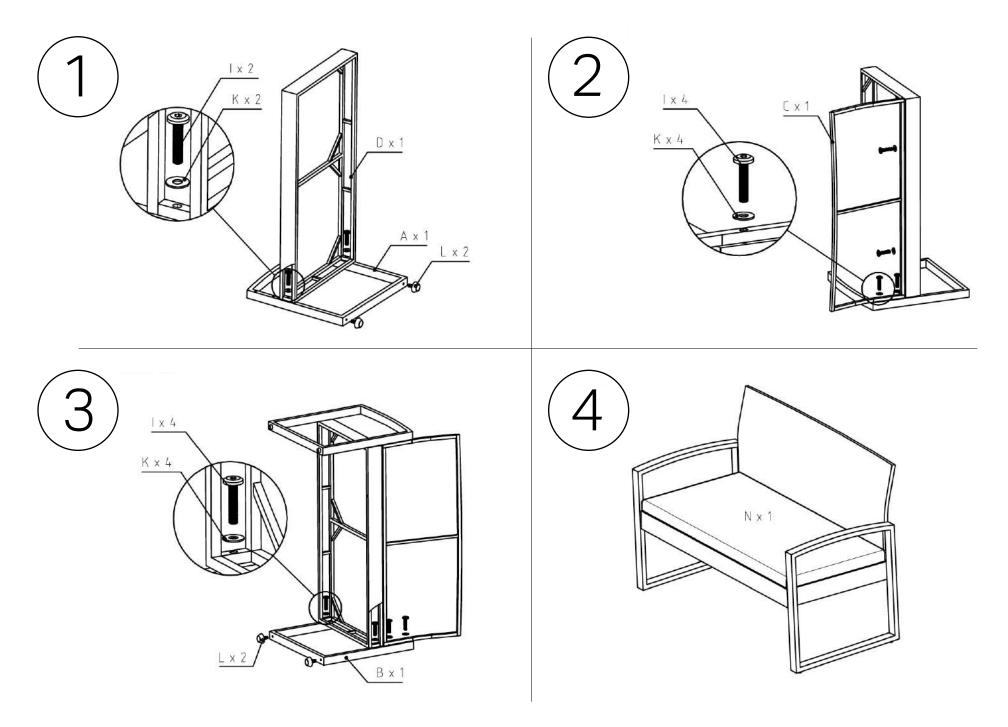

III- PRODUCT ASSEMBLY: CHAIR "DO NOT TIGHTEN THE SCREWS UNTIL ALL OF PARTS SET INTO CORRECT POSITION"

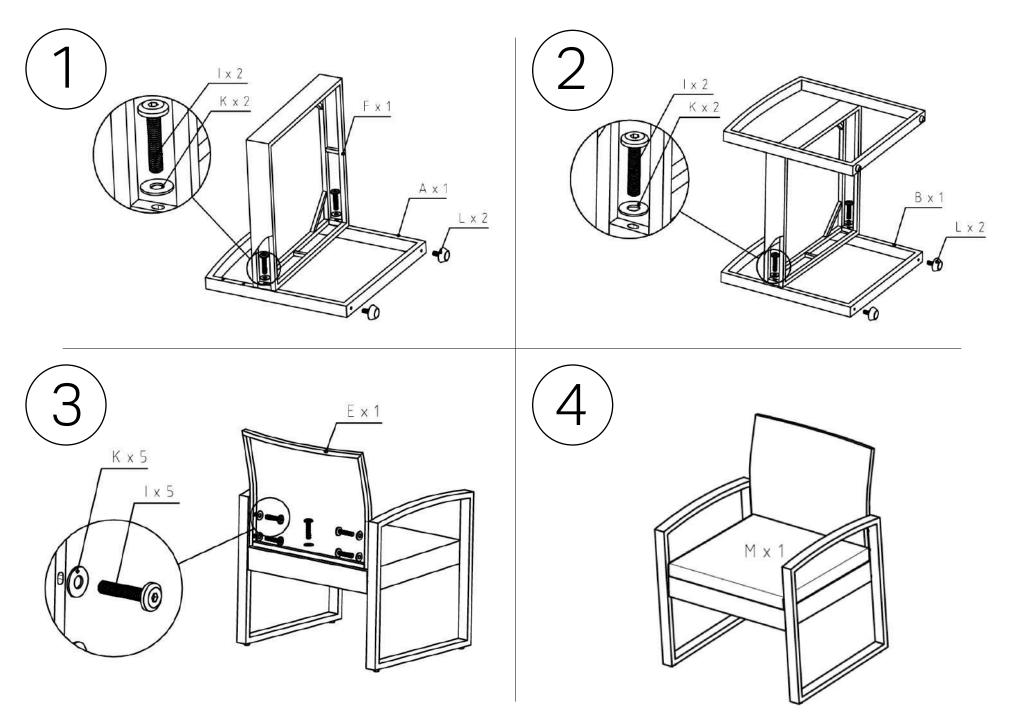

IV- PRODUCT ASSEMBLY: TABLE "DO NOT TIGHTEN THE SCREWS UNTIL ALL OF PARTS SET INTO CORRECT POSITION"

