

HAUNTED

LIVING®



HAUNTED
LIVING and
logo design
are trademarks
or registered
trademarks
of LF, LLC.
All rights
reserved.

TEKKY®
and the logo
design are
trademarks
of JCW
Investments,
Inc., d/b/a
Tekky, and
used under
license.



ITEM #7950566
MODEL #96807

6.5 FT ANIMATED WITCH WITH BROOM

Español p. 14

ATTACH YOUR
RECEIPT HERE

Serial Number _____

Purchase Date _____

Thank you for purchasing this **HAUNTED LIVING** product.
Questions, problems or missing parts?
Before returning, contact us on:
888-251-1006, 8 a.m. - 8 p.m., EST, Monday - Sunday.

TABLE OF CONTENTS

Package Contents..... 3

Safety Information..... 4

Battery Instructions..... 4

Warning..... 5

Preparation..... 5

Assembly Instructions..... 6

Operating Instructions..... 10

Optional Demo/External Speaker Setup..... 11

Care and Maintenance 12

Troubleshooting..... 12

FCC Regulations..... 13

PACKAGE CONTENTS



PART	DESCRIPTION	QUANTITY
1	Metal Base with 3.3 lbs Sandbag	1
2	Lower Pole	1
3	Middle Pole	1
4	Upper Pole with Control Box & 5.9V 2A DC Adapter	1
5	Lower Broomstick with Broom	1
6	Middle Broomstick	1
7	Top Broomstick	1
8	Head & Body	1
9	AA Batteries	4
10	Snap Lock Removal Tool	1

 
SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

1. This item is not a toy and should be used for decoration only.
2. This item contains small parts that can be a choking hazard.
3. Keep all plastic and wire parts away from babies and children. Recommended for ages 15 and up.
4. Please use the adapter supplied by the manufacturer.
5. Please assemble item according to the instructions.
6. Connect all wires according to matching letters.
7. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep all materials away from the adapter, as it heats up during operation.
8. This item contains Polyvinyl Chloride (PVC).
9. Colors, style and contents may vary slightly from those shown on the package.

BATTERY INSTRUCTIONS

1. Contains (4) AA 1.5-volt alkaline batteries. Batteries are not rechargeable.
2. Battery installation and removal should be performed by an adult. Batteries are harmful if swallowed.
3. Keep batteries and parts away from babies and children. Recommended for ages 15 and up.
4. Remove batteries when not in use.
5. Use only batteries recommended in the instructions.
6. Do not mix new and used batteries.
7. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
8. Be mindful to insert batteries with the correct polarity (+/-) as indicated.
9. Remove all exhausted batteries.
10. Rechargeable batteries are only to be charged under adult supervision.
11. Rechargeable batteries are to be removed from the item before being charged.
12. Non-rechargeable batteries are not to be recharged.
13. The supply terminals are not to be short-circuited.
14. Always dispose of exhausted batteries properly.
15. DO NOT dispose of batteries in fire, they may leak or explode.

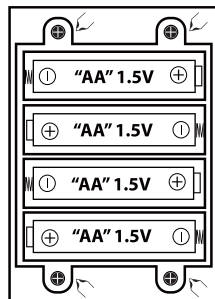

WARNING

- **Warning: Risk of injury to persons. Read and understand instruction manual before use.**
- Warning: CHOKING HAZARD! Small parts. This item is not a toy. For decoration only.
- Do not turn item on until you have completely finished assembly.
- Stay clear of item while operating.
- Do not place item on uneven ground.
- Do not place additional weight on item while in operation unless on the metal base.
- Intended for indoor use only.

PREPARATION

ADULT ASSEMBLY REQUIRED

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble the product.


A small crosshead/Phillips screwdriver is required to remove the battery compartment cover on the control box.

Estimated Assembly Time: 3 minutes

ASSEMBLY INSTRUCTIONS

1. Insert and snap lock the lower pole into the metal base.

MATCH A to A

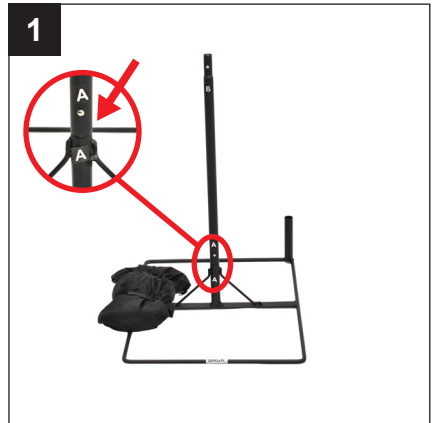


2. Insert and snap lock the middle pole into the lower pole.

MATCH B to B



3. Insert and snap lock the upper pole with control box & 5.9V 2A DC adapter into the middle pole.


MATCH C to C

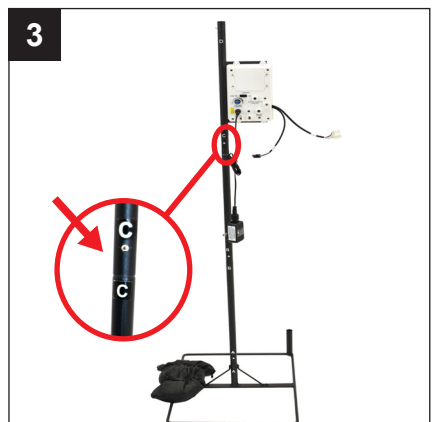

ASSEMBLY INSTRUCTIONS

4. Insert and snap lock the head & body into the upper pole with control box & 5.9V 2A DC adapter.

MATCH D to D

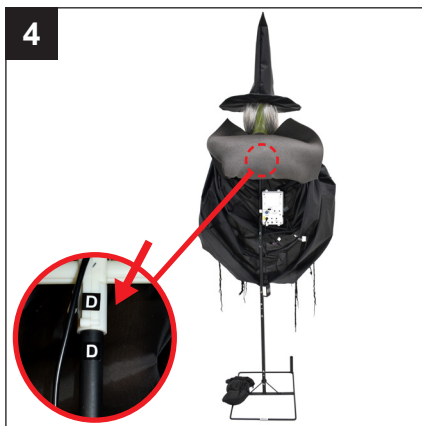

5. Place the bottom of the lower broomstick with broom onto the metal post on the right front corner of the metal base.



6. Insert and twist lock the middle broomstick into the lower broomstick with broom.

MATCH E to E



ASSEMBLY INSTRUCTIONS

7. Insert and twist lock the bottom of the right hand with broomstick into the middle broomstick.

MATCH F to F



8. Insert and twist lock the top broomstick into the top of the right hand with broomstick.

MATCH G to G




9. Locate the control box through the back of the assembled item.

Connect the wires from the head & body to the control box.

MATCH I to I (black connector Human Sensor)

MATCH H to H (white connector Head Movement and LED Eyes)

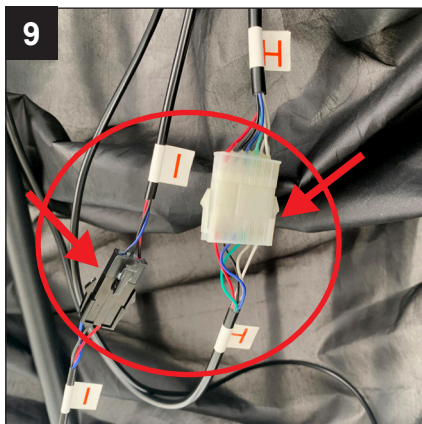

ASSEMBLY INSTRUCTIONS

10. Adjust the body's fabric over the metal base.




OPERATING INSTRUCTIONS

1. Check that the 5.9V 2A DC Adapter (included) located on the control box is fully secured by twisting it tight. Do not overtighten.

OR

Remove the 5.9V 2A DC Adapter (included) from the control box and insert 4 AA batteries (included) into the control box's battery compartment.

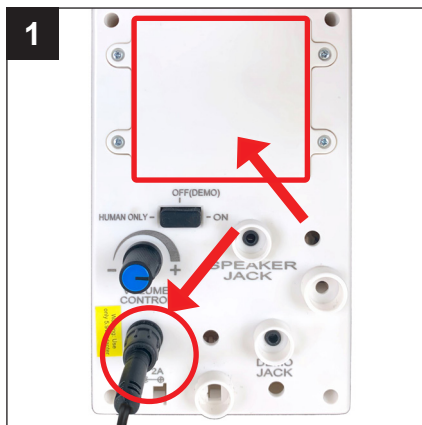


2. Move the switch to the ON position. Make a loud sound (clap), or move in front of the item to activate it (marked in red).

OR

Move the switch to the HUMAN ONLY position (marked in blue) to activate with motion only.

Turn the switch to the OFF (DEMO) position when not in use.

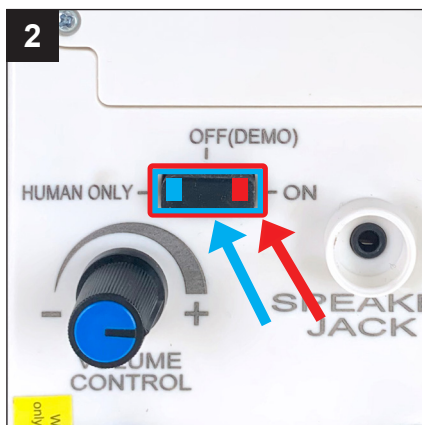


OPTIONAL DEMO/EXTERNAL SPEAKER SETUP

OPTIONAL DEMO SETUP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad into the jack labeled DEMO JACK located on the control box.
2. Set the power switch to the OFF (DEMO) position to enable demo activation.
3. Step on the footpad to activate the scary sequence!

* Footpads are sold separately and can be purchased at www.lowes.com.

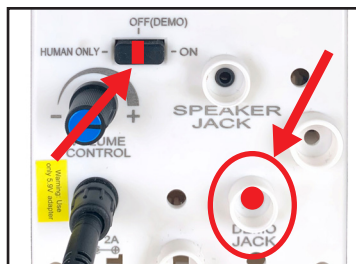

OPTIONAL EXTERNAL SPEAKER SETUP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Plug speaker cord into the jack labeled SPEAKER JACK located on the control box.
2. Turn the VOLUME CONTROL knob on the control box to highest level and use your external speaker's volume control to adjust volume level.



CARE AND MAINTENANCE

- STORE IN A COOL AND DRY ENVIRONMENT.
- INTENDED FOR INDOOR USE ONLY.
- SURFACE WASHABLE ONLY. DO NOT USE ANY HARSH OR ABRASIVE CLEANING AGENTS.
- DESIGNED FOR SEASONAL OPERATION ONLY.
- NOT INTENDED FOR CONSTANT OR LONG-TERM USE.
- PROPER STORAGE AND USE ARE ESSENTIAL TO THIS ITEM'S LONGEVITY.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Item will not activate.	• 5.9V 2A DC adapter is not plugged in. • Switch on control box is not in the ON position. • Human sensor on collar may be blocked. • Batteries are not inserted correctly.	• Check 5.9V 2A DC adapter is plugged in and securely inserted into the control box. • Move the switch to the ON position. • Move any obstructions away from the collar. • Install batteries with positive and negative terminals in the correct position.
You only hear item sound but no item activation.	• Control box wires to the motion sensor and head are not connected correctly.	• Make sure the control box wires labeled I and H are securely connected.
Item has no sound while operating.	• Volume knob is turned all the way down.	• Adjust volume to the desired volume.

FCC REGULATIONS

FCC STATEMENT

FCC RULES: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help