



2X2&2X4 LED Light Installation Guide


A. Flush Mount (Mounting kits do not included)

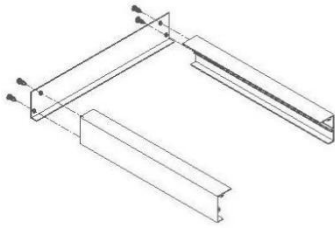


A1. Use screws to joint three sides.

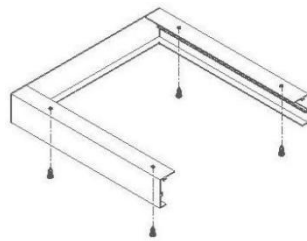


A2. Install the frame to ceiling wall.

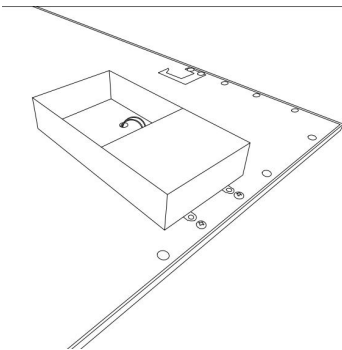

A4. Attach driver box to light panel by Removing 2 screws

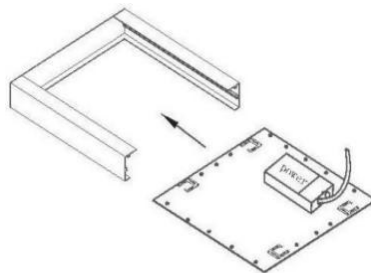


A5. Slip the light panel into the frame

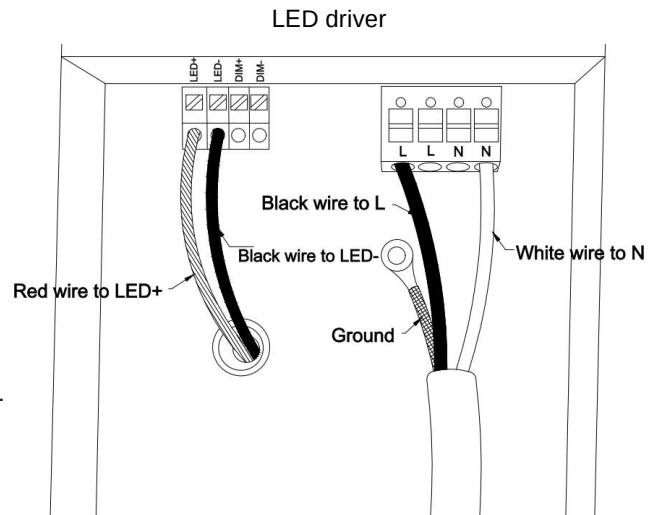


A3. Wiring the light panel as below:

ACL to Live, ACN to Neutral
Red wire to LED+
Black wire to LED-
Need buy 0-10V dimmer switch
if you would like to adjust the brightness


B. Mount to T-bar Ceiling

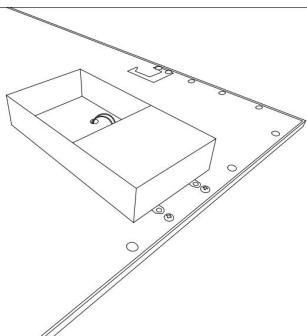

B1. Attach driver box to light panel by Removing 2 screws.

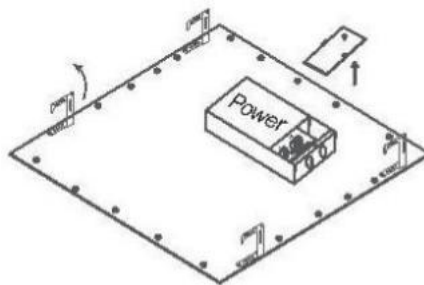

B2: Secure light to T-bar grid by bending the built-in clips

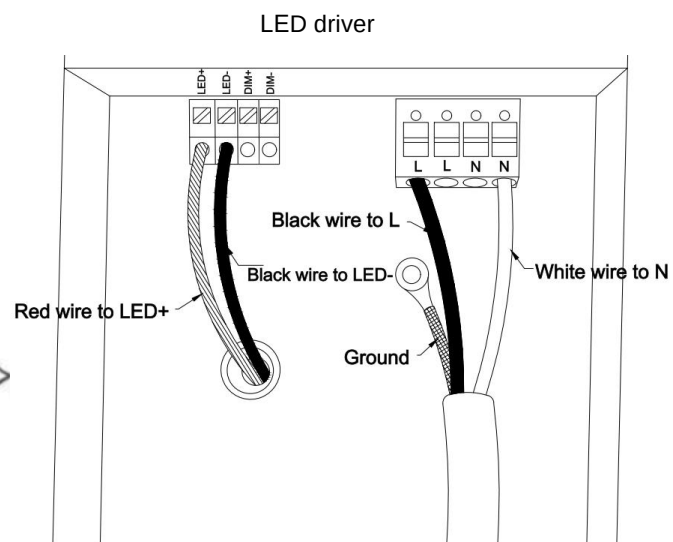

B3: Wiring the light panel as below:
ACL to Live, ACN to Neutral(18 AWG wire)
Red wire to LED+
Black wire to LED-



WARNING RISK OF SHOCK

- ✓ Turn off power before installation.
- ✓ Verify that supply voltage is correct by comparing it with the light label information.
- ✓ Make all electrical and grounded connections in accordance with the National Electrical Code (NEC)
- ✓ All wiring connections should be capped with UL approved recognized wire connectors.

CAUTION RISK OF INJURY

- ✓ Wear gloves and safety glasses at all times when removing light from carton, installing, servicing or performing maintenance.
- ✓ Avoid direct eye exposure to the light source while it is on.

TroubleShooting

Fault	Potential causes	Corrective action
Entire Fixture does not light up	Inspect the wiring for loose connection	Use 18-14 AWG wire Check AC connection to LED driver
	Connect the wires to two "L" or two "N" terminals.	Replace LED driver
	Check to see if LED driver appears to be damaged or burnt	Replace LED driver
Flickering or blinking lights	The led driver does not work	Replace LED driver
	Incompatible dimmer switches	Use 0-10V dimmer
Uneven light distribution	One side of the led light is very dim	Replace the light
	Dark spot in the middle edge	Loosen the screws on the frame, hold the frame and push it towards the center
	One side of the led light is a bit dim	
	Dark corner	1) Loosen the screws on the frame, hold the frame and push it towards the center 2) LED chips are faulty

If above actions do not resolve the issue, the next step is to replace the light.

Limited Warranty

This product is warrantied to be free from defects in workmanship and material for up to 2 years from date of purchase.

Replacement or refund is your remedy.Except to the extent prohibited by law,any implied warranties are limited in duration to the duration of this warranty.

Some states do not allow the exclusion of incidental or consequential damages so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Should you have any questions,please feel free to contact us as below:

1400 Summit Ave suite A Plano, TX 75074

Ph: 469-268-7109

Email: wyzm_light@163.com