



STYLE NO:
6036-5924 Space-Saving® Drying Rack




Part	Reference
A	F8309
B	F8310
C	F8311

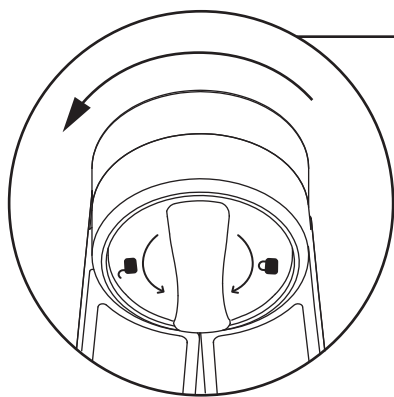

□ **NOTE:** Expand the dryer by turning both knobs counterclockwise.

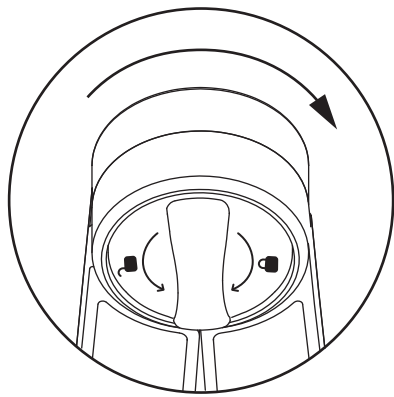


□ **NOTE:** To lock into place turn both knobs clockwise.

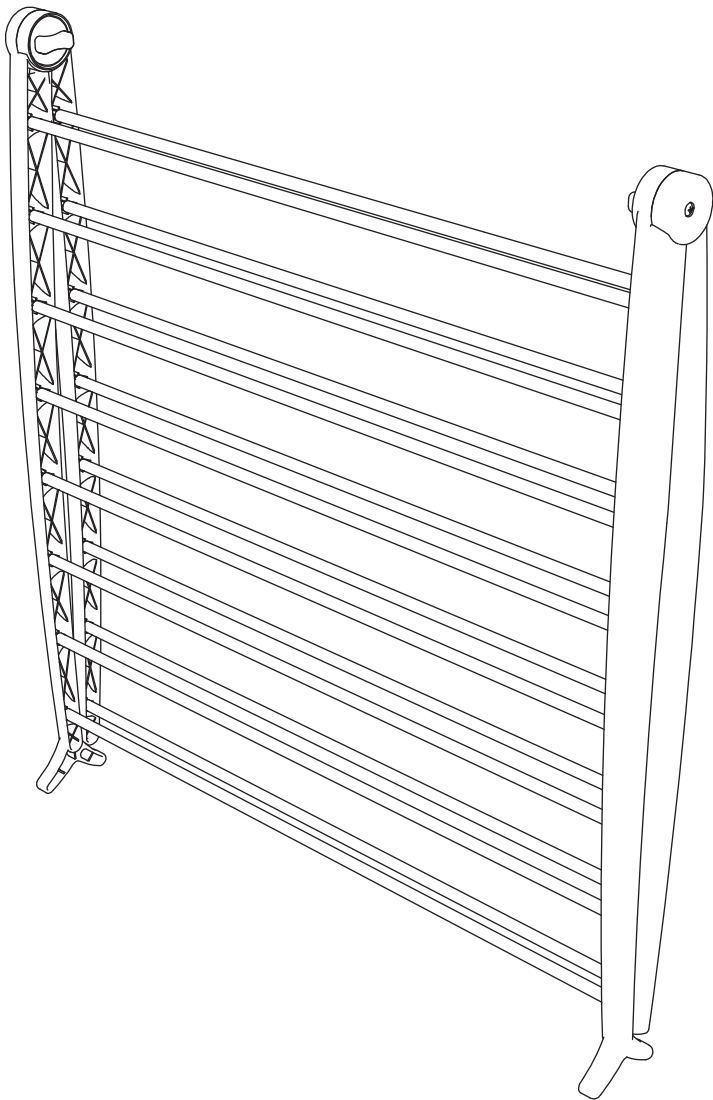

No tools required.



 A 1 ea
Left Side Frame




B 1 ea
Right Side Frame




C 16 ea
Horizontal Tubes

STEP 1:


- Using the knobs on each side frame (**A and B**) turn counterclockwise, allowing the dryer to expand. Make sure the frames are all straightened and locked into place.
- Place opened and locked right side frame (**B**) on a flat surface (e.g. floor). Insert horizontal tubes (**C**) into side frame.
- **NOTE:** Firmly press each tube down until you feel a "click" and the tube touches the cross at the base. Please see illustration below.

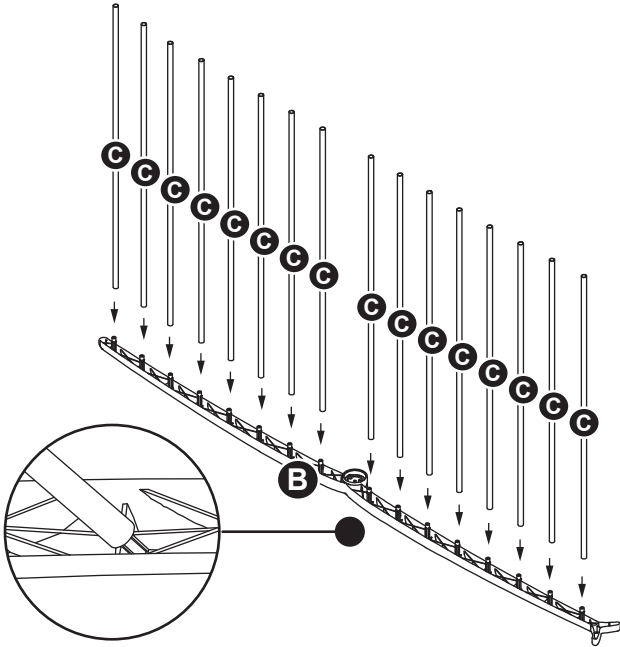**STEP 3:**


- To ensure that all tubes are fully seated in the frame, firmly press down on the frame.
- Flip and repeat on the opposite side.

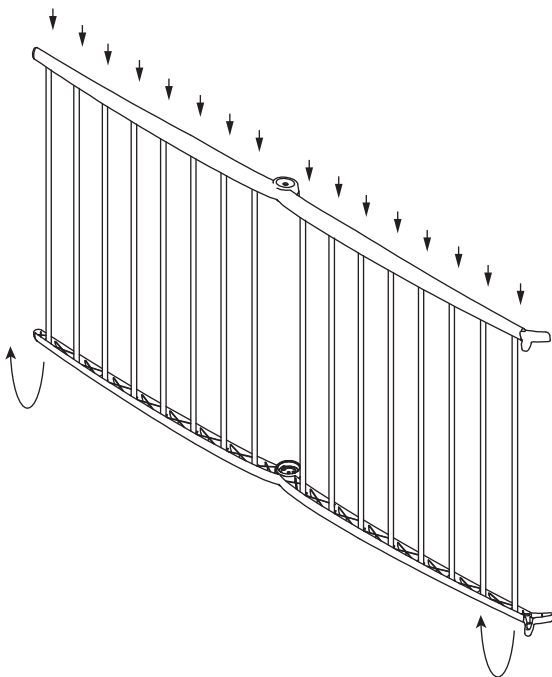**STEP 2:**

- Frame (**A**) must be inserted from one end to another. Place the left-side frame (**A**) on top of the horizontal tubes (**C**) by aligning the horizontal tubes (**C**) one by one into the side frame (**A**). You should feel each tube "click" as you apply pressure to it.

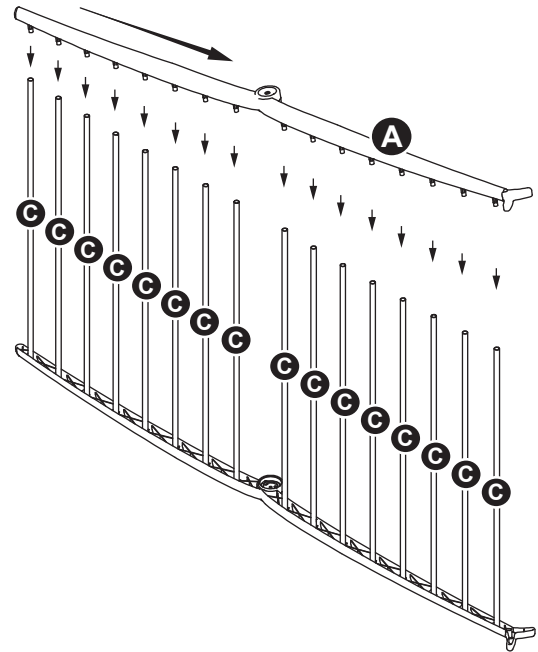**STEP 4:**

- Turn the knob on each side counterclockwise to allow the dryer to expand and adjust as needed.
- Turn the knob clockwise to lock into place.

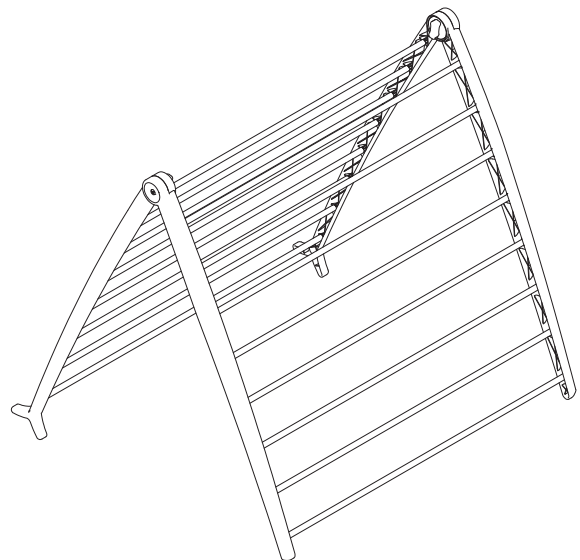

8680 Swinnea Road • Suite 103 • Southaven, MS • 38671

NEED HELP? For help with assembly, or if you are missing a part, please call Whitmor's Consumer Care Team, 1-888-944-8667 between 8 a.m. and 4:30 p.m. (Central Standard Time) Monday through Friday, or email: help@whitmor.com. Visit us online at www.whitmor.com