

4 Operation

4.1 Before The First-time Use

- (A) Turn on the cold water supply and ensure the supply adapter valve is open.
- (B) Connect the system with power. You will hear a long beep, and all indicators will light up for 3s. The system will automatically flush for 30s.

Wipe all the joints and connections with tissue to check for leakage. If the tissue stays dry, the system is installed correctly.

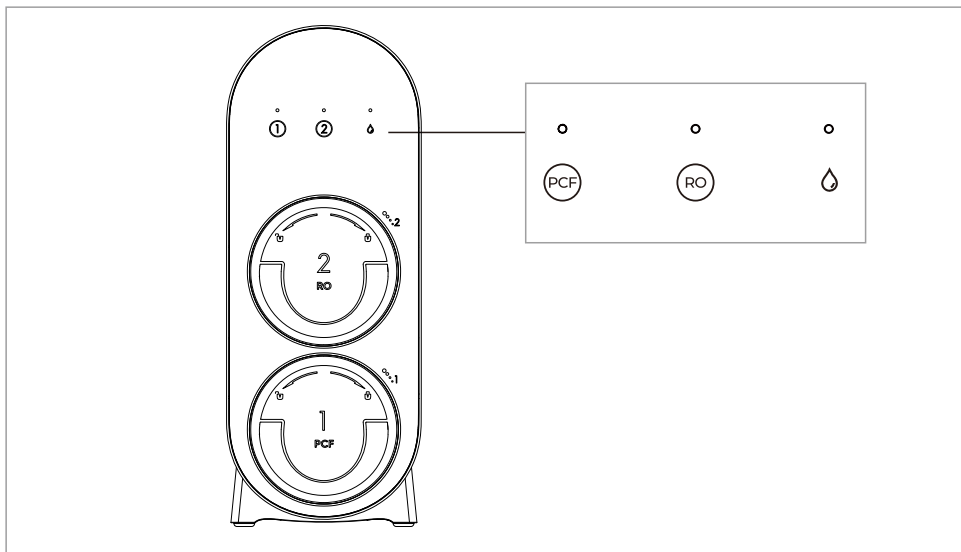
- (C) After the auto-flush is completed, turn on the faucet to allow water to run for 30 minutes to flush the air and carbon fines through the filters. After that, the system is ready, and you can start to consume the pure water.






NOTICE

Initially, the water may appear cloudy. This is a result of air trapped in the RO filter. It is not harmful and will disappear in a matter of minutes. It may take up to a week after installing a new RO filter for the trapped air to dissipate.

4.2 User Interface



Indicator	Indication	Status
 PCF lifetime indicator & Reset button	Solid blue light	Lifetime > 5%
	Flashing red light	0 < Lifetime ≤ 5%
	Solid red light	Lifetime = 0
 RO lifetime indicator & Reset button	Solid blue light	Lifetime > 5%
	Flashing red light	0 < Lifetime ≤ 5%
	Solid red light	Lifetime = 0
 Wording Status indicator	Solid blue light	System working normally
	Flashing blue light	System is flushing
	Flashing Red light	System malfunction

  **Reset Button**

To reset the filter lifespan, press and hold the reset button for 3 seconds until you hear a beep. The indicator will flash blue, confirming that the filter lifespan has been reset.

Faucet Indicator

Solid blue light	Flashing blue light	Flashing red light	Solid red light
Filter lifetime is normal	System is flushing	Replace filter soon	Replace filter now

