

# Thank you for purchasing

## SERVICE CARD

We strive to make sure each item you got is perfect and ensure all parts and hardware are included in our package. However if you are experiencing a shortage of any parts or hardware, PLEASE do not return the product to any local store directly. Try to contact us, we will do our best to solve your problem and expedite the missing item to you as soon as possible from our local customer service center.

Please provide following information when you contact us. Your detail information will help us to bring you a more faster and effective service for you. Appreciate your kindly understanding and patience !

1. Your **Order No.** (Comes from your marketplace dashboard) . **Model No.** (On the left side below) **Series No.** (On the right side below)
2. Marketplace you place the order : Amazon, Walmart, Ebay or Others
3. What's the problem you had and the help you need

## Notice



Read this assembly manual carefully and make sure you have all the parts list below before you begin to install. Keep this assembly manual for future reference.



Move this stand gently with 2 persons.



Protect finishes by placing furniture pieces on a soft carpeted surface during assembly.



Do not place very hot/cold objects on top of any surface. Always use a coaster or mat. Never leave liquids on the surface. Clean immediately with a mild soap and a damp cloth. Never use scouring powder based cleanser. Don't touch the glass surface with a hard/acute object it may cause the glass to shatter.



**DO NOT ASSUME CHILD SAFETY WITH ANY PIECE OF FURNITURE!**

 
 
 
Do not allow children to climb on furniture. Improper use can cause death or serious injury. If you are placing a TV on top use safety straps on your TV to prevent the risk of a toppling television. Furniture straps fastened to a wall can also be used to help ensure safety.

Damaged parts or furniture put together incorrectly can lead to serious injuries. Make sure to follow instructions correctly.


 


## Parts list

<b>1</b> x1	<b>2</b> x2	<b>3</b> x2	<b>4</b> x2	<b>5</b> x2
<b>6</b> x1	<b>7</b> x1	<b>8</b> x1	<b>9</b> x1	<b>10</b> x1
8.35" (212mm)		17.3" (440mm)	6.69" (170mm)	8.03" (204mm)
<b>11</b> x2	<b>12</b> x1	<b>13</b> x2	<b>14</b> x2	<b>15</b> x2
				M6x490
<b>16</b> x1	<b>17</b> x2	<b>18</b> x9	<b>19</b> x1	
M8x470	M10x650			
<b>A</b>	<b>B</b>	<b>C</b>	<b>D</b>	<b>E</b>
A <sub>1</sub> X1	B <sub>1</sub> X1	C <sub>1</sub> X2	D <sub>1</sub> X2	E <sub>1</sub> X2
A <sub>2</sub> X1	B <sub>2</sub> X1	C <sub>2</sub> X2	D <sub>2</sub> X2	E <sub>2</sub> X2
		C <sub>3</sub> X2		E <sub>3</sub> X2
<b>F</b>			<b>S</b>	
F <sub>1</sub> X1			Screws for TV	Tools Required(Not included)

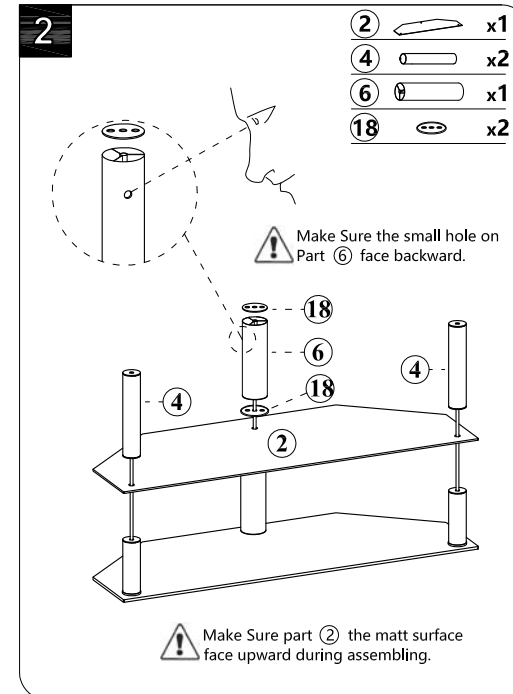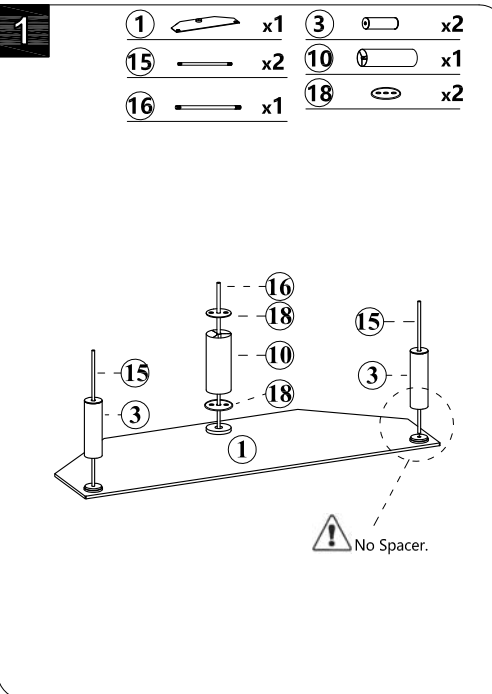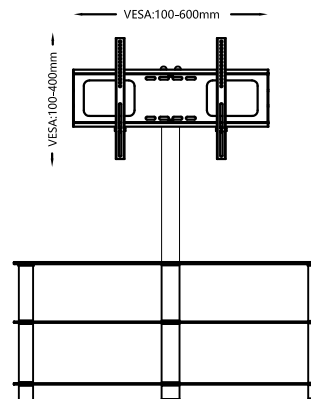 
Model NO.:  
**AT9810**



 
3

A	A <sub>1</sub>		x1
	A <sub>2</sub>		x1
B	B <sub>1</sub>		x1
	B <sub>2</sub>		x1

! Don't Over Tighten The Screw A1.

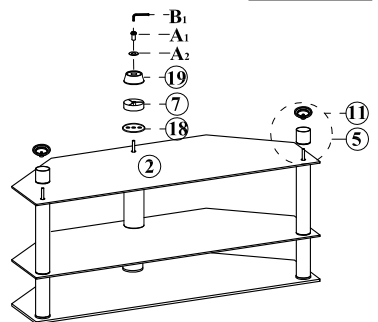
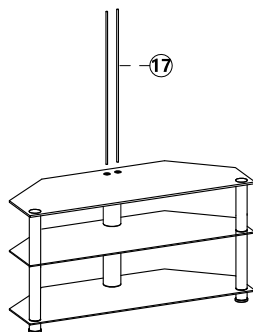 


! Make Sure part 2 the matt surface face upward during assembling.

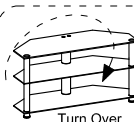 








Turn Over

4

 
17  x2

5



8  x1  
18  x49  x1  
14  x2D D<sub>1</sub>  x2  
D<sub>2</sub>  x2  
B B<sub>2</sub>  x1

! Make Sure the small hole on Part 8 face backward.

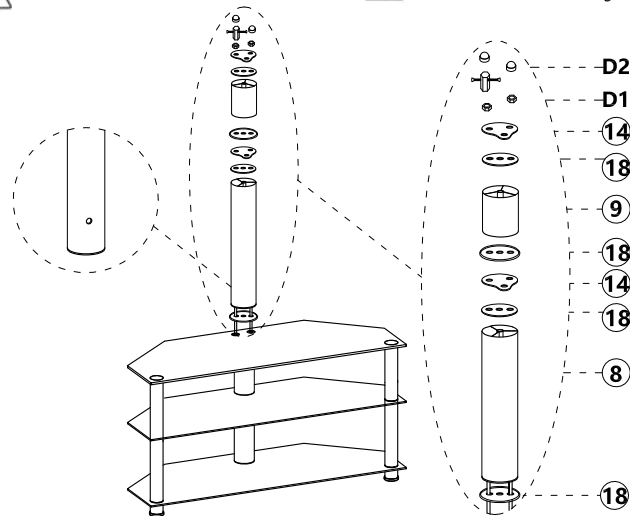 
! Please don't fully tighten until Step 7 to fix all the screws in the right holes.



6




 
12  x1  
C C<sub>1</sub>  x2

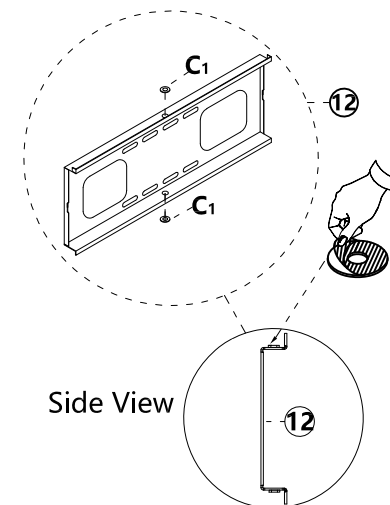

! Stick C1 on top and bottom center of steel bracket.



 
Side View

7

F	F <sub>1</sub>		x1
	F <sub>2</sub>		x1
B	B <sub>1</sub>		x1
	B <sub>2</sub>		x1

C	C <sub>2</sub>		x2
	C <sub>3</sub>		x2

 
! Make Sure fully tighten all screws before putting on your TV.

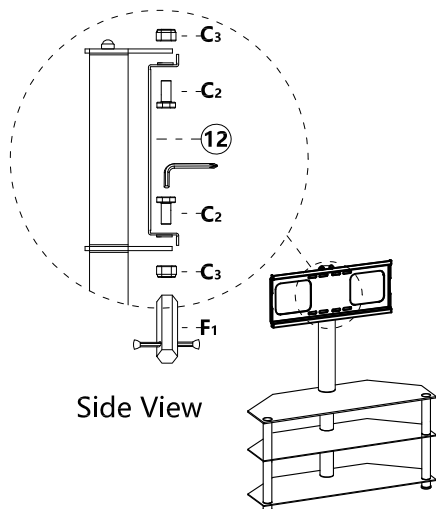

 
Side View

8

 
! Variant screws and spacers provided to fit your TV, however not for all brands. Maybe you need to use the original screws comes with your TV or buy the special screws by yourself.

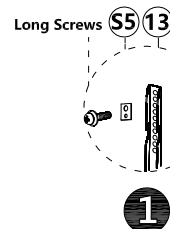

 
1

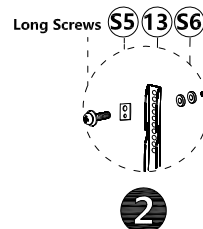

 
2

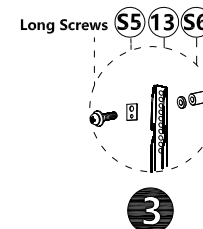


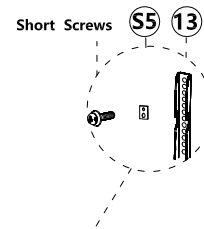 
3

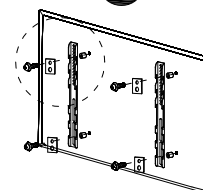

Curved or Recessed TV







S1		M6	x4
S2		M6	x4
S3		M8	x4
S4		M8	x4
S5			x4
S6			x4
S7			x8
S8			x2



Flat Panel TV



9

E	E <sub>1</sub>		x2
	E <sub>2</sub>		x2
	E <sub>3</sub>		x2
	E <sub>4</sub>		x2

! Important: Lock your TV before using

