


Assembly Instructions for Dual-Use Camping Wagon (Reclining & Storage)

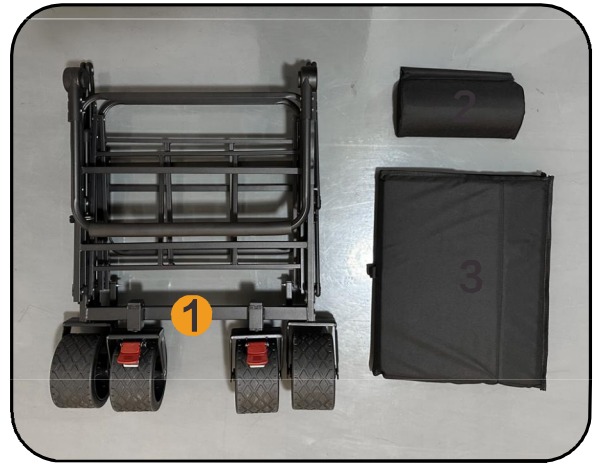


1: Frame 2: Headrest 3: Fabric Pocket

Step 1



As shown: Fully unfold the frame

Step 2

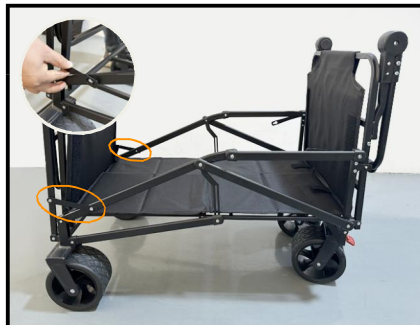

Fasten the reclining frame buckle to the frame, then slide the fabric pocket over the frame.

Step 3



Secure with the Velcro on the side fabric pockets. Attach the headrest to the fabric pocket.

Step 4



Detach side buckles from locking pins. Fully unfold the reclining frame.

Step 5



Grasp the two pull rings inside the tail section and pull outward. Snap the buckles on both sides into place.

Step 6



Remove the buckles on both sides to enable dual-side frame opening.