


INSTALLATION



Product Manual

Version: 260144-01-24A-DC

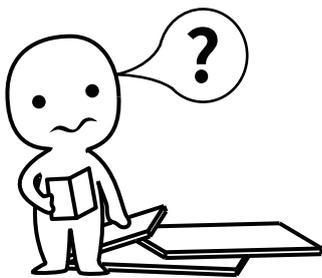


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

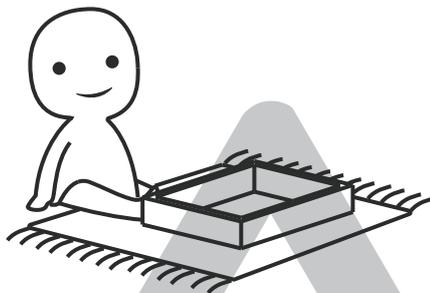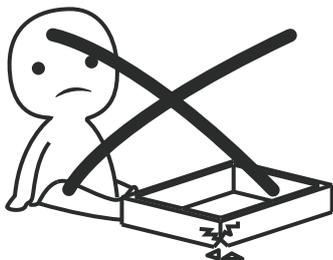


AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

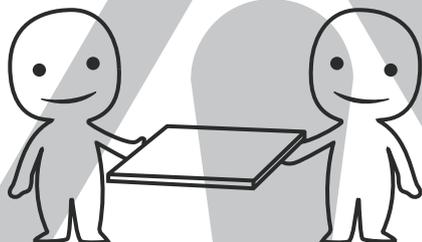

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

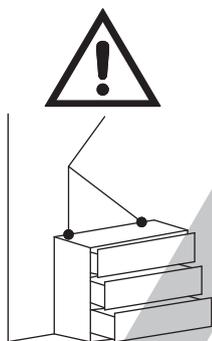

ANTI-TOPPLE WARNING !


Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.








Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

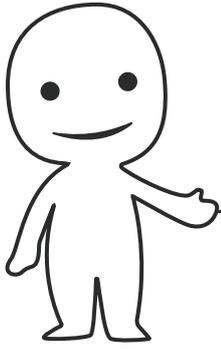


Please prepare the following tools

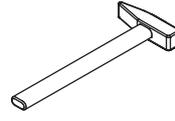  

    When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size
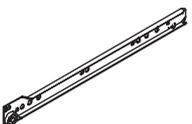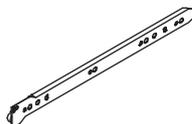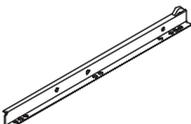
<p>A x 93</p>  <p>Ø 6 x 35 mm</p>	<p>B x 93</p>  <p>Ø 15 x 10 mm</p>	<p>C x 64</p>  <p>Ø 6 x 30 mm</p>	<p>D x 23</p>  <p>Ø 4 x 35 mm</p>	<p>E x 36</p>  <p>Ø 3.5 x 12 mm</p>
<p>F x 3</p> <p>F-1 F-2</p>  <p>Ø 4 x 10 mm</p>	<p>G x 9</p>  <p>Ø 4 x 30 mm</p>	<p>H x 19</p> 	<p>J x 49</p>  <p>Ø 2.5 x 12 mm</p>	<p>K x 4</p> 
<p>L x 8</p>  <p>Ø 4 x 12 mm</p>	<p>M x 4</p> 	<p>N x 16</p> 	<p>O x 6</p> <p>O-1 O-2</p>  <p>Ø 4 x 20 mm</p>	<p>P x 96</p>  <p>Ø 4 x 14 mm</p>
<p>CL x 3</p>  <p>L = 350 mm</p>	<p>CR x 3</p>  <p>L = 350 mm</p>	<p>DL x 3</p>  <p>L = 350 mm</p>	<p>DR x 3</p>  <p>L = 350 mm</p>	

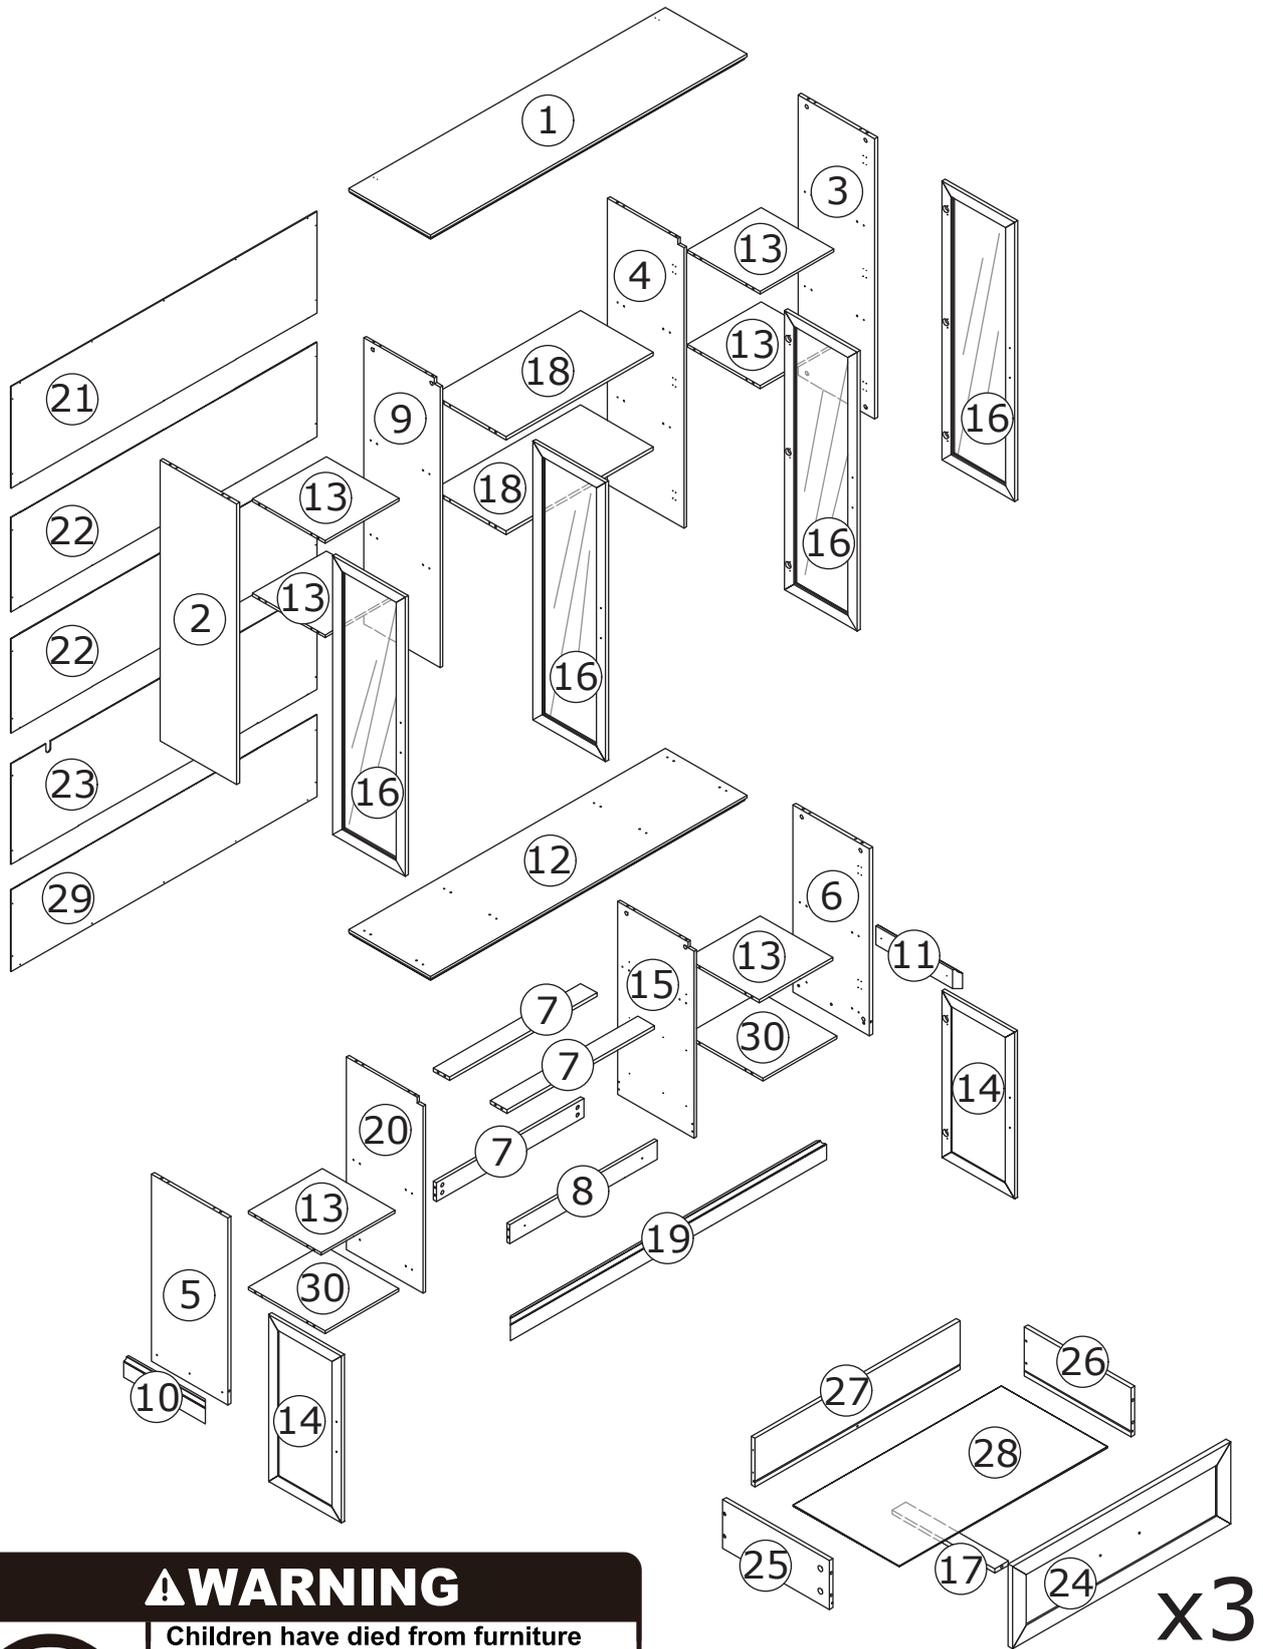

x3


⚠ WARNING










Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



*This is a permanent label.
Do not remove!*

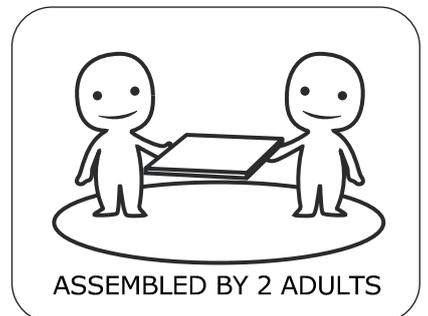

1

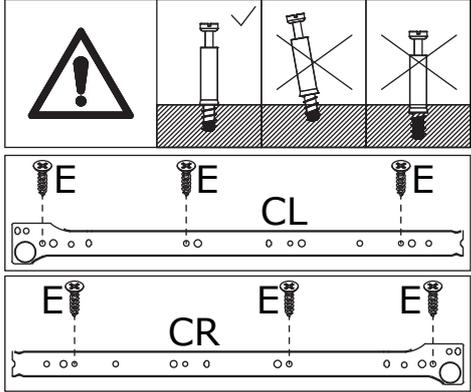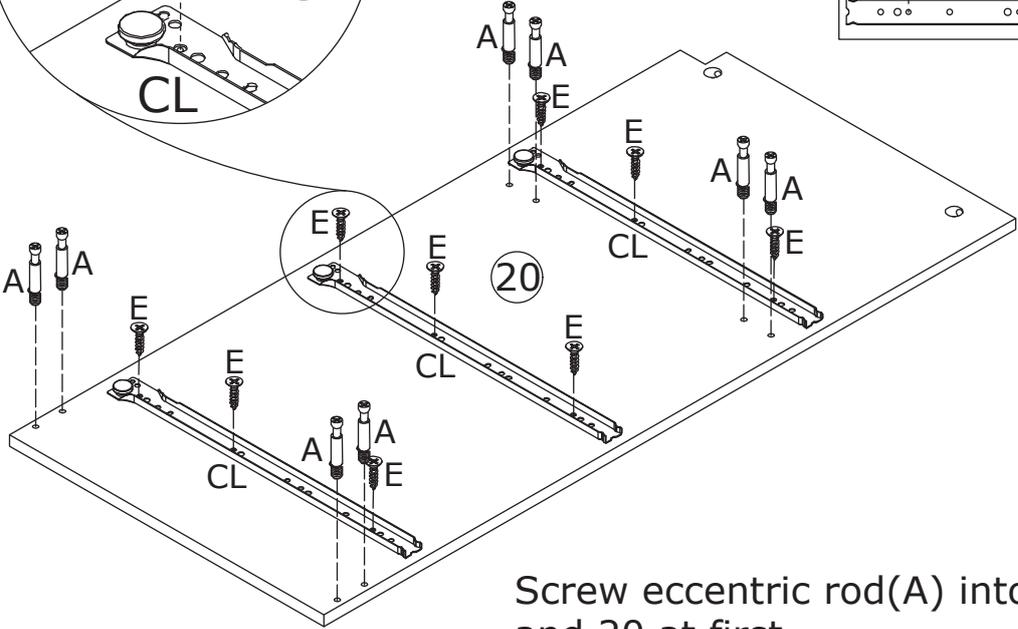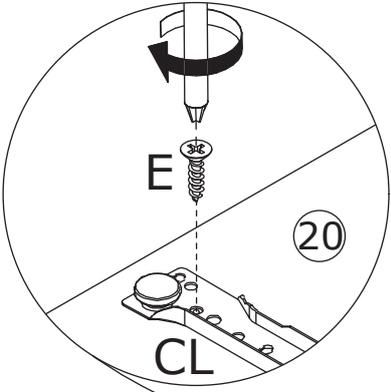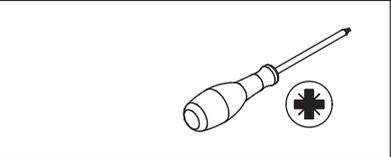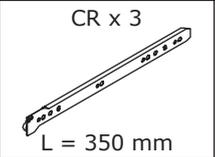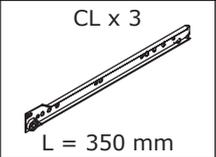
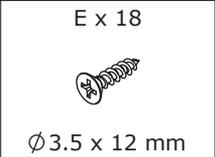


Screw eccentric rod(A) into panel 15 and 20 at first.
Fix rail(CL) and (CR) to panel 20 and 15 with screw(E) as shown.

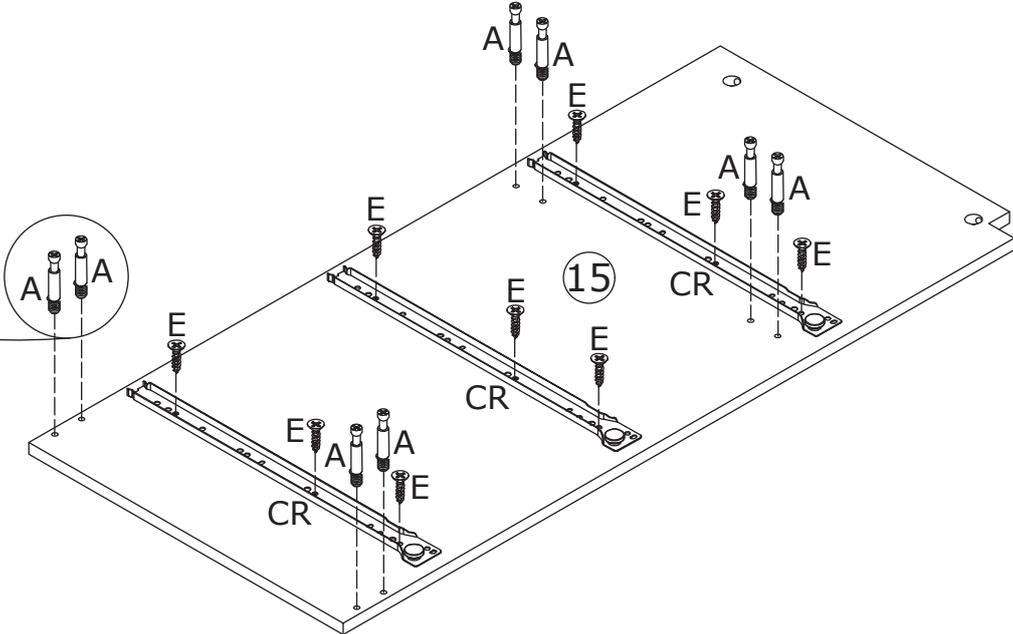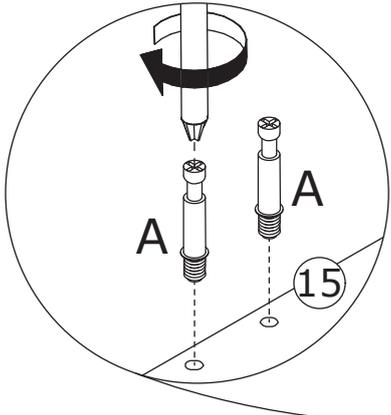


2

 B x 16
Ø 15 x 10 mm


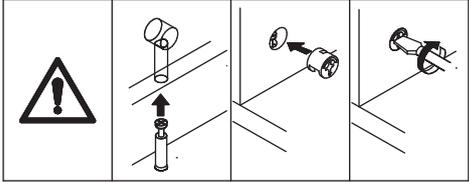



Connect panel 15 and 20 to panel 7 and 8,
add cam lock(B) into panel 7,8 and turn
clockwise to tighten as shown.


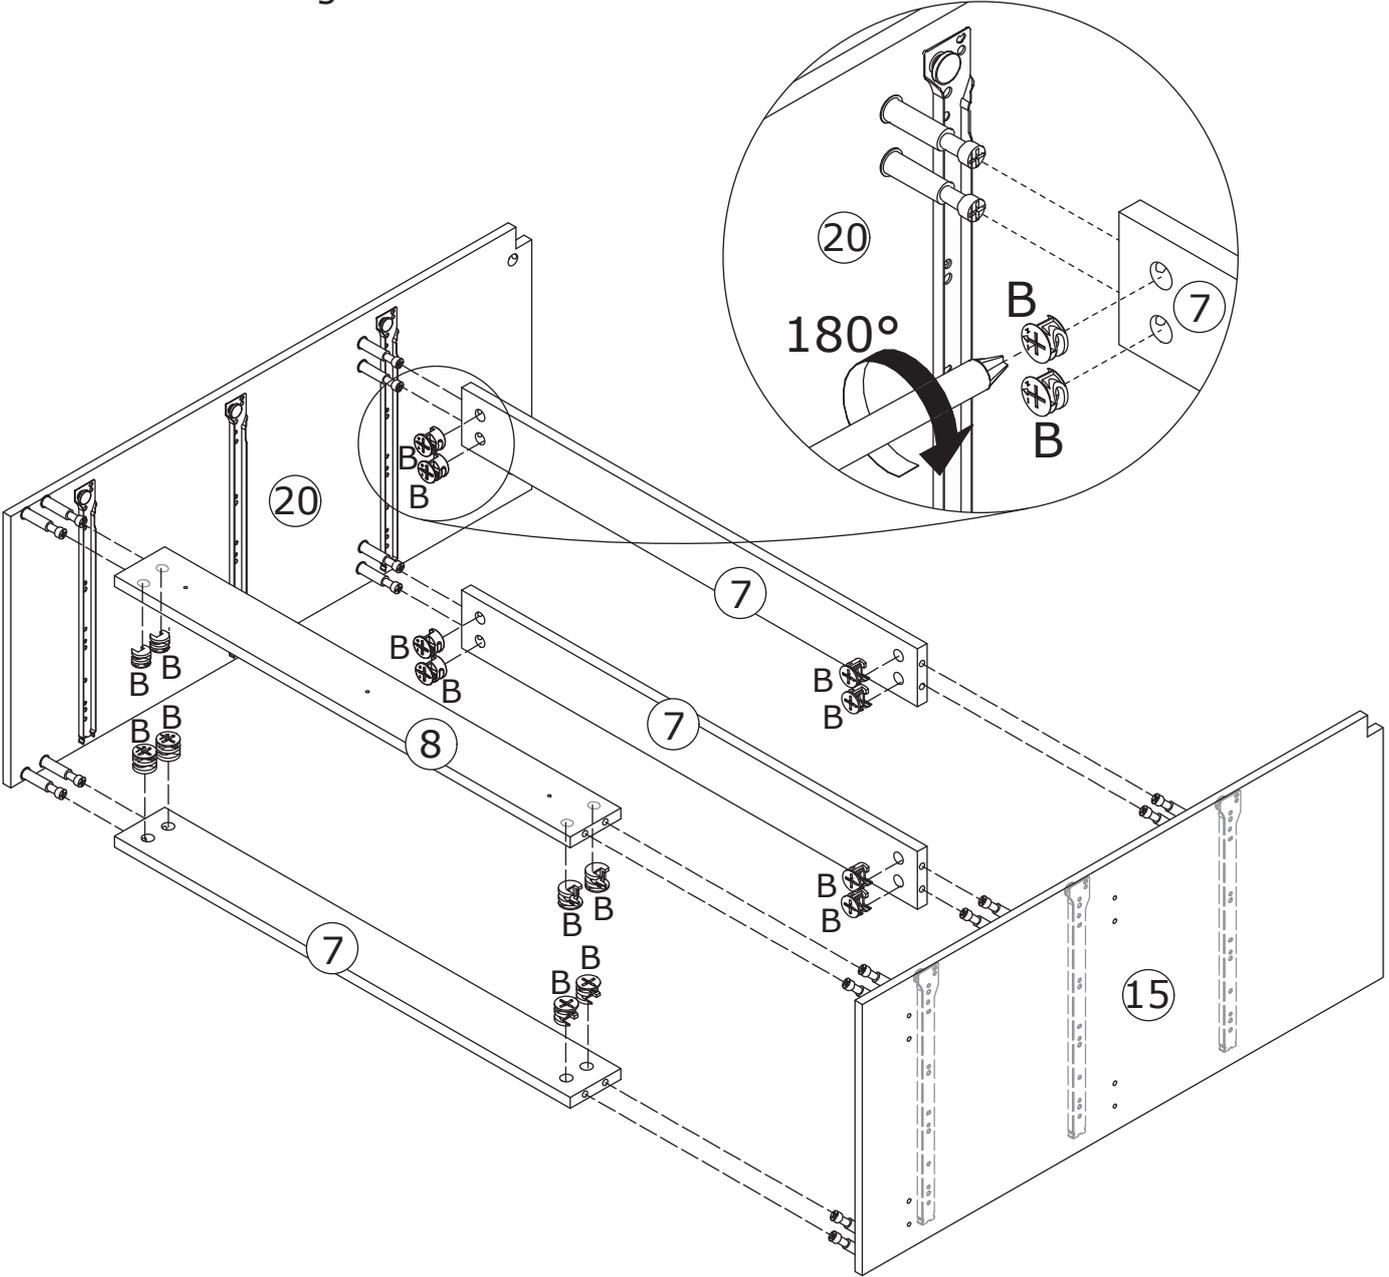


3



 
A x 8
Ø6 x 35 mm

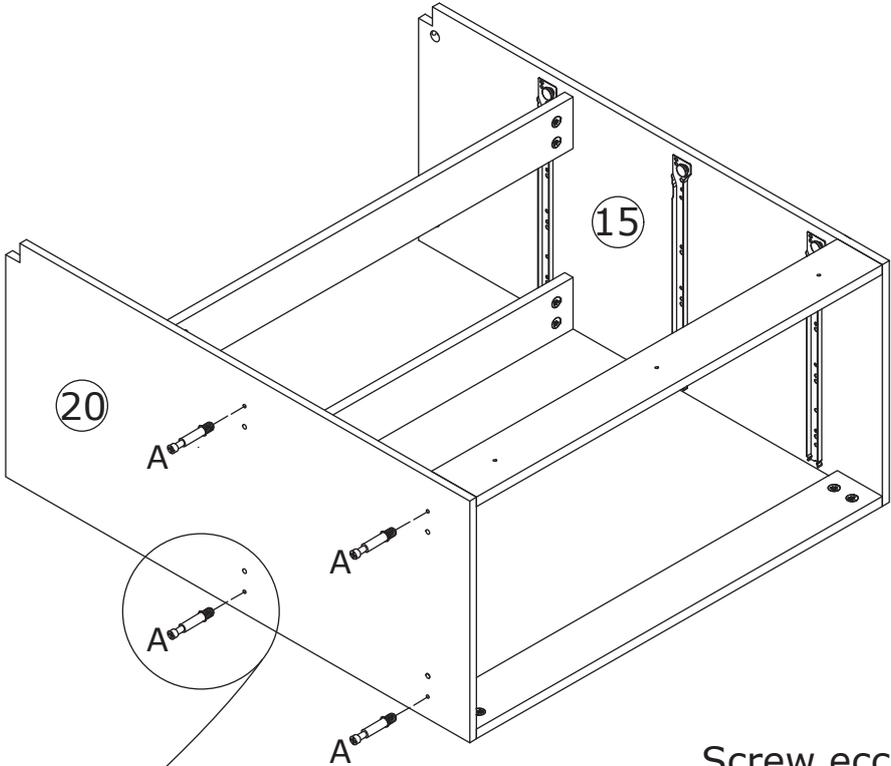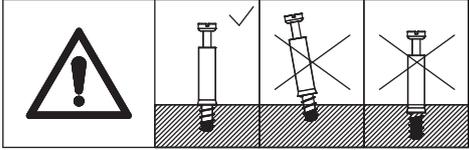



Screw eccentric rod(A) into panel 15 and 20 at first.

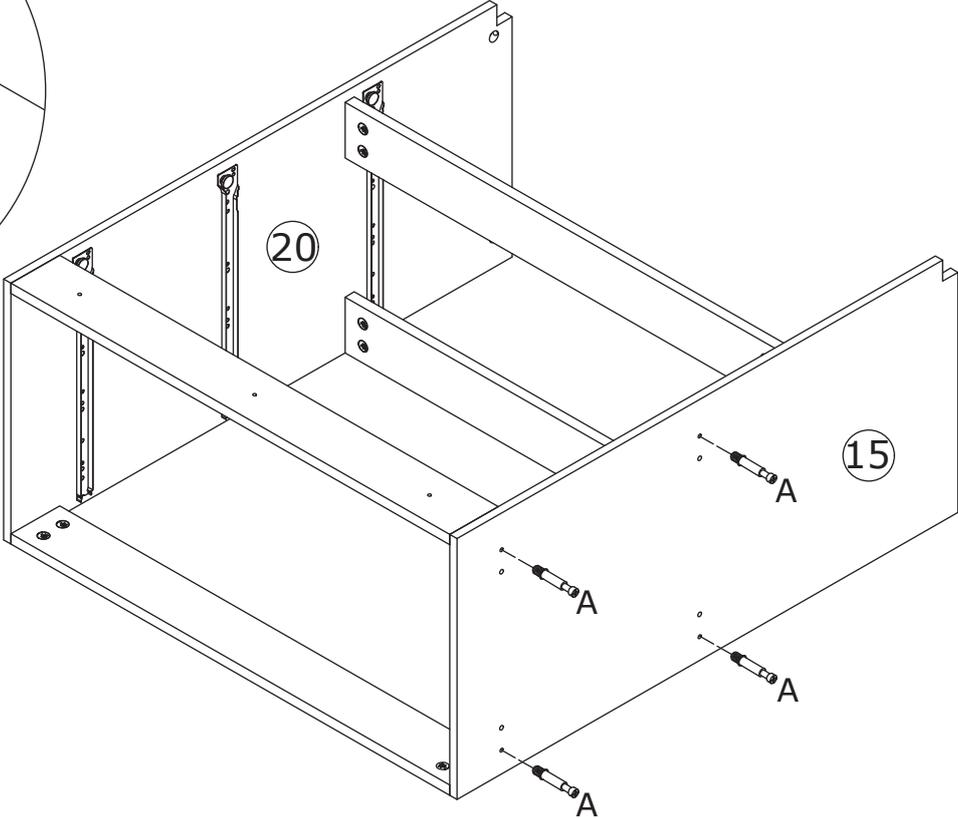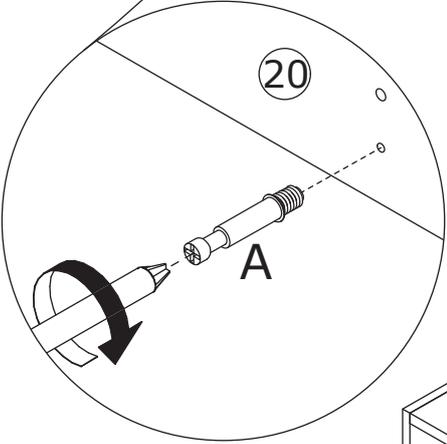

4

 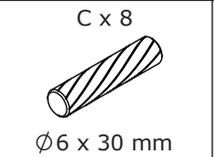
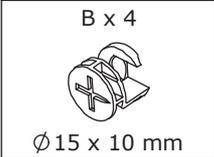


Insert wooden dowel(C) into panel 30, 13 at first. Attach panel 30, 13 to panel 15, add cam lock(B) into panel,30, 13 and turn clockwise to tighten as shown.

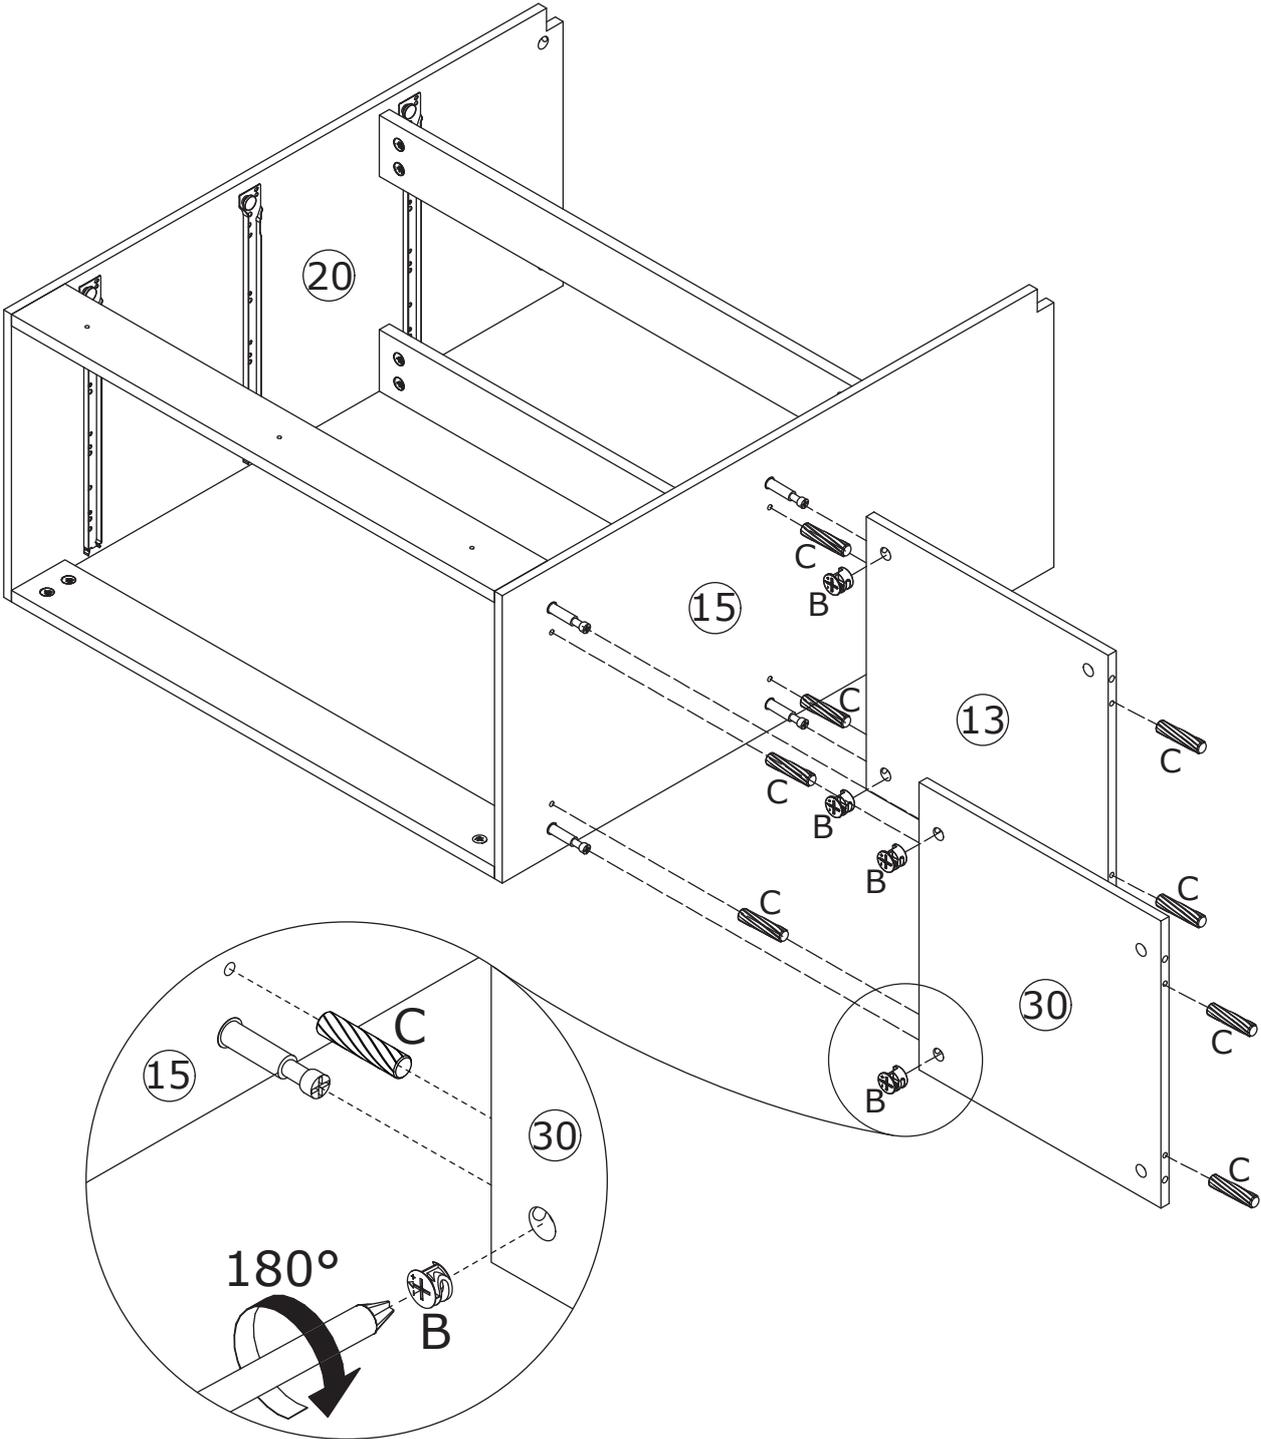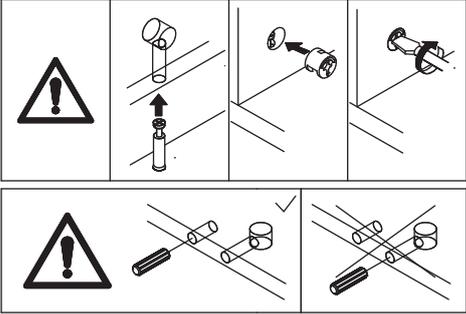


5

 A x 10
Ø6 x 35 mm

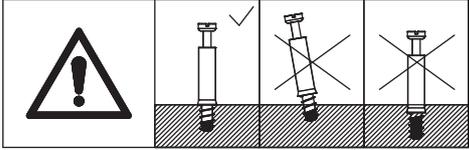



Screw eccentric rod(A) into panel 5, 6 and 19 at first.



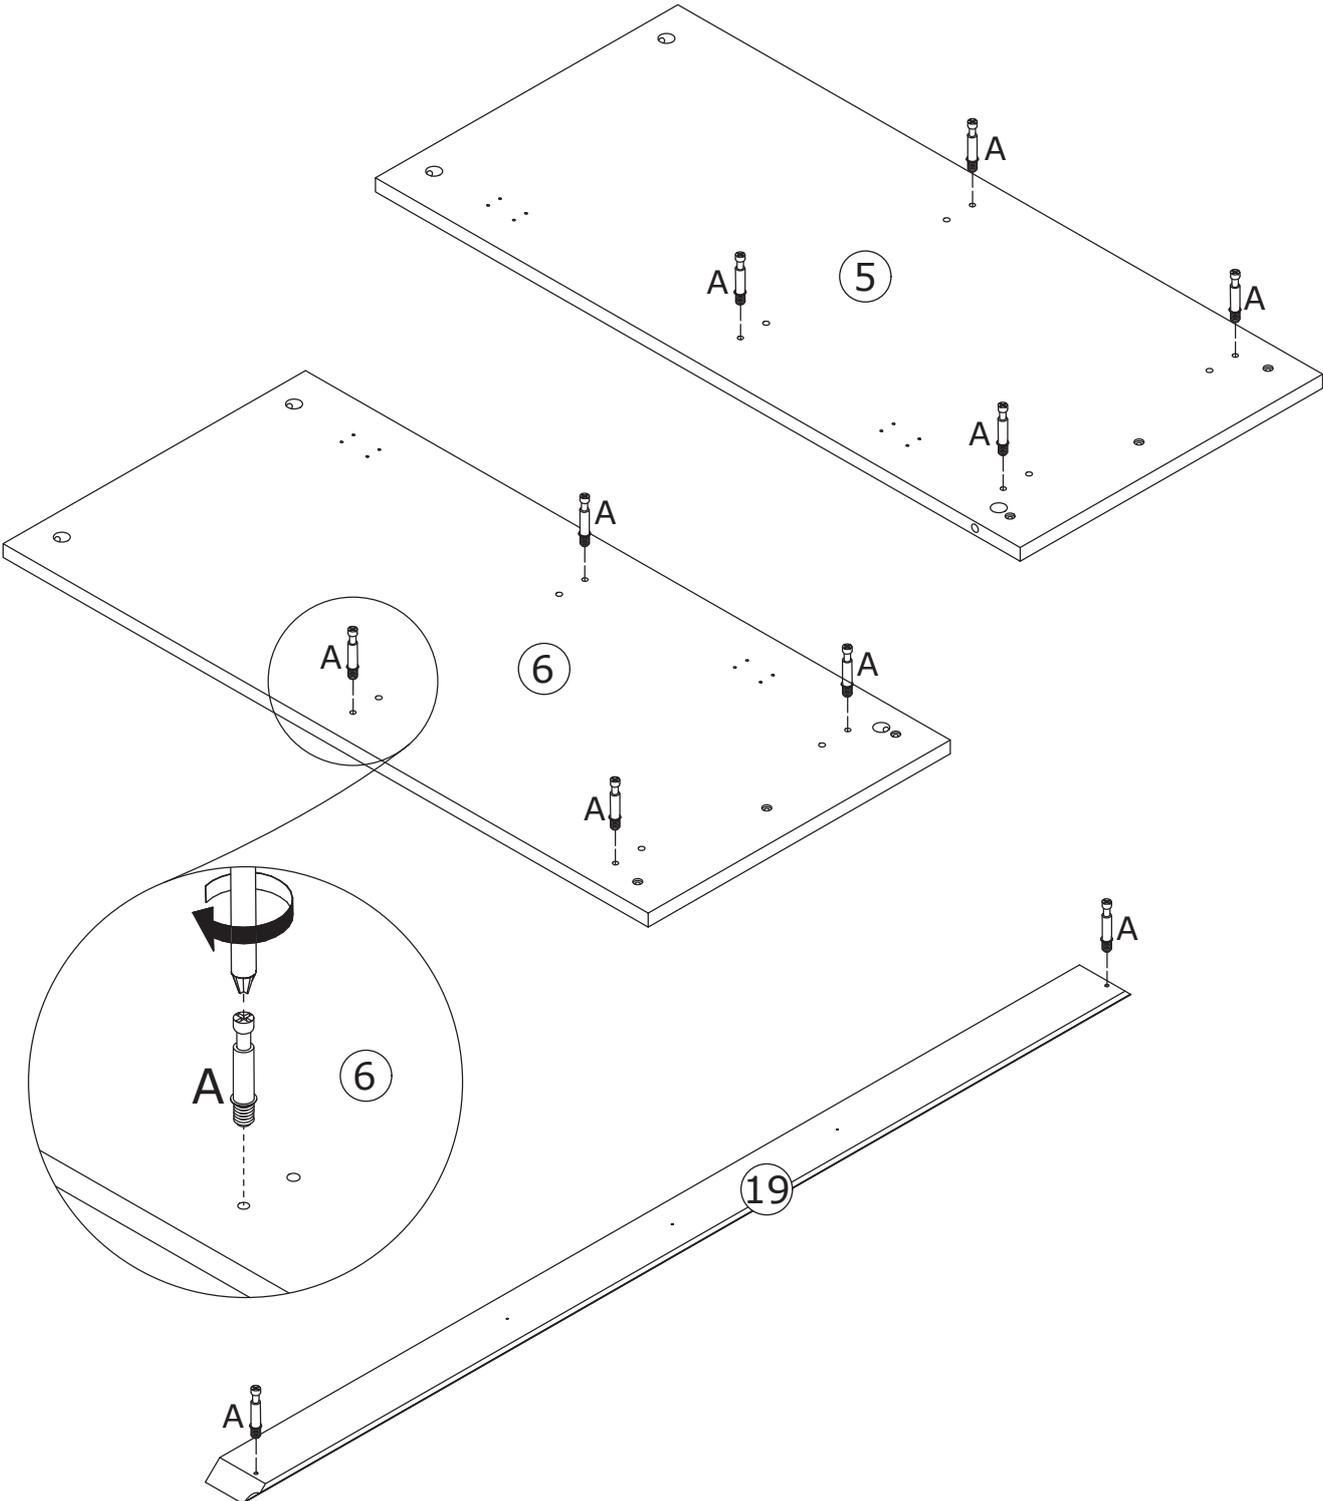


6




 
B x 4
Ø 15 x 10 mm

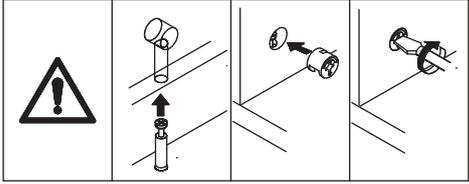


Attach panel 6 to panel 30, 13, add cam lock(B) into panel 30, 13 and turn clockwise to tighten as shown.

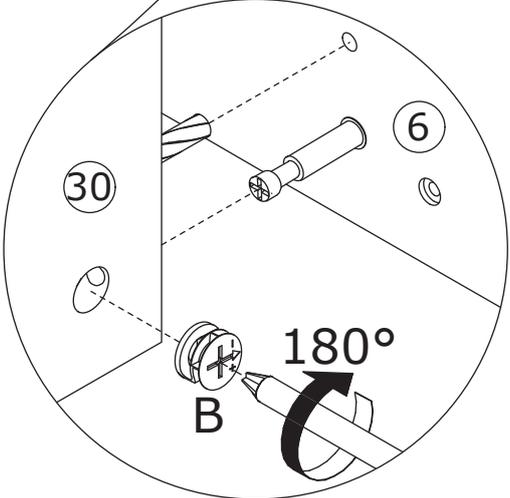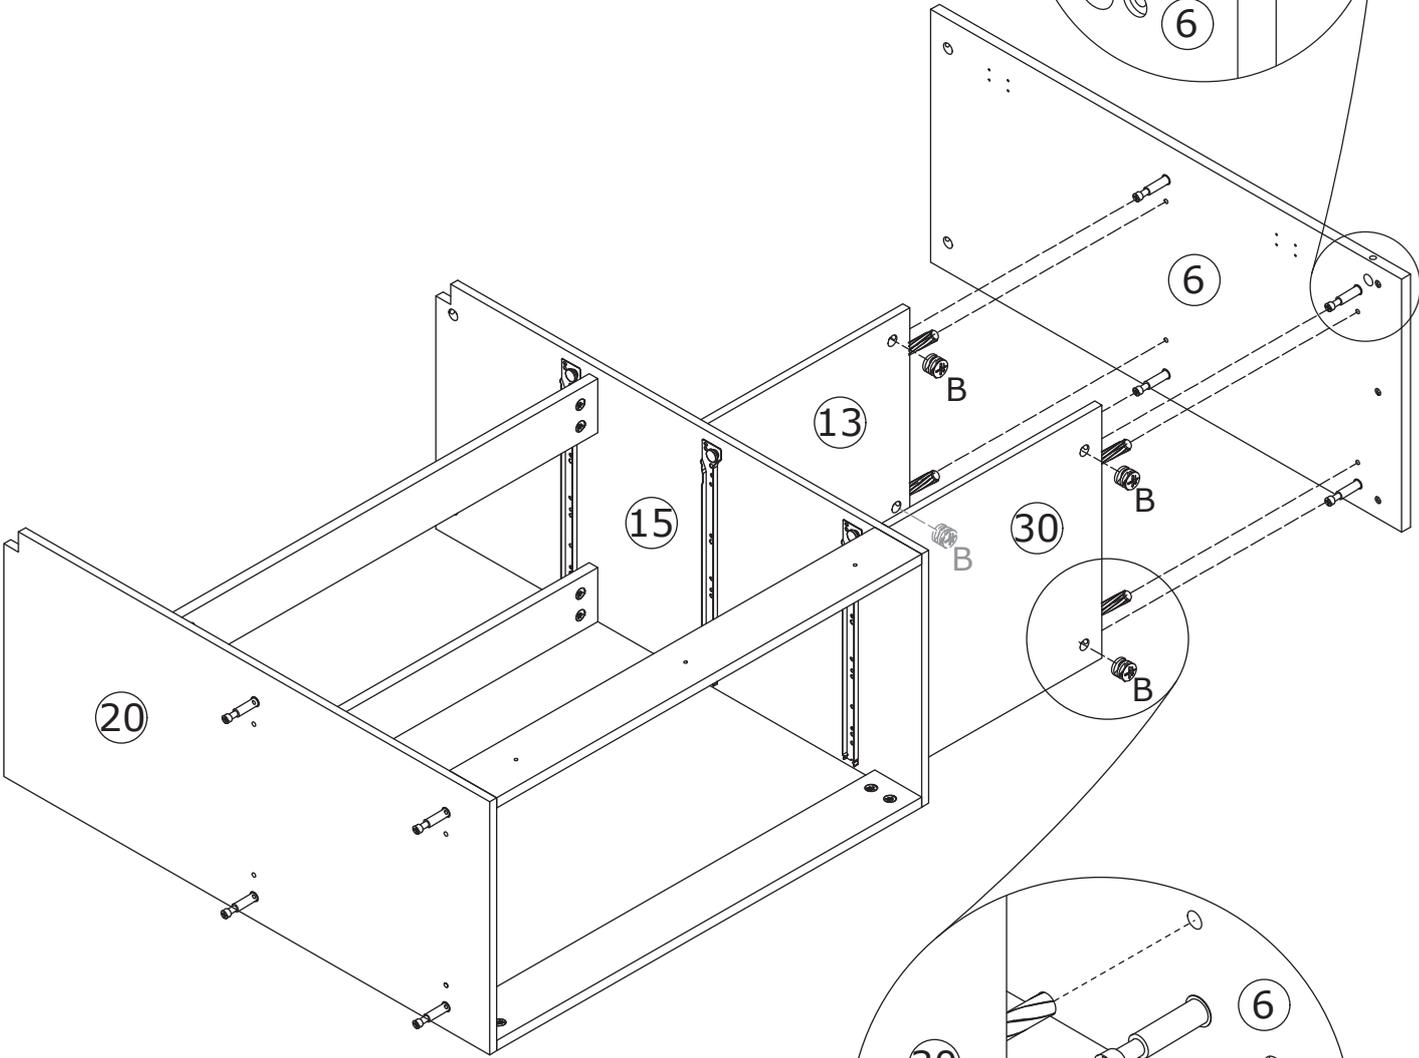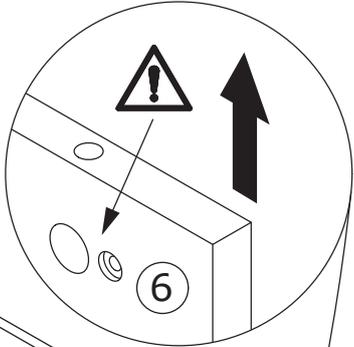

7

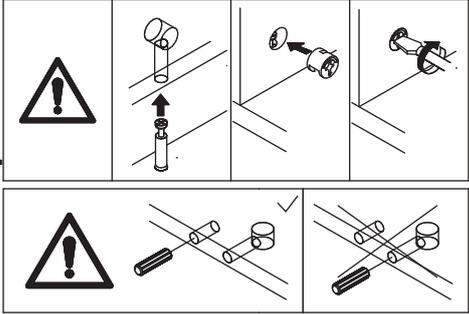 
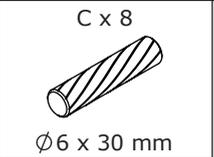
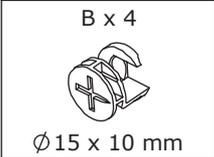


Insert wooden dowel(C) into panel 30, 13 at first. Attach panel 30, 13 to panel 20, add cam lock(B) into panel 30, 13 and turn clockwise to tighten as shown.

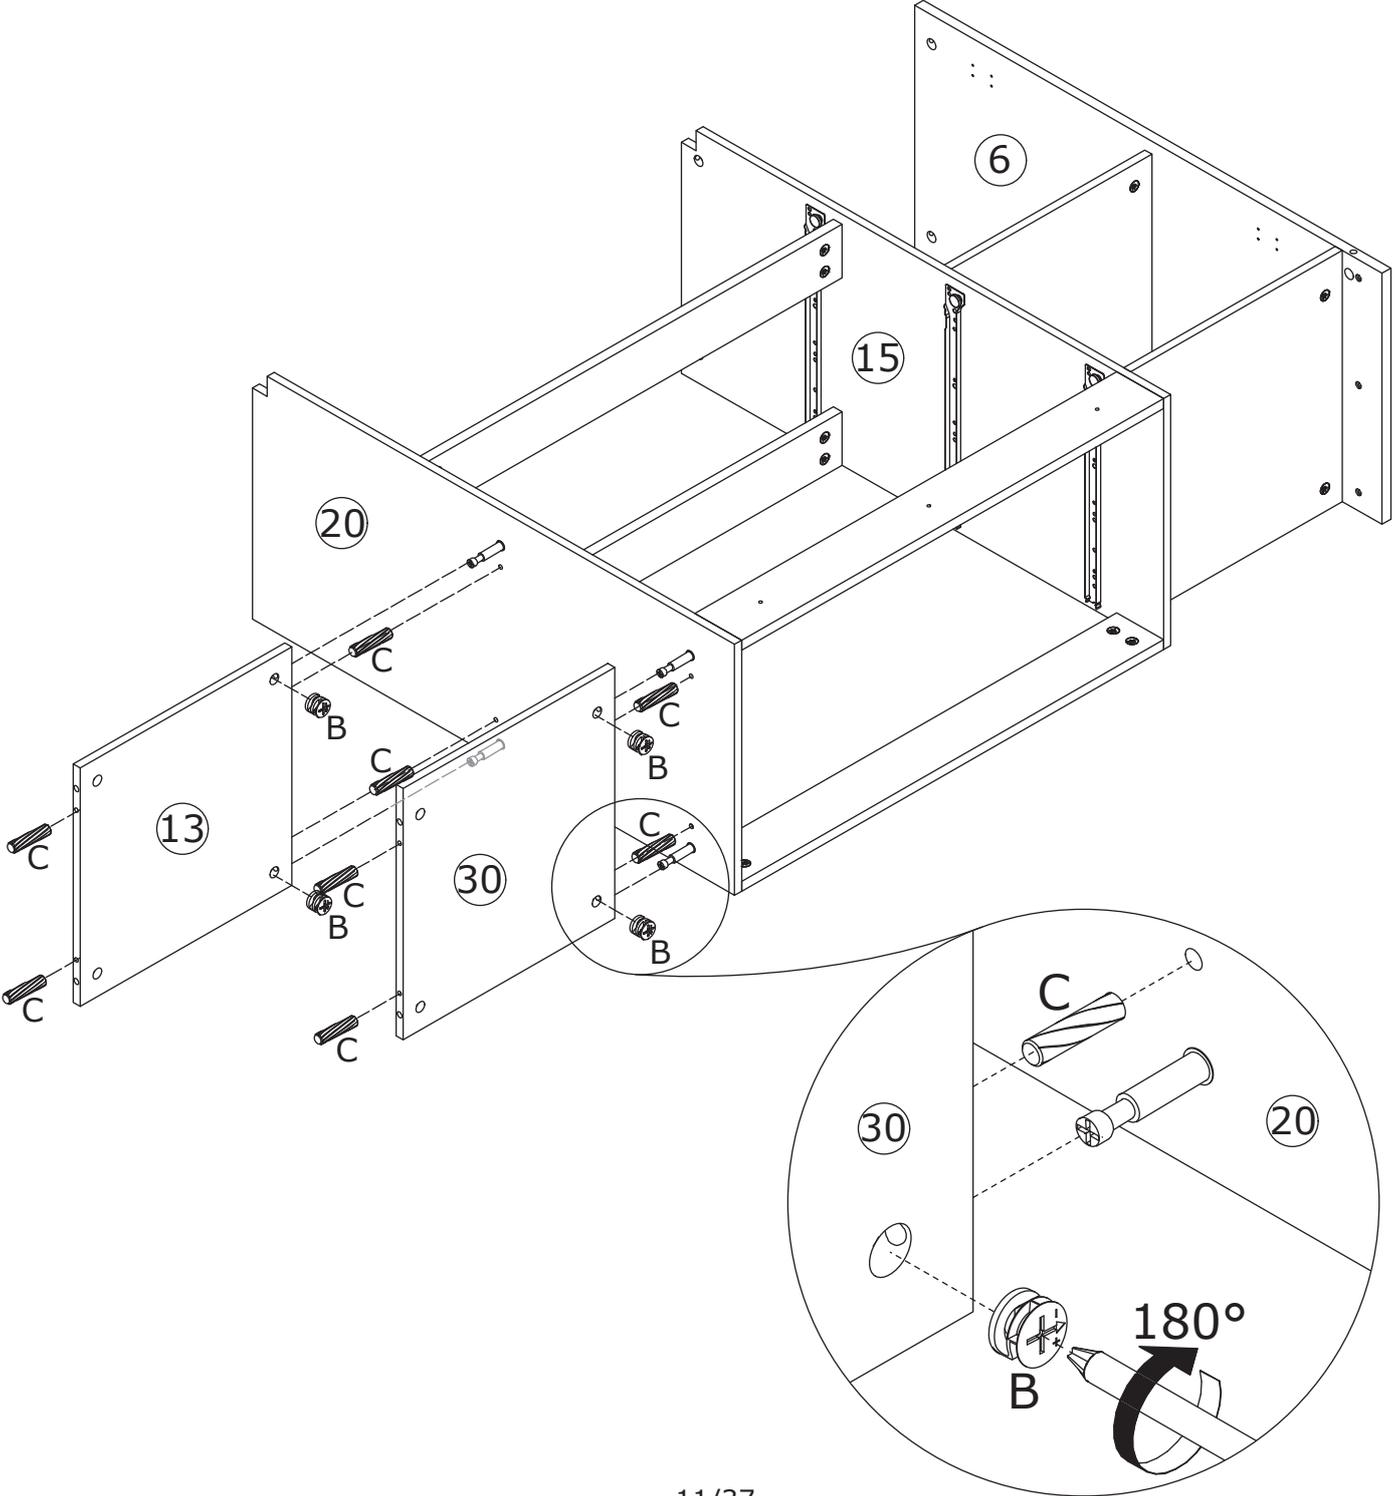


8

 B x 4
Ø15 x 10 mm

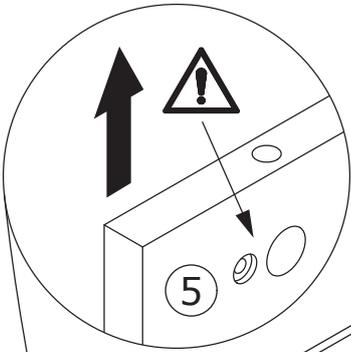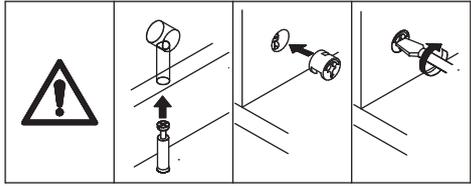



Attach panel 5 to panel 30, 13, add cam lock(B) into panel 30, 13 and turn clockwise to tighten as shown.

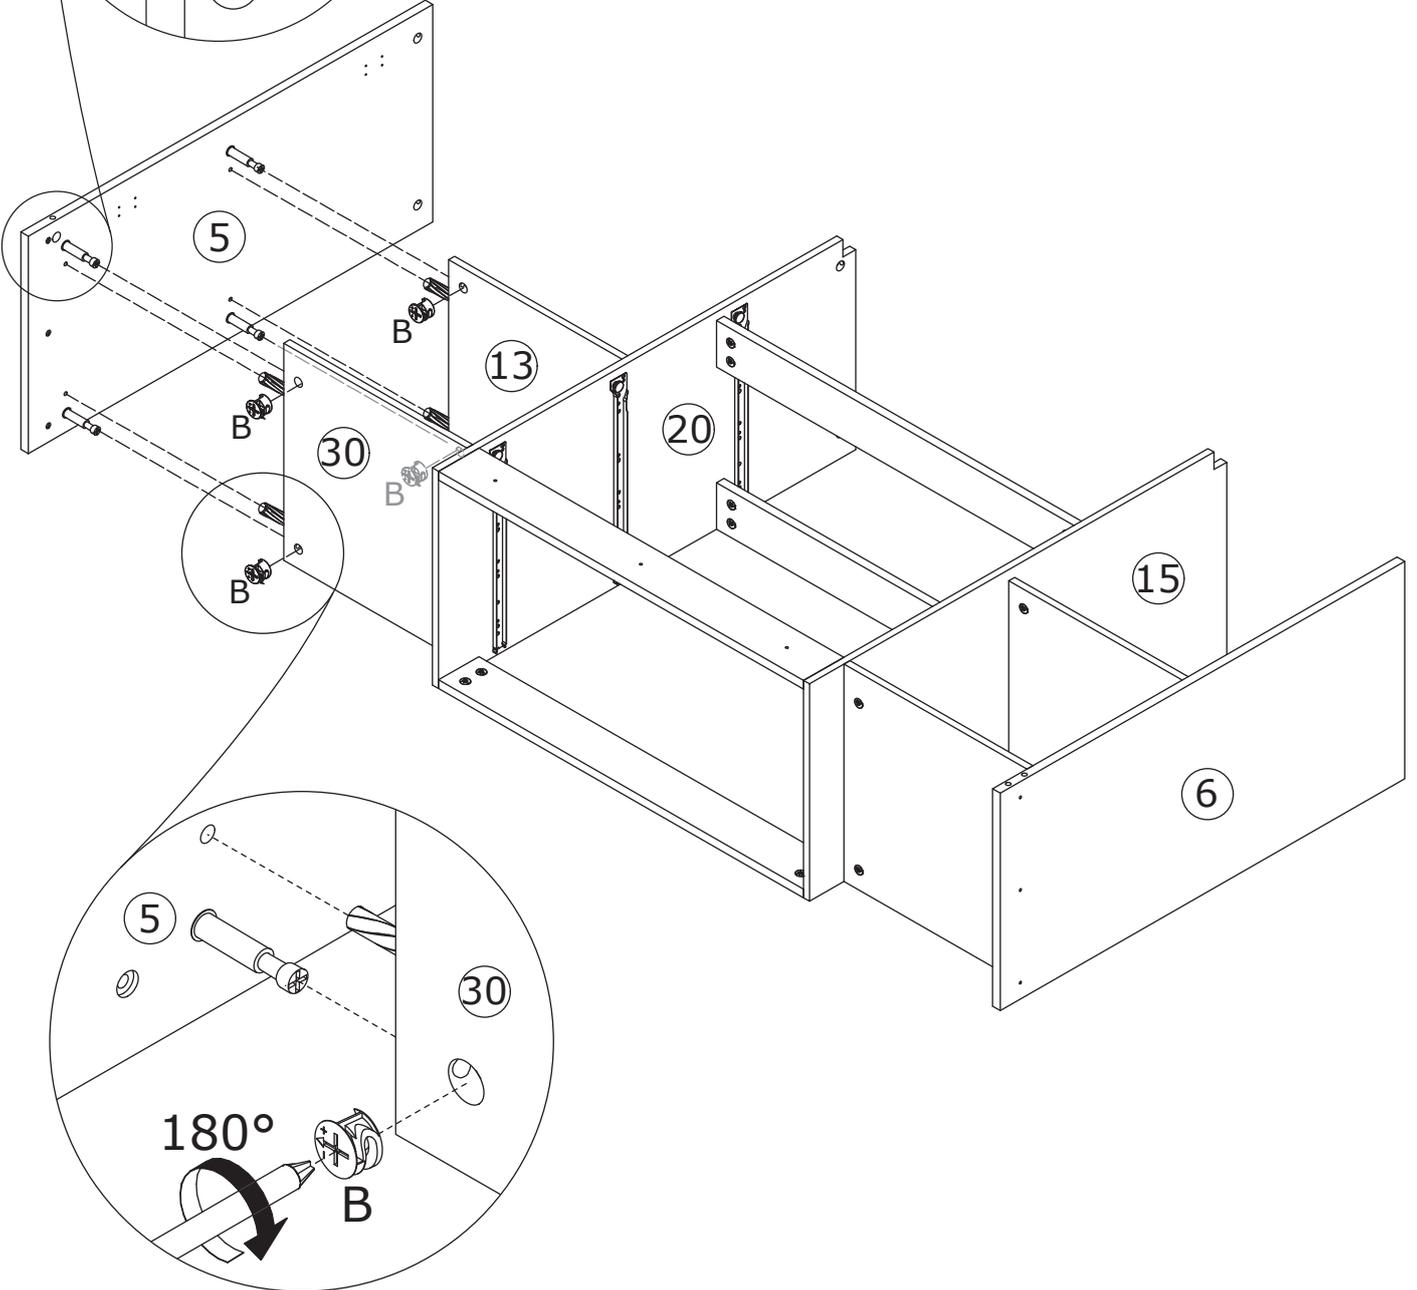


9





 
G x 6
Ø4 x 30 mm

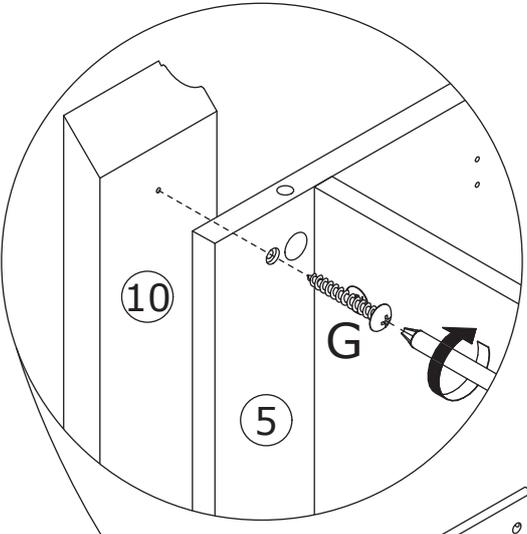



Fix panel 10 and 11 to panel 5 and 6 with screw(G) as shown.

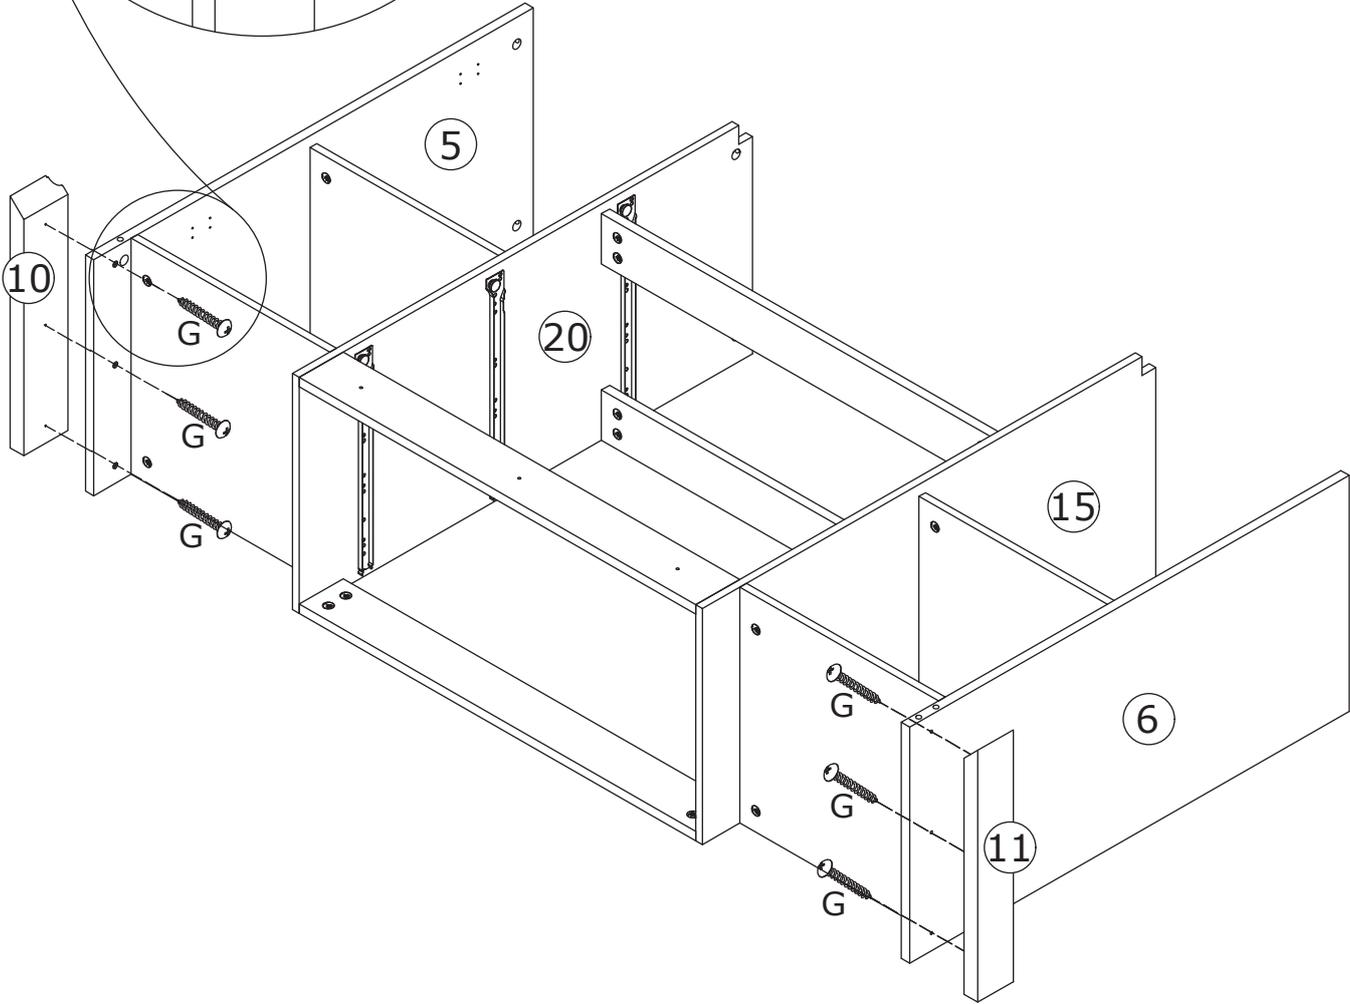





10

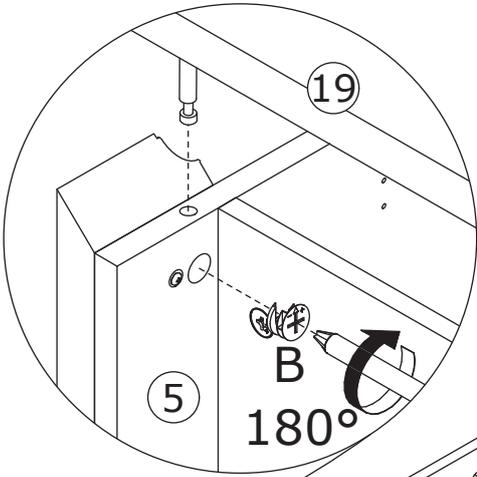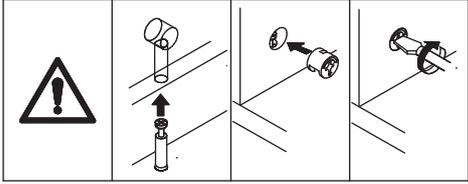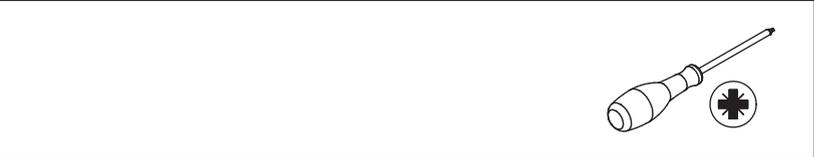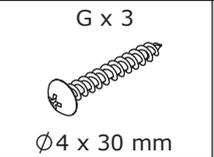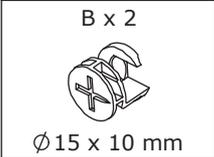



Attach panel 19 to panel 5 and 6, add cam lock(B) into and turn clockwise to tighten as shown.
Fix panel 19 to panel 8 with screw(G) as shown.

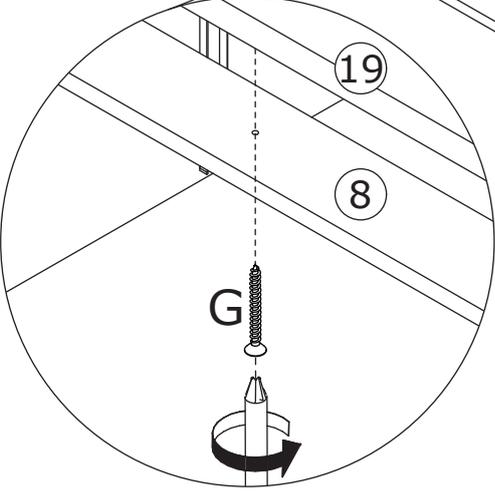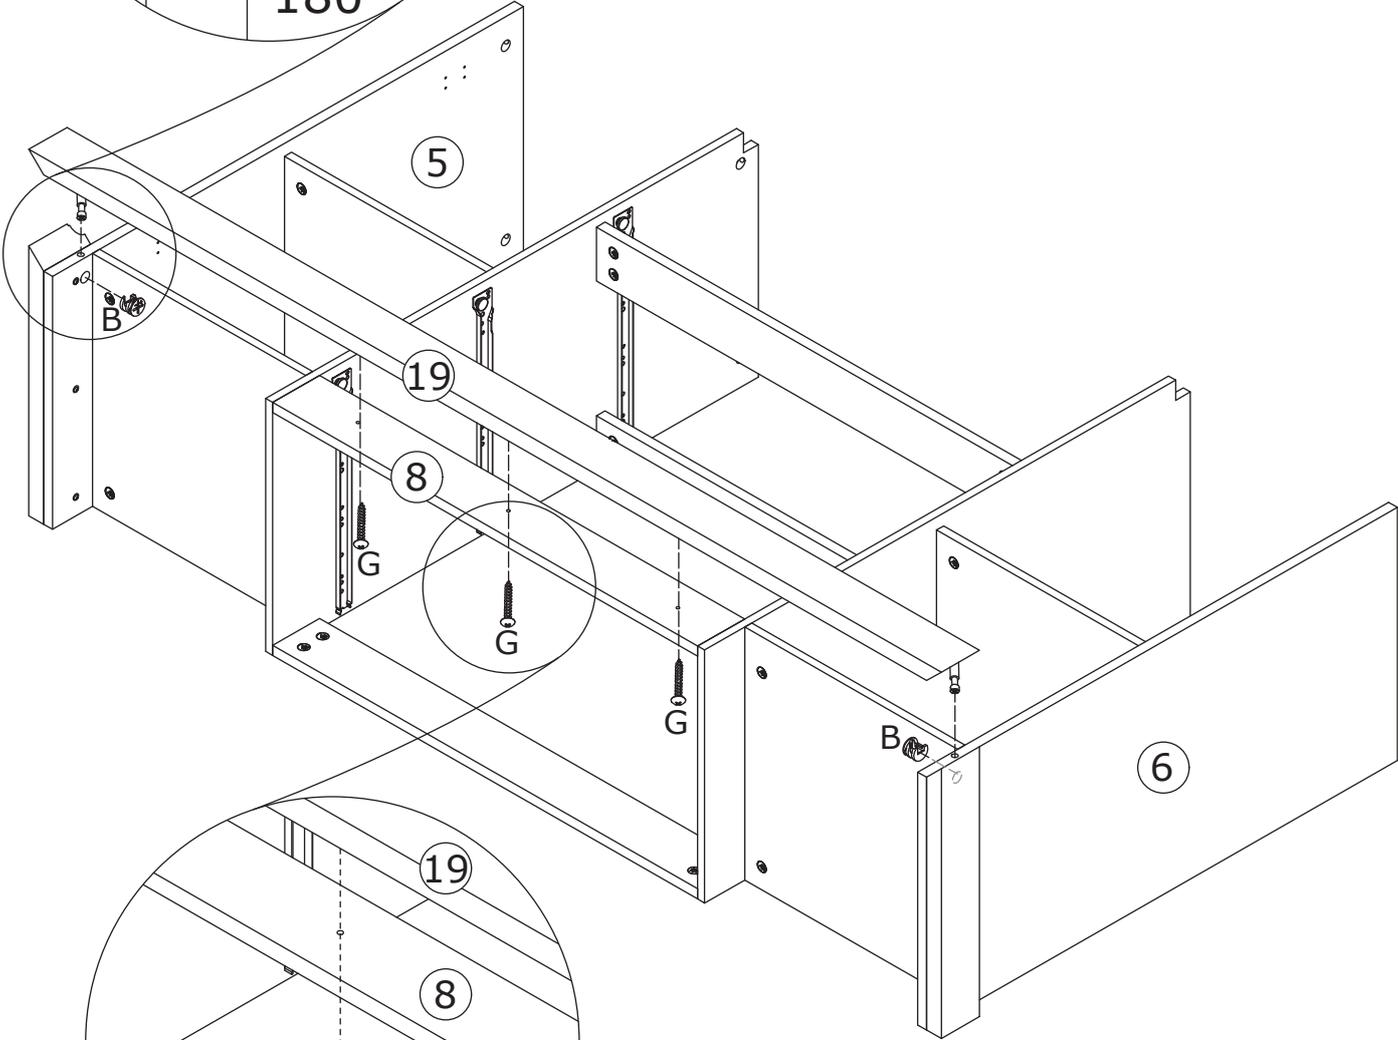

11

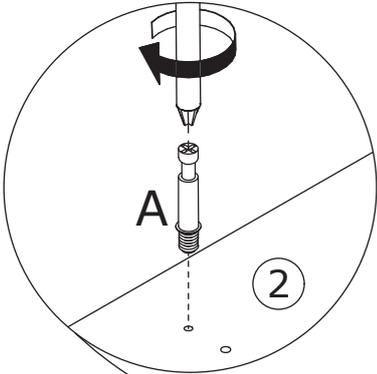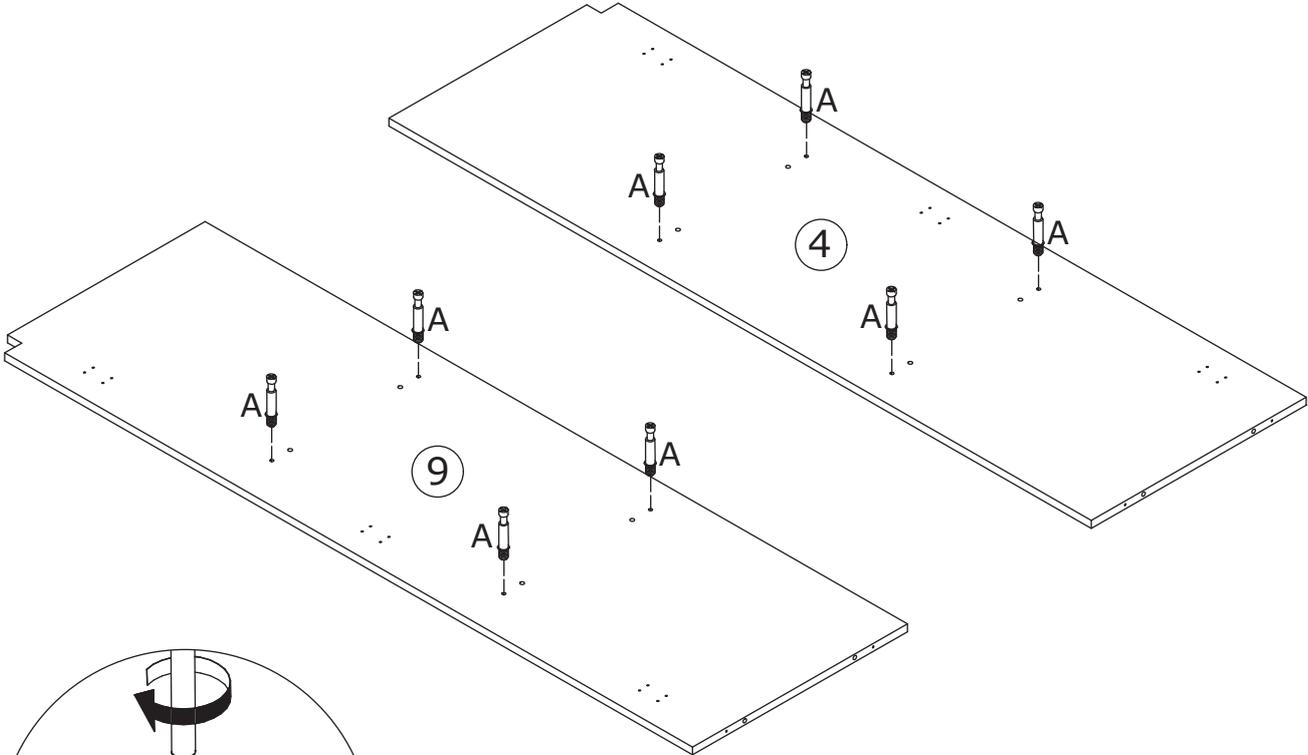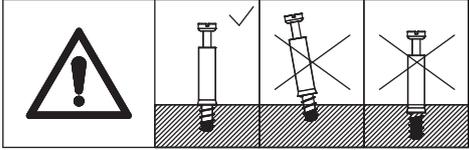 



Screw eccentric rod(A) into panel 4, 9, 2 and 3 at first.

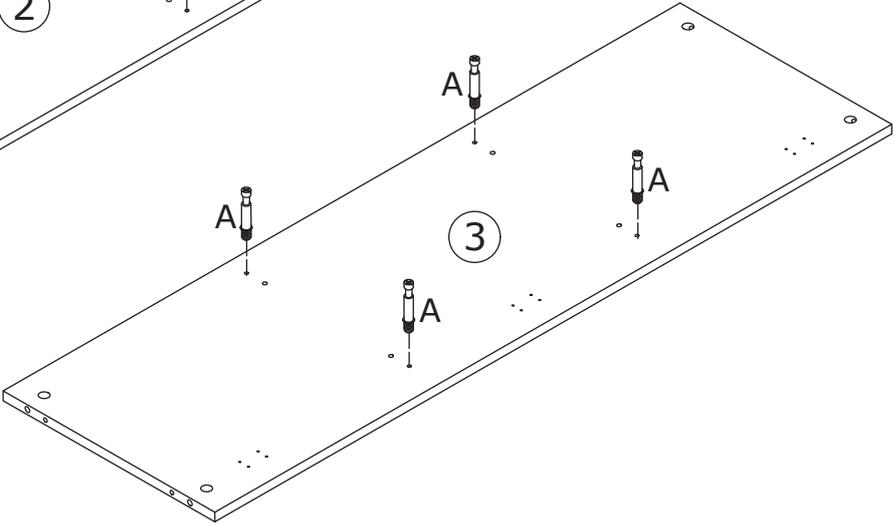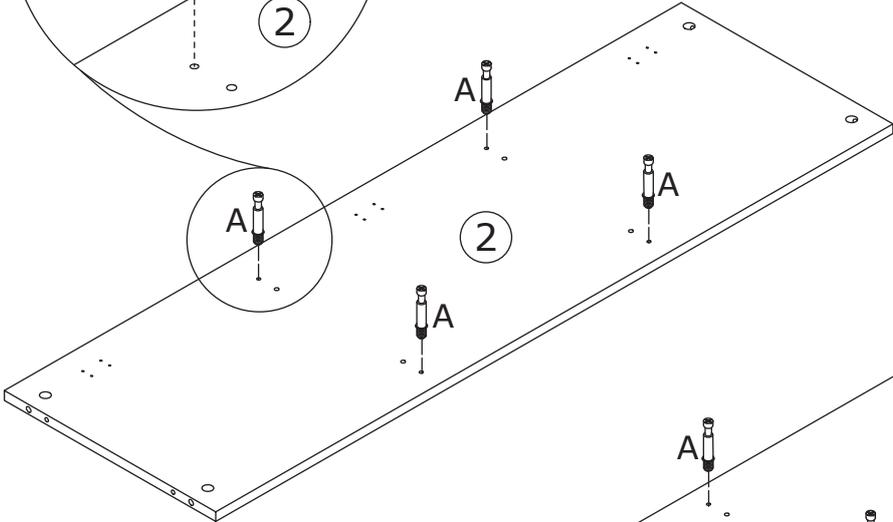

12






Connect panel 4 and 9 to panel 18 using wooden dowel(C), add cam lock(B) into and turn clockwise to tighten as shown.

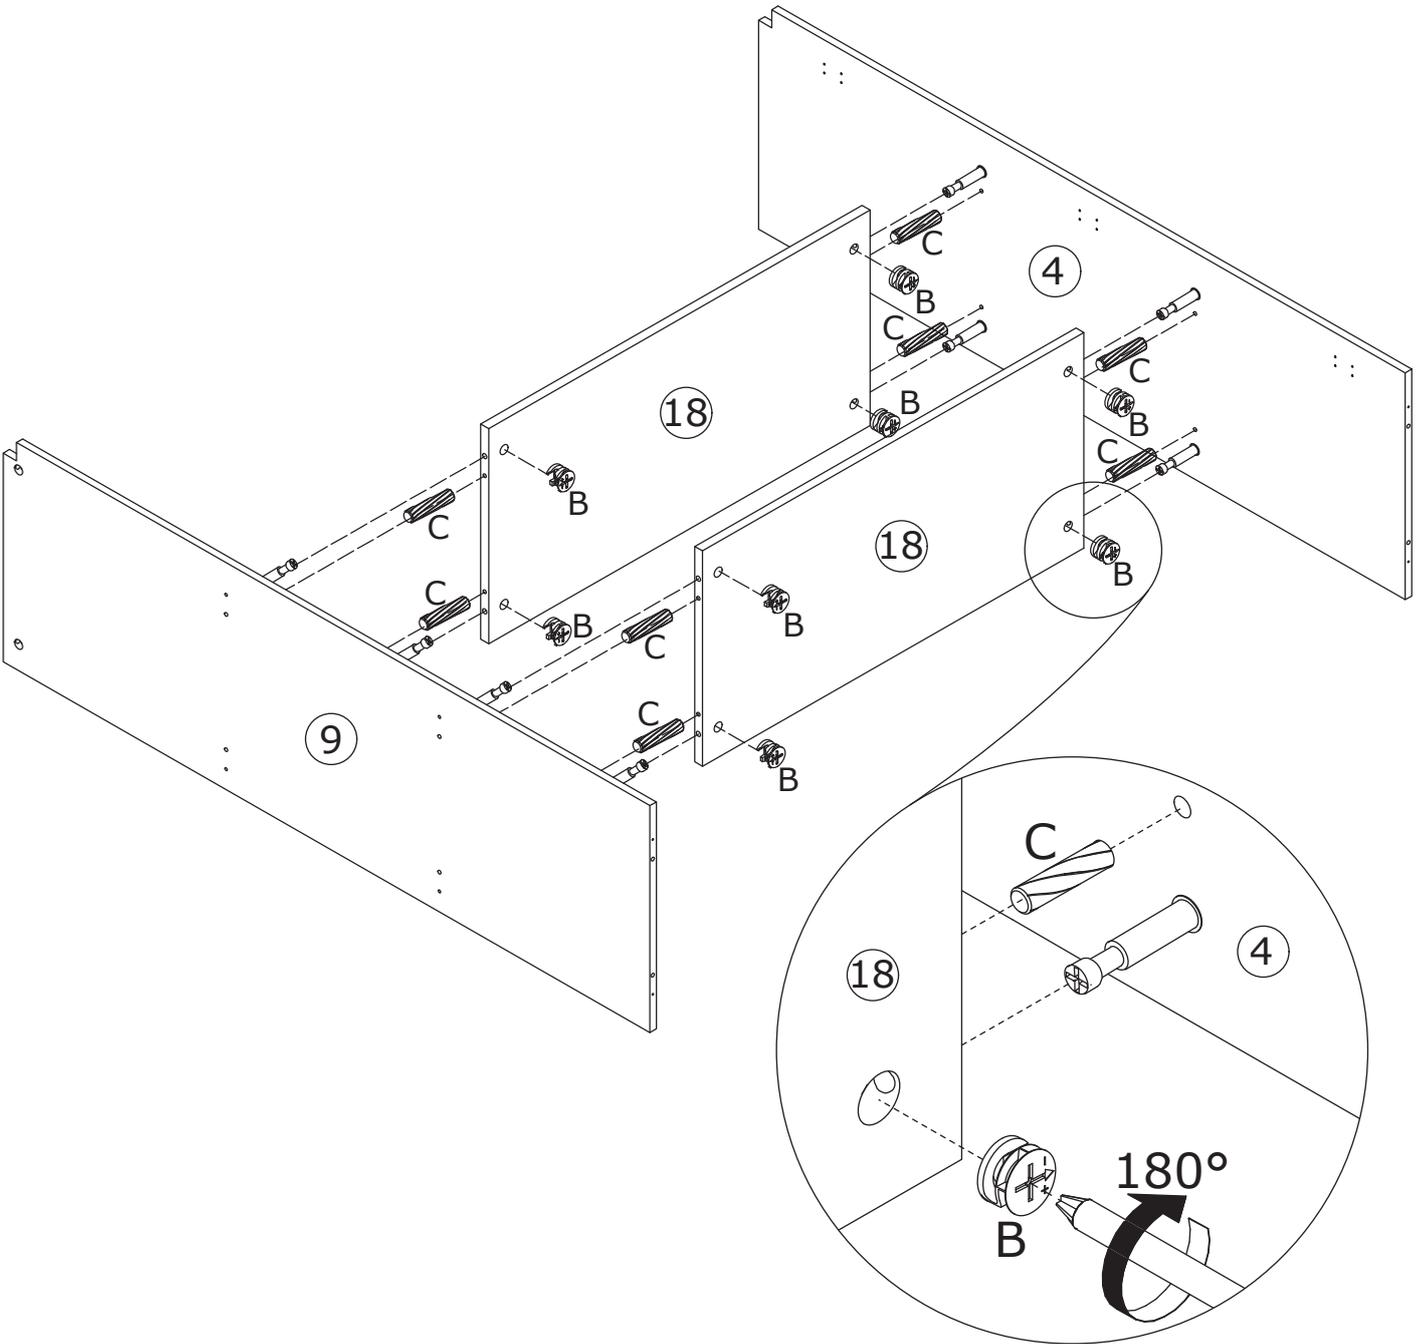
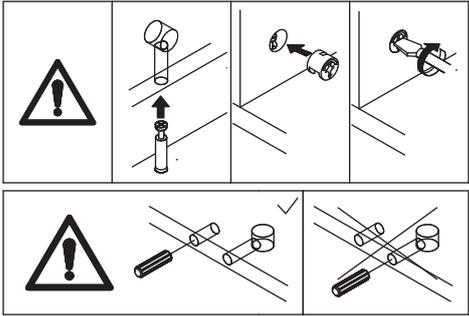


13

 A x 8
Ø6 x 35 mm

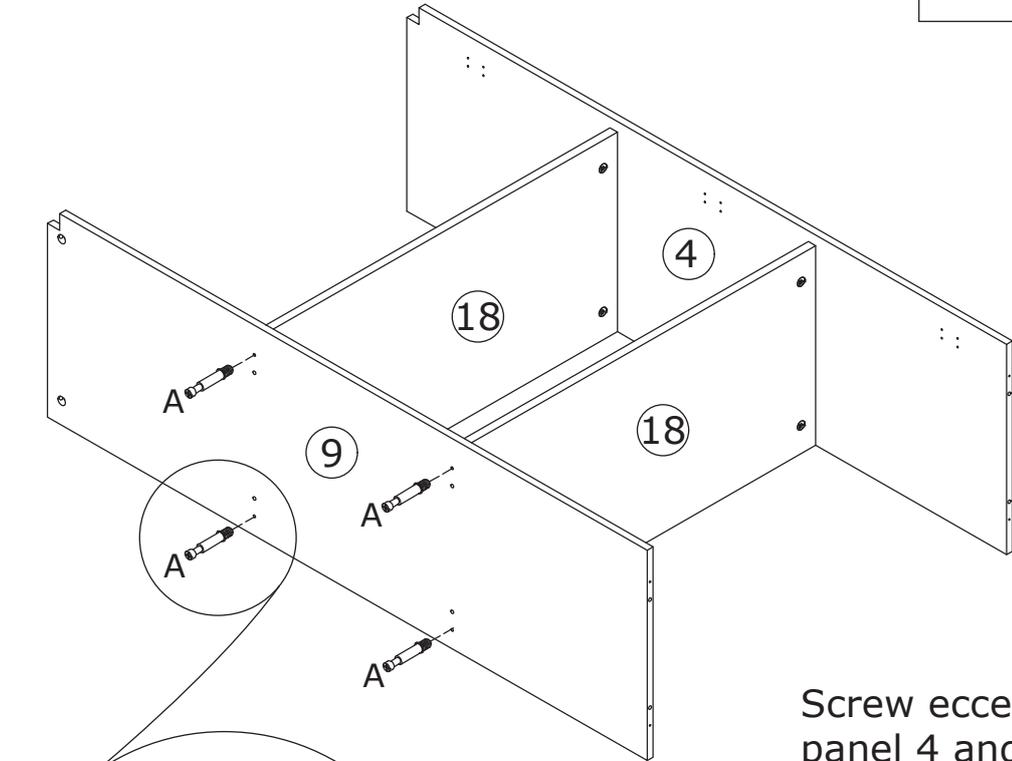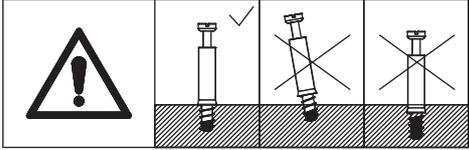




Screw eccentric rod(A) into panel 4 and 9 at first.

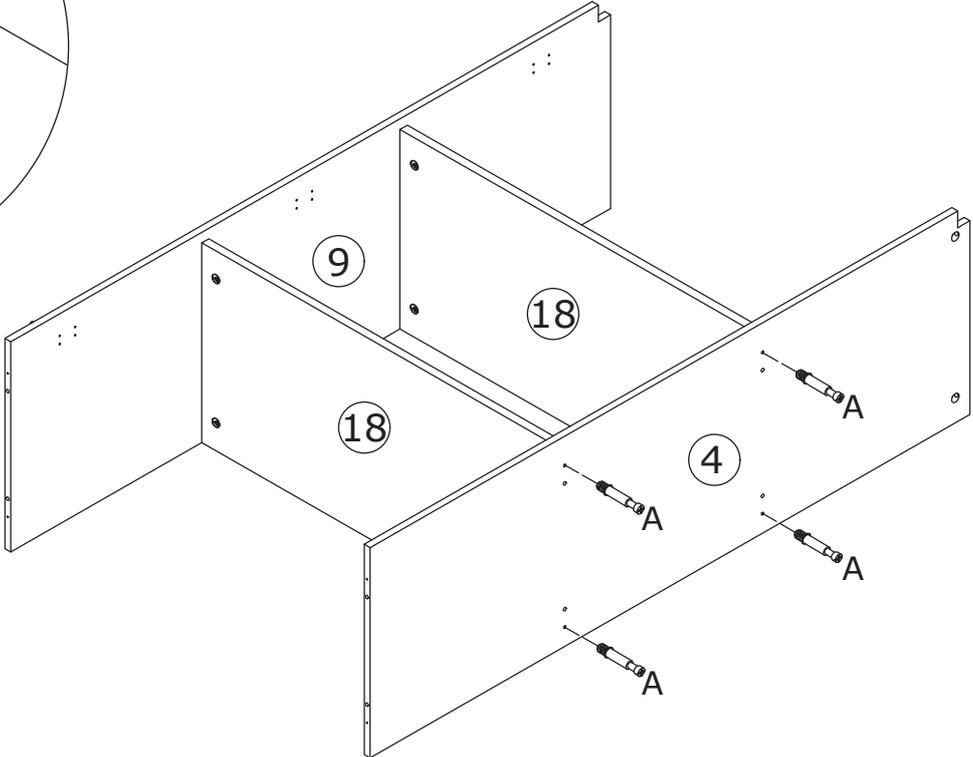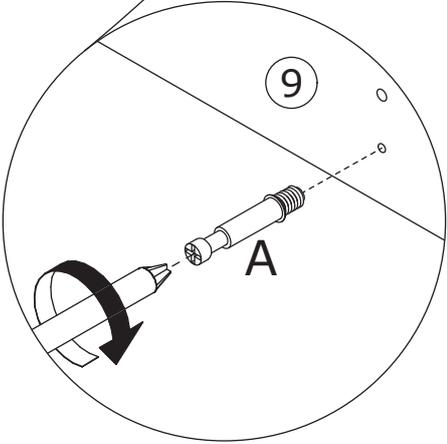

14





Insert wooden dowel(C) into panel 13 at first. Attach panel 13 to panel 9, add cam lock(B) into and turn clockwise to tighten as shown.

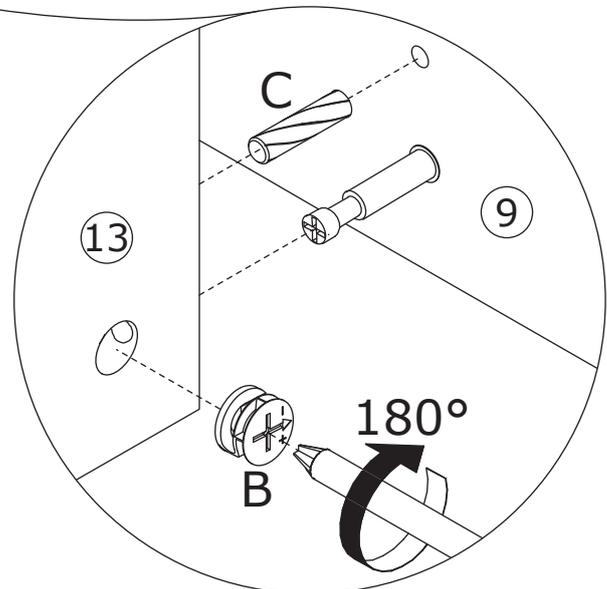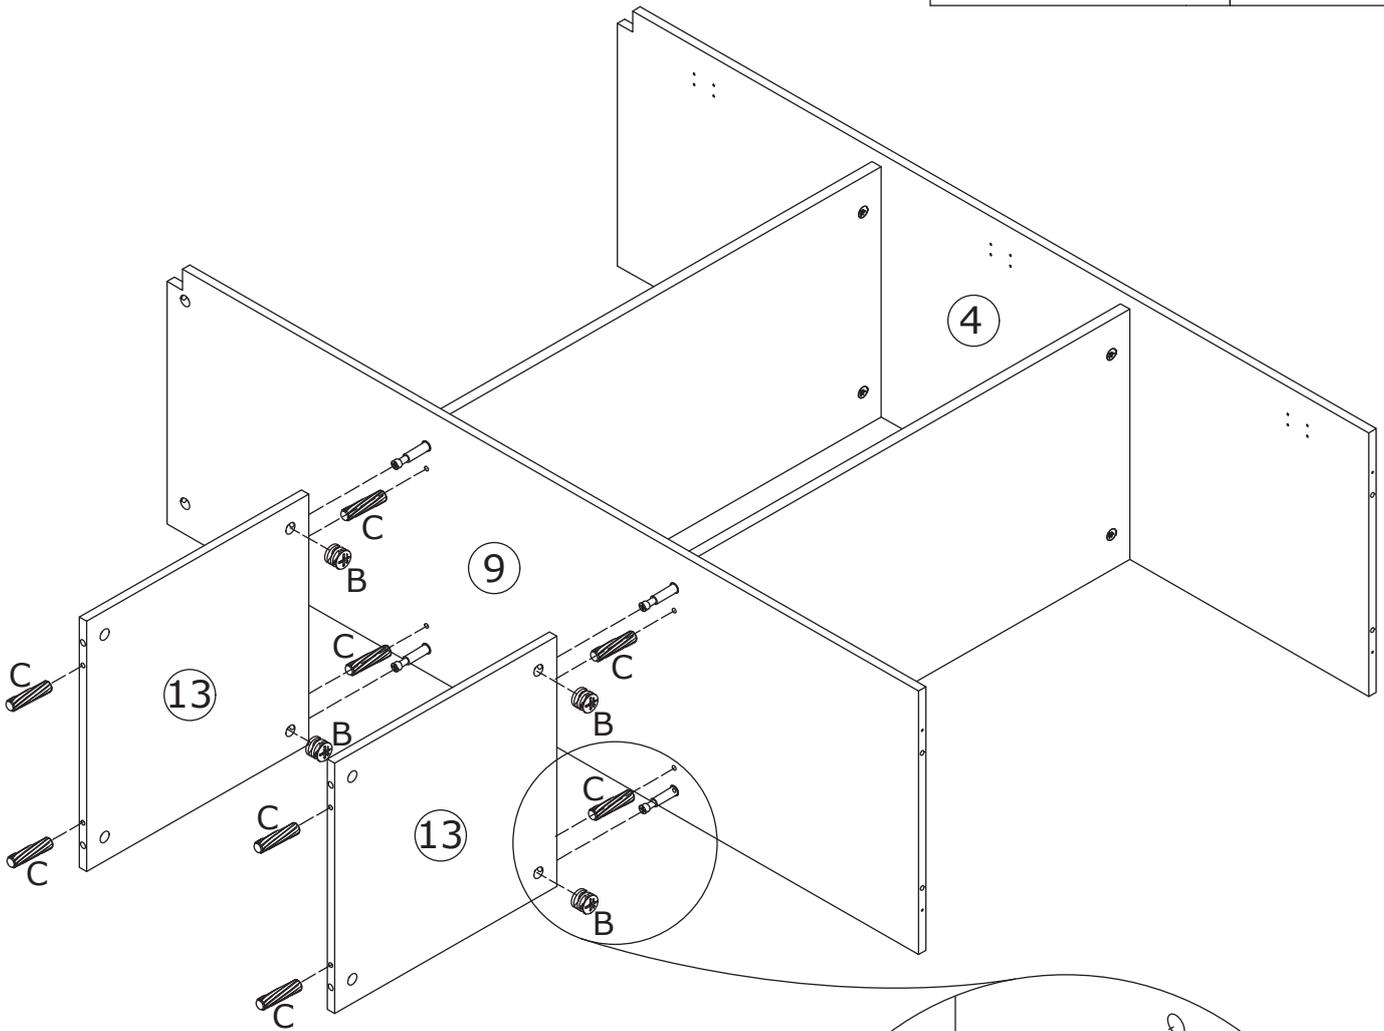
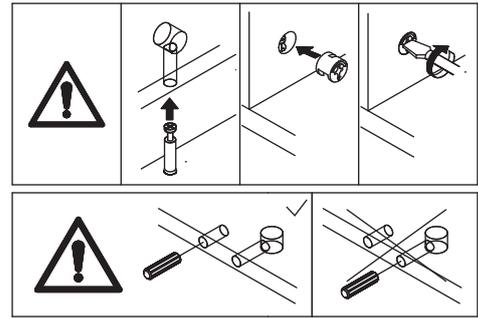


15



 
B x 4
Ø 15 x 10 mm

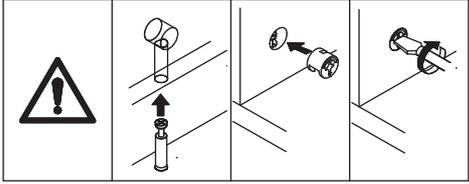




Attach panel 2 to panel 13, add cam lock(B) into and turn clockwise to tighten as shown.

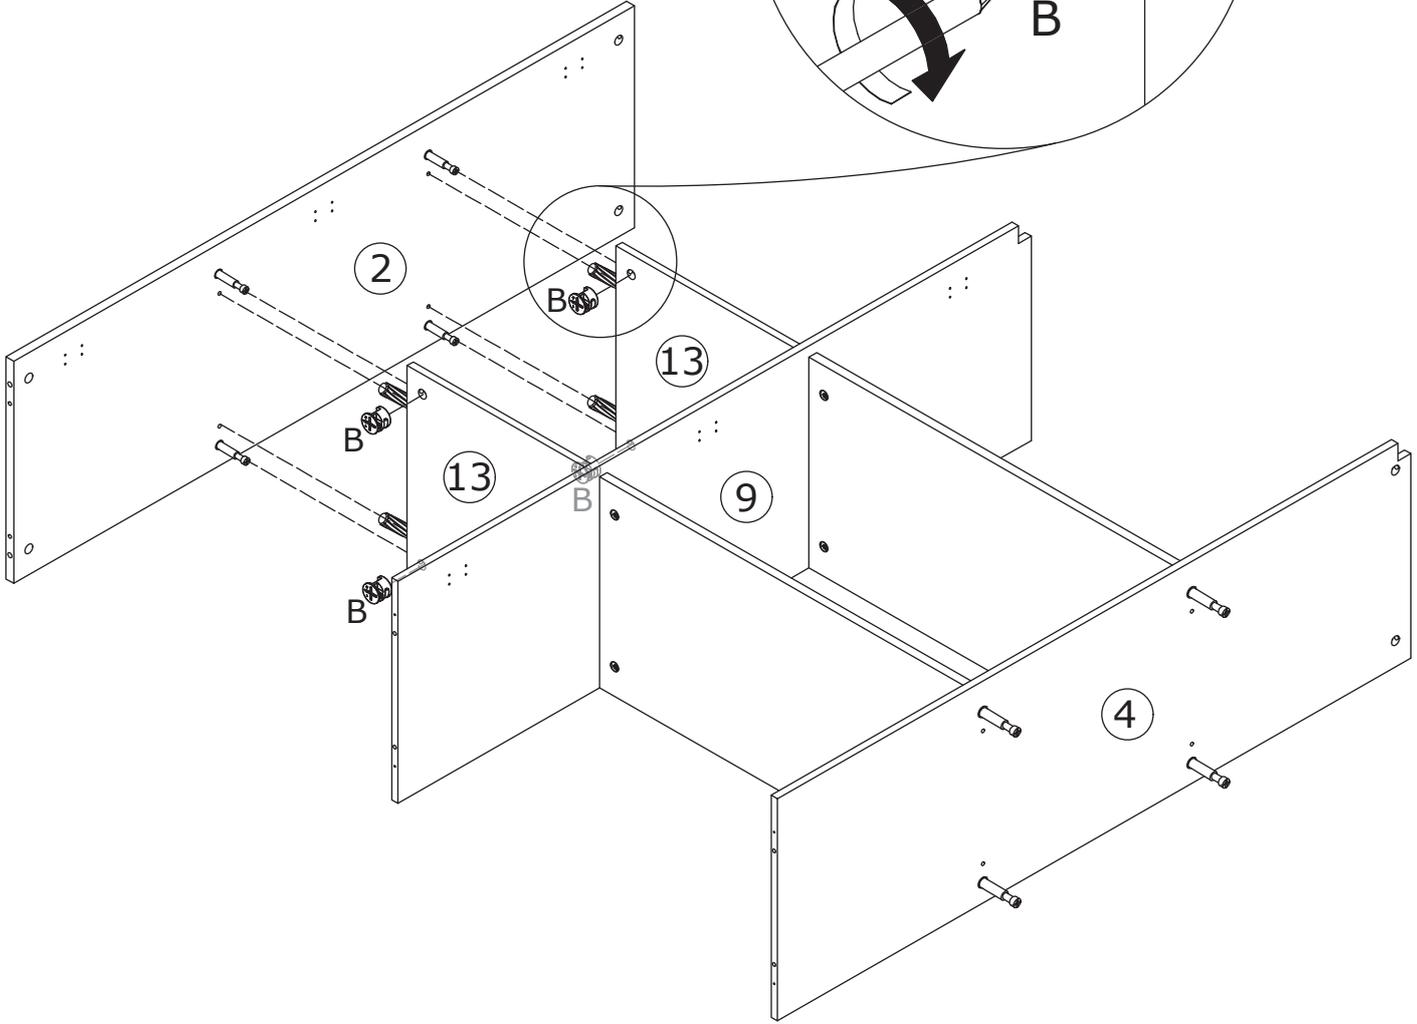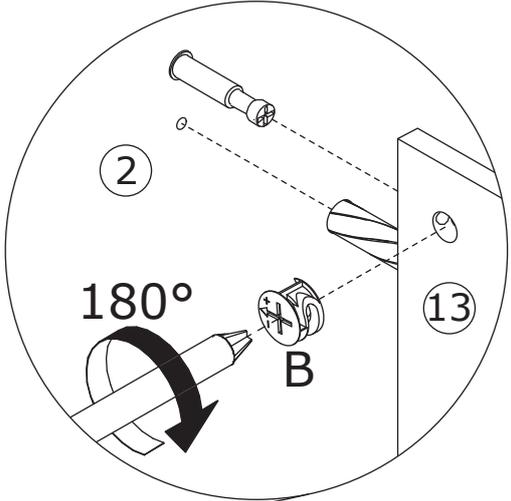

16

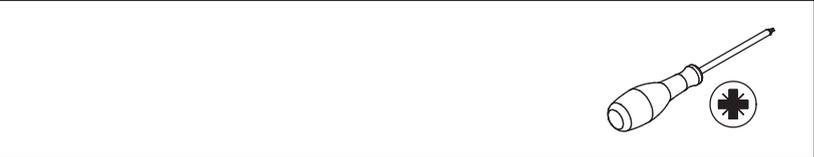
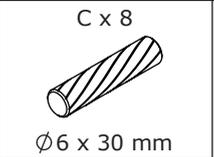
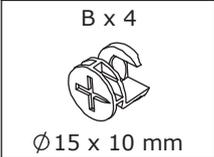


Insert wooden dowel(C) into panel 13 at first.
Attach panel 13 to panel 4, add cam lock(B)
into and turn clockwise to tighten as shown.

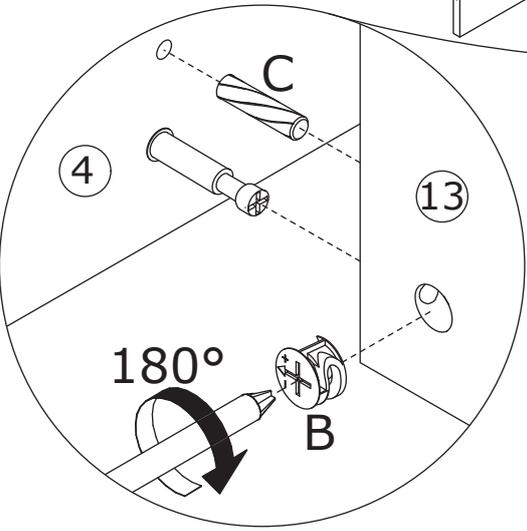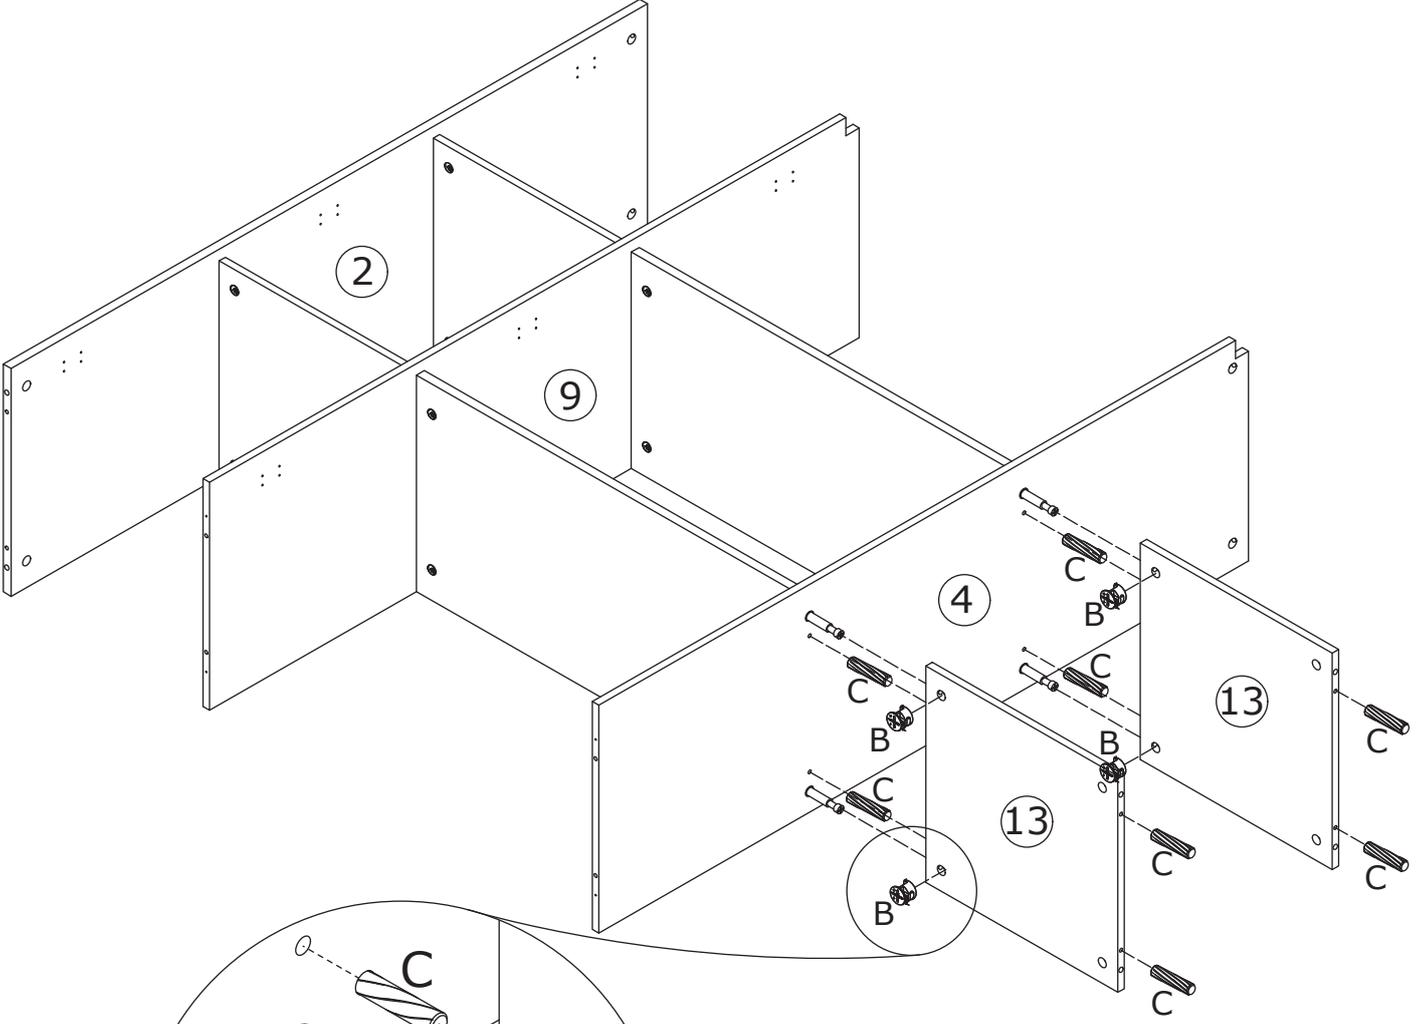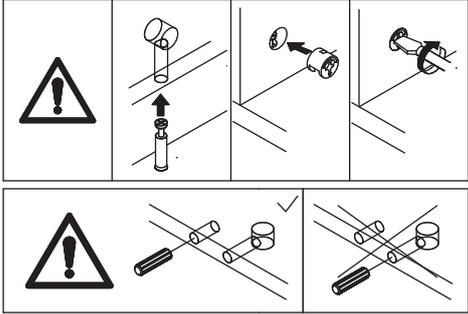


17

 B x 4
Ø 15 x 10 mm

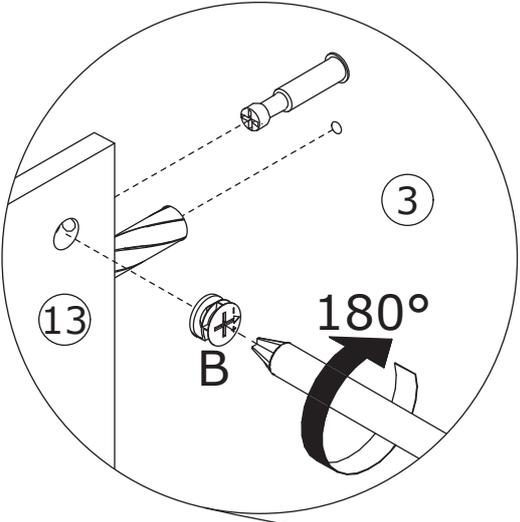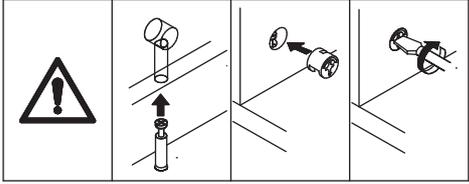

Attach panel 3 to panel 13,
add cam lock(B) into and turn
clockwise to tighten as shown.

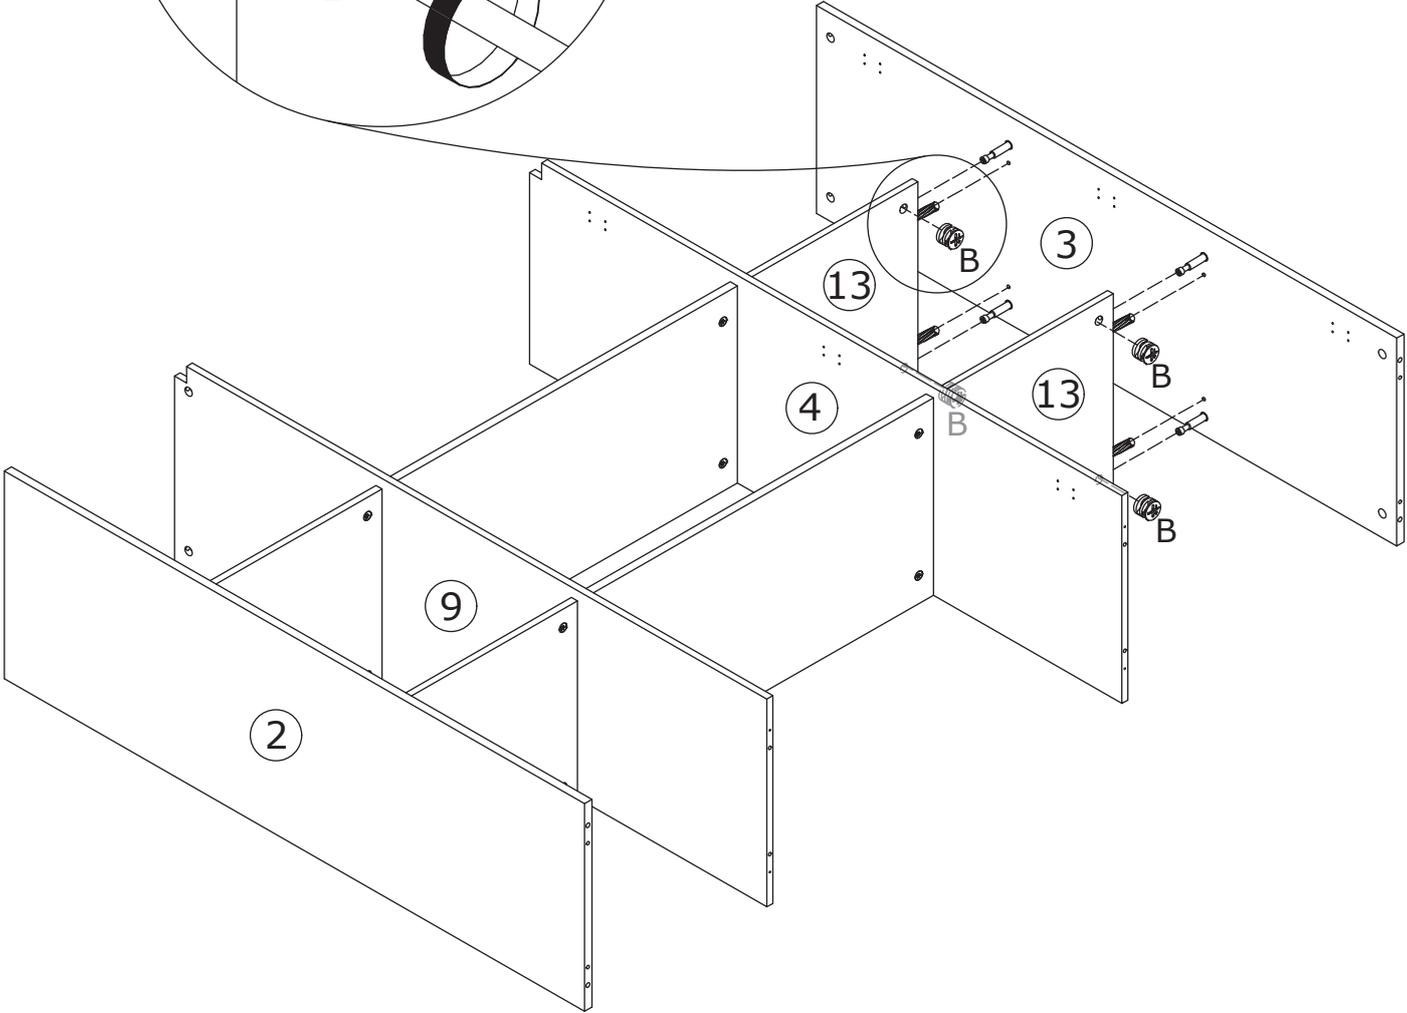

19

B x 8




 


Ø15 x 10 mm


C x 8







Ø6 x 30 mm

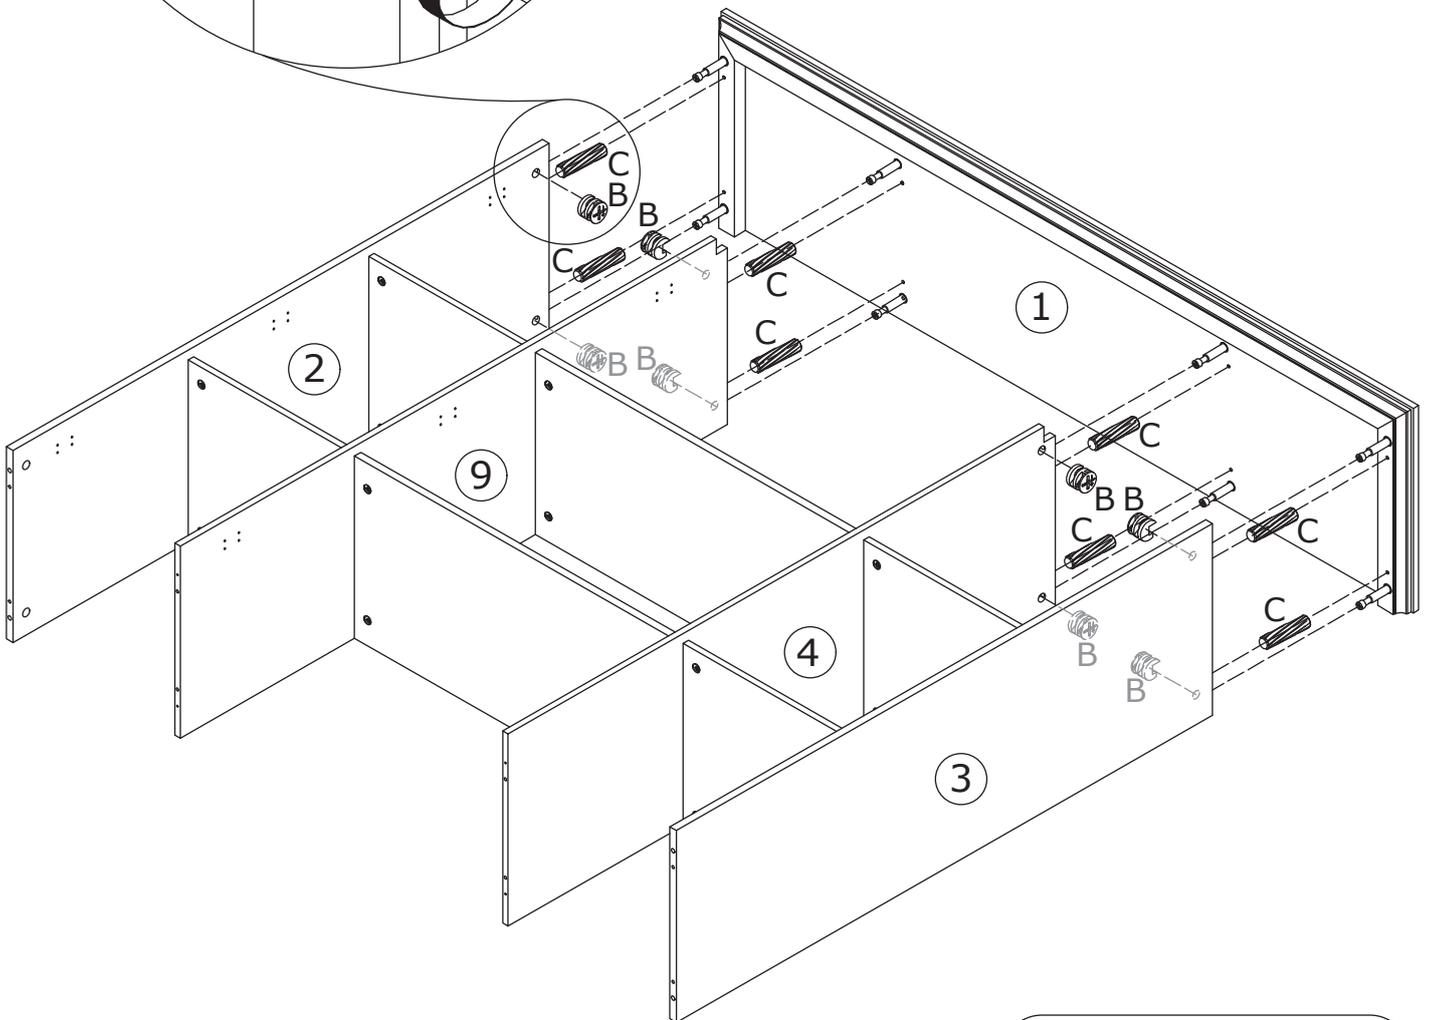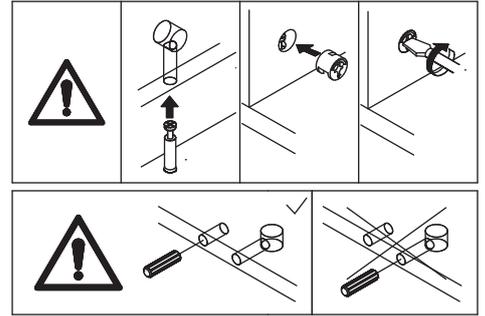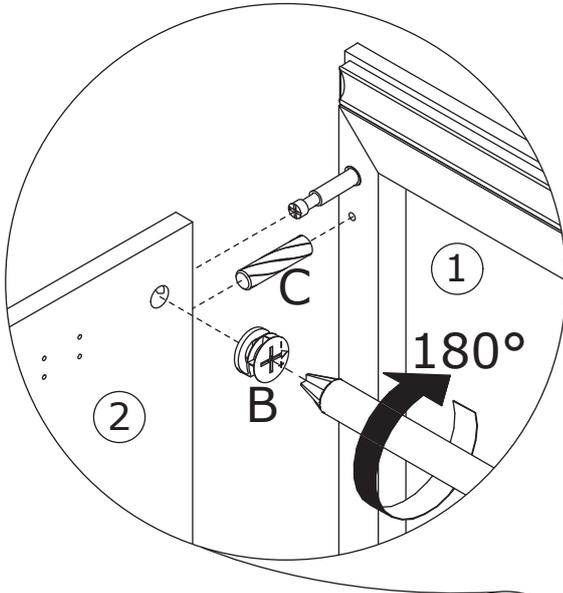



Attach panel 1 to panel 2, 9, 4 and 3 using wooden dowel(C), add cam lock(B) into and turn clockwise to tighten as shown.

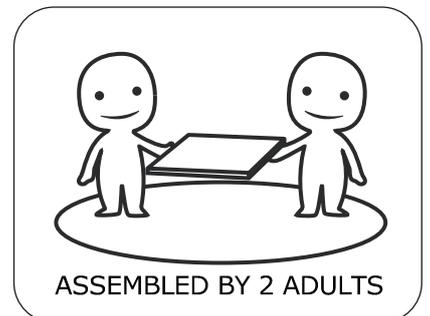




20

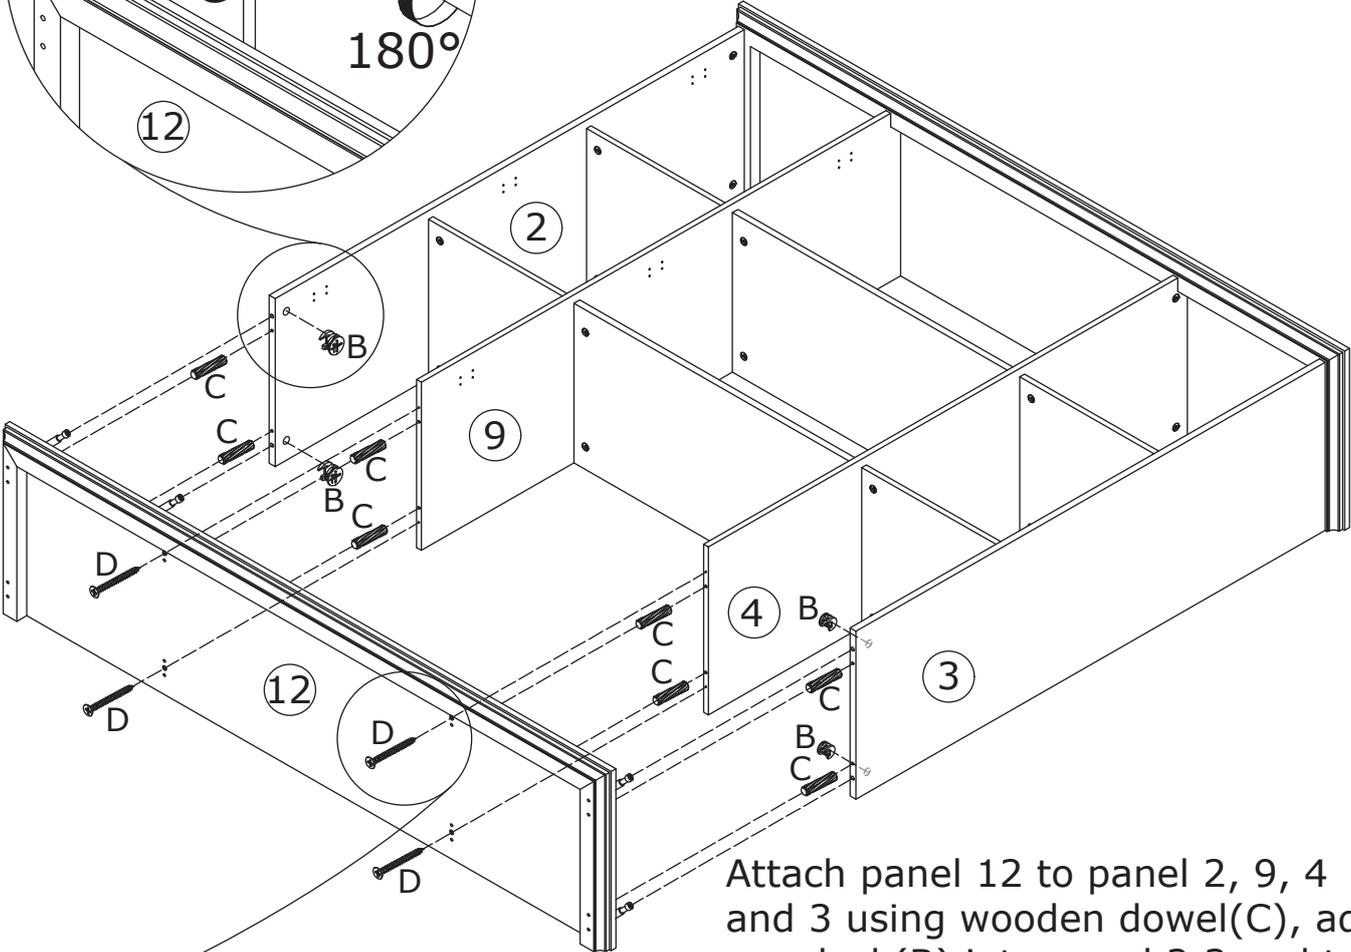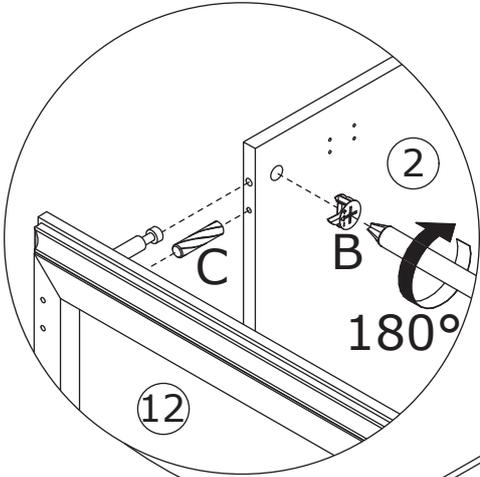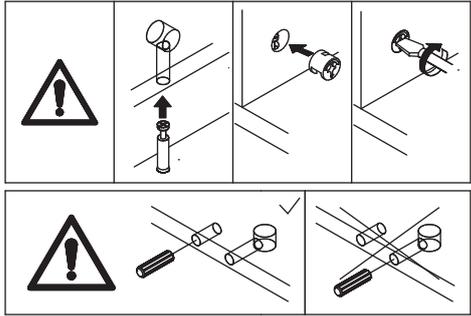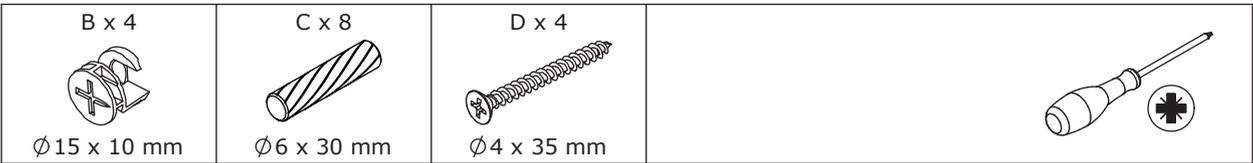




Attach panel 12 to panel 2, 9, 4 and 3 using wooden dowel(C), add cam lock(B) into panel 2,3 and turn clockwise to tighten as shown. Fix panel 12 to panel 4 and 9 with screw(D) as shown.

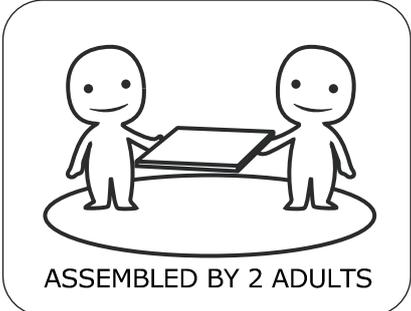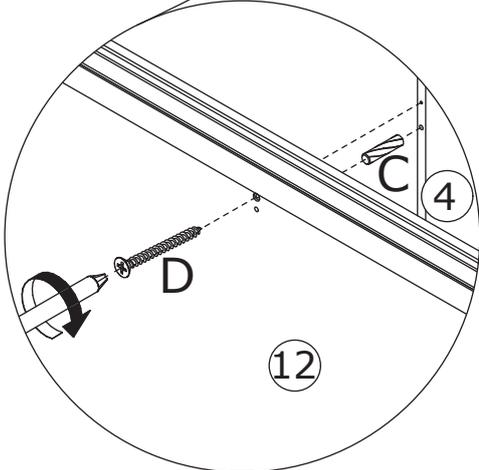





21

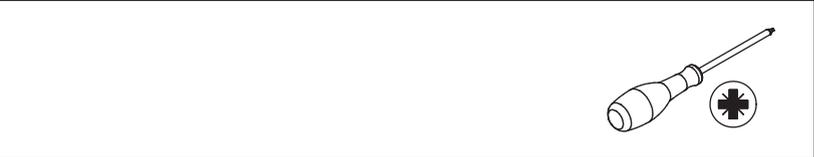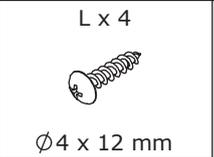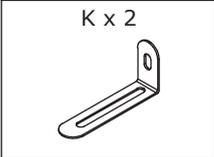





Fix part(K) to panel 1 with screw(L) as shown.

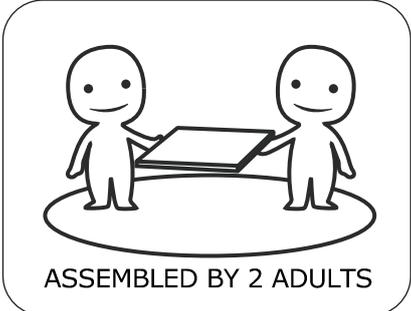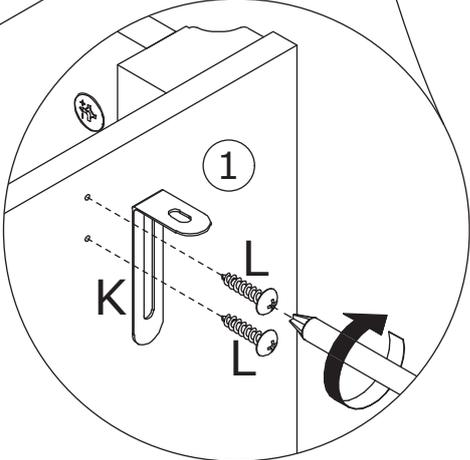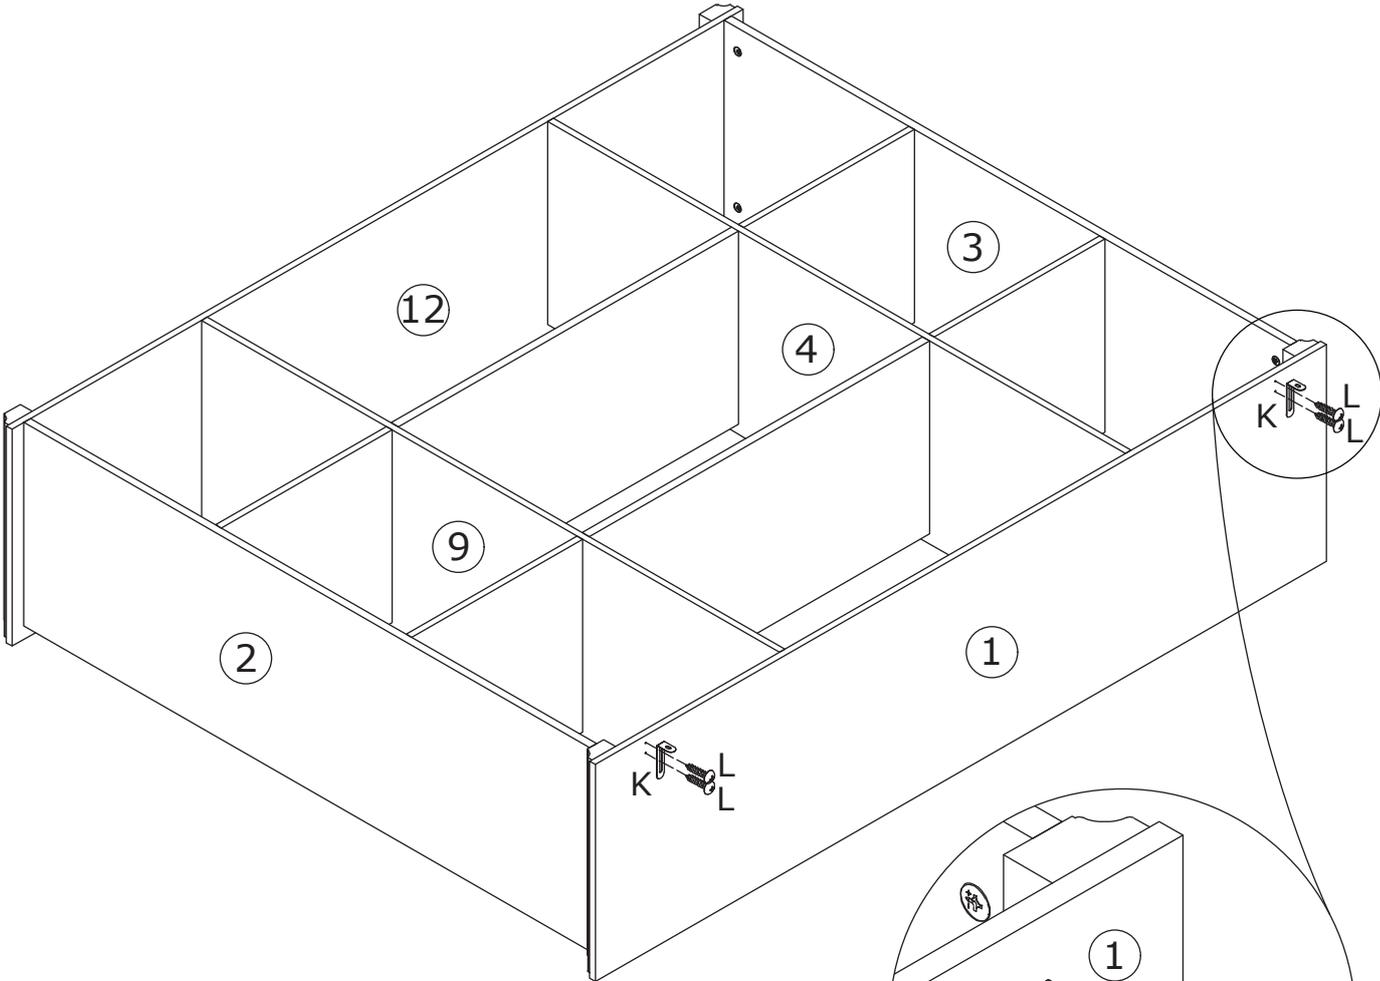




22

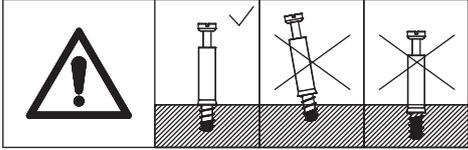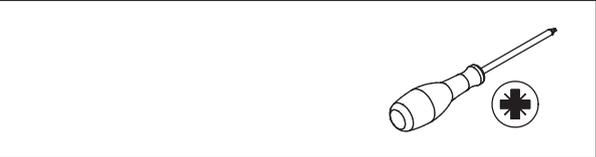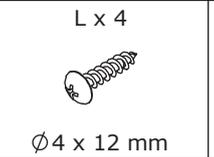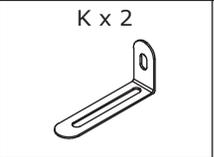





Screw eccentric rod(A) into panel 12 at first.
Fix part(K) to panel 12 with screw(L) as shown.

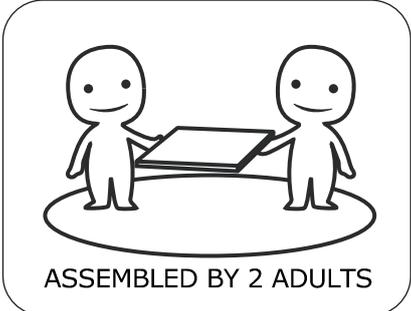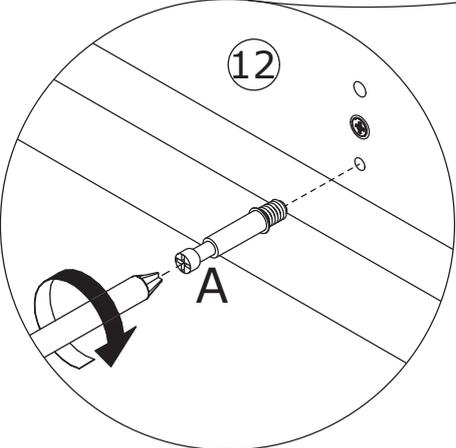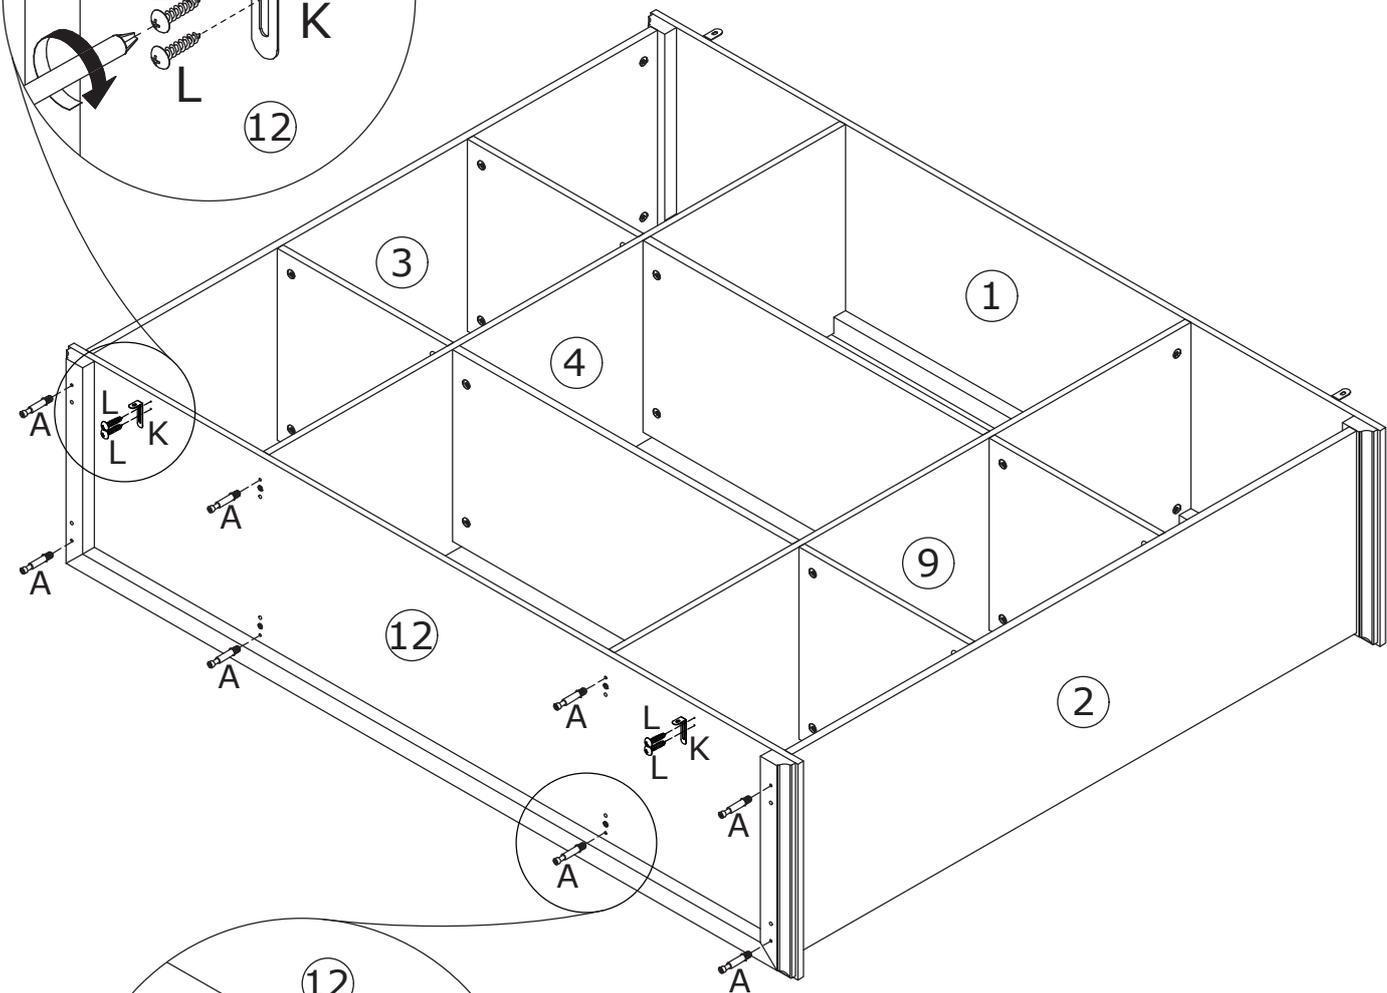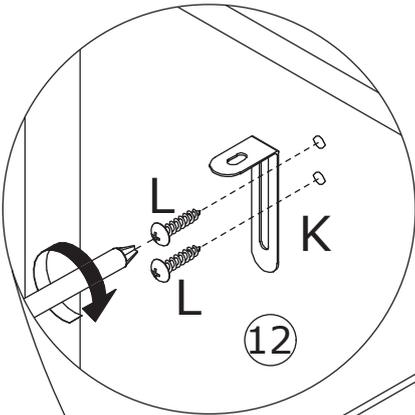






23

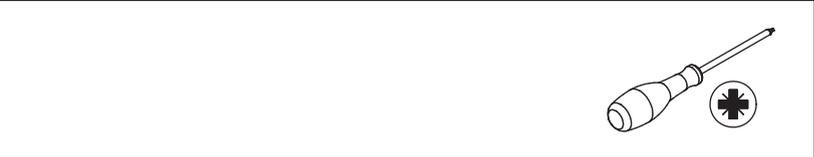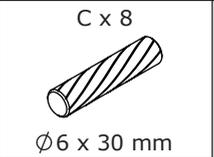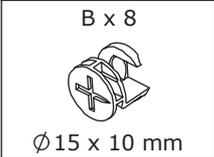


Connect the two components using wooden dowel(C), add cam lock(B) into and turn clockwise to tighten as shown.

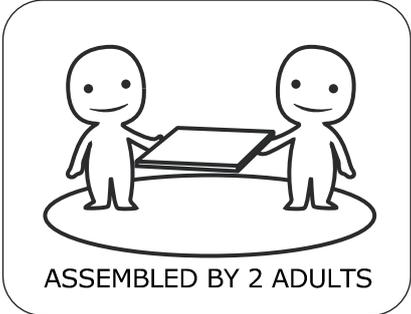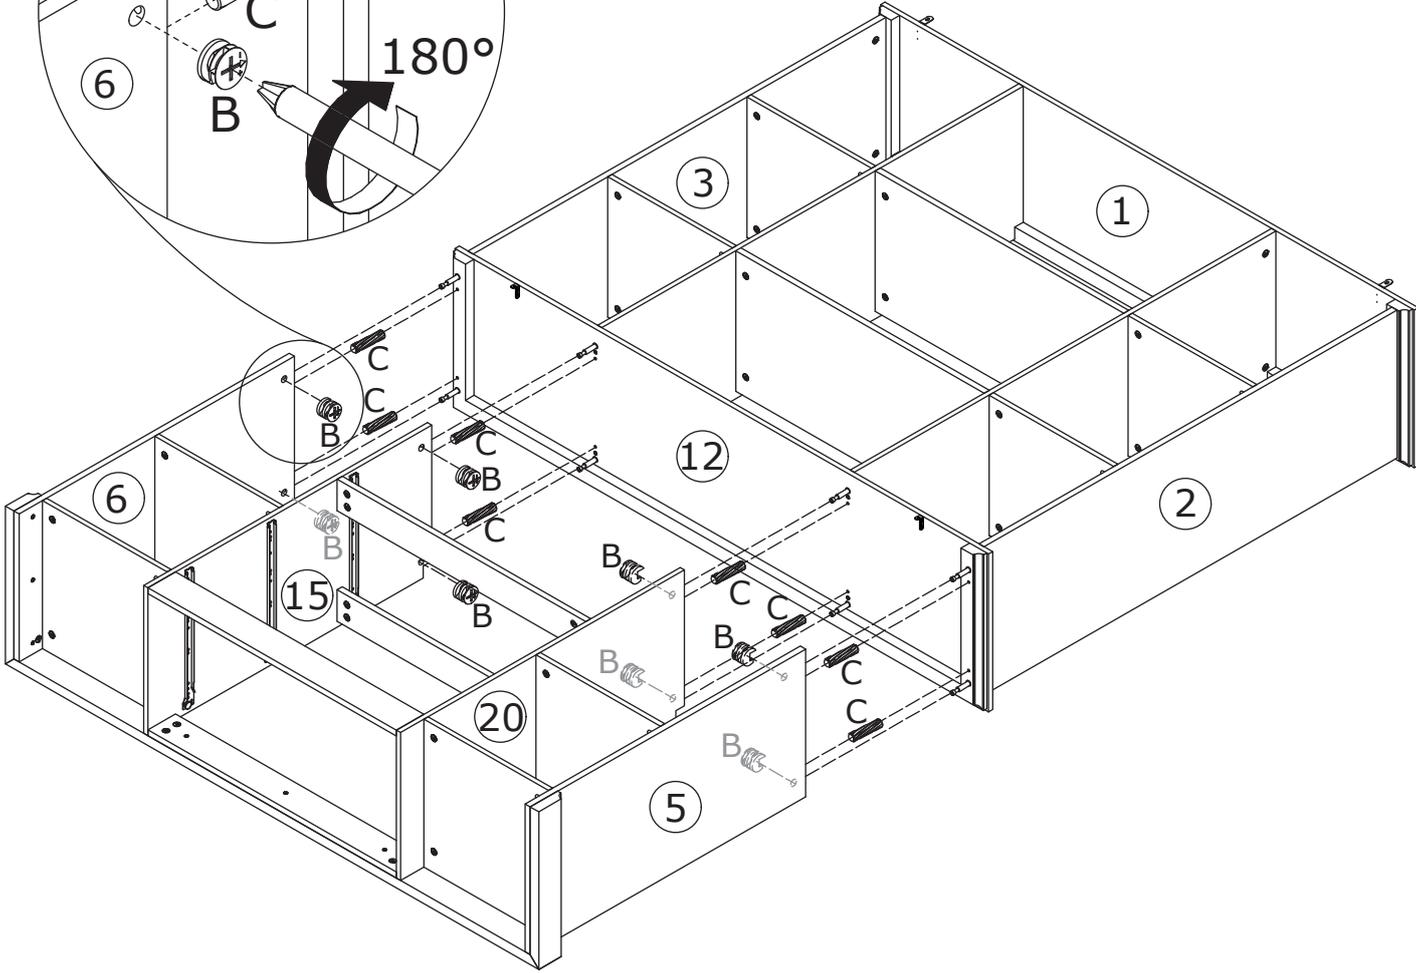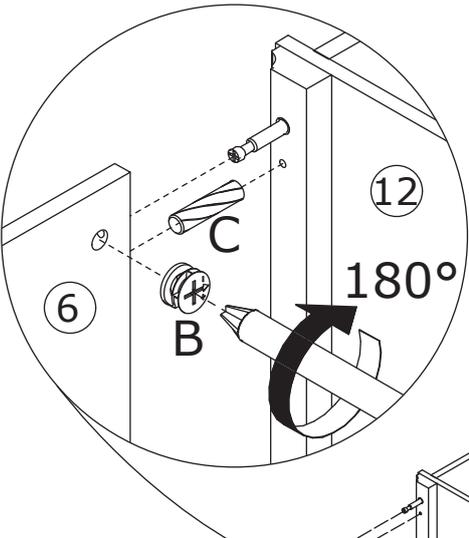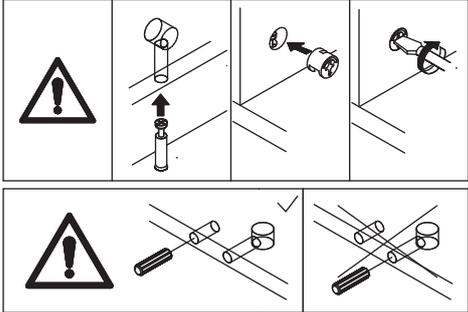


24

 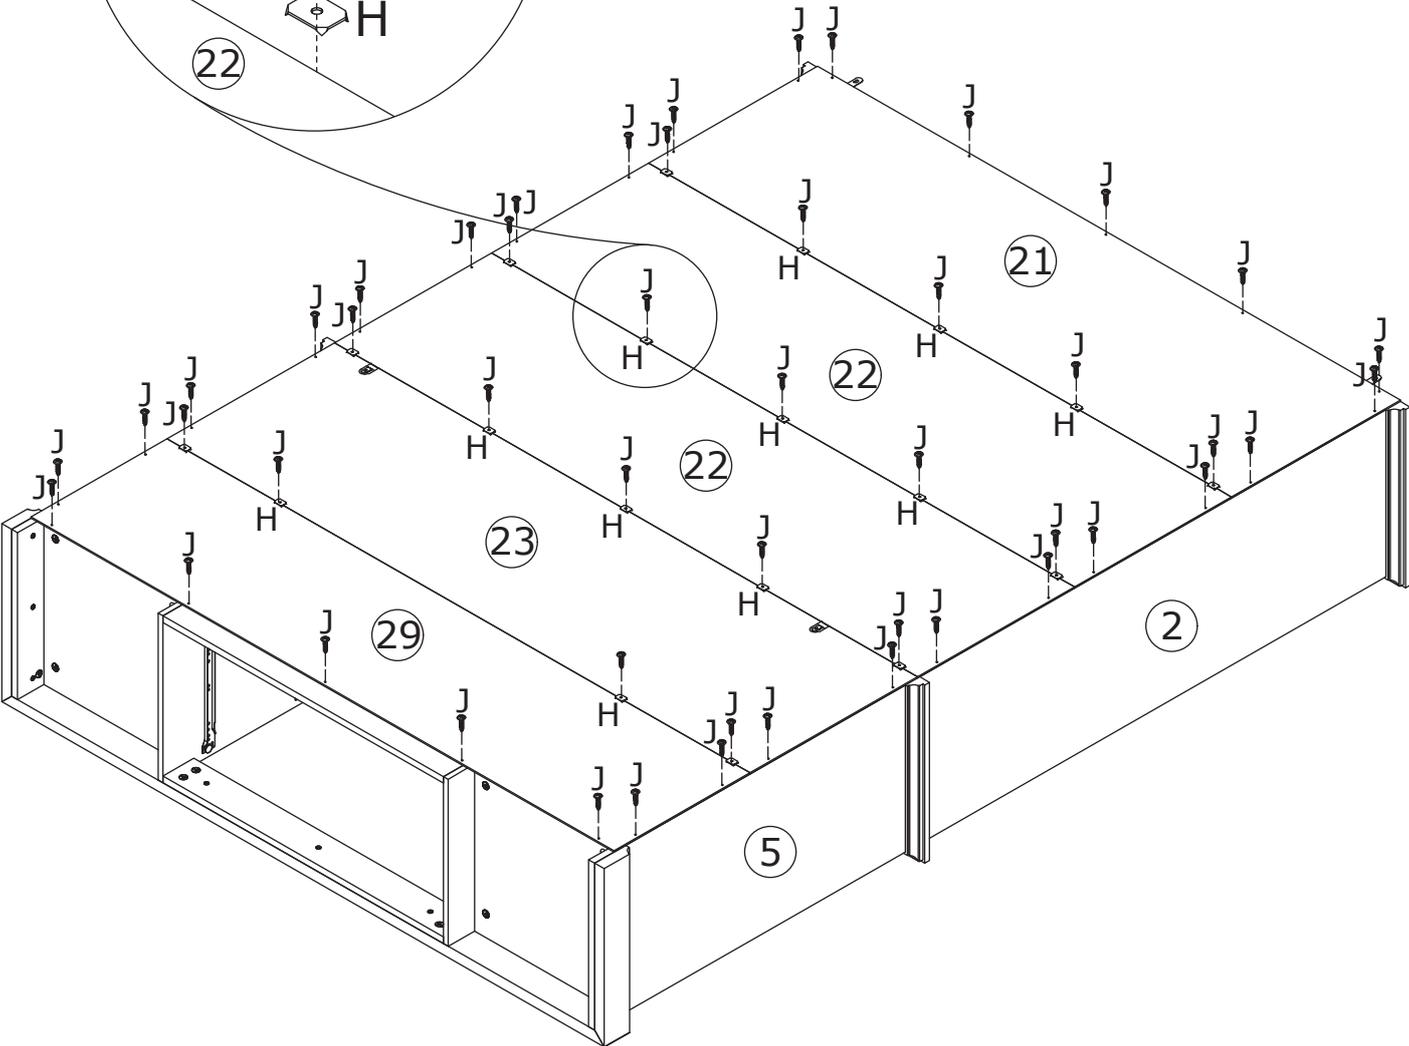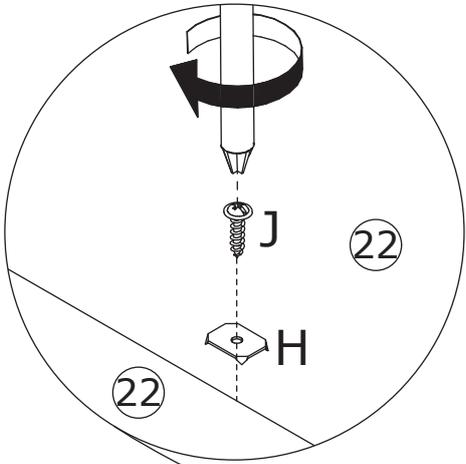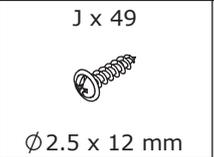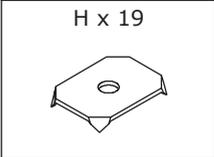

Fix back panel 21, 22, 23 and 29 to the unit with screw(J) at first.
Fix iron sheet(H) to back panels with screw(J) as shown.


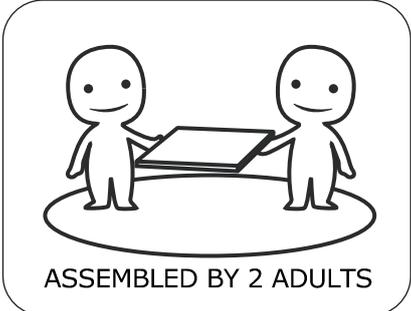


25

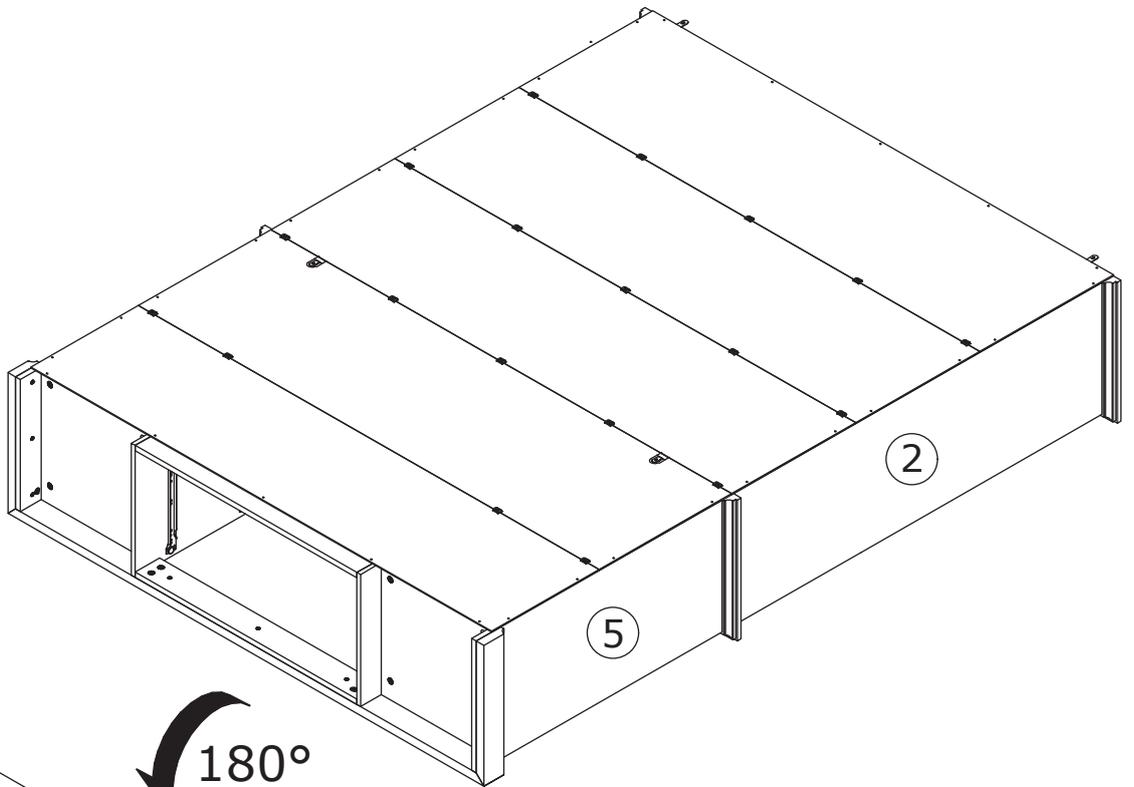



180°

It takes 4 people to stand the cabinet up

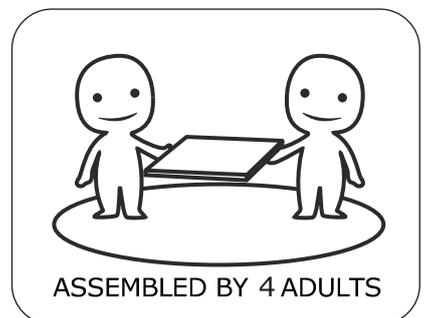
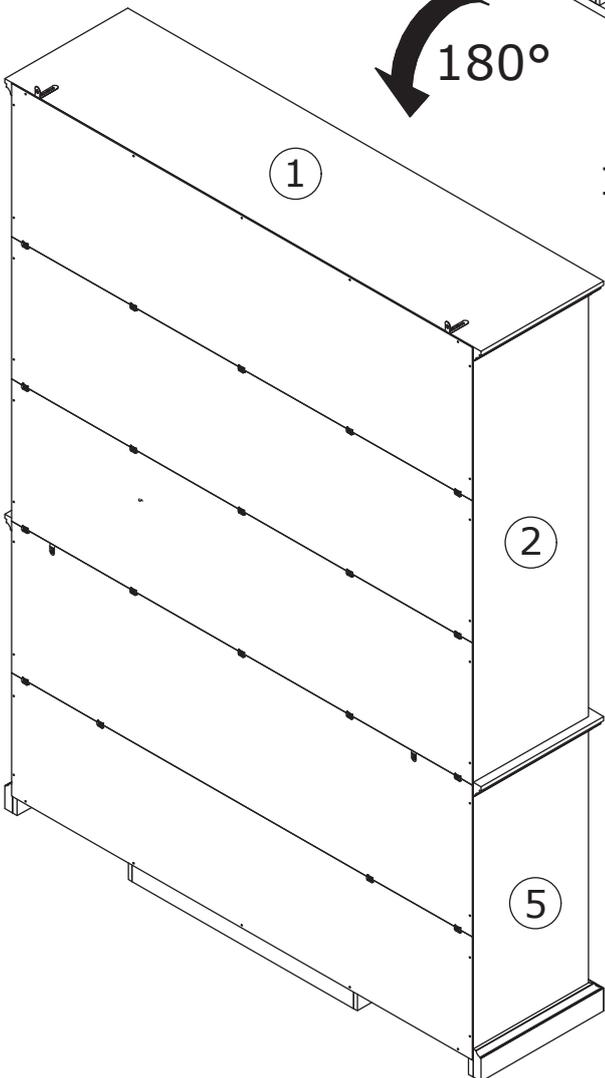


26






 
D x 15
Ø4 x 35 mm

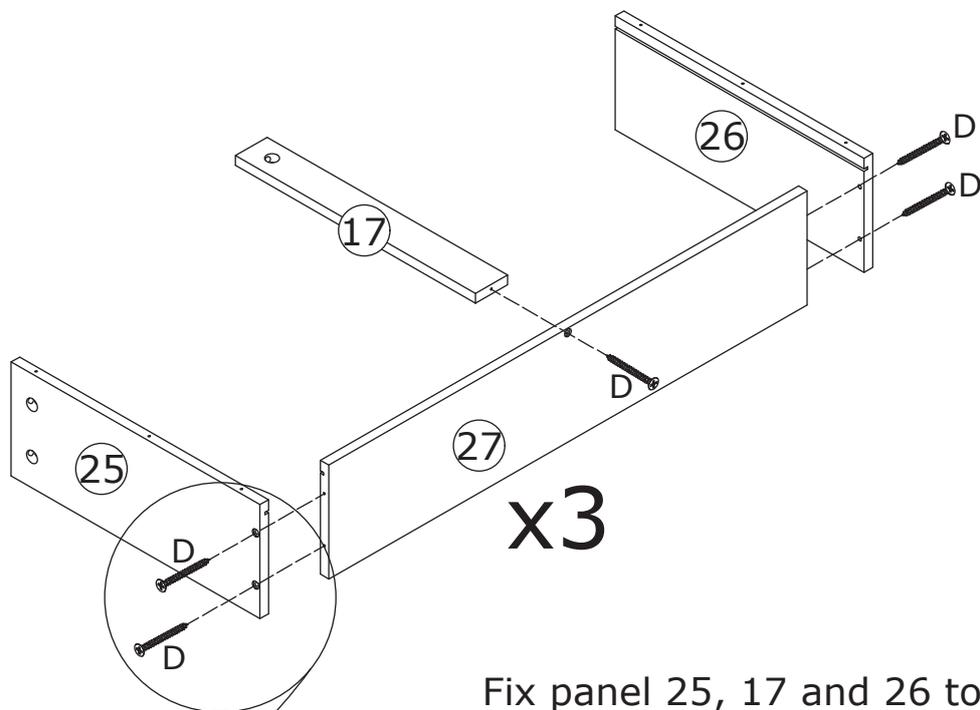



Fix panel 25, 17 and 26 to panel 27 with screw(D) as shown.
Insert panel 28 along available grooves as shown.

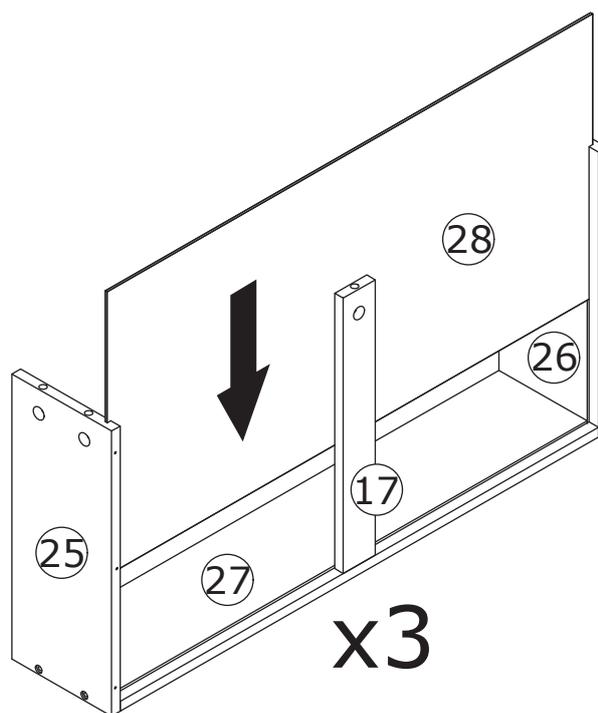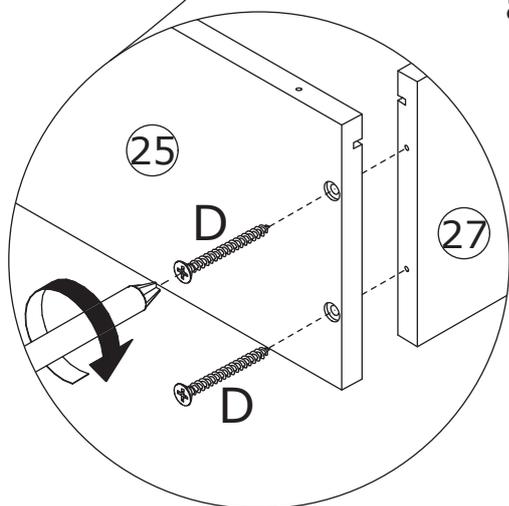

27

 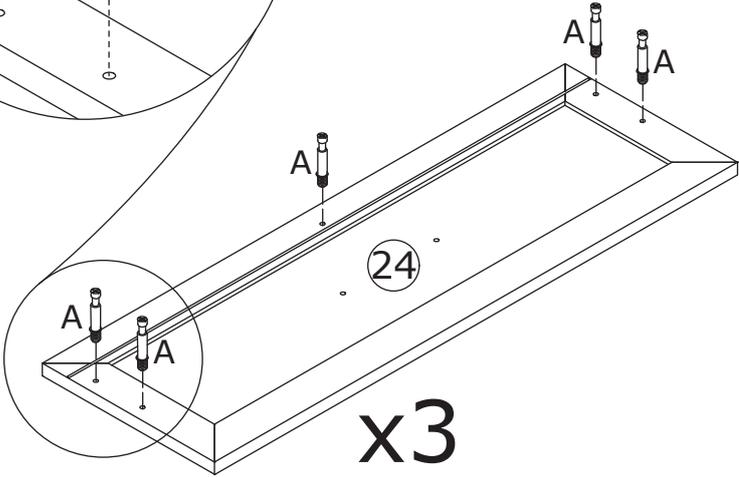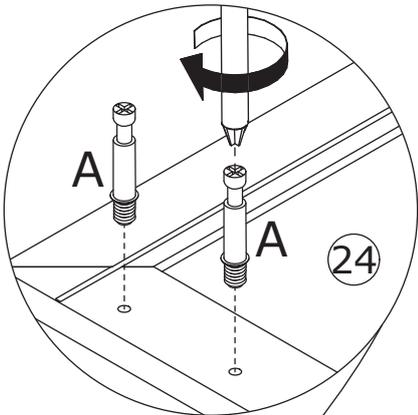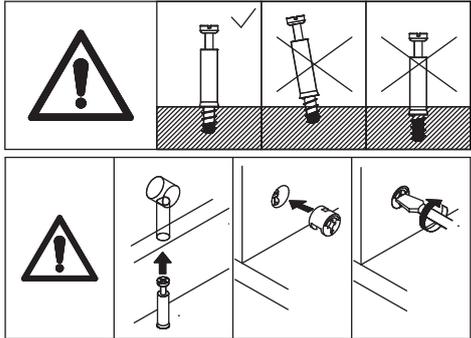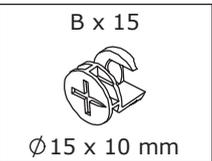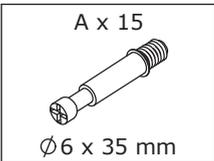


Screw eccentric rod(A) into panel 24 at first.




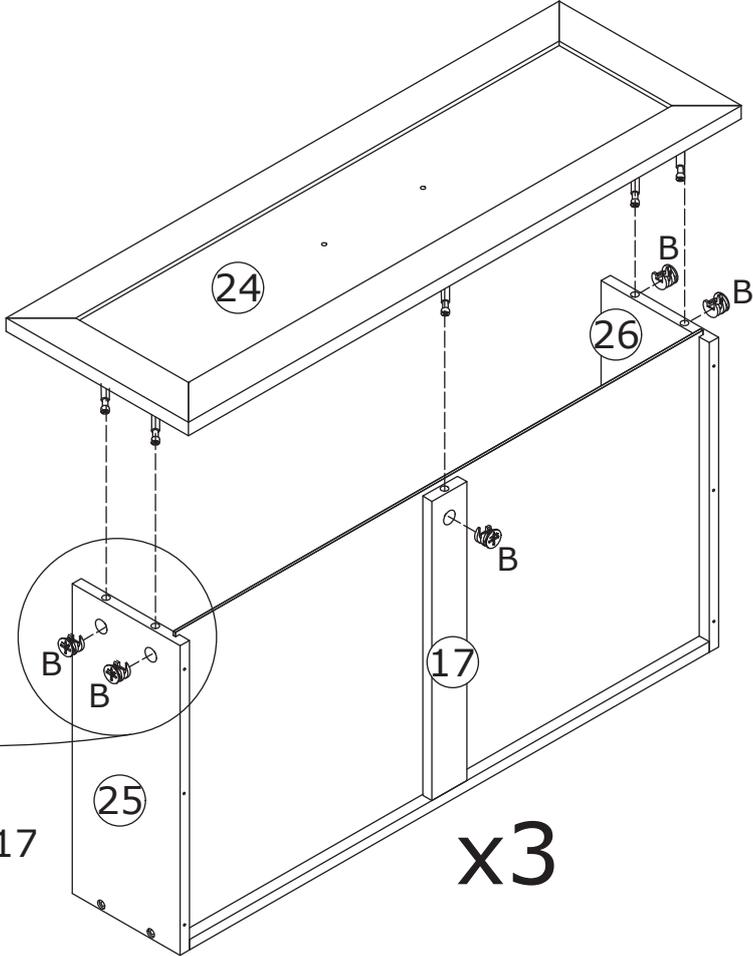
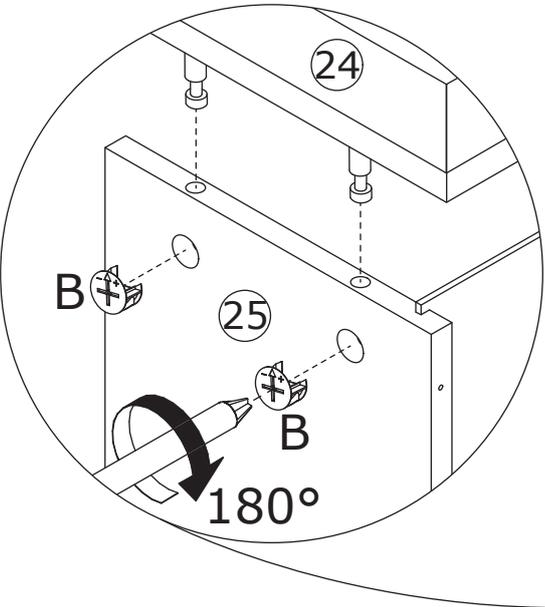


Attach panel 24 to panel 25, 17 and 26, add cam lock(B) into and turn clockwise to tighten as shown.

28






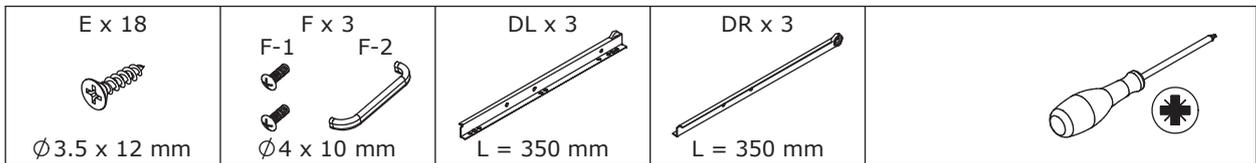


Fix handle(F) as shown.


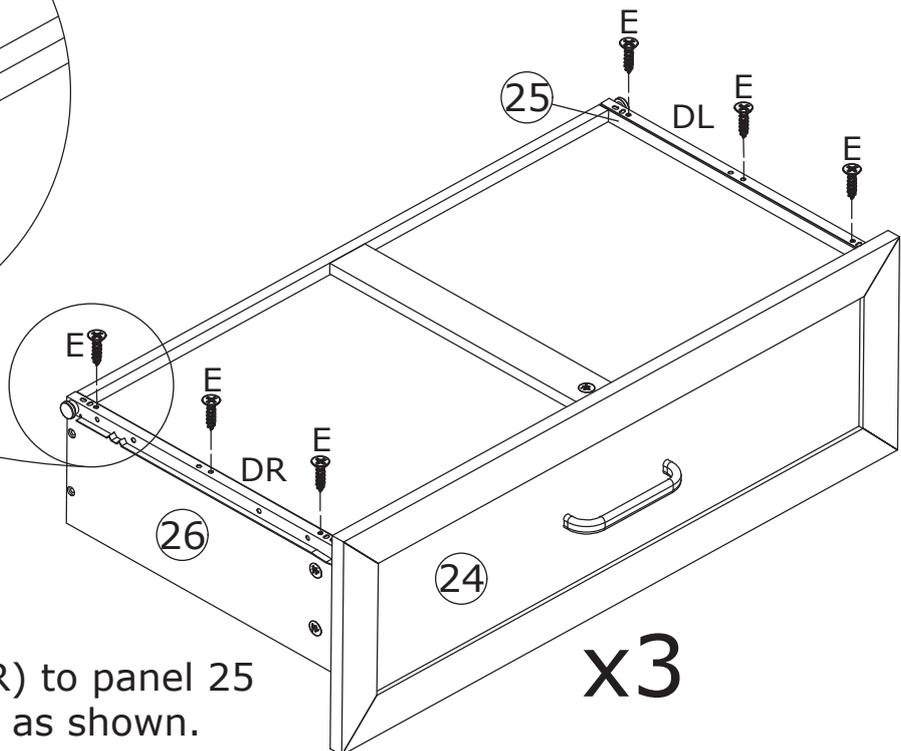
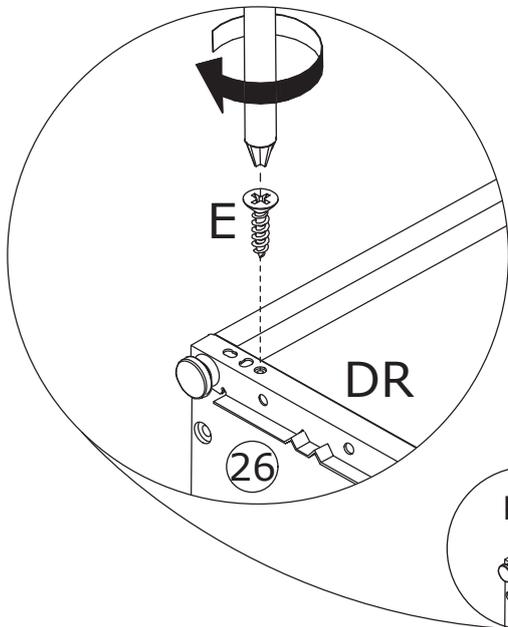
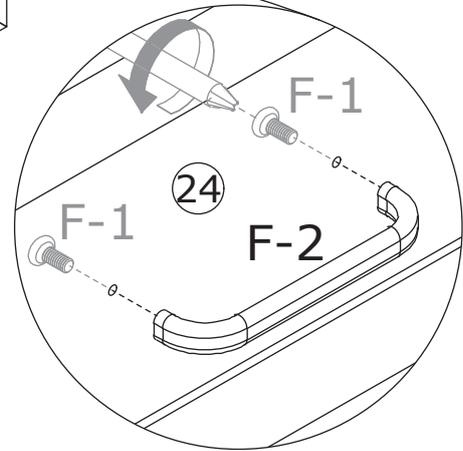
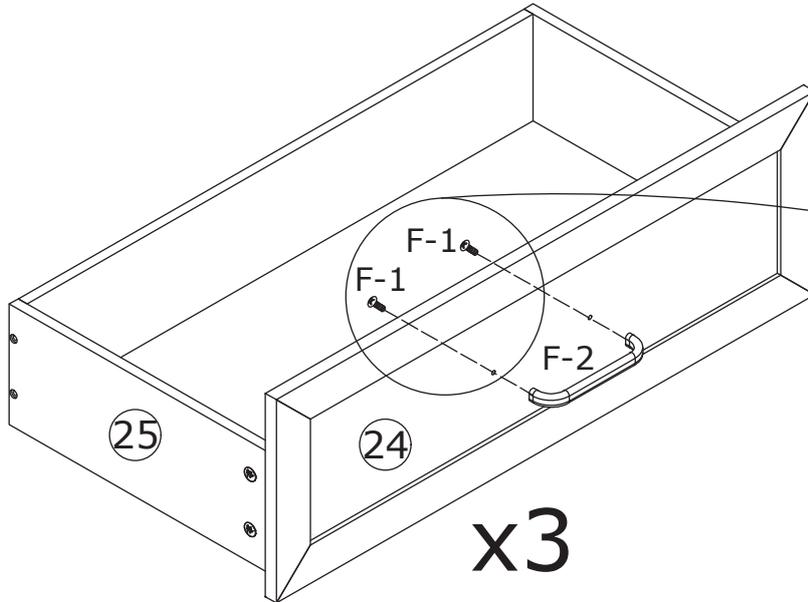
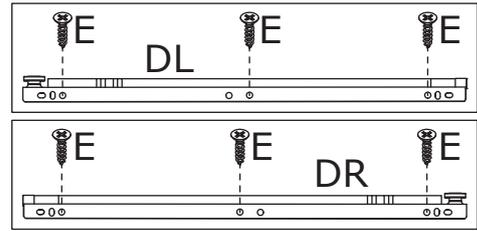


Fix track(DL) and (DR) to panel 25 and 26 with screw(E) as shown.


29

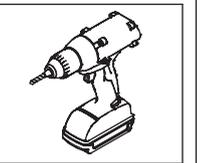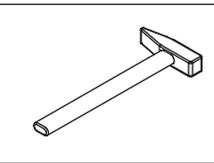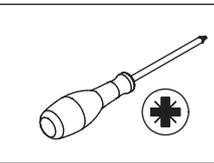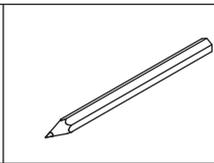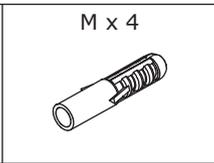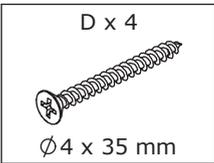


Install anti-tipping device as shown.

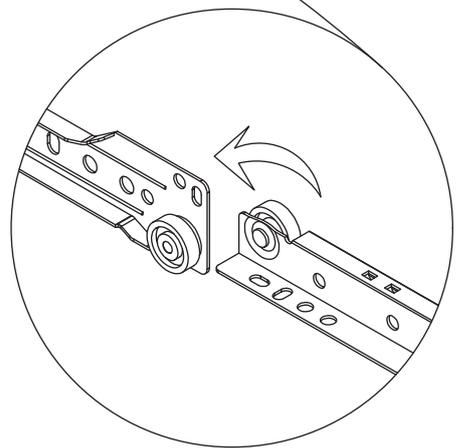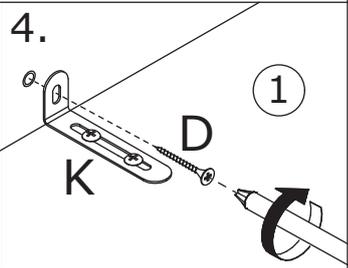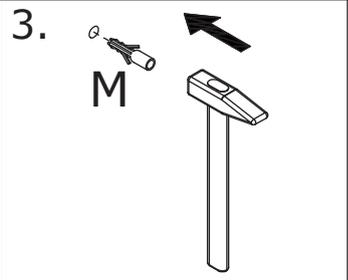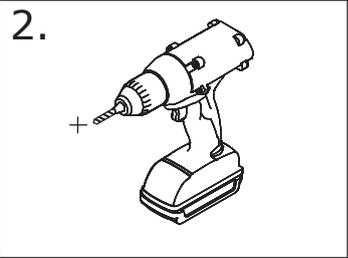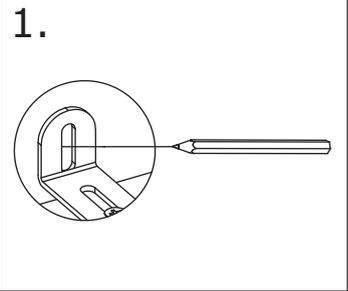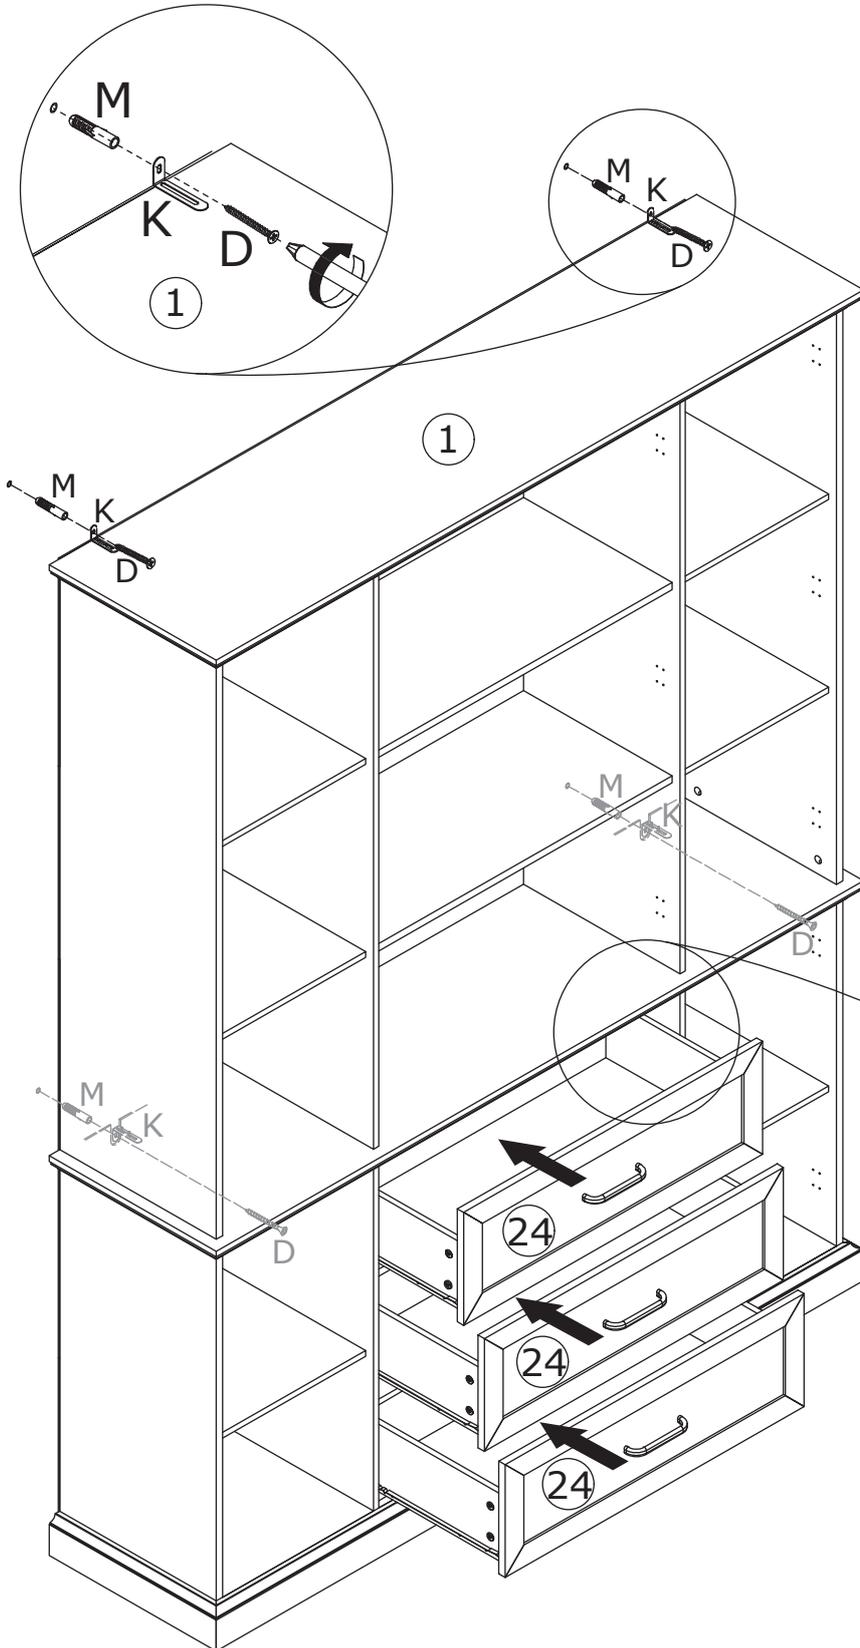


30
 
<p>N x 16</p> 	<p>O x 6</p> <p>O-1</p> <p>O-2</p> <p>∅4 x 20 mm</p>  	<p>P x 32</p>  <p>∅4 x 14 mm</p>	 
---	--	---	---



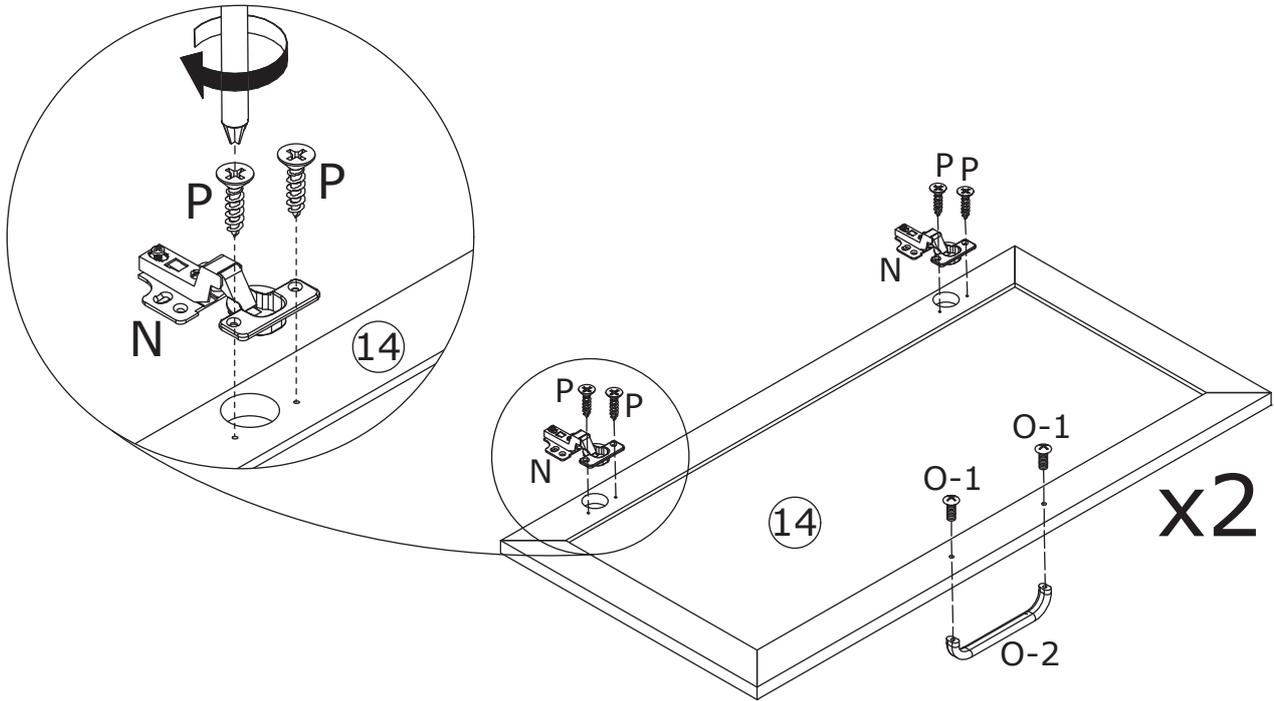


Fix hinge(N) to panel 14 and 16 with screw(P) at first.
Fix handle(O) as shown.

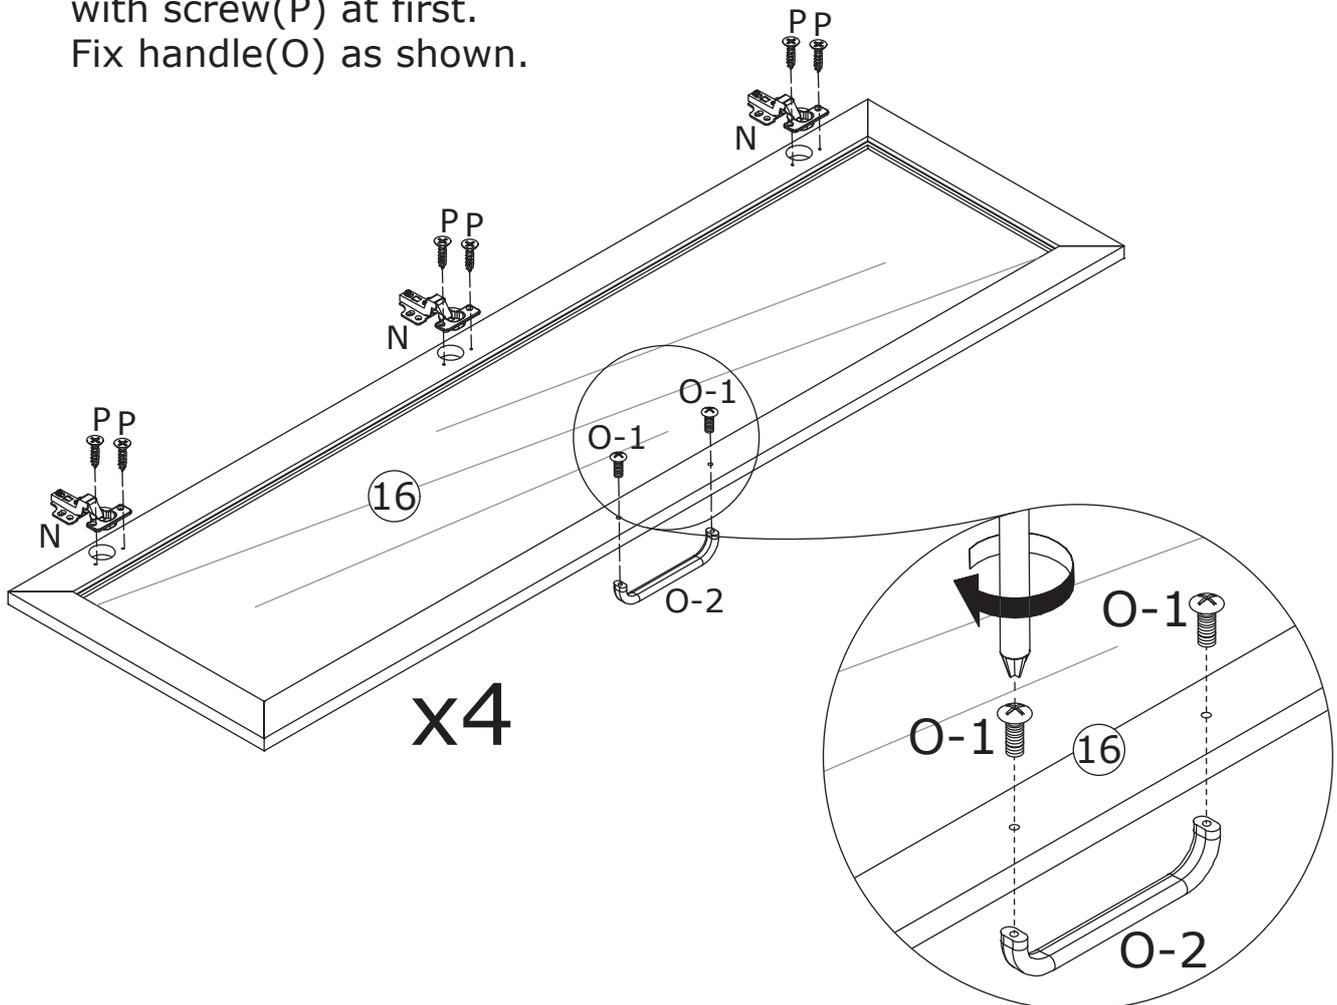

31

 P x 16
Ø 4 x 14 mm

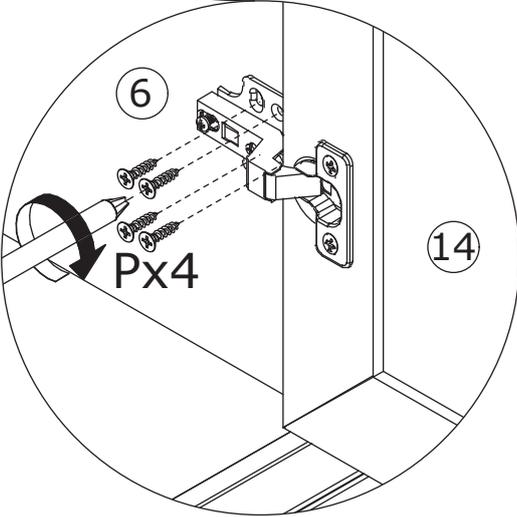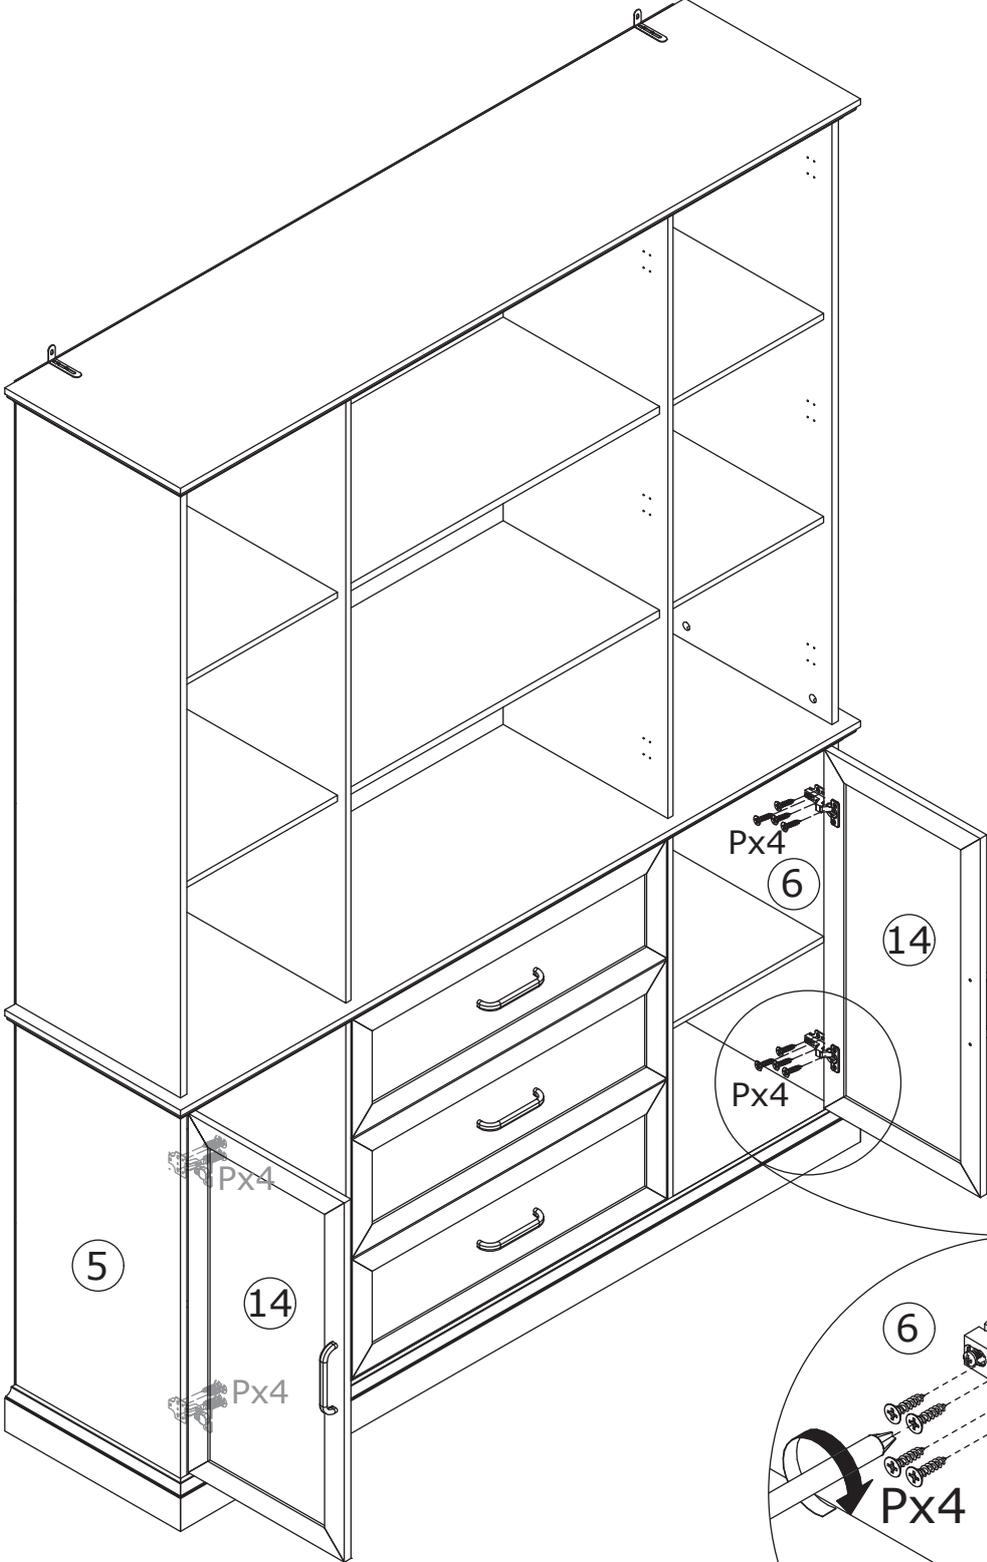



Assemble door panel 14 to lower component by fixing hinge with screw(P) as shown.

32


P x 48




 Ø4 x 14 mm

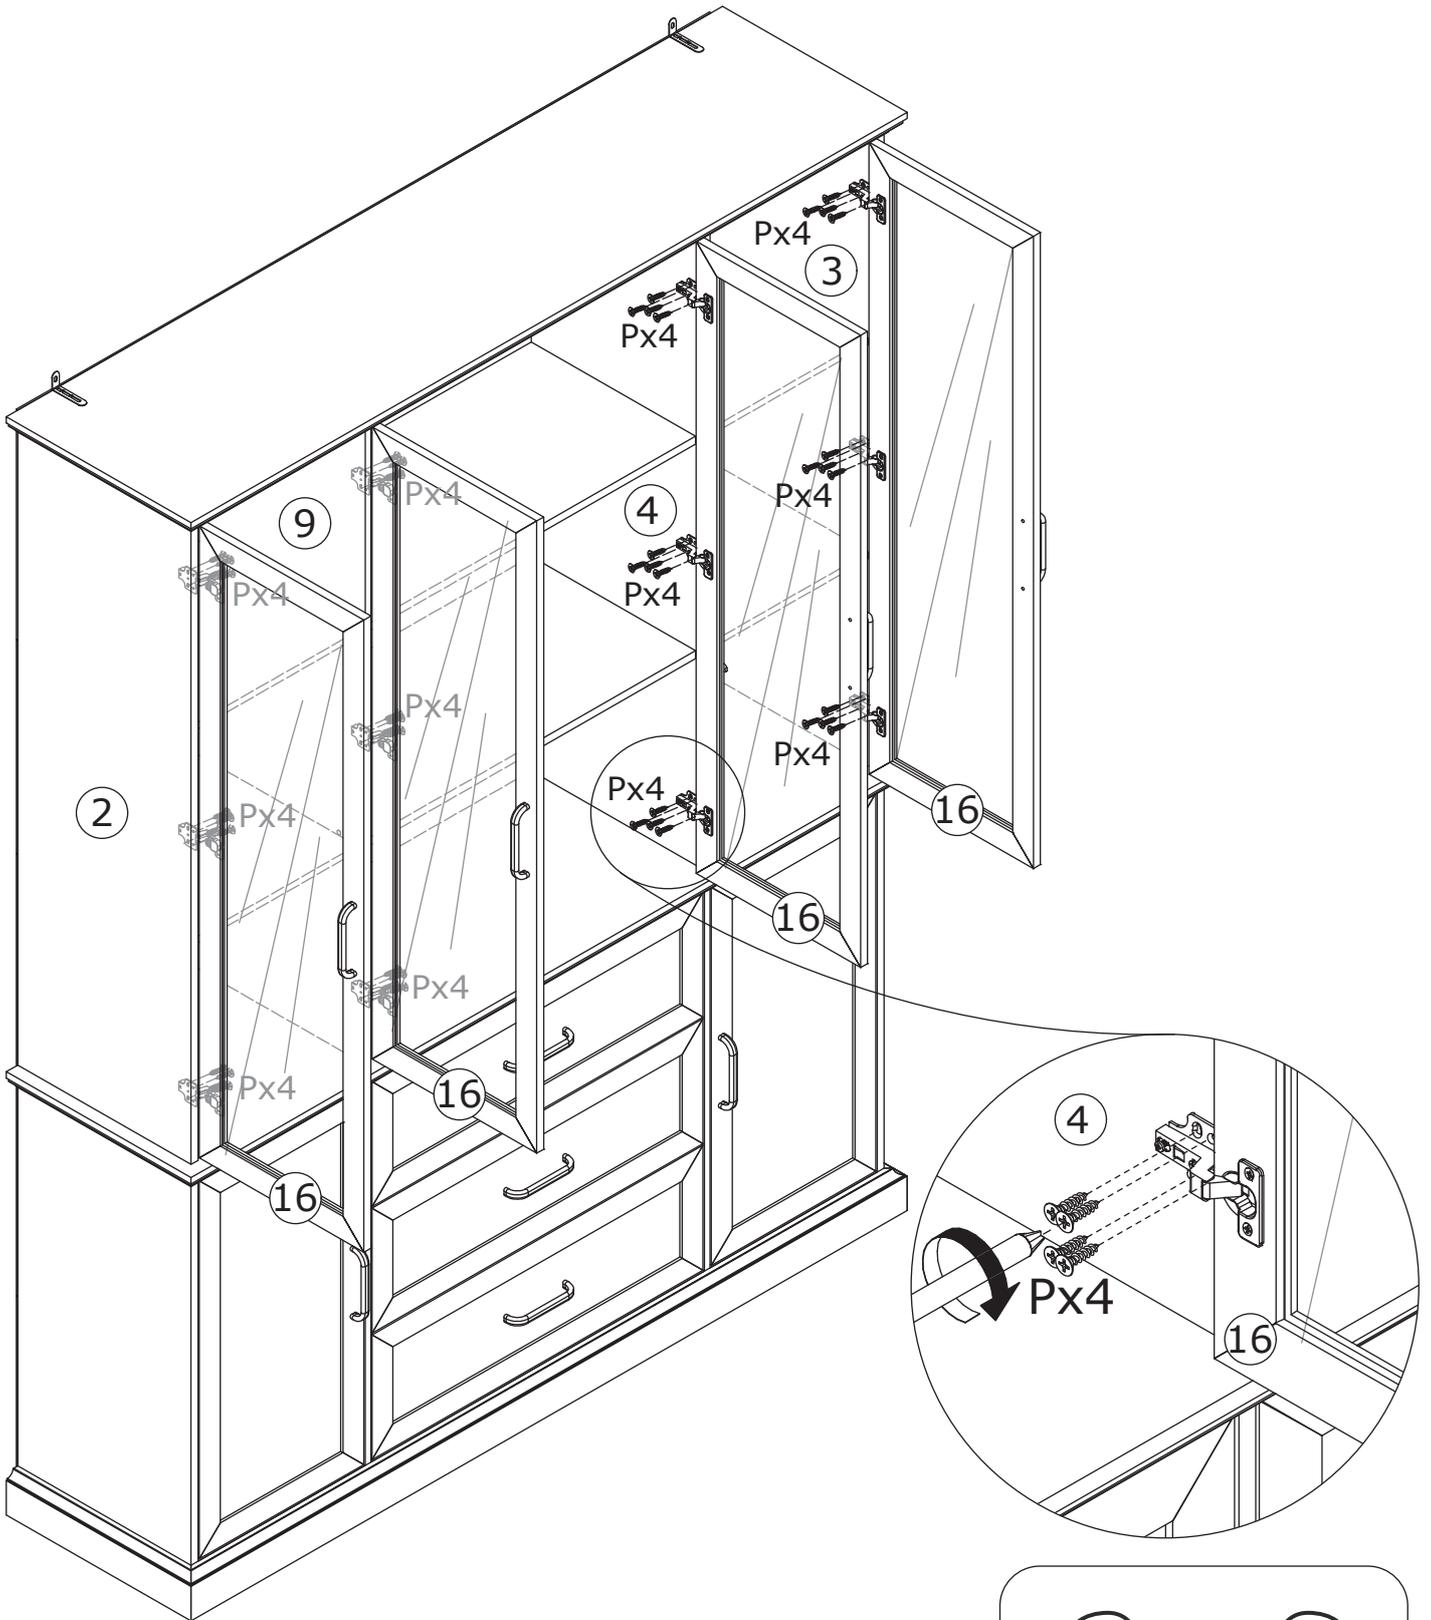


 
Assemble glass door panel 16 to upper component by fixing hinge with screw(P) as shown.

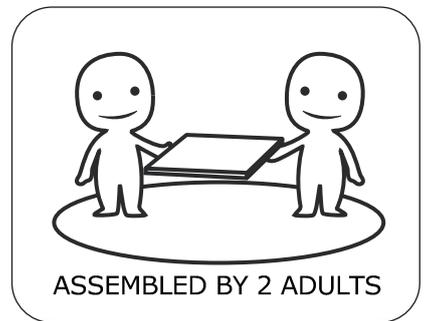




If doors are still not aligned if the hinges are properly correctly, please watch the video.


<https://youtu.be/n0Lb36SoODM>

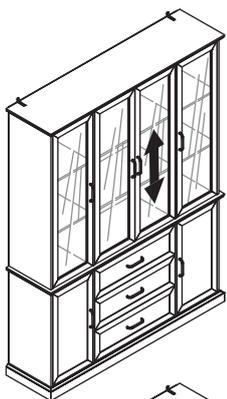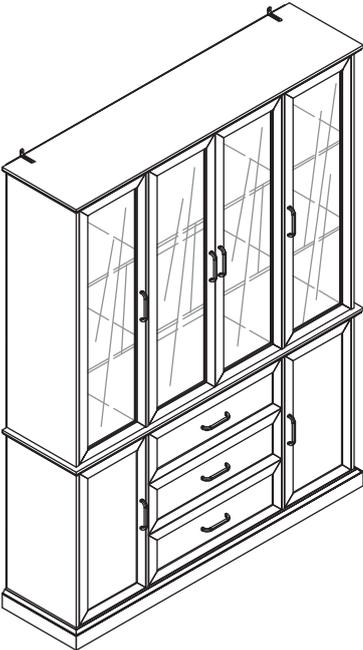



I

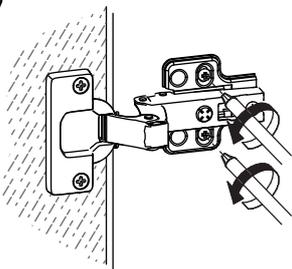


II

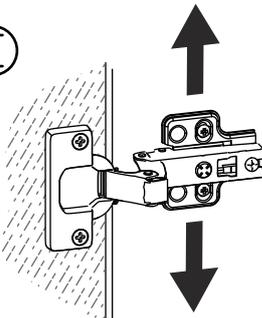


III

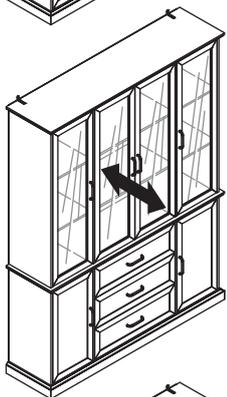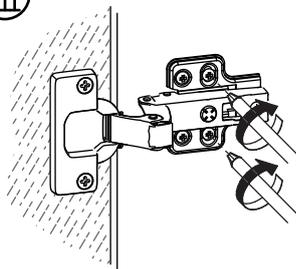



I

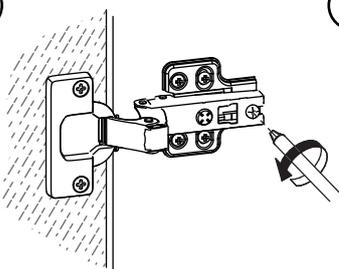


II

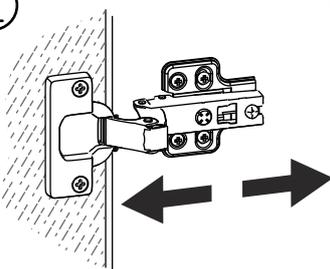


III

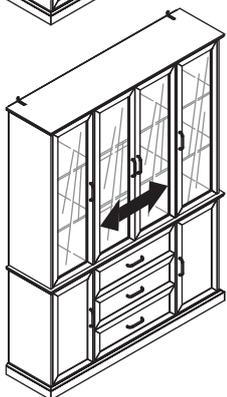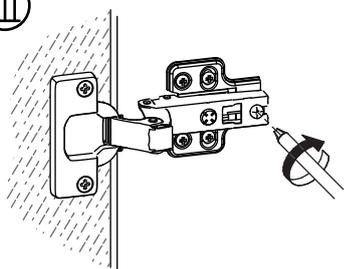

I

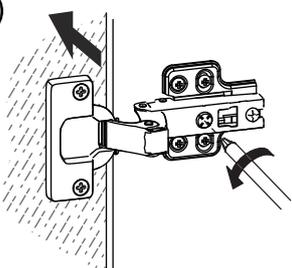

II

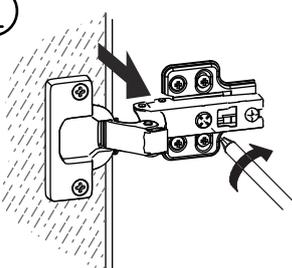

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com




208-820-0068

INSTALLATION


Product Manual

Version: 260145-01-24A-DC

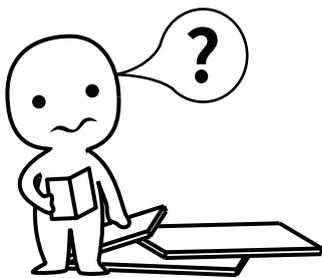


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

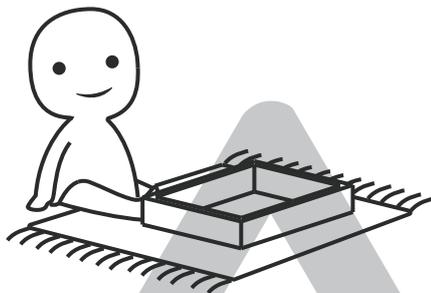


AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

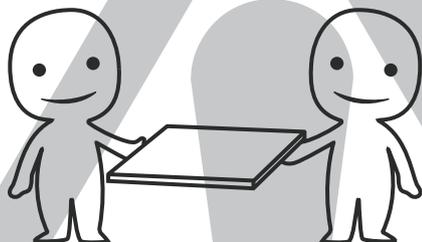

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

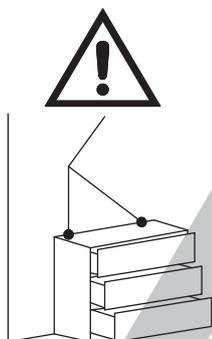

ANTI-TOPPLE WARNING !


Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

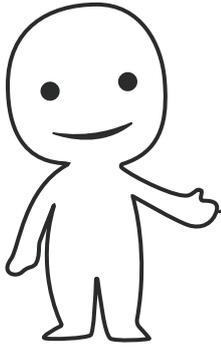


Please prepare the following tools

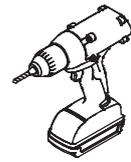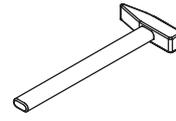 

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 58

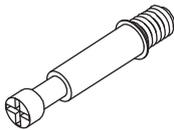

Ø 6 x 35 mm

B x 58




Ø 15 x 10 mm

C x 50



Ø 6 x 30 mm

D x 6

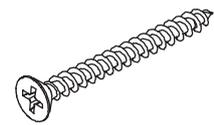


Ø 4 x 35 mm

E x 90




Ø 4 x 14 mm

F x 6

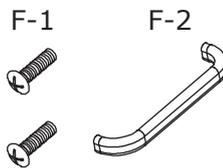


Ø 4 x 20 mm

 G x 9



Ø 4 x 30 mm

 H x 16




J x 44




Ø 2.5 x 12 mm

K x 4

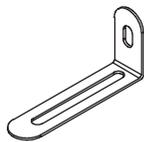

L x 8

 



Ø 4 x 12 mm

M x 4



N x 15

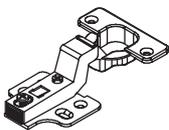

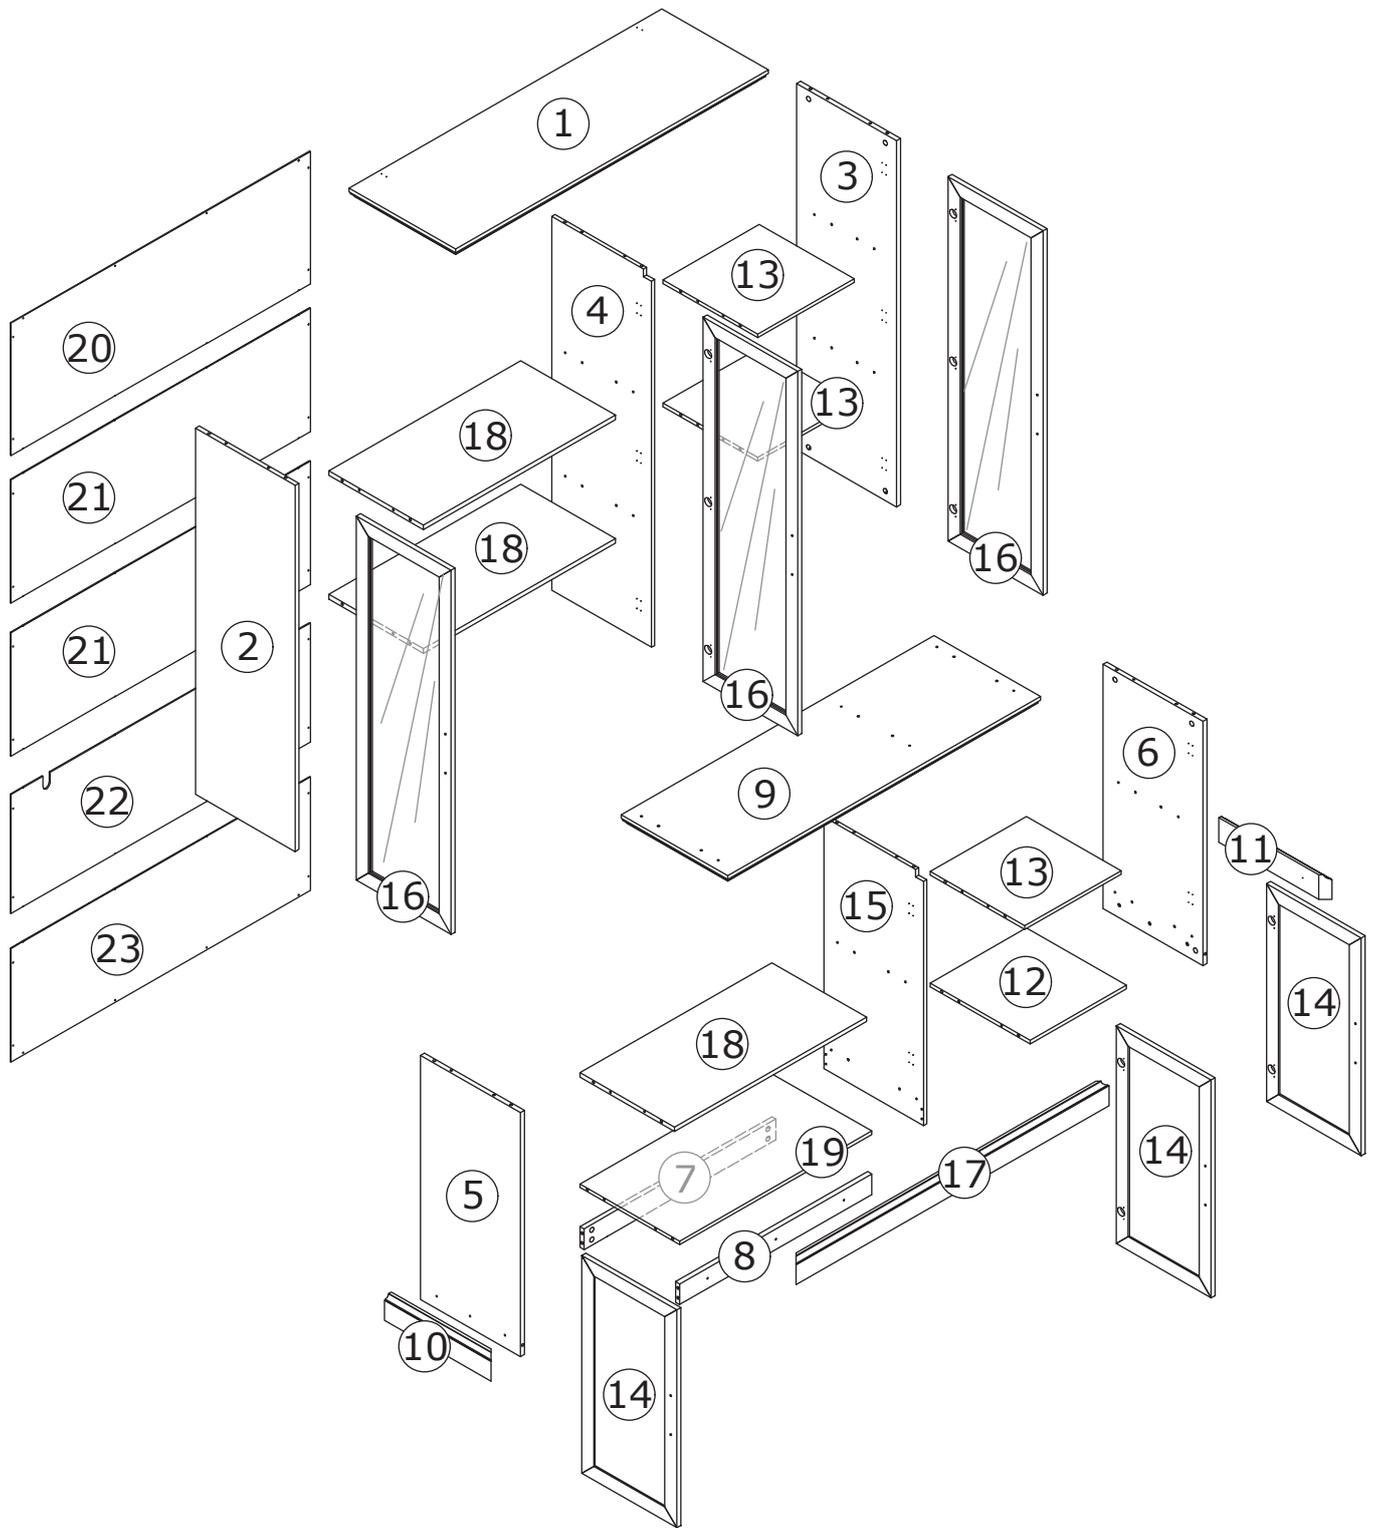

⚠ WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover:



- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.




*This is a permanent label.
Do not remove!*

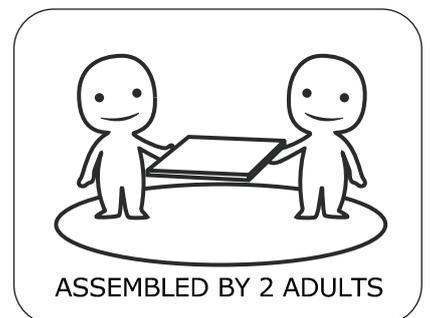




1

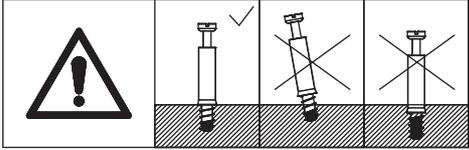 



Screw eccentric rod(A) into panel 5, 6, 15 and 17 at first.

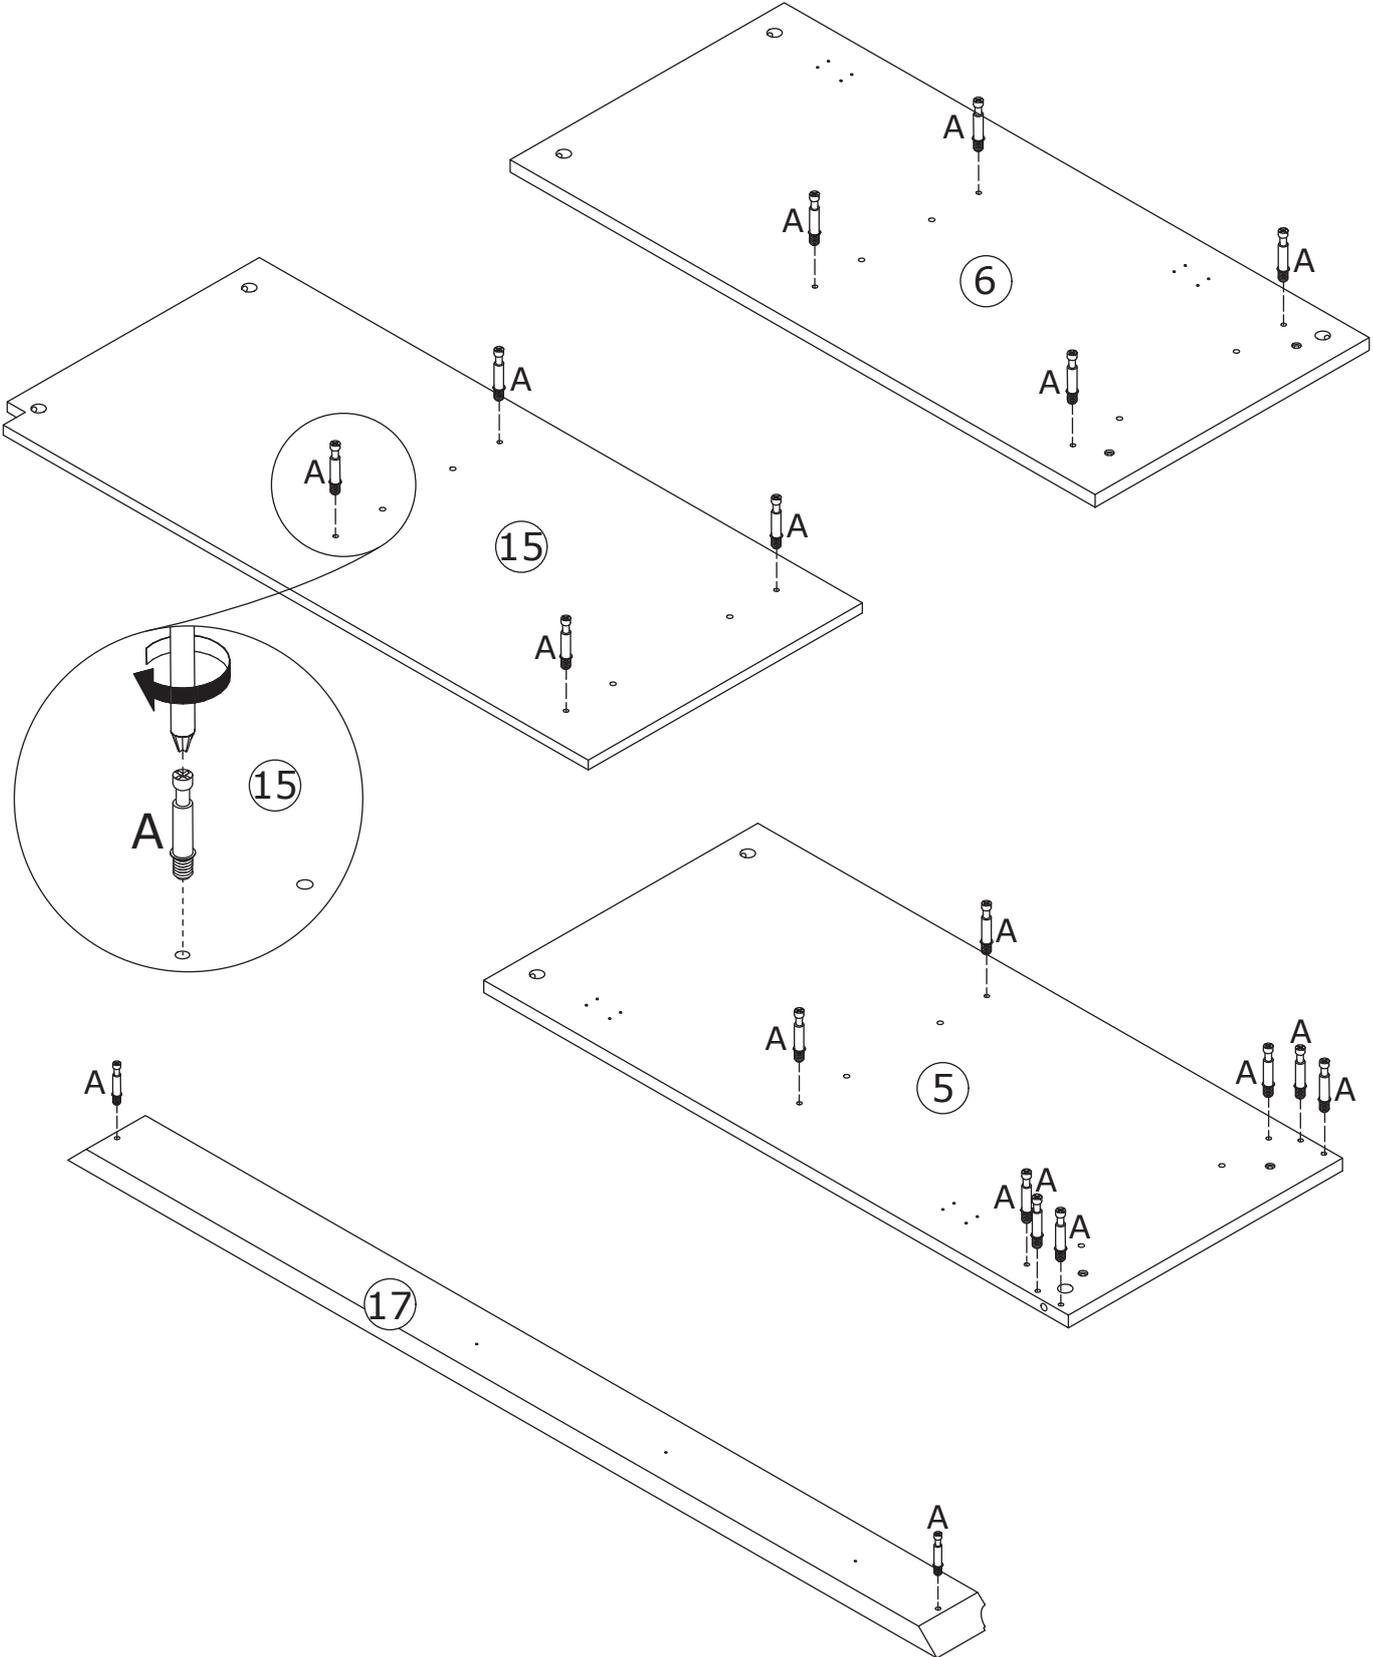



2

 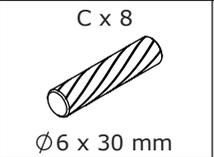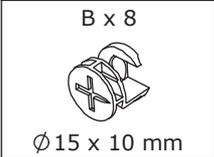


Connect panel 15 and 6 to panel 12 and 13 using wooden dowel(C), add cam lock(B) into panel 12,13 and turn clockwise to tighten as shown.

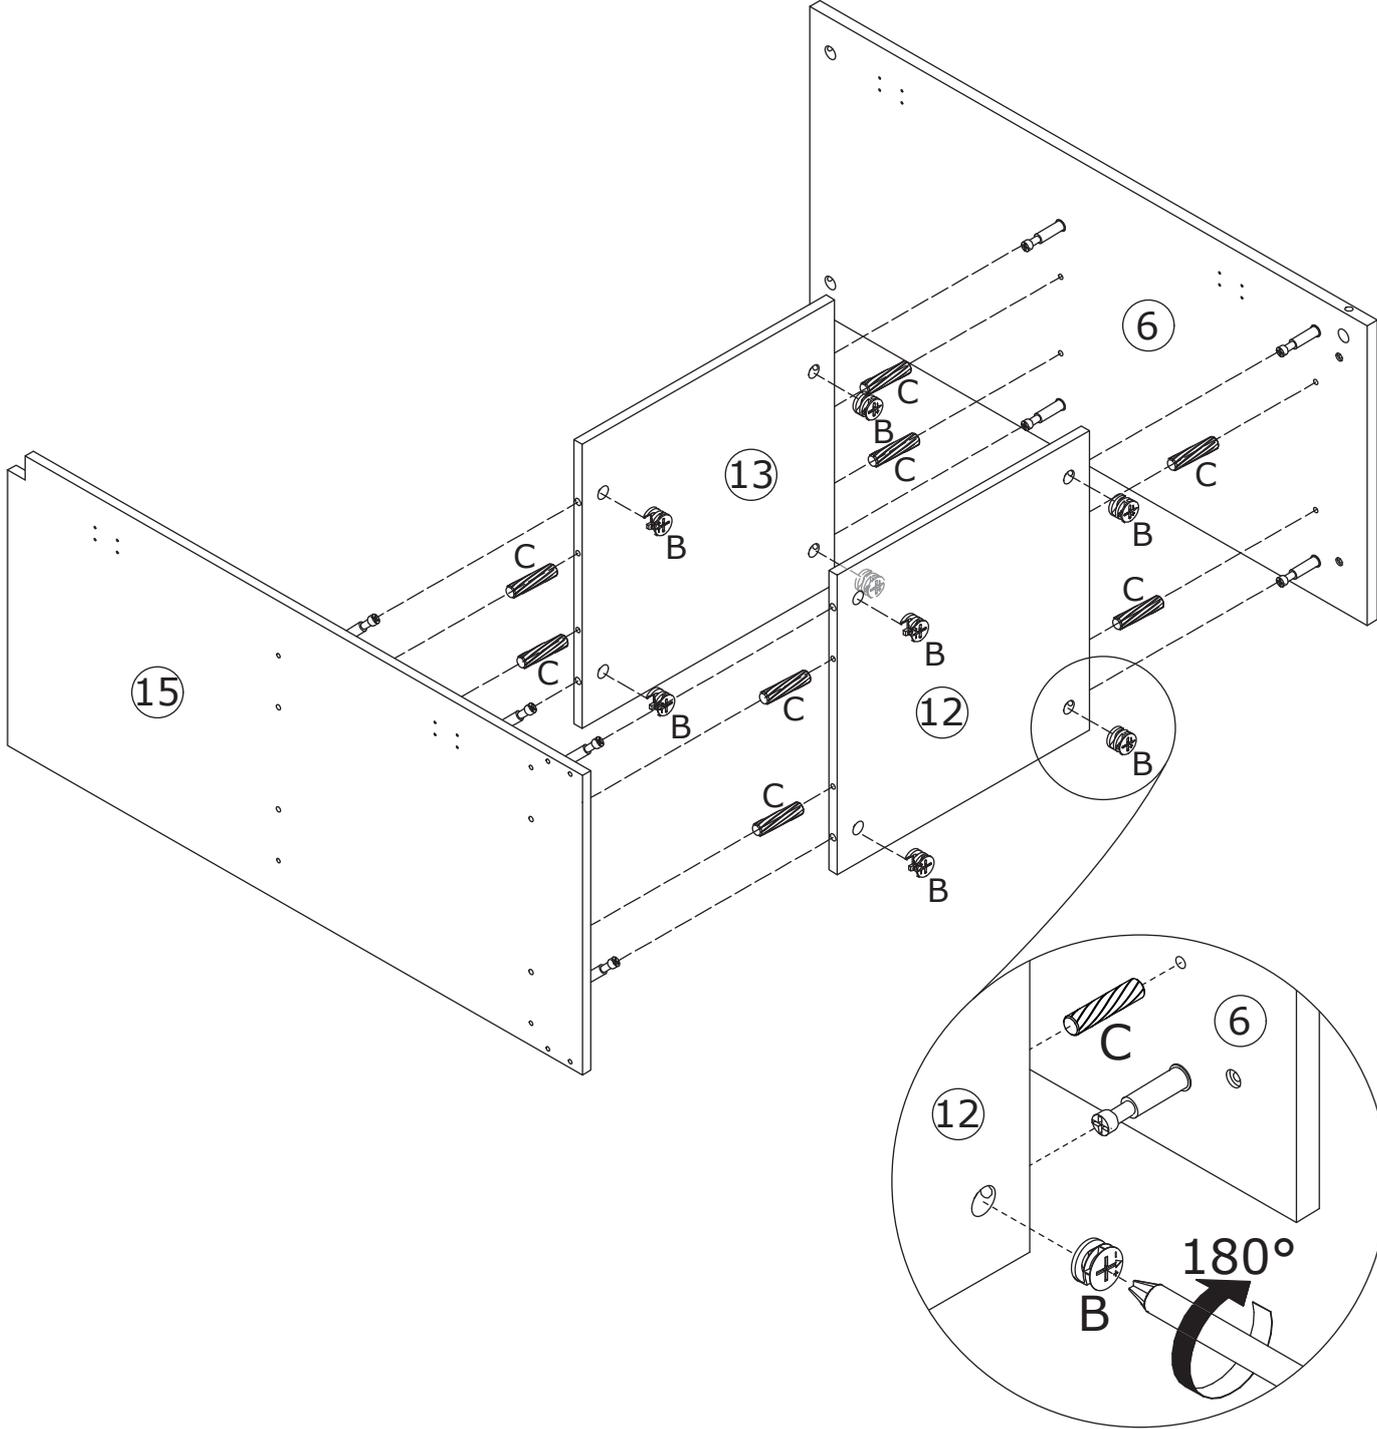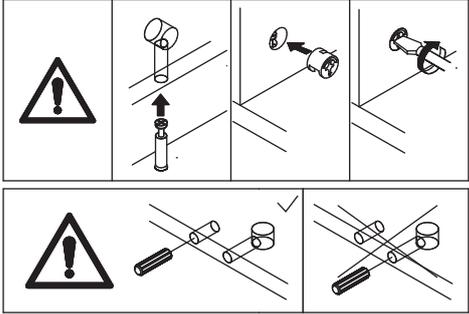

3

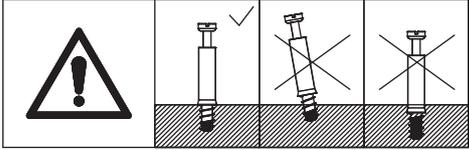 

Screw eccentric rod(A) into panel 15 at first.

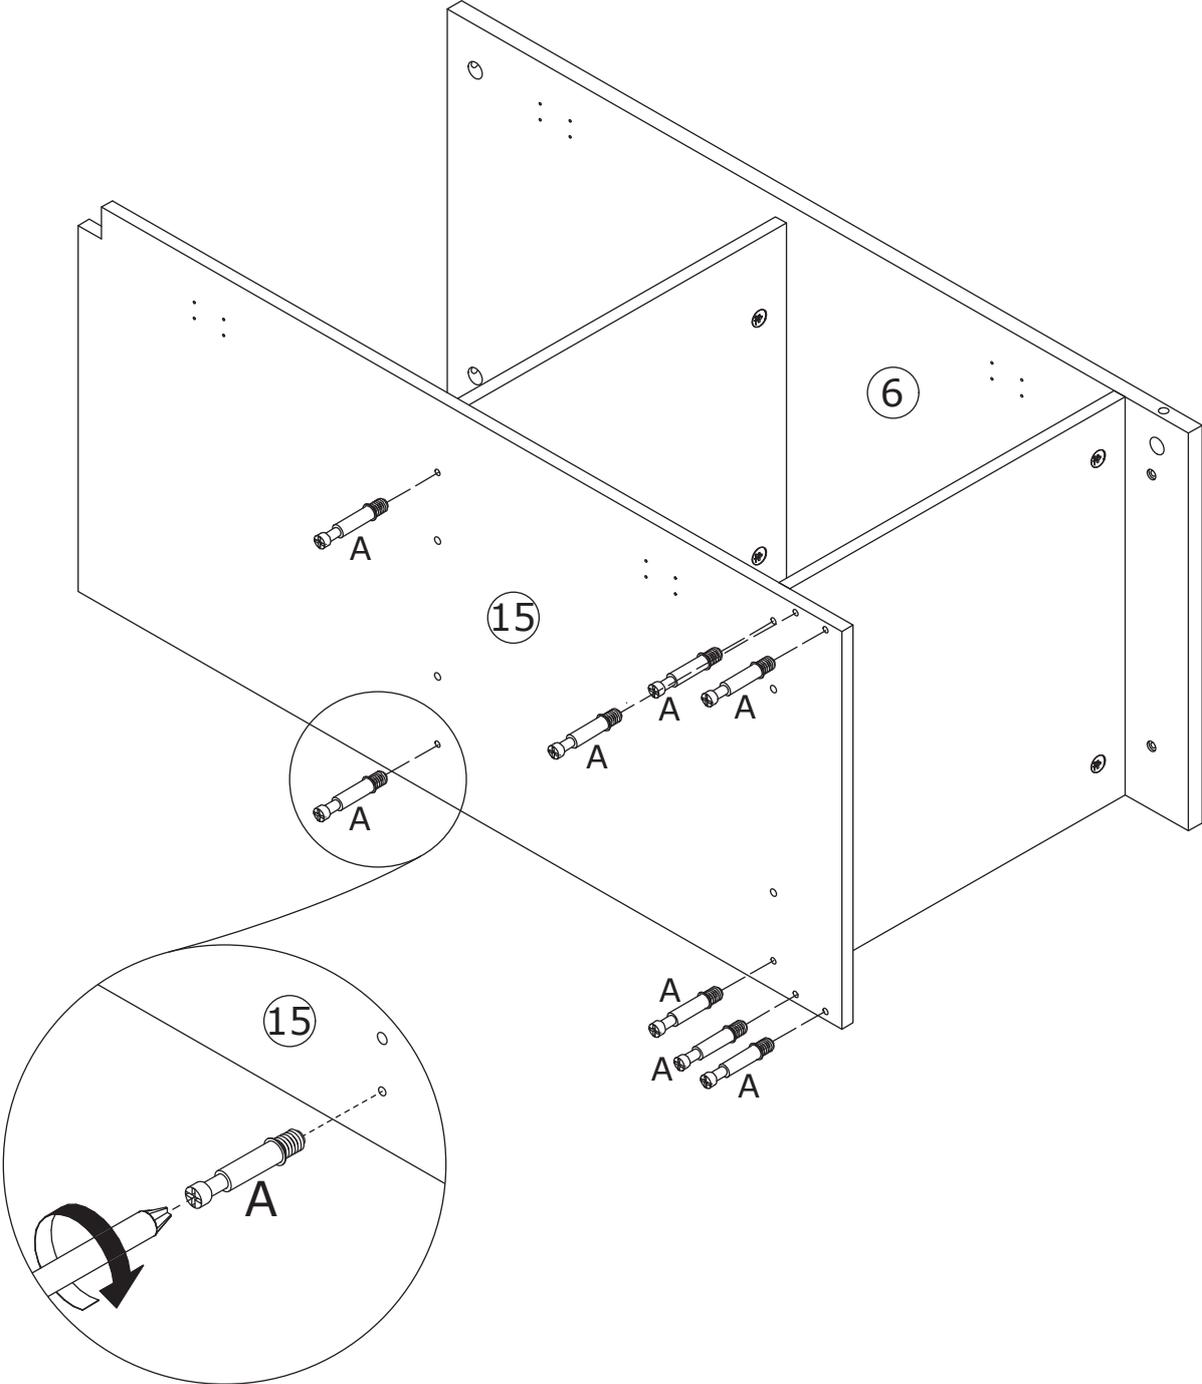


4

B x 6









Ø 15 x 10 mm

 C x 8





Ø 6 x 30 mm

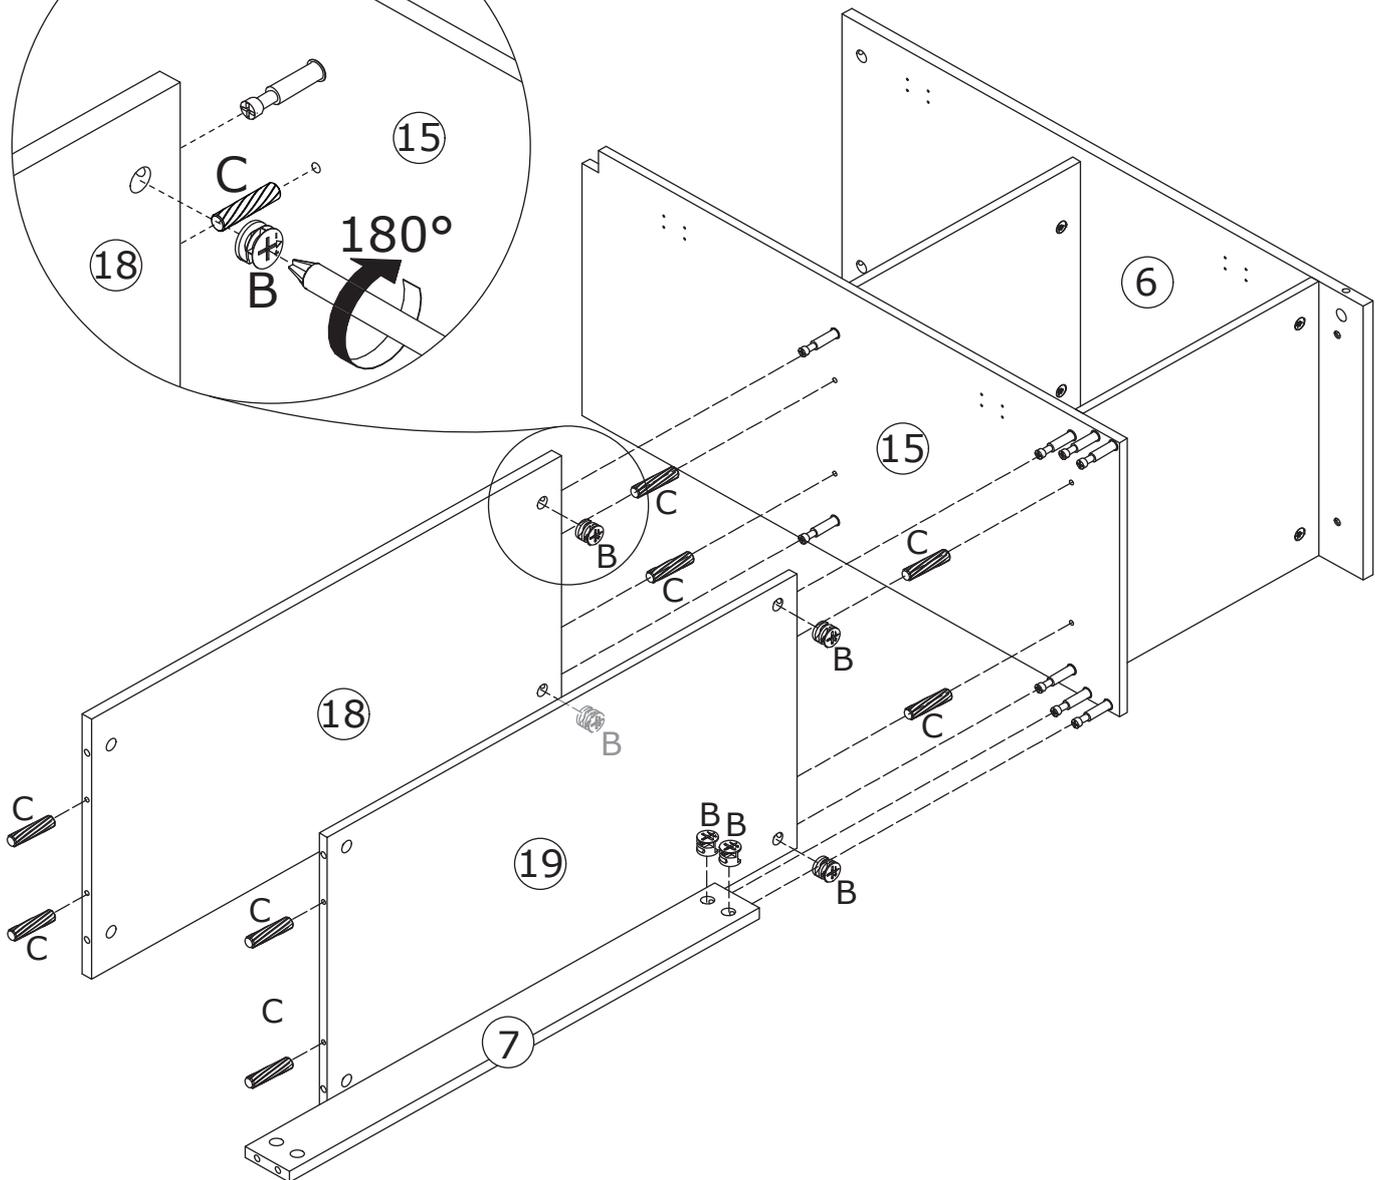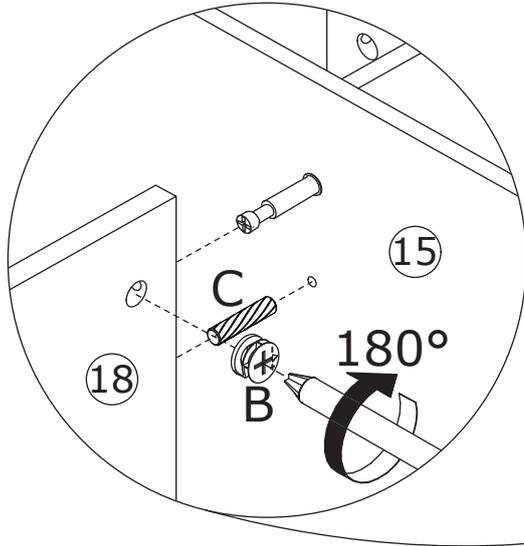    



Insert wooden dowel(C) into panel 18 and 19 at first.
 Attach panel 18, 19 and 7 to panel 15, add cam lock(B)
 into panel 18,19,7 and turn clockwise to tighten as shown.

5

 B x 10
Ø 15 x 10 mm

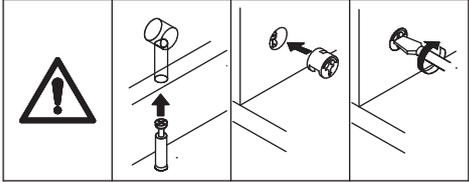


Connect panel 5 and 8 to panel 18, 19 and 7, add cam lock(B) into panel 18,19,7,8 and turn clockwise to tighten as shown.

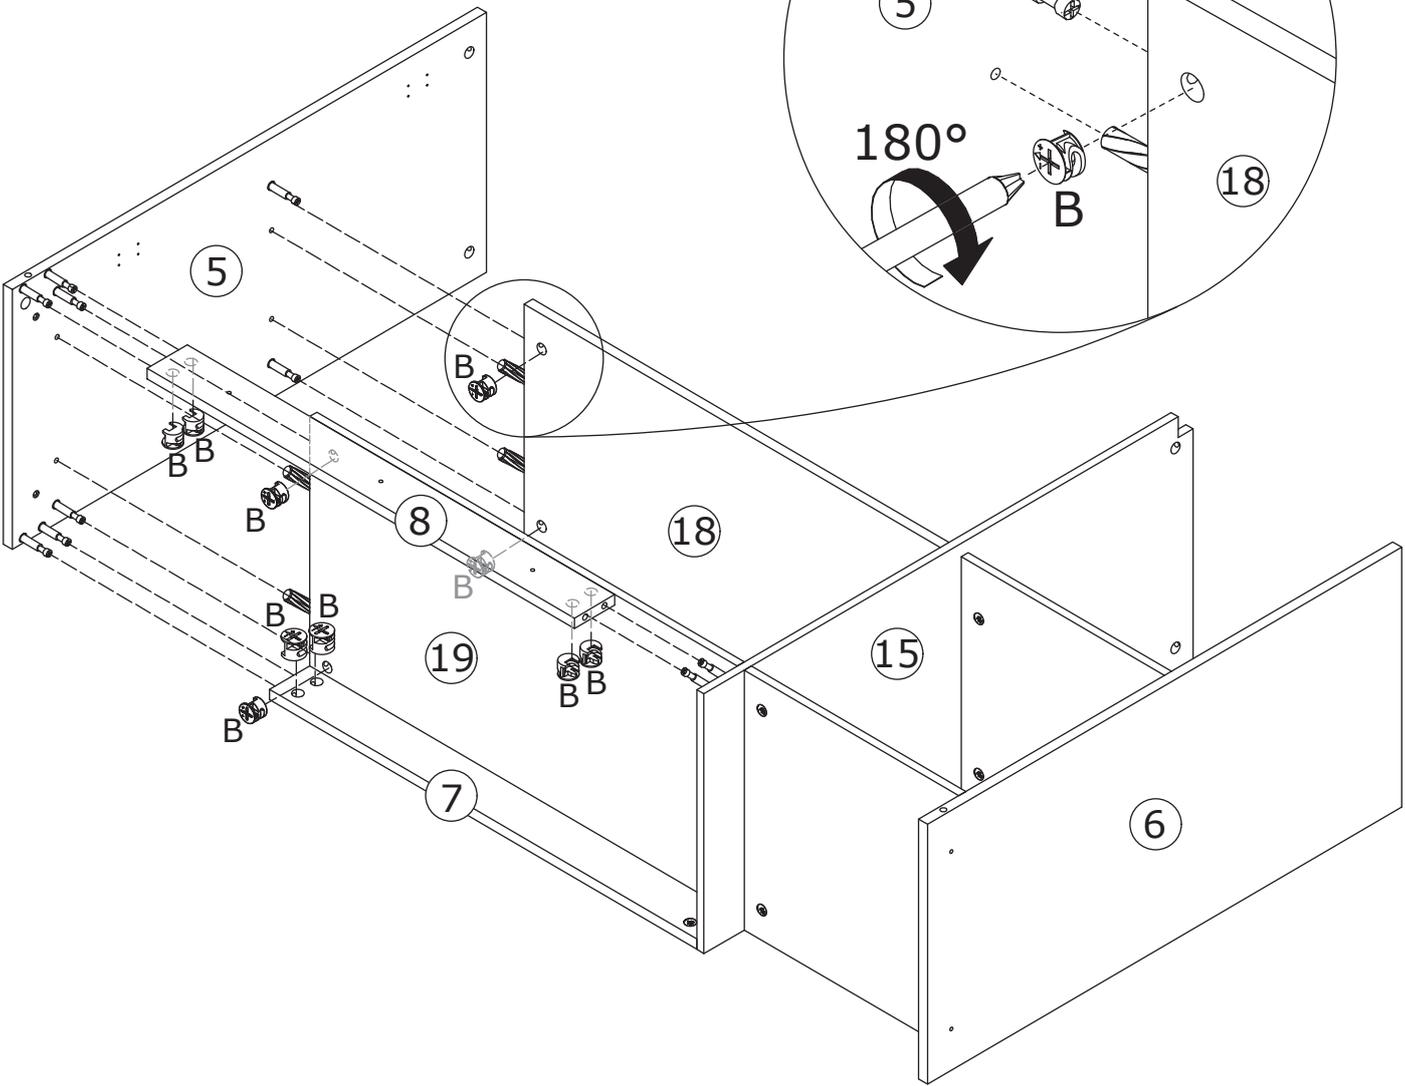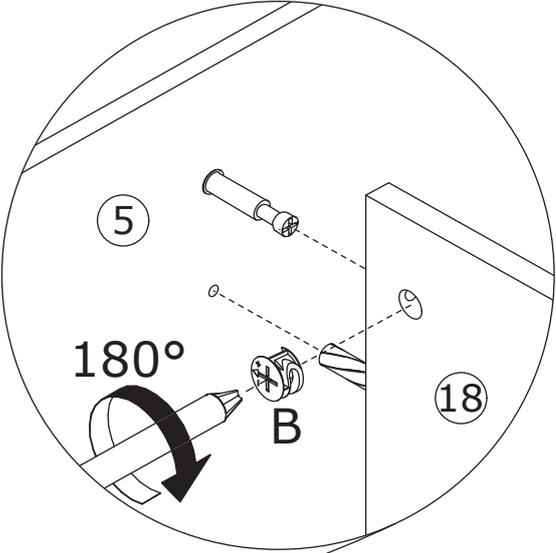


6





 
G x 6
Ø4 x 30 mm





Fix panel 10 and 11 to panel 5 and 6 with screw(G) as shown.

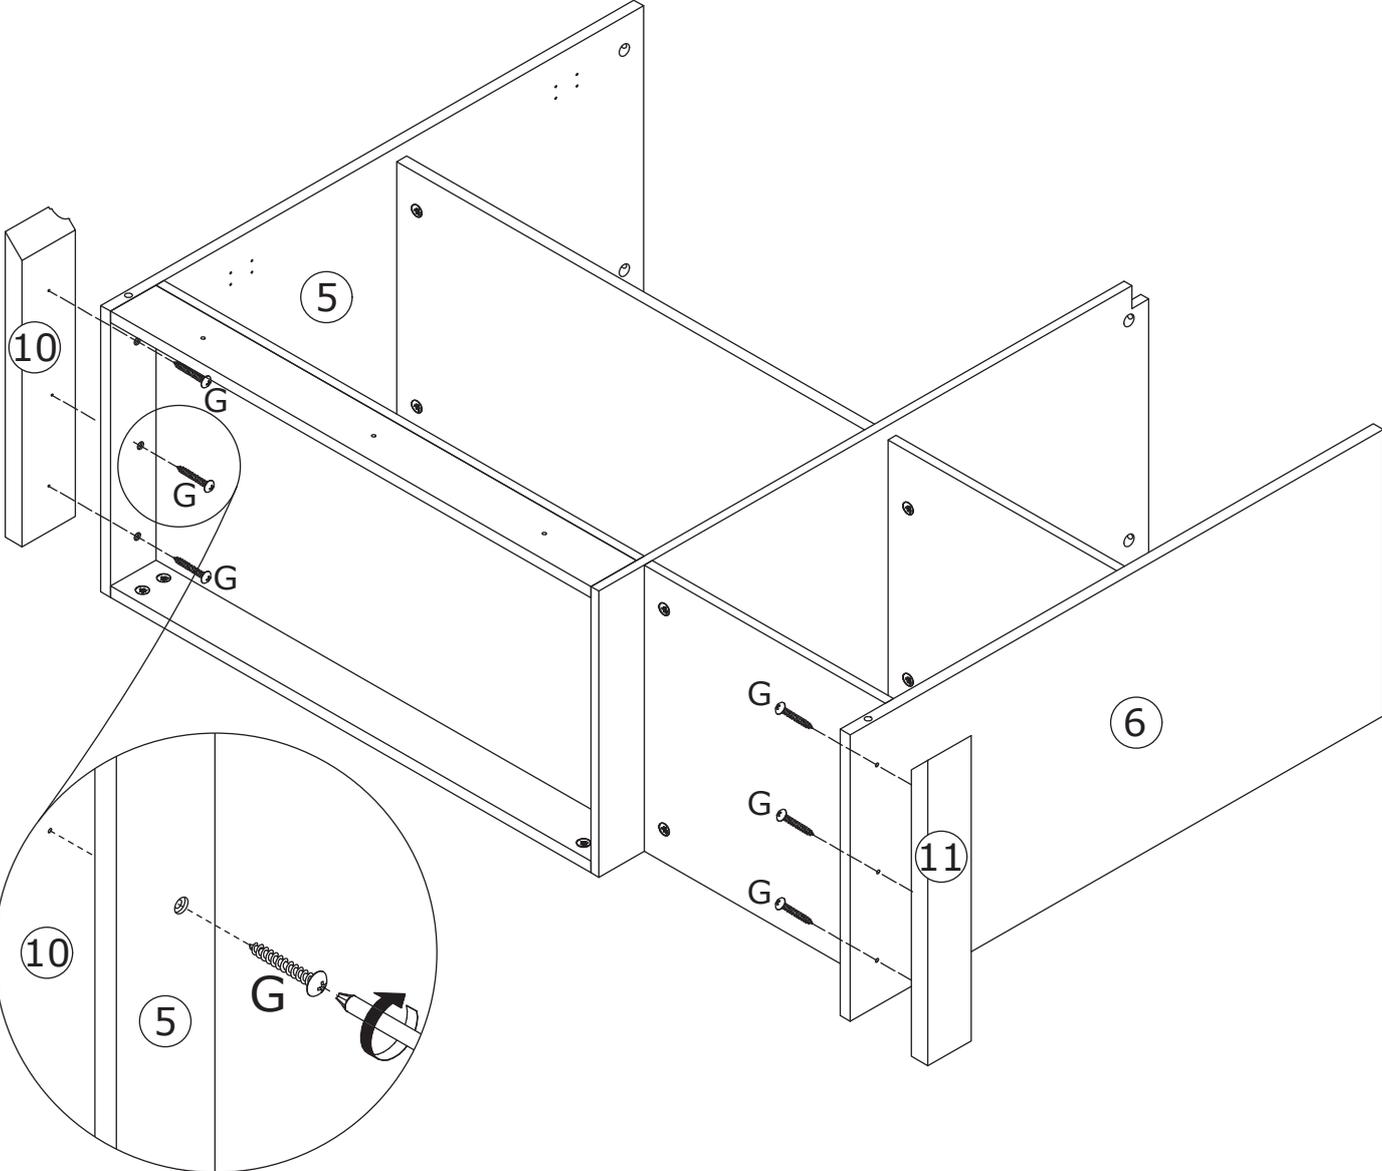

7

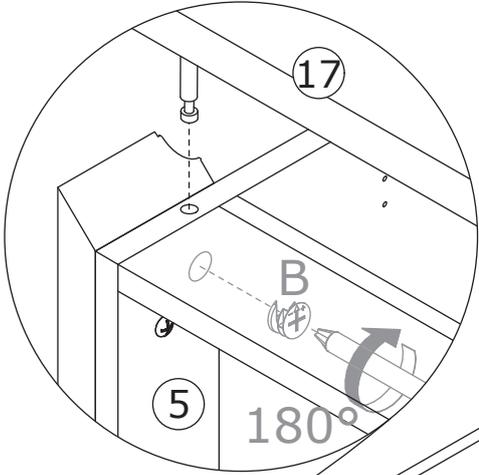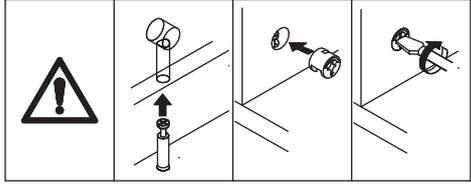 
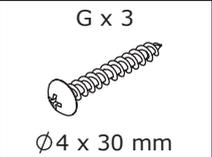
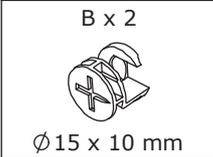


Attach panel 17 to panel 5 and 6, add cam lock(B) into and turn clockwise to tighten as shown.
Fix panel 17 to panel 8 with screw(G) as shown.

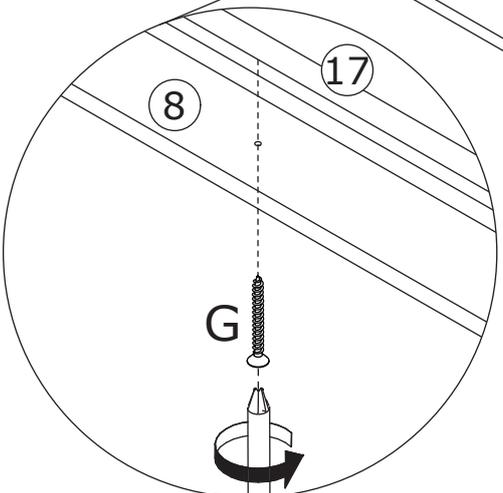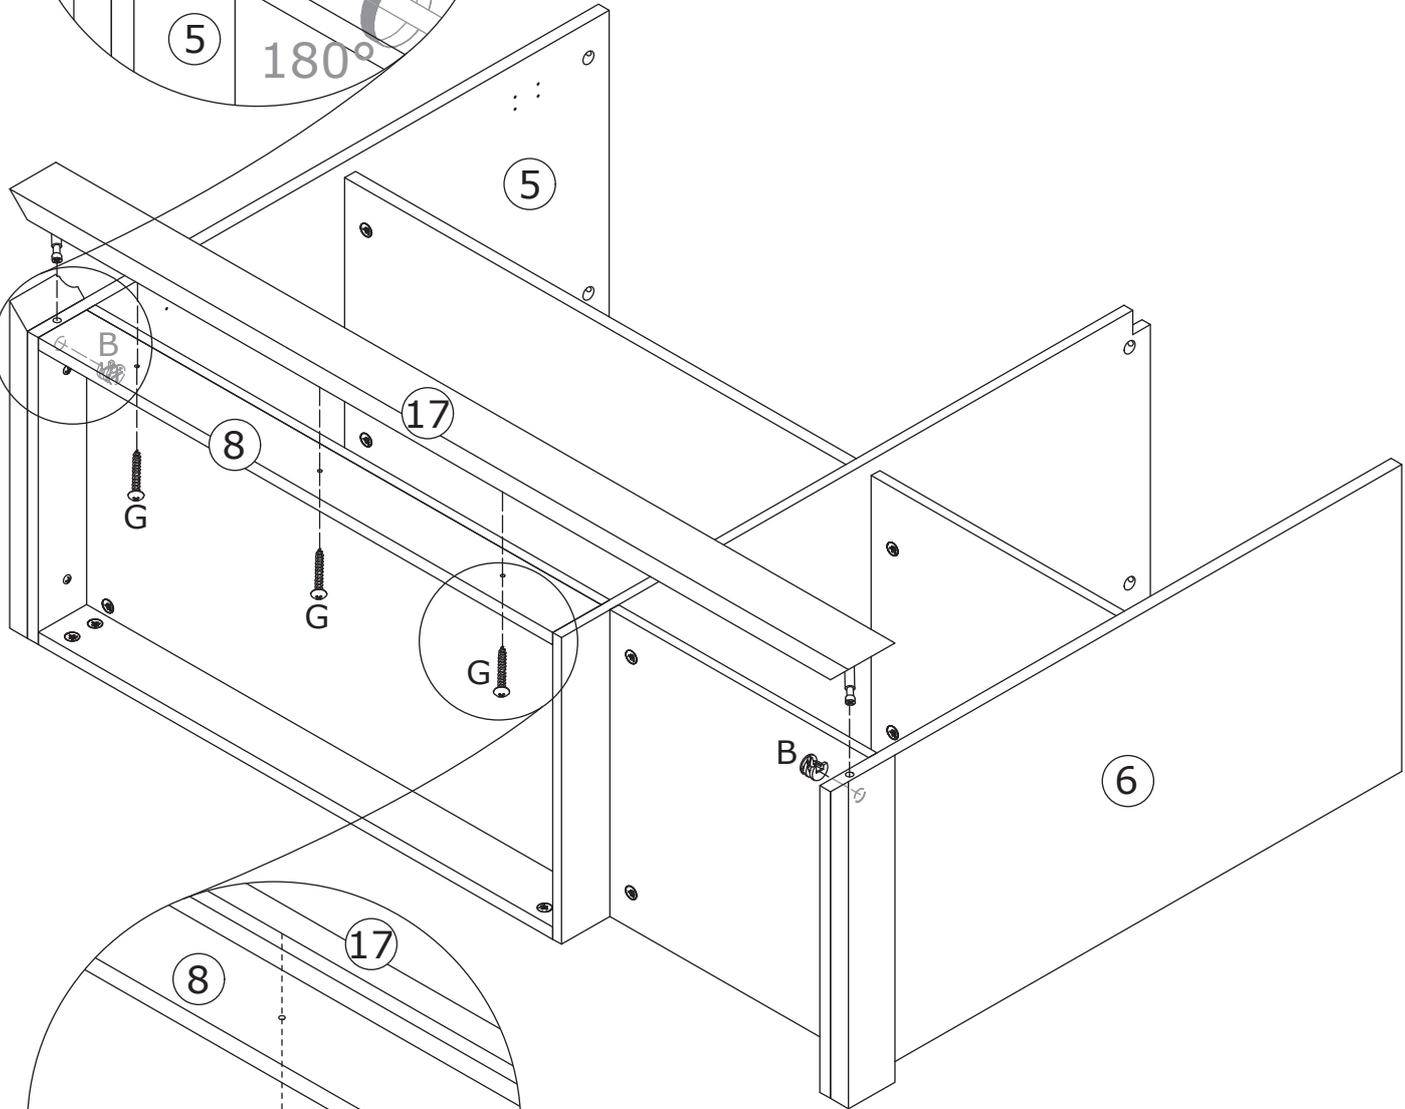




8

 A x 12
Ø6 x 35 mm

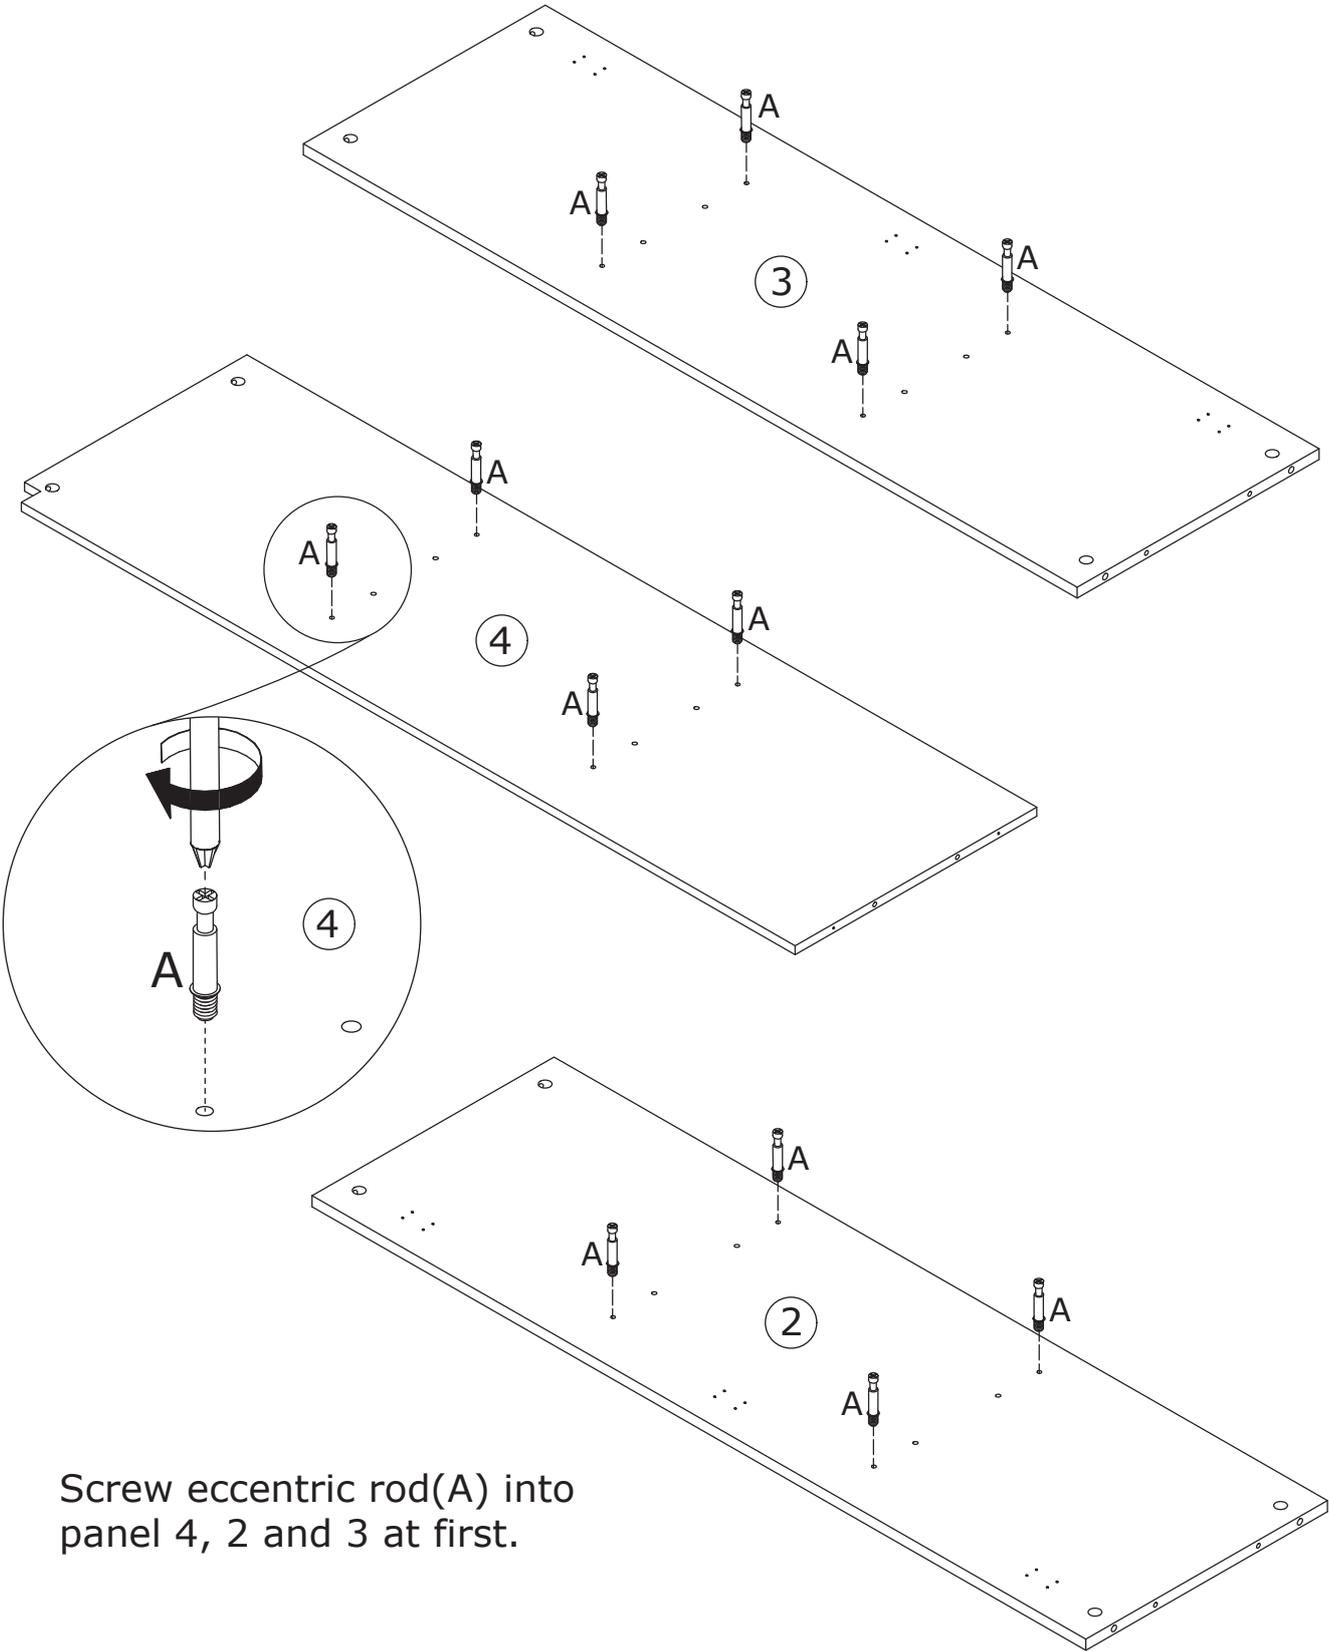
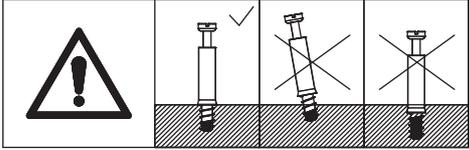



Screw eccentric rod(A) into panel 4, 2 and 3 at first.



9

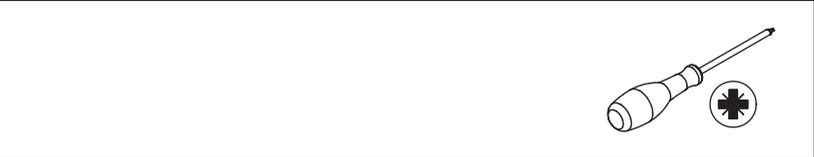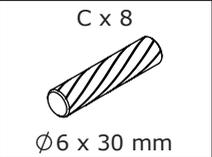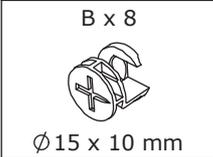


Connect panel 4 and 3 to panel 13 using wooden dowel(C), add cam lock(B) into and turn clockwise to tighten as shown.

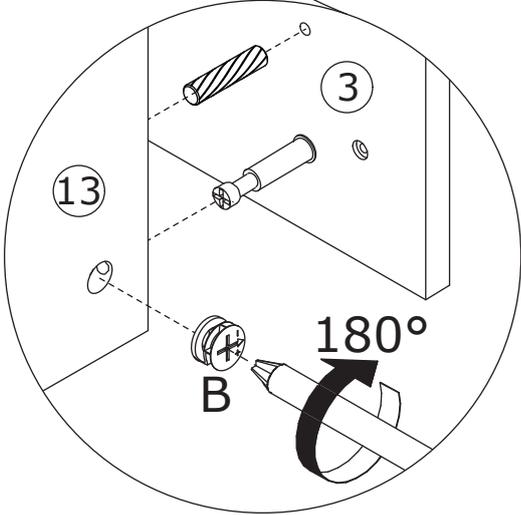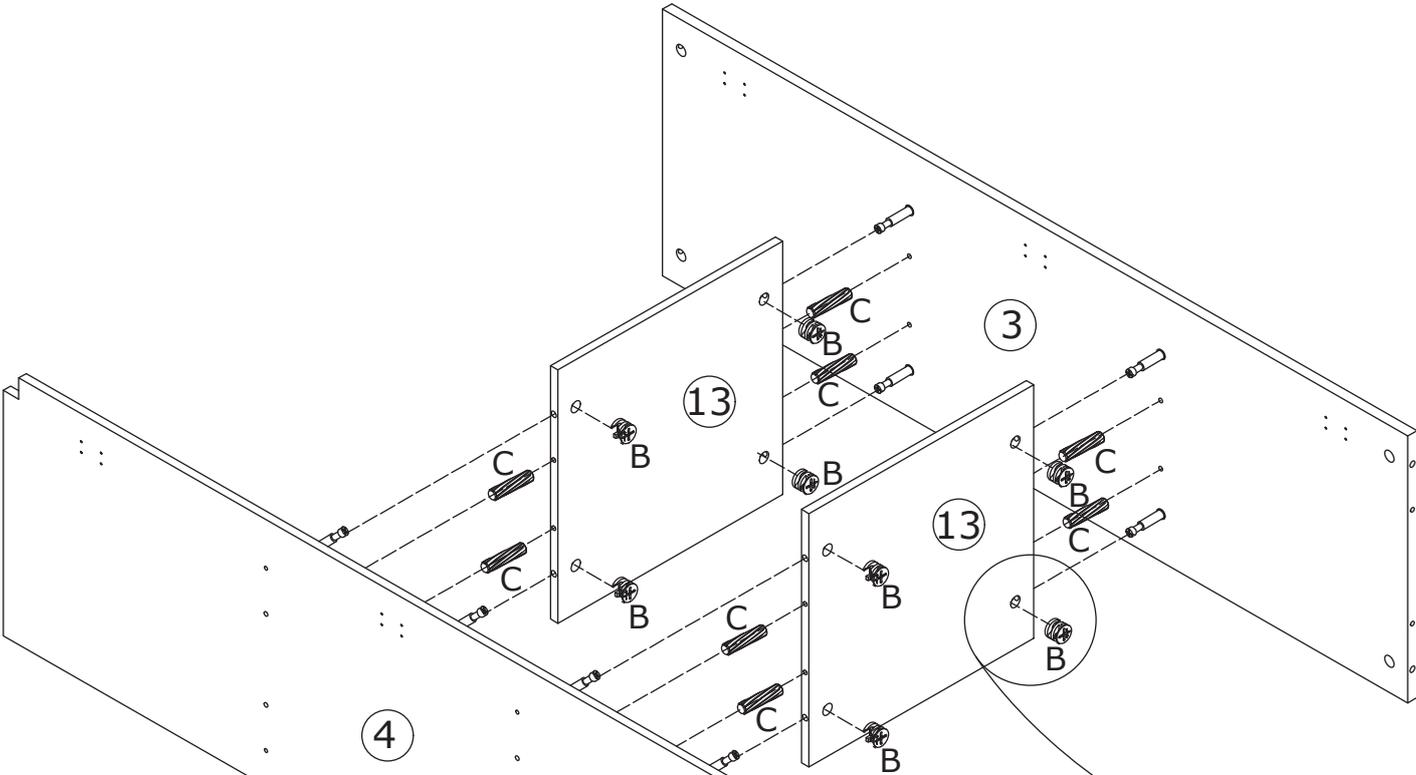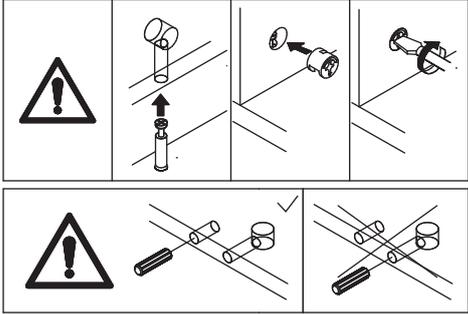




10

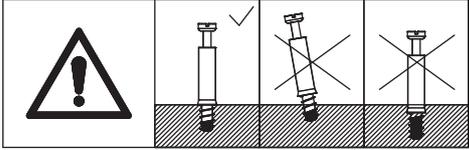 




Screw eccentric rod(A) into panel 4 at first.

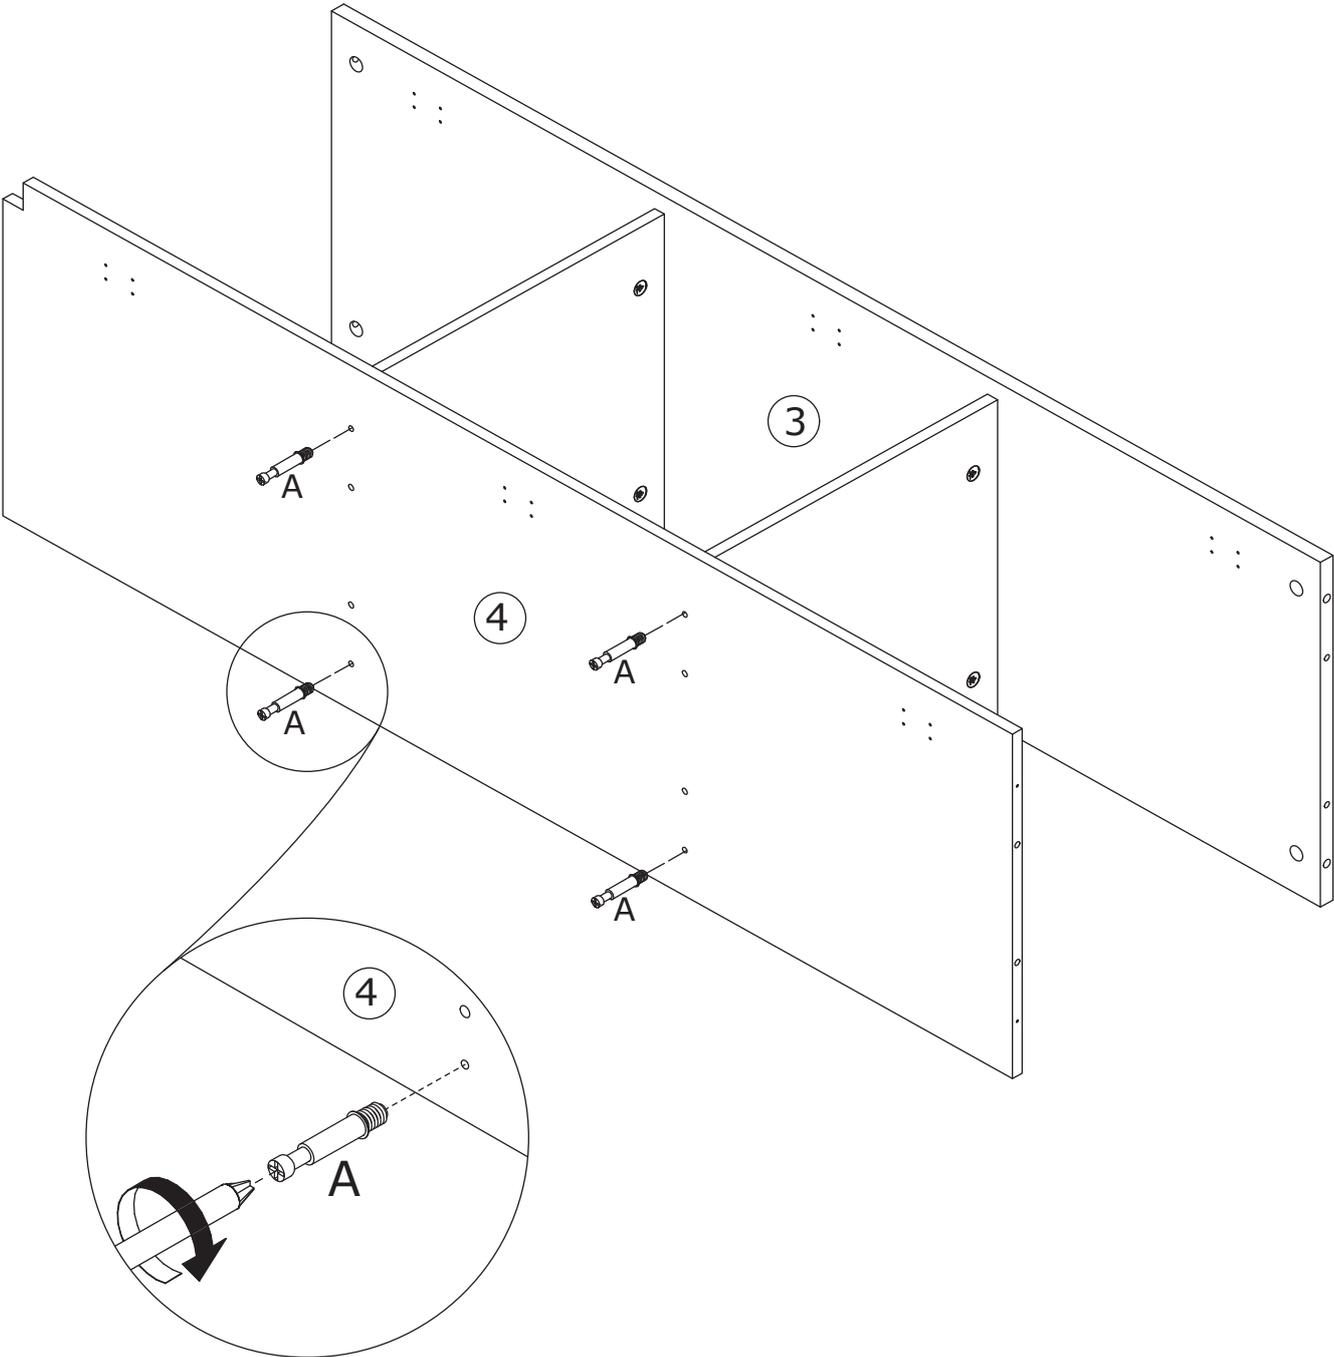

11

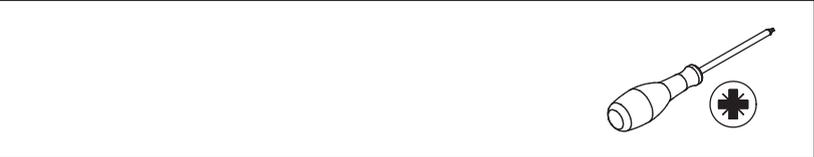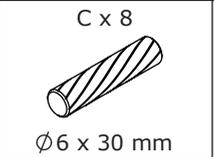
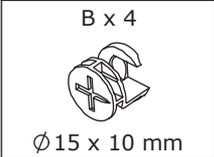


Insert wooden dowel(C) into panel 18 at first.
Attach panel 18 to panel 4, add cam lock(B)
into and turn clockwise to tighten as shown.

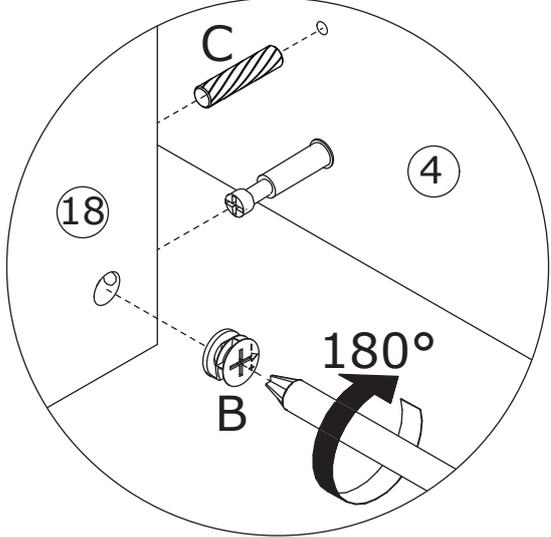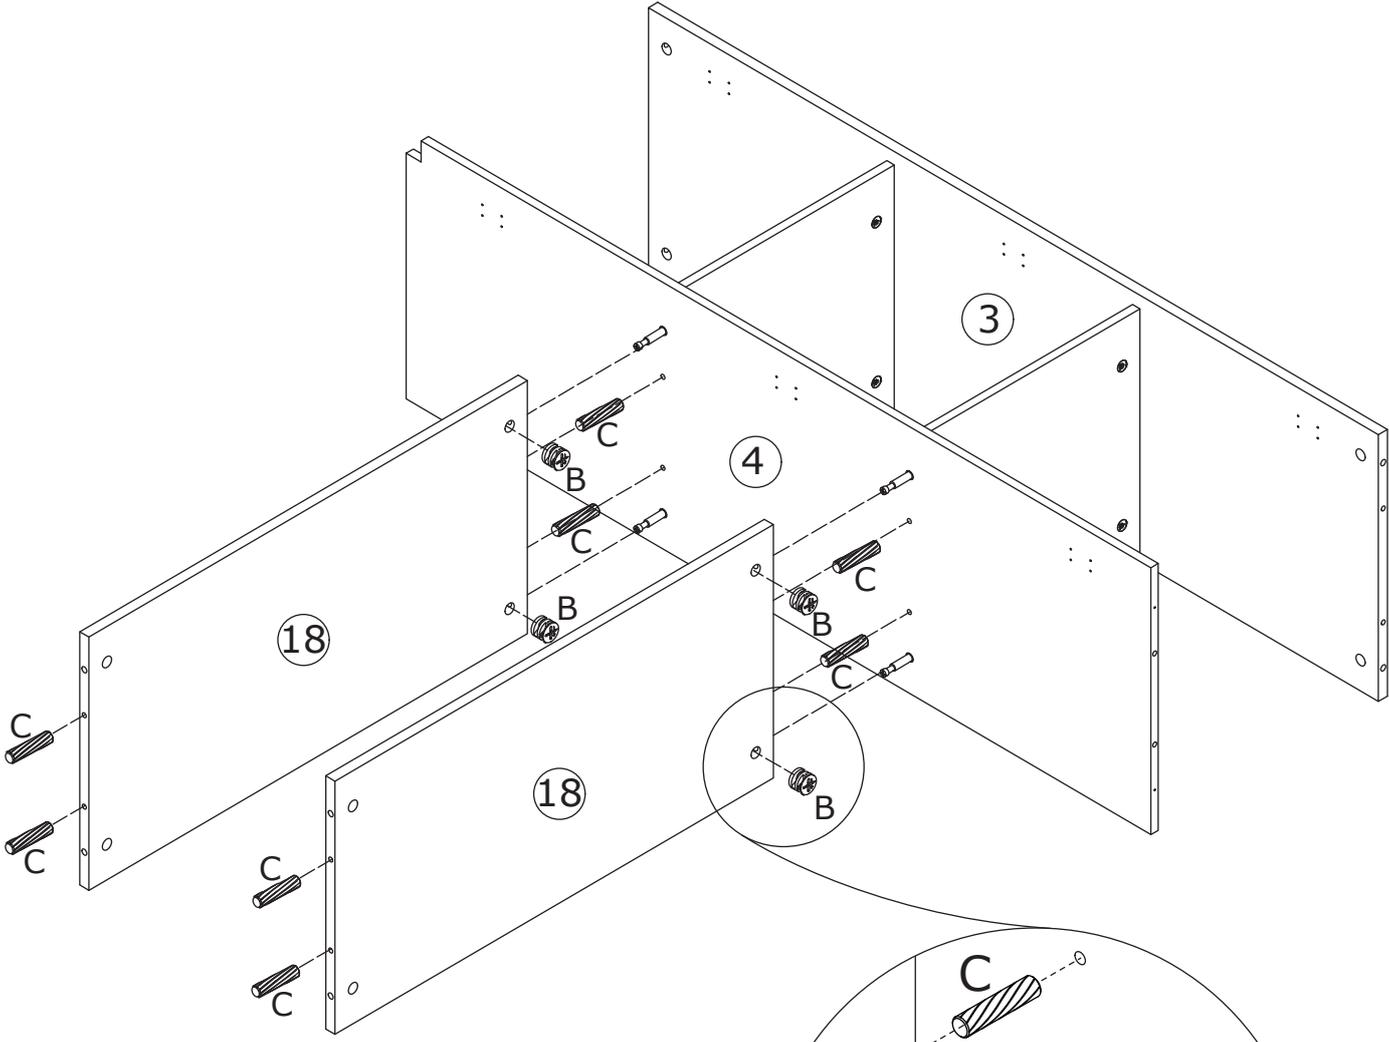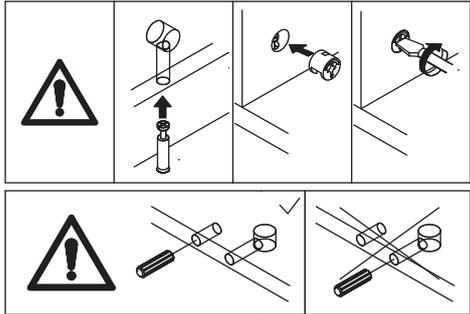


12




 
B x 4
Ø 15 x 10 mm

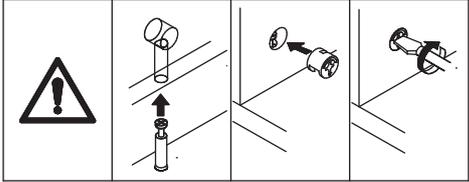


Attach panel 2 to panel 18, add cam lock(B) into and turn clockwise to tighten as shown.

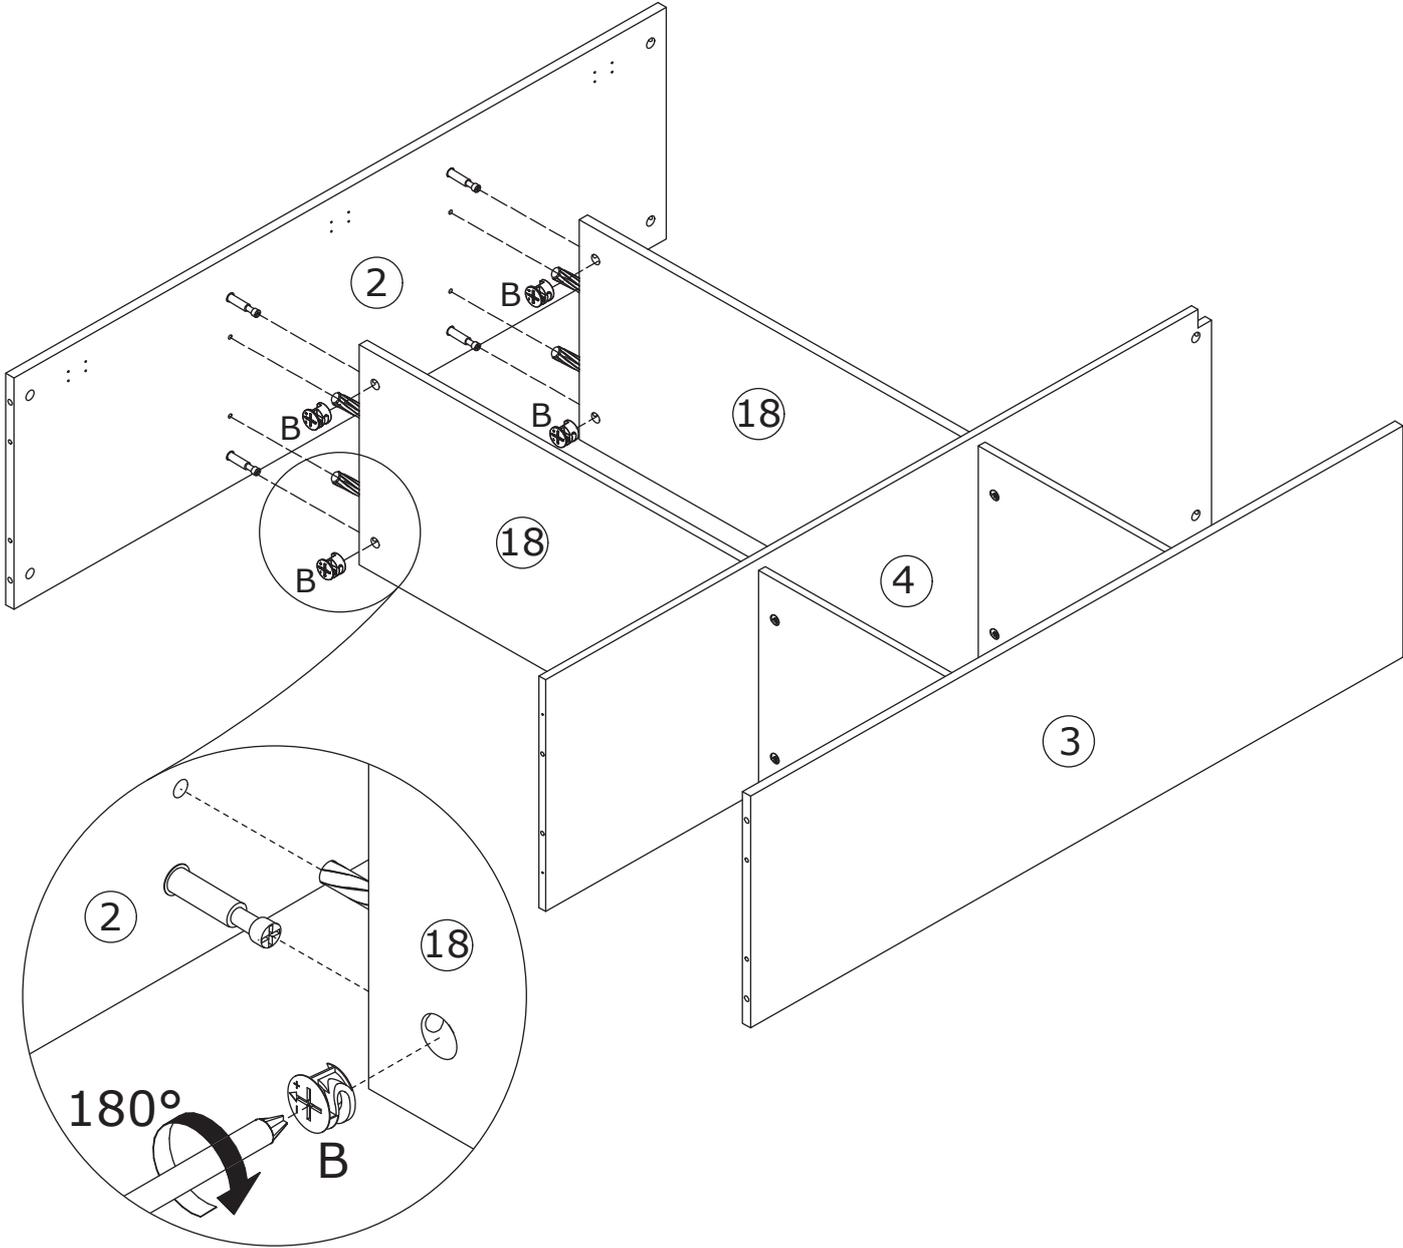

13

 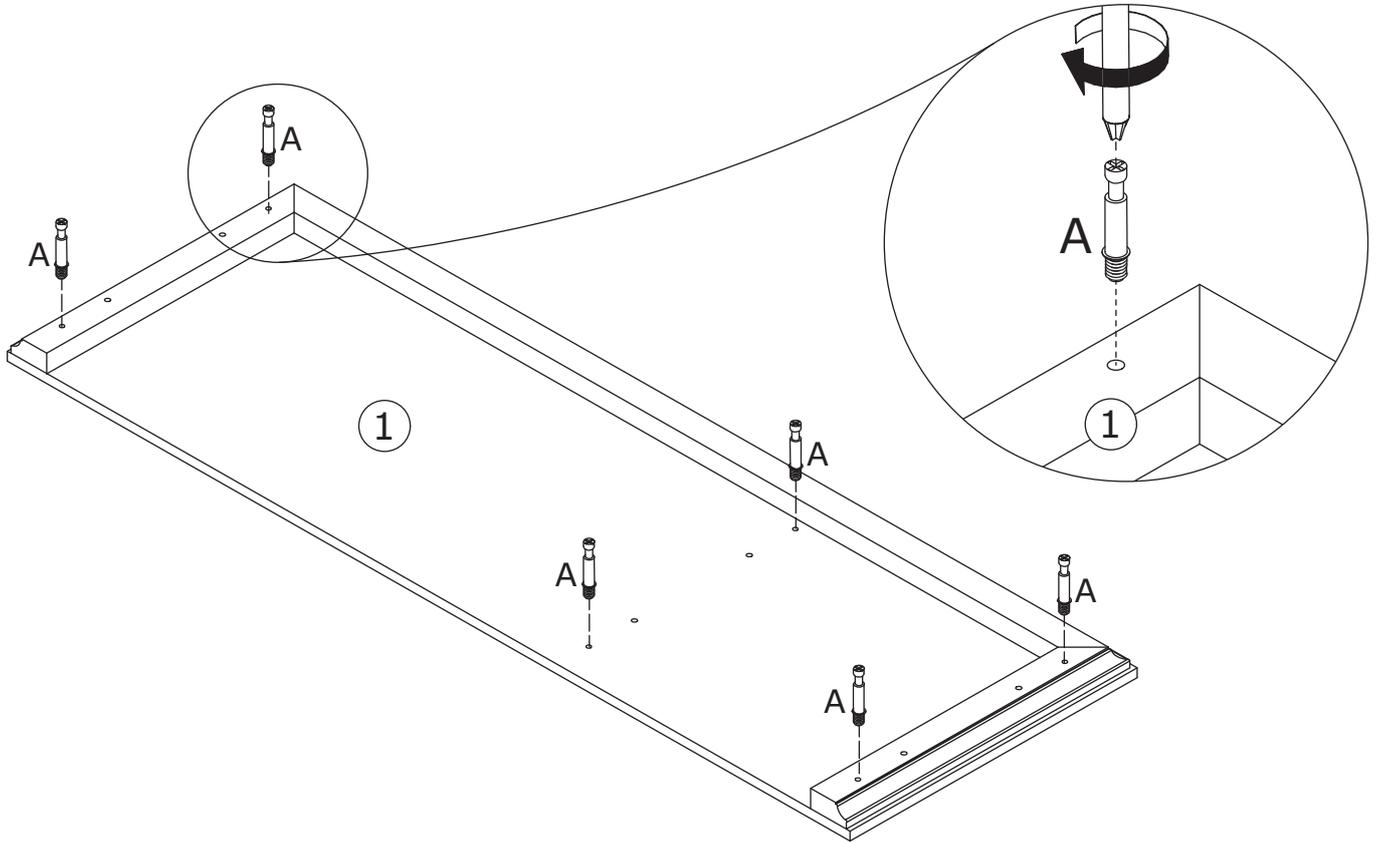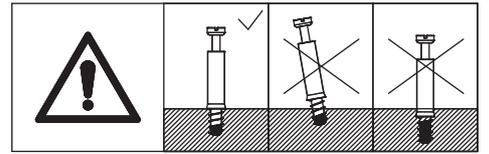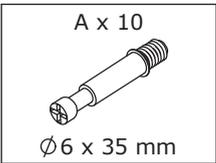





Screw eccentric rod(A) into panel 1 and 9 at first.

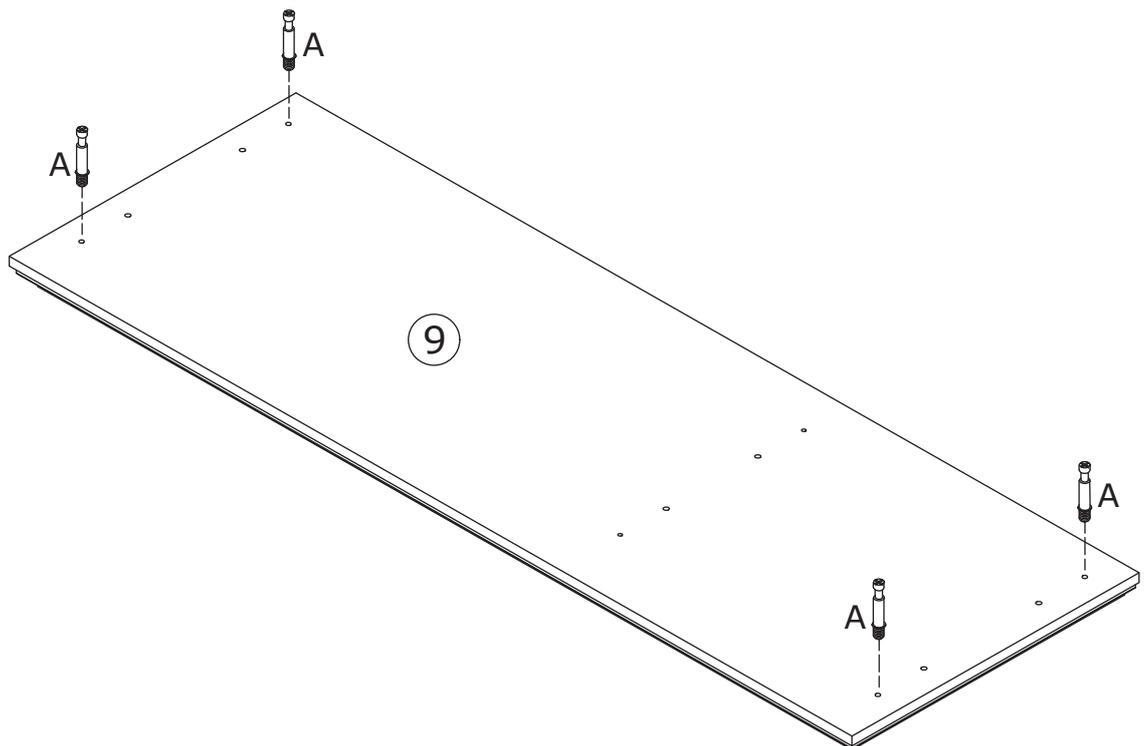


14

B x 6
Ø 15 x 10 mm

 
C x 12
Ø 6 x 30 mm

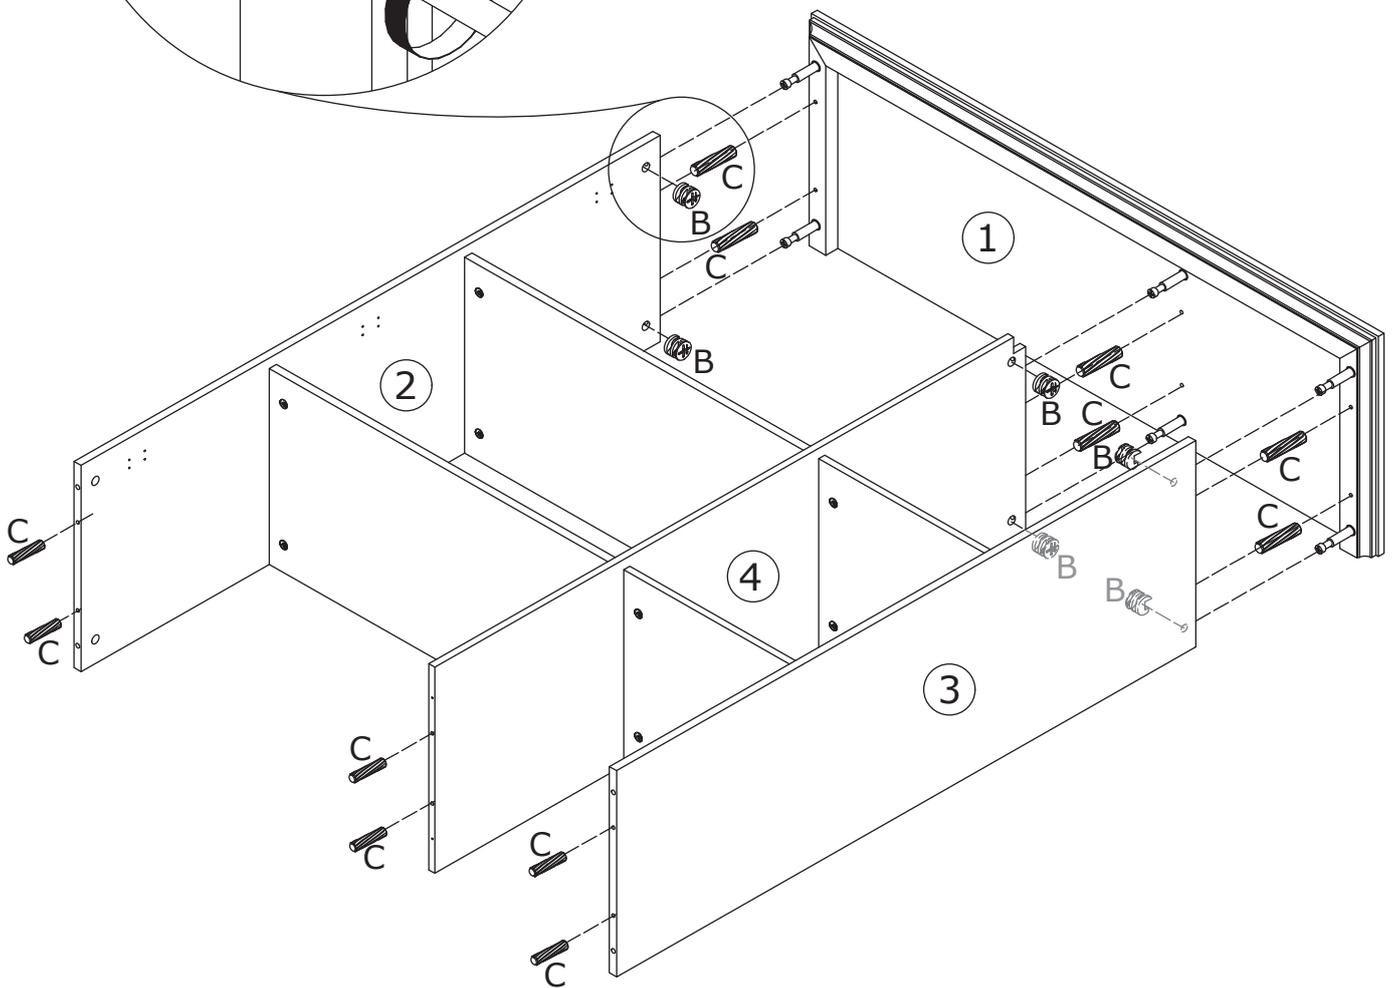
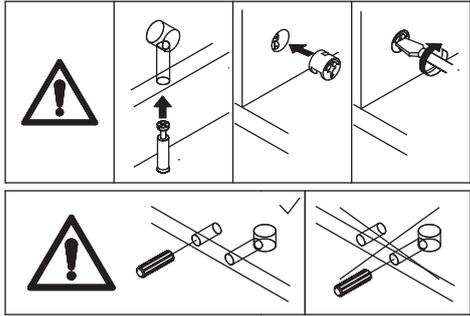
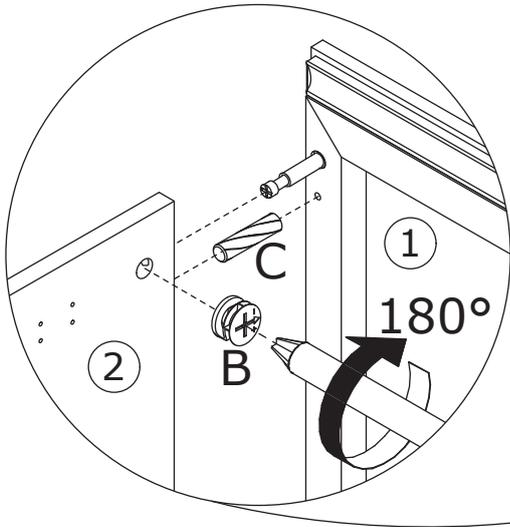



Insert wooden dowel(C) into panel 2, 4 and 3 at first.
Attach panel 1 to panel 2, 4 and 3, add cam lock(B)
into and turn clockwise to tighten as shown.

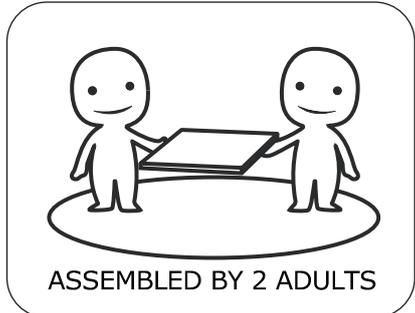


15



 
<p>B x 4</p>  <p>Ø15 x 10 mm</p>	<p>D x 2</p>  <p>Ø4 x 35 mm</p>	
---	--	---

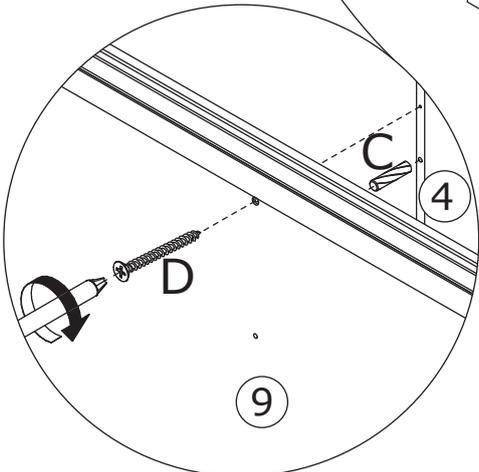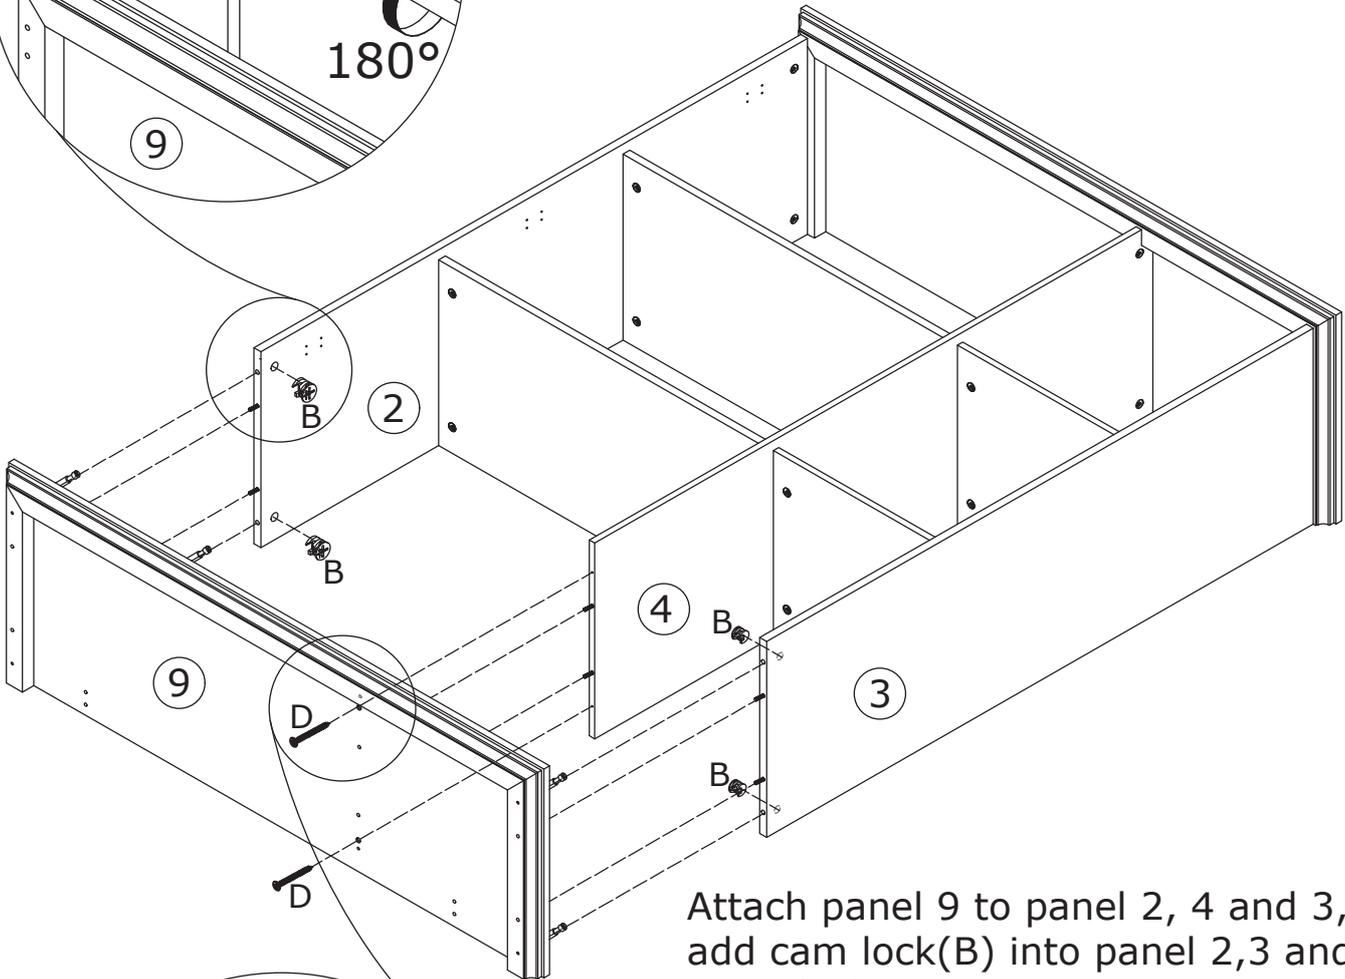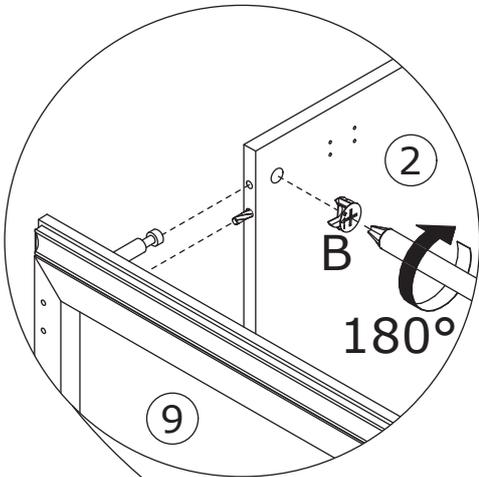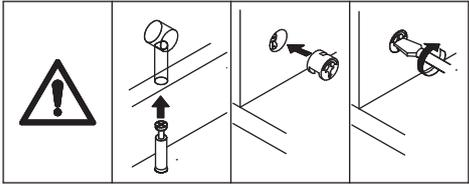


Attach panel 9 to panel 2, 4 and 3, add cam lock(B) into panel 2,3 and turn clockwise to tighten as shown. Fix panel 9 to panel 4 with screw(D) as shown.

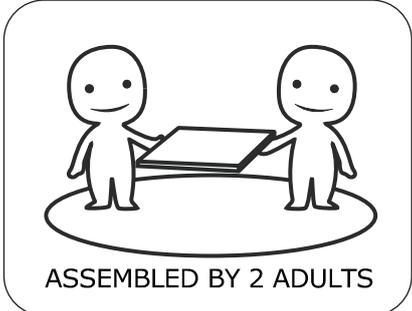


16

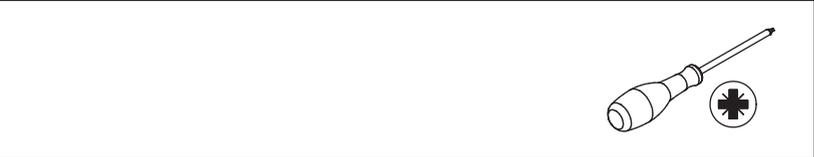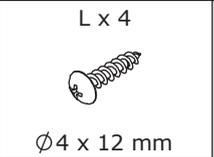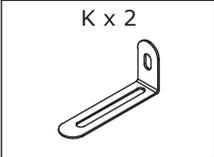


Fix part(K) to panel 1 with screw(L) as shown.


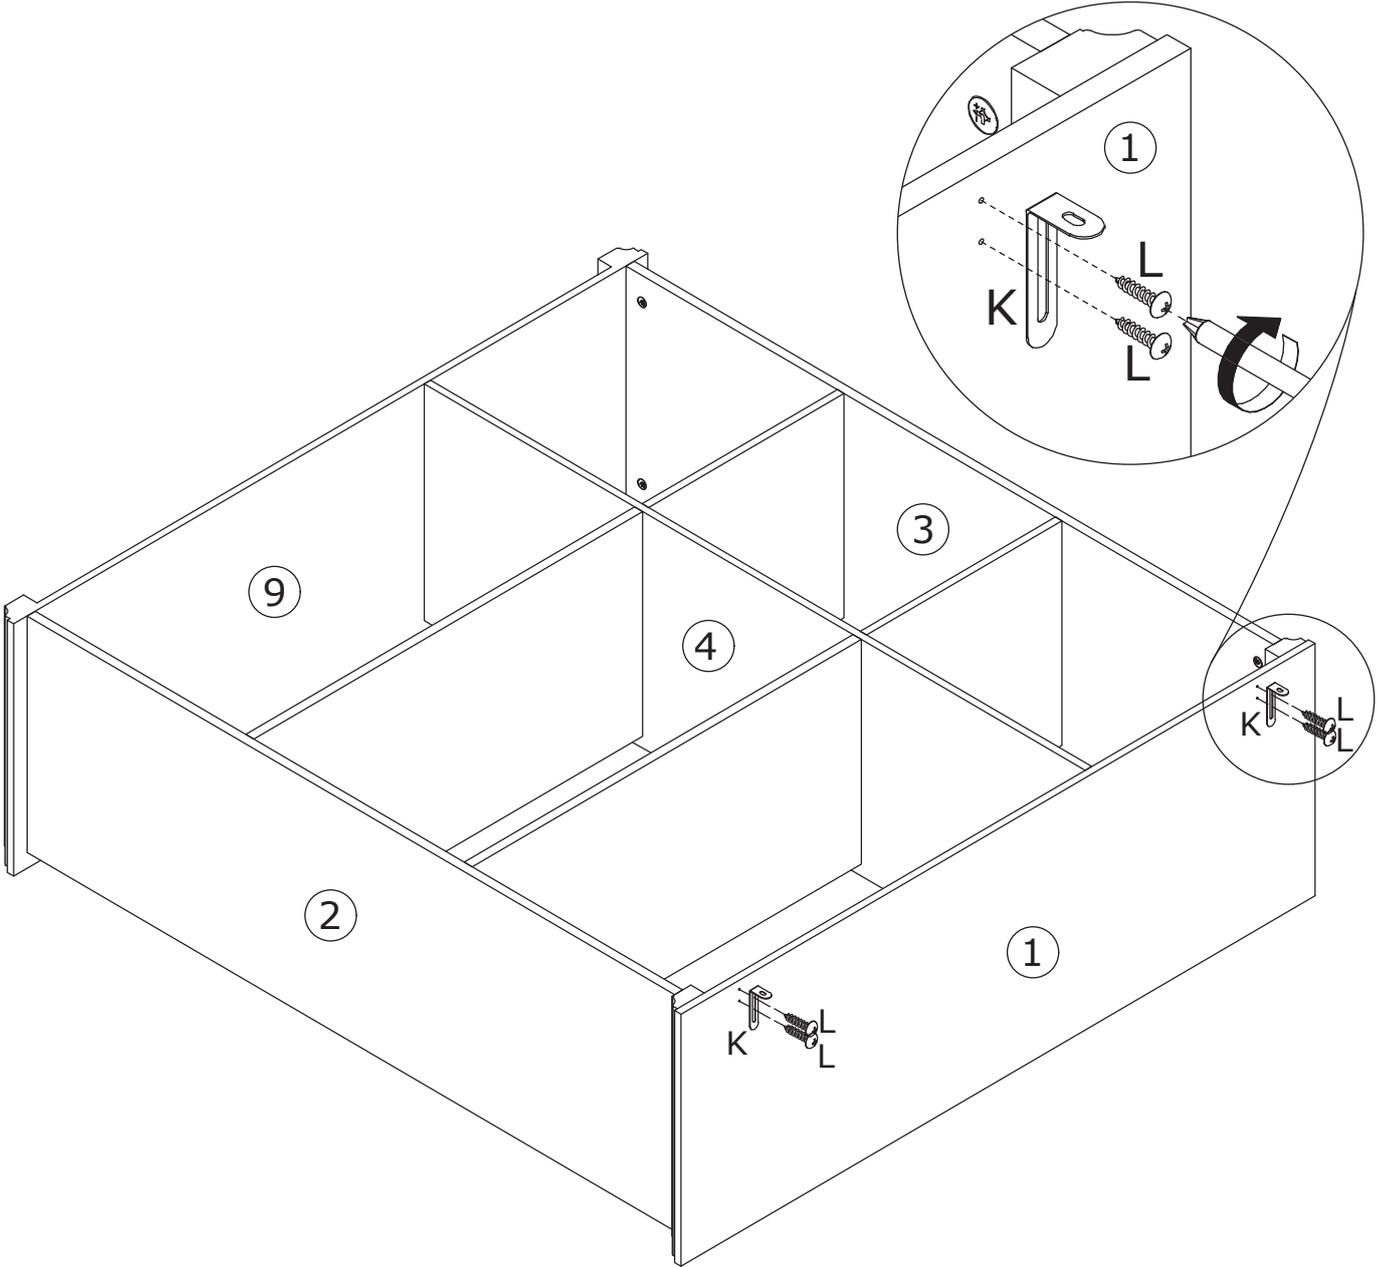


17
 
<p>A x 6  Ø6 x 35 mm</p>	<p>K x 2 </p>	<p>L x 4  Ø4 x 12 mm</p>	
---	--	---	---

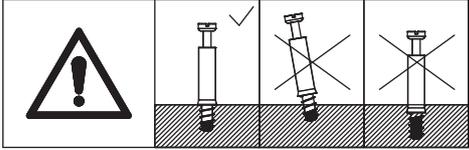

Screw eccentric rod(A) into panel 9 at first.
Fix part(K) to panel 9 with screw(L) as shown.

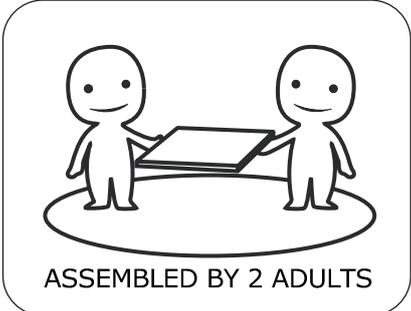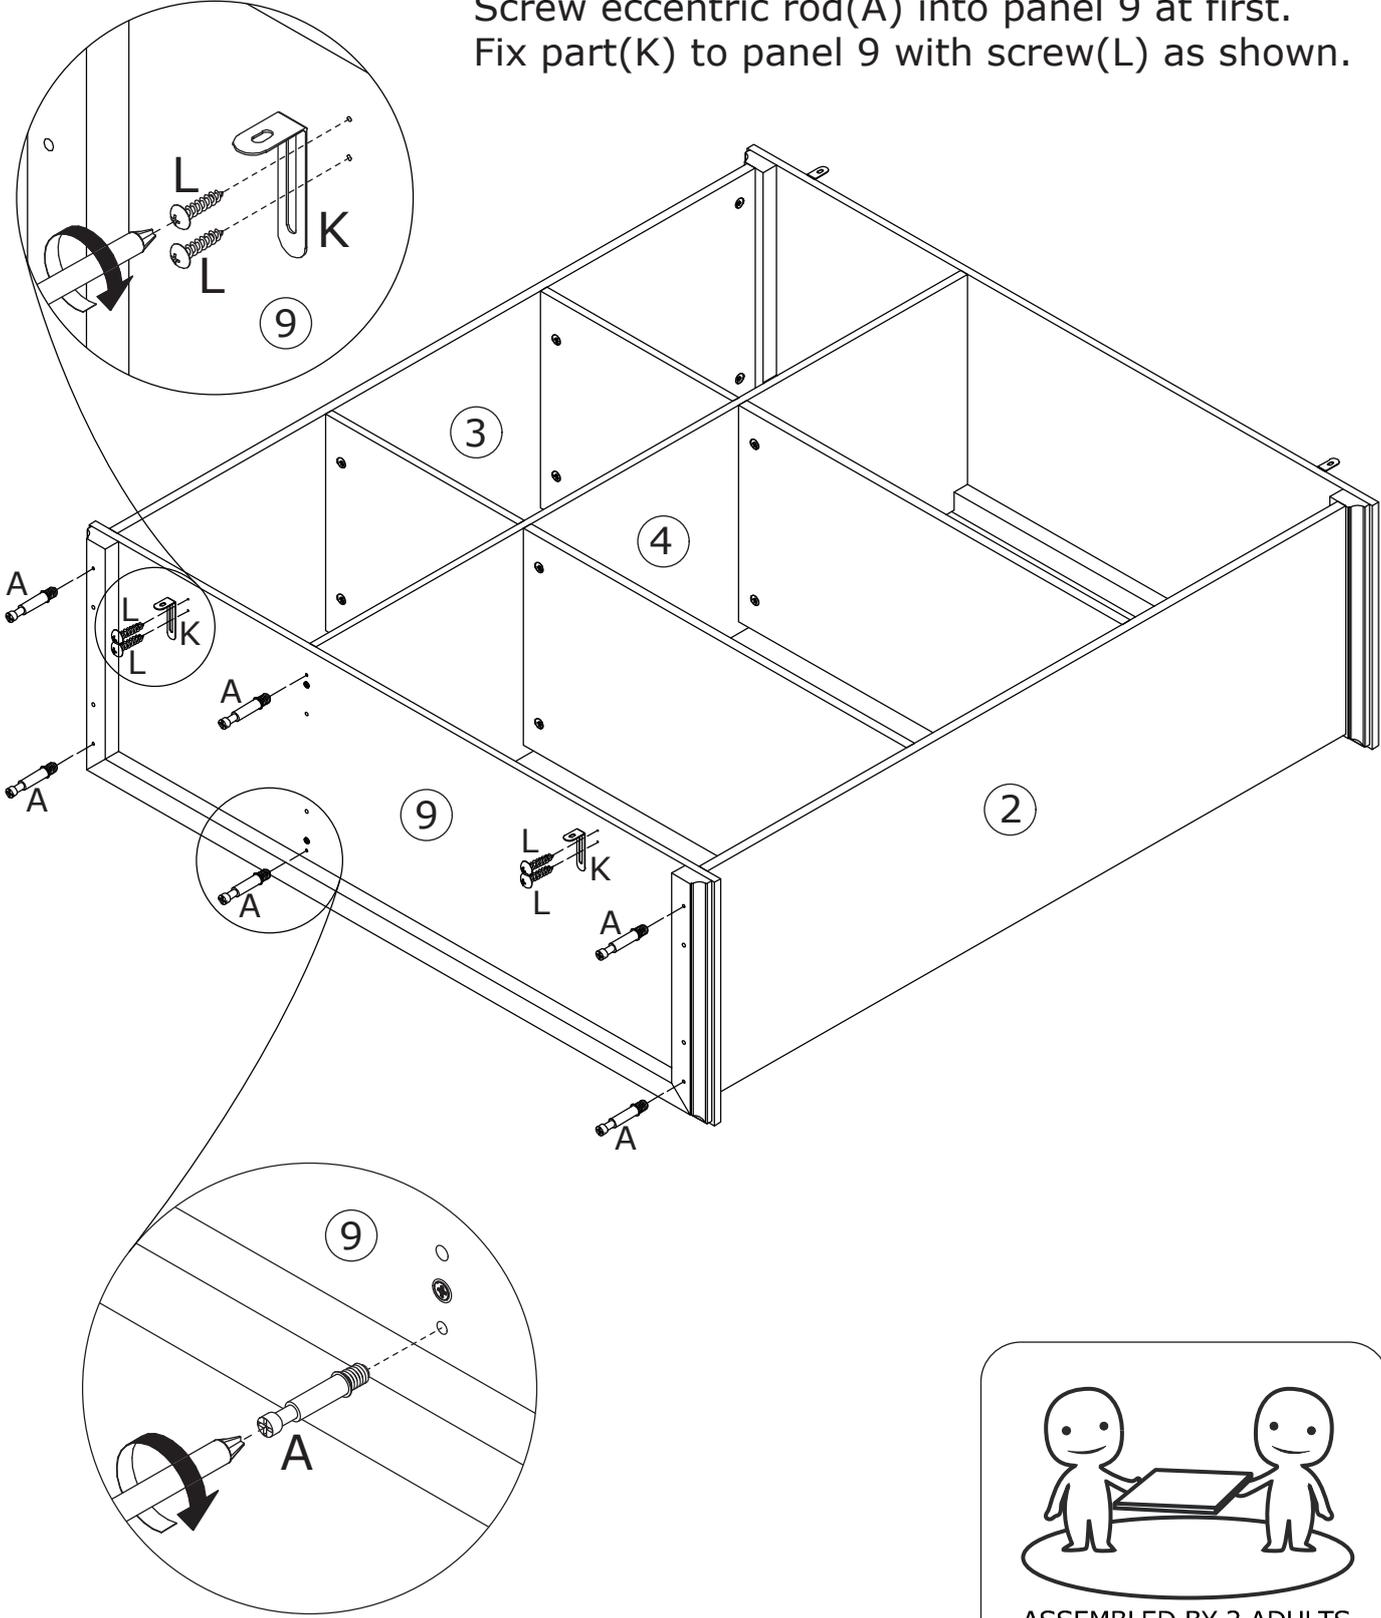


18

B x 6









Ø15 x 10 mm

 C x 6








Ø6 x 30 mm

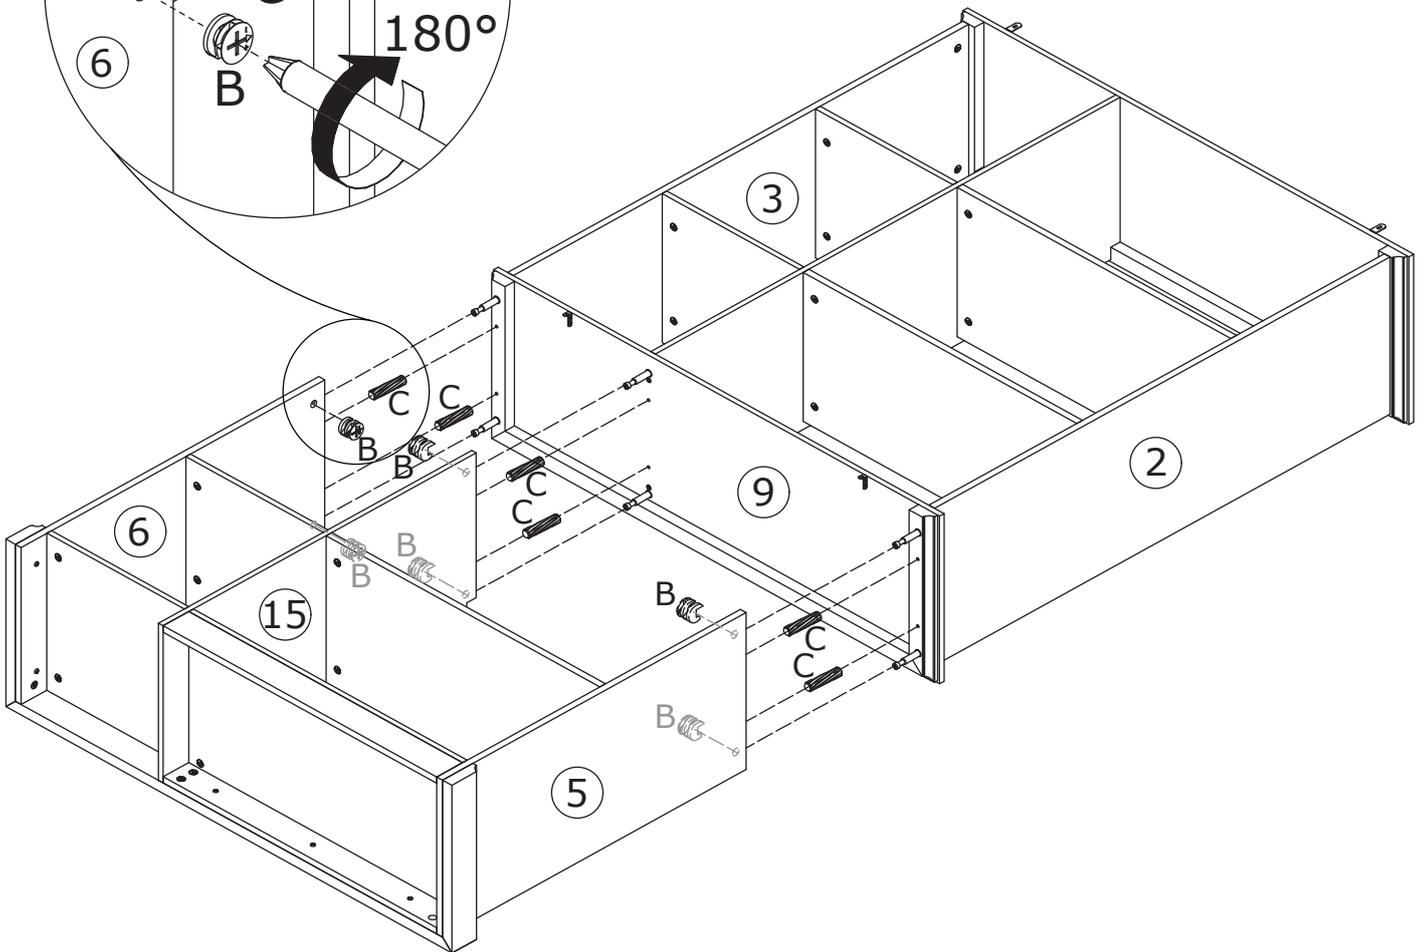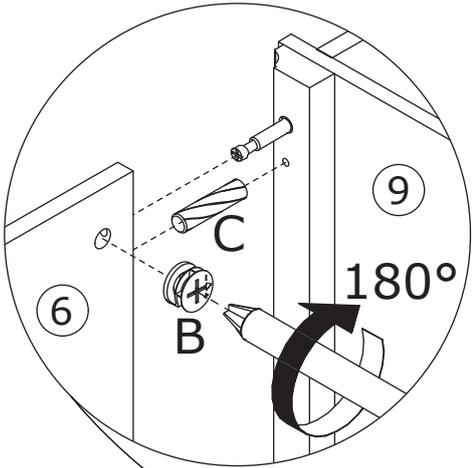    

Connect the two components using wooden dowel(C),
add cam lock(B) into and turn clockwise to tighten as shown.

 

19

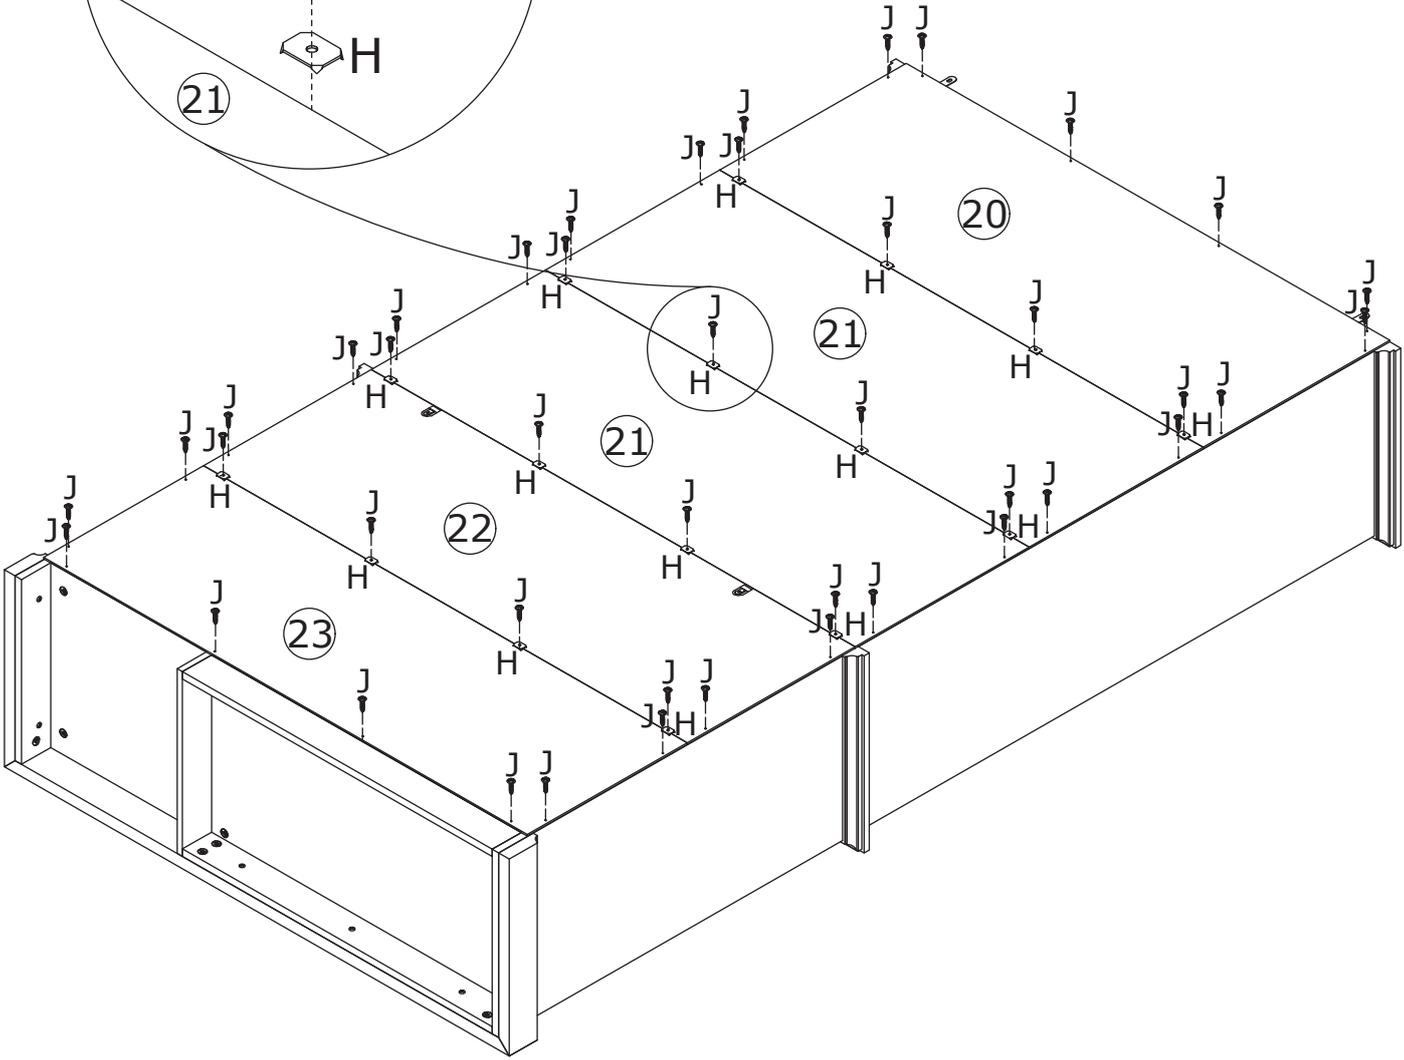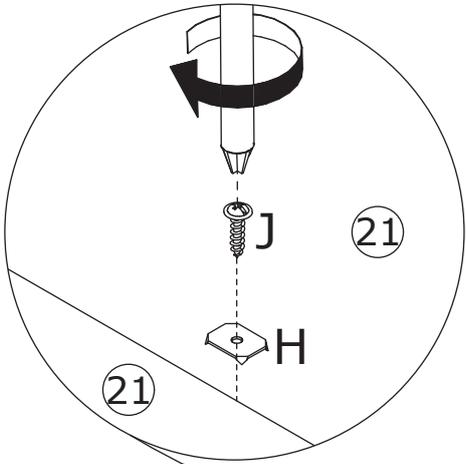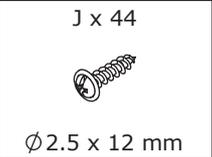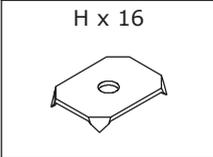





Fix back panel 20, 21, 22 and 23 to the unit with screw(J) at first.
Fix iron sheet(H) to back panels with screw(J) as shown.

20


It takes 4 people to stand the cabinet up

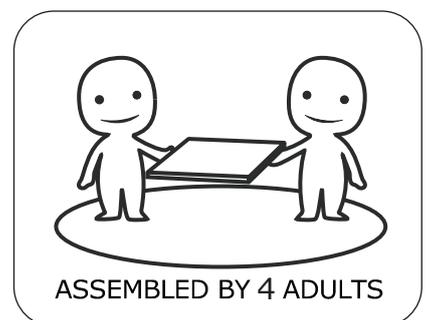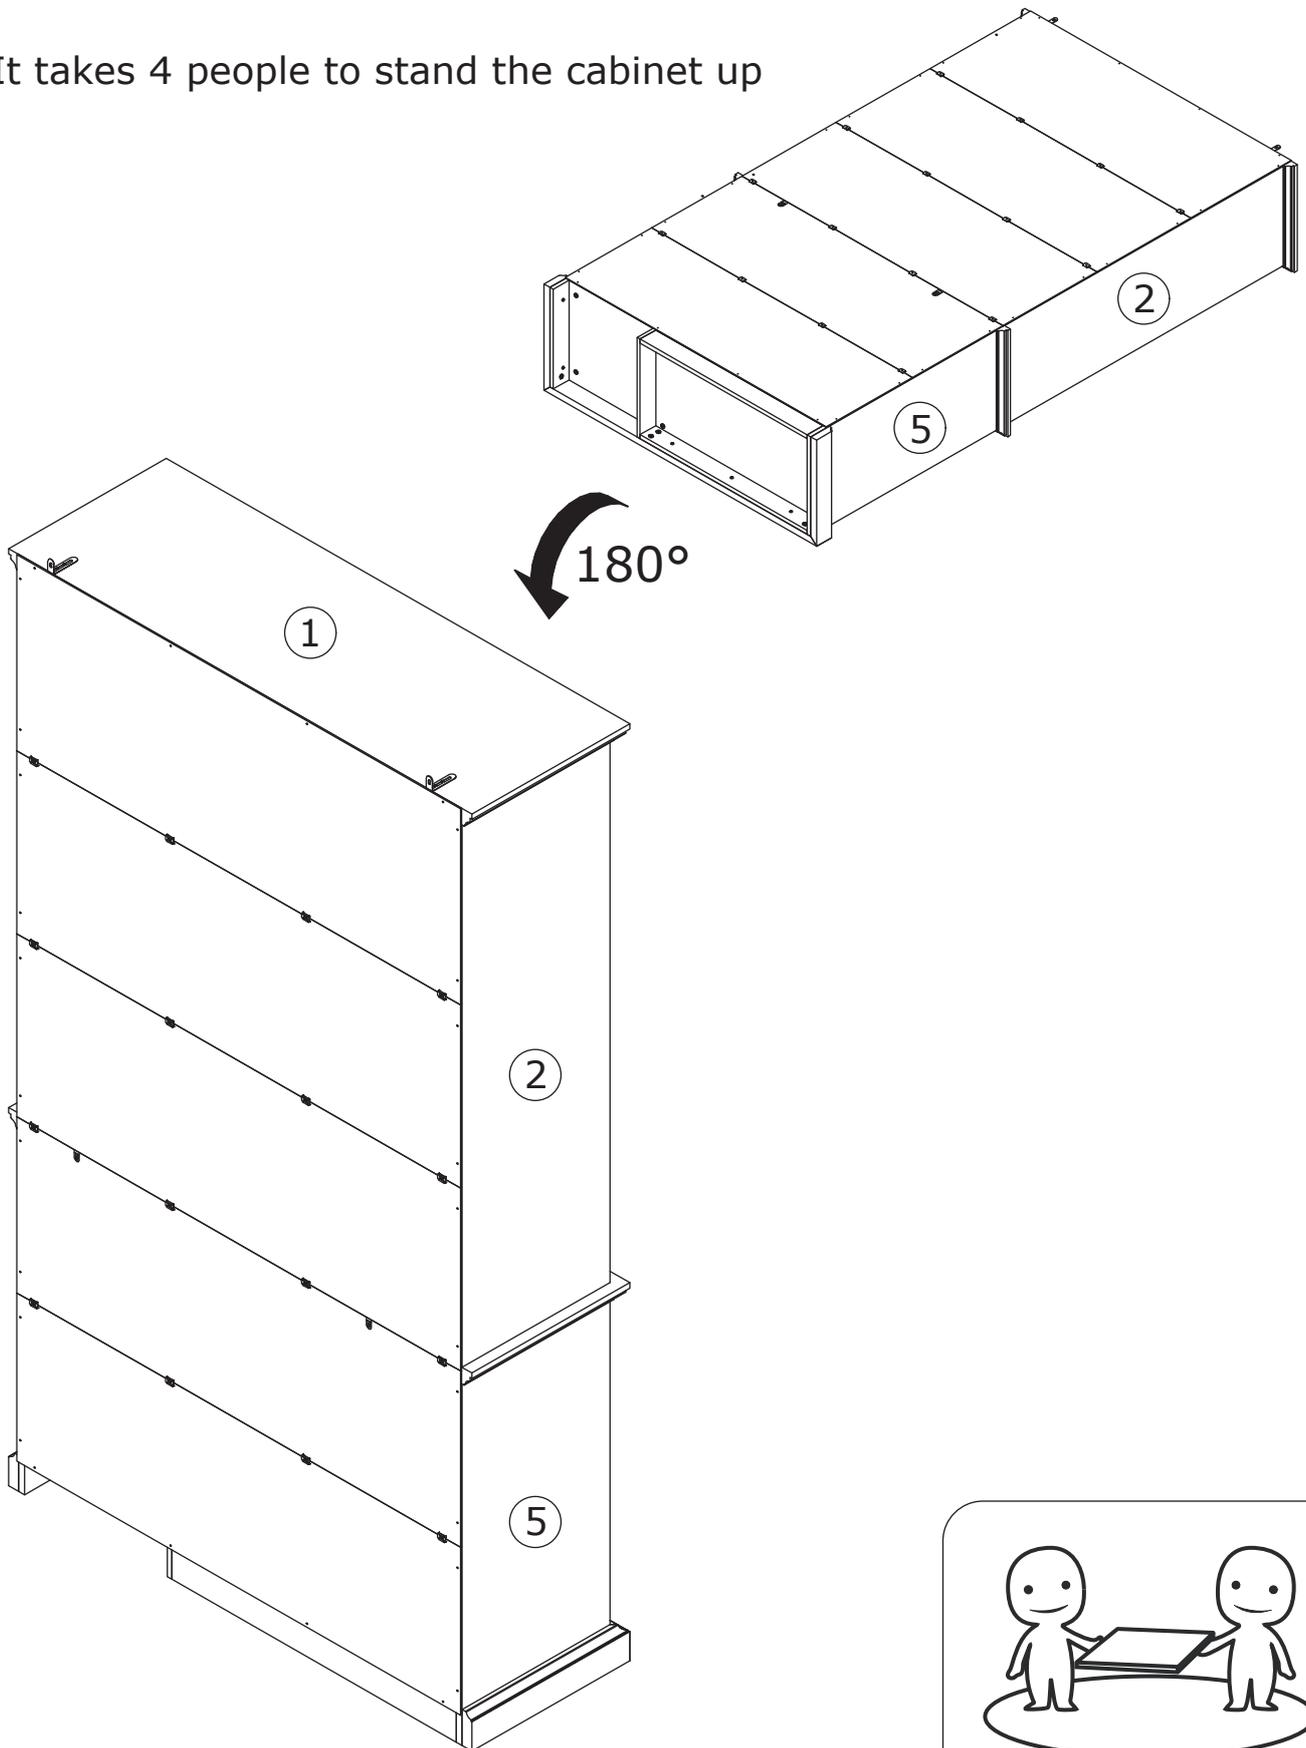







21

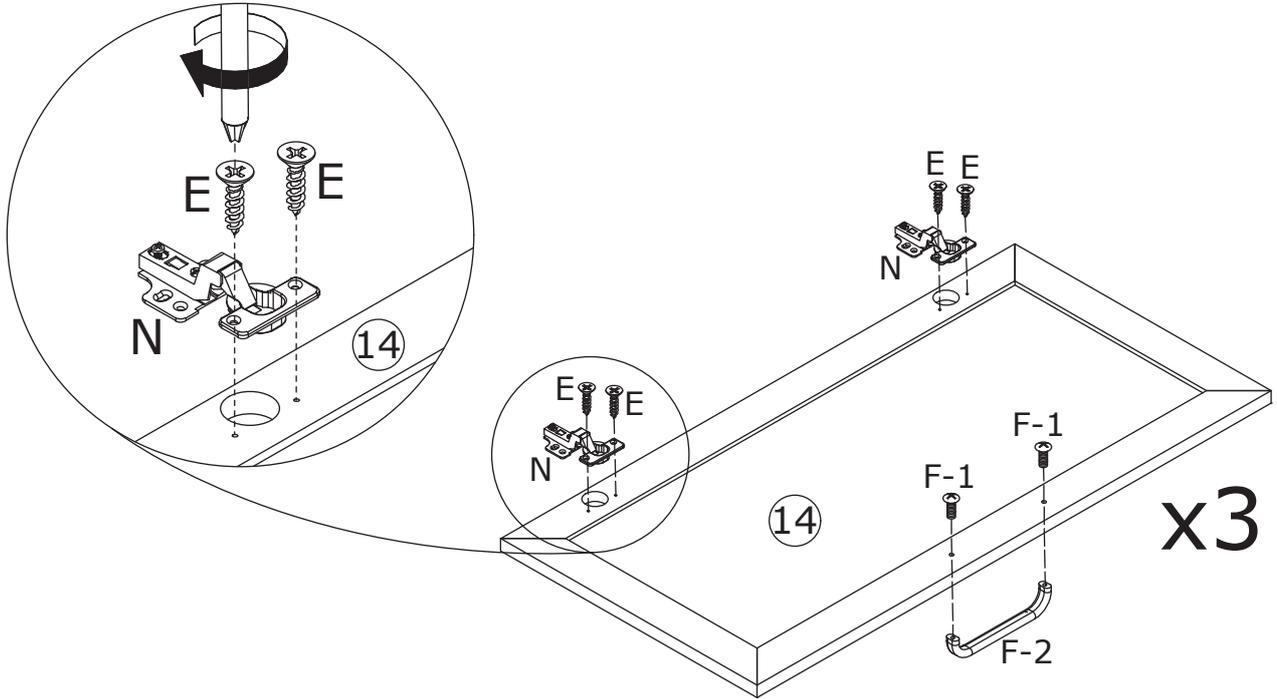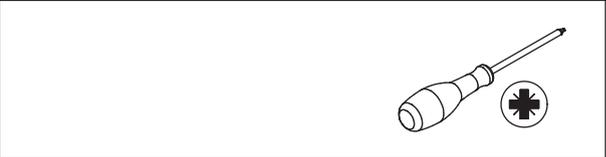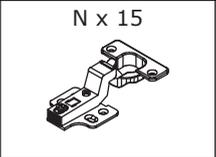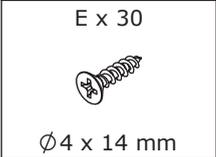






Fix hinge(N) to panel 14 and 16 with screw(E) at first. Fix handle(F) as shown.

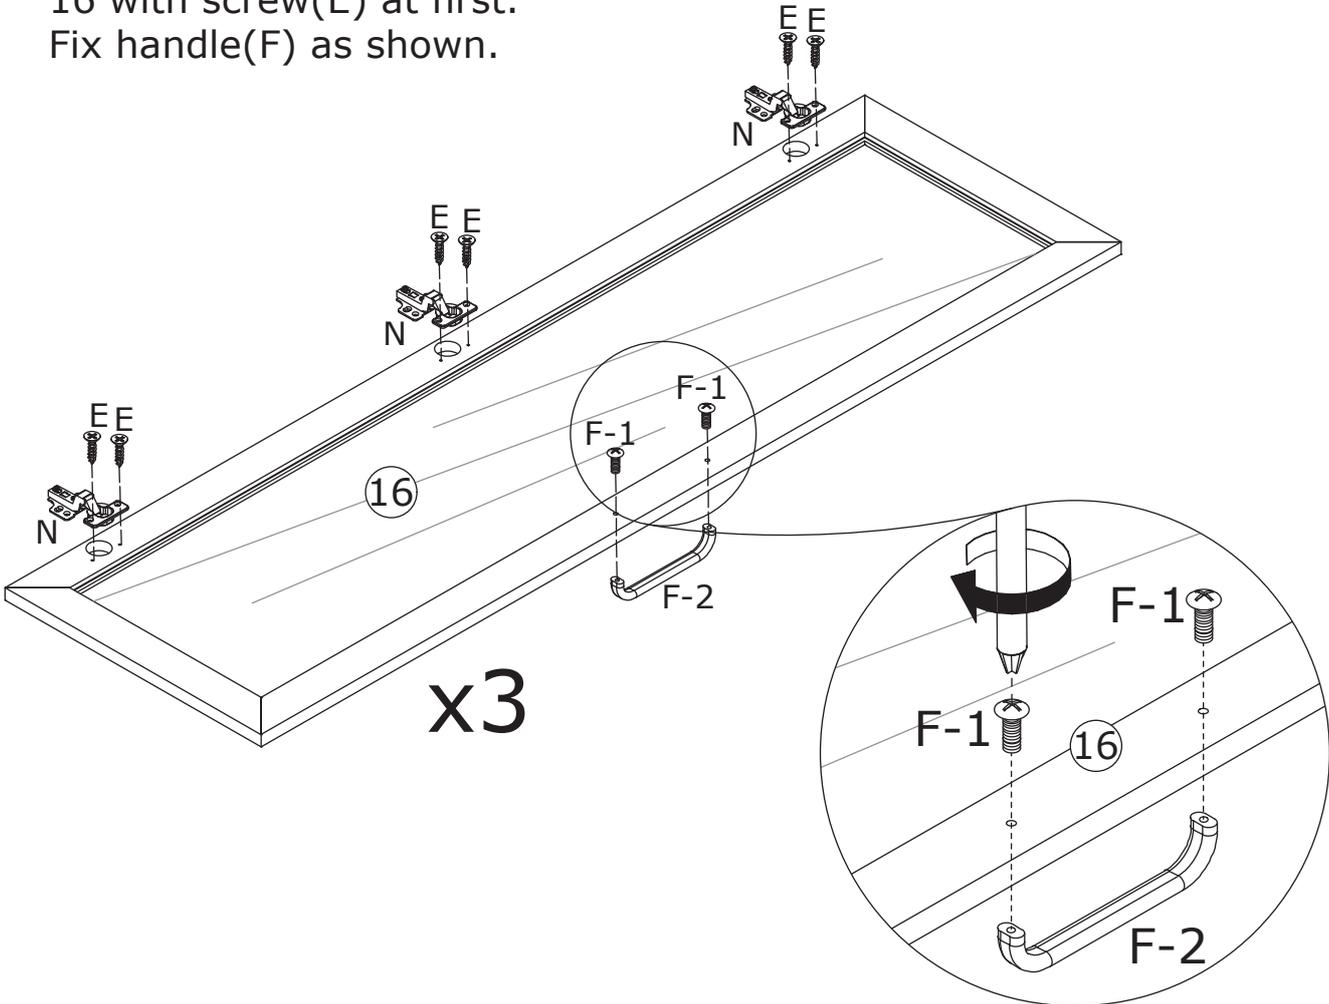

22

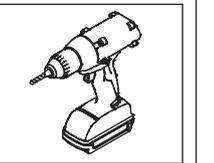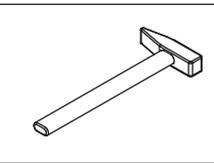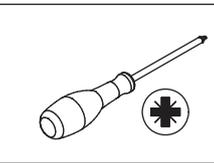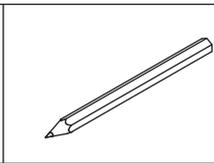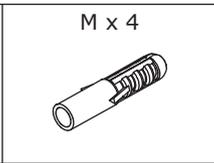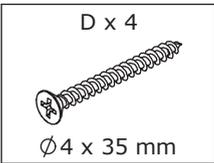

Install anti-tipping device as shown.

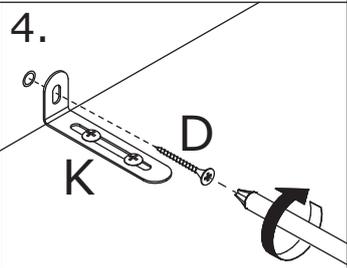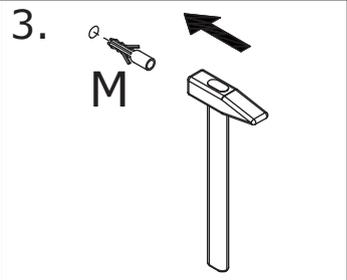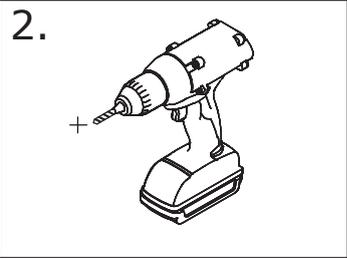
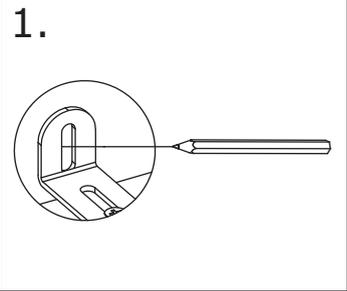
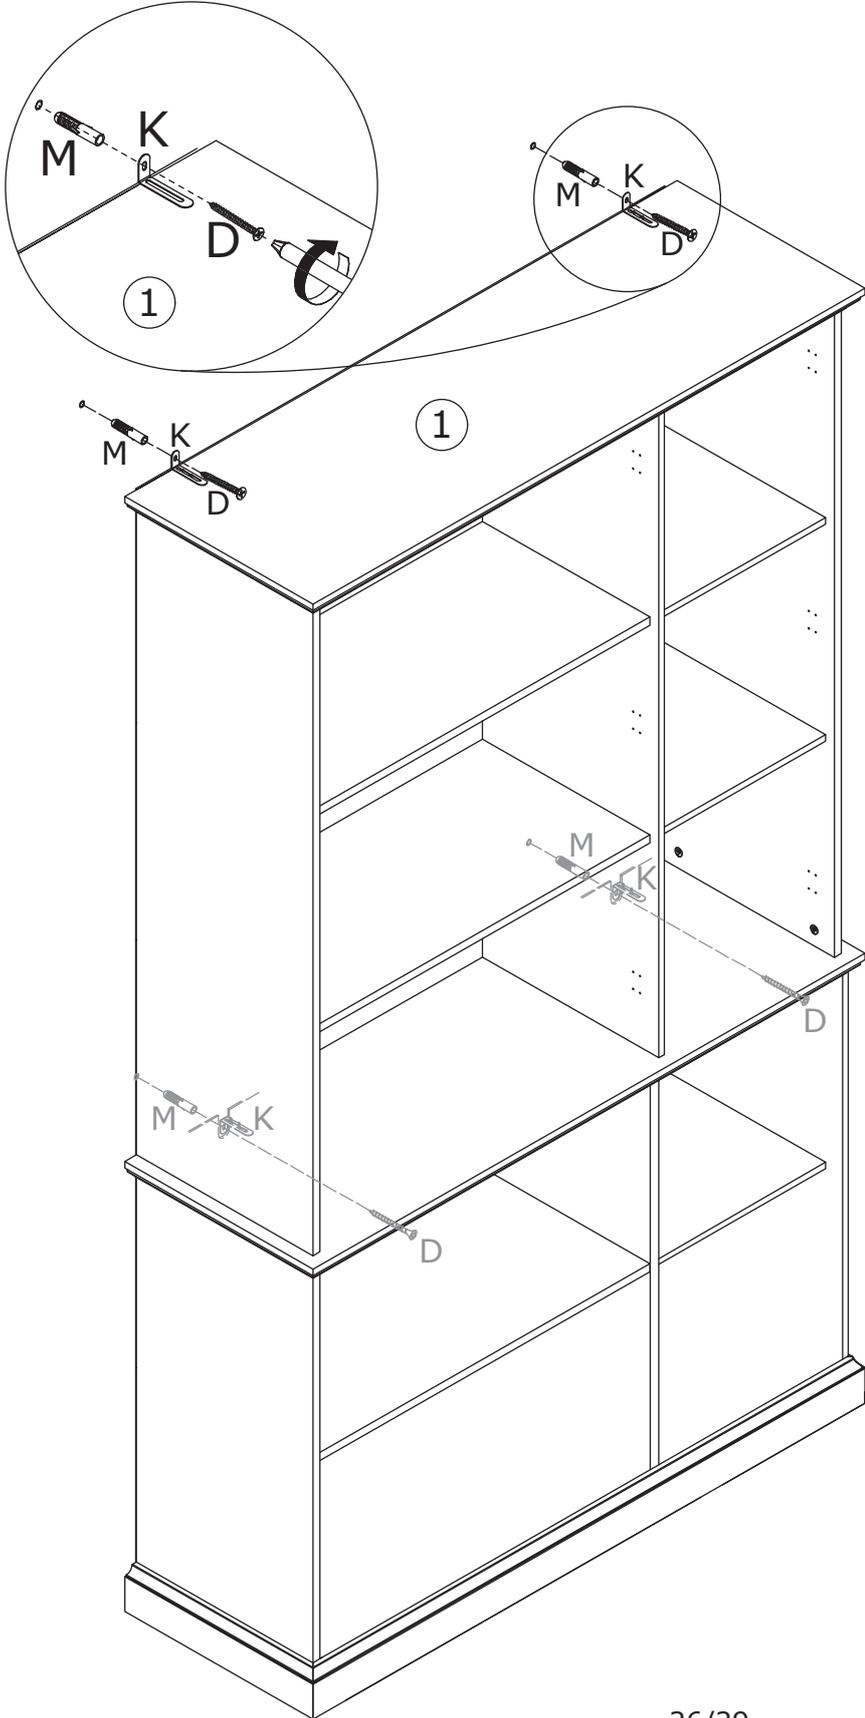


23

E x 24



 Ø4 x 14 mm

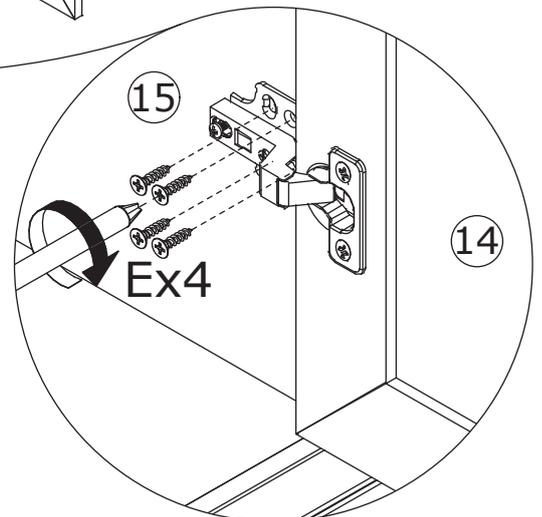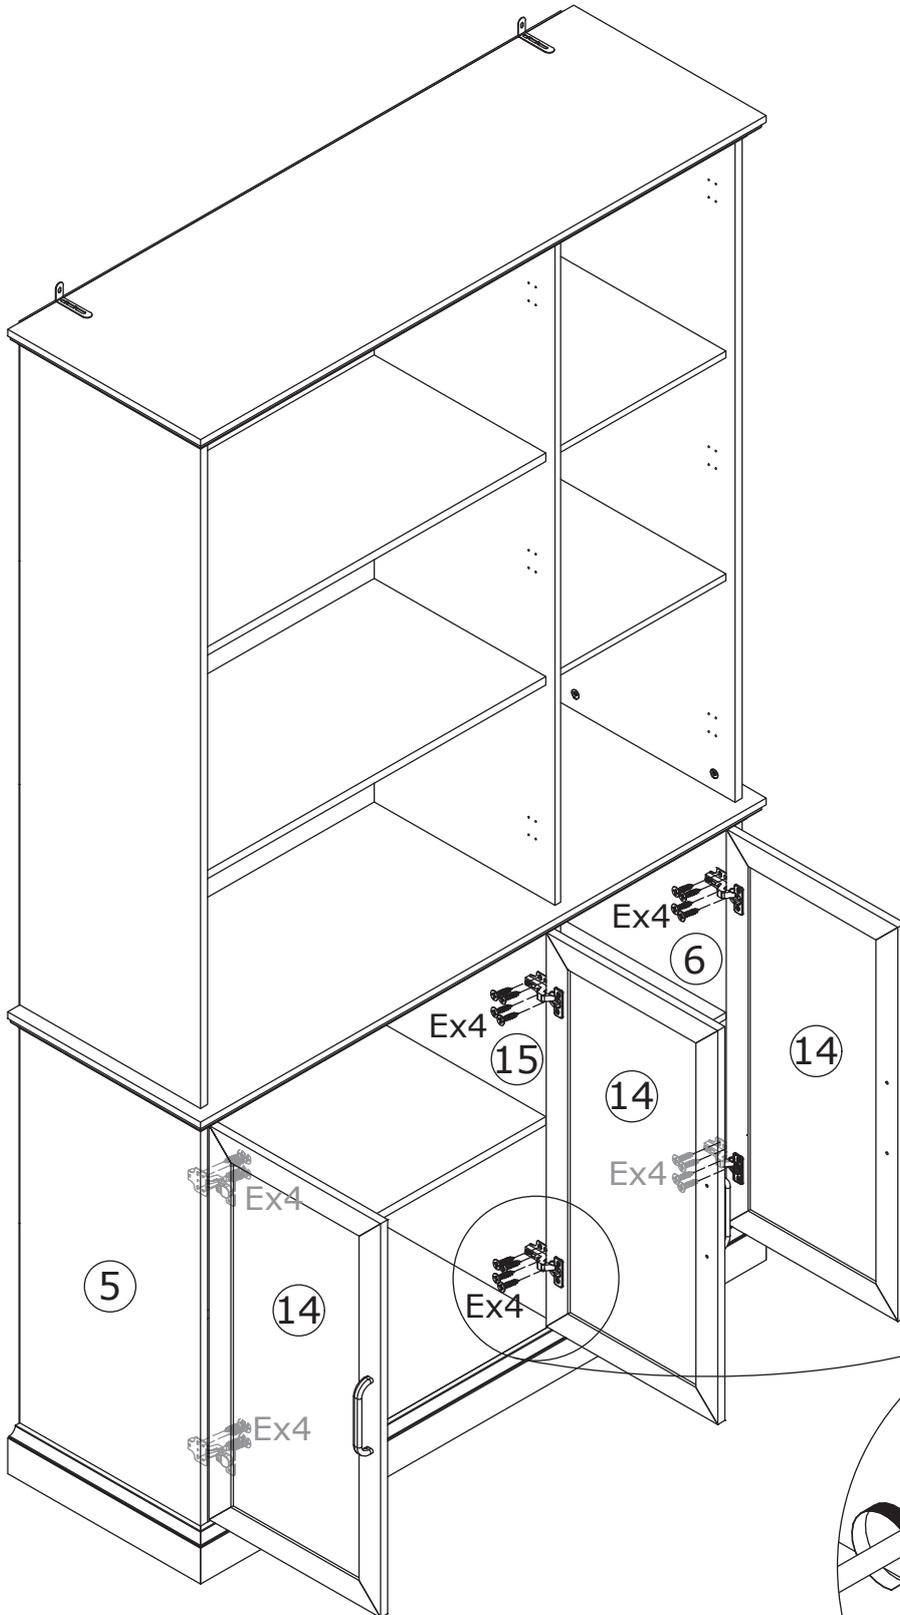



Assemble door panel 14 to lower component by fixing hinge with screw(E) as shown.

24


E x 36




 Ø4 x 14 mm

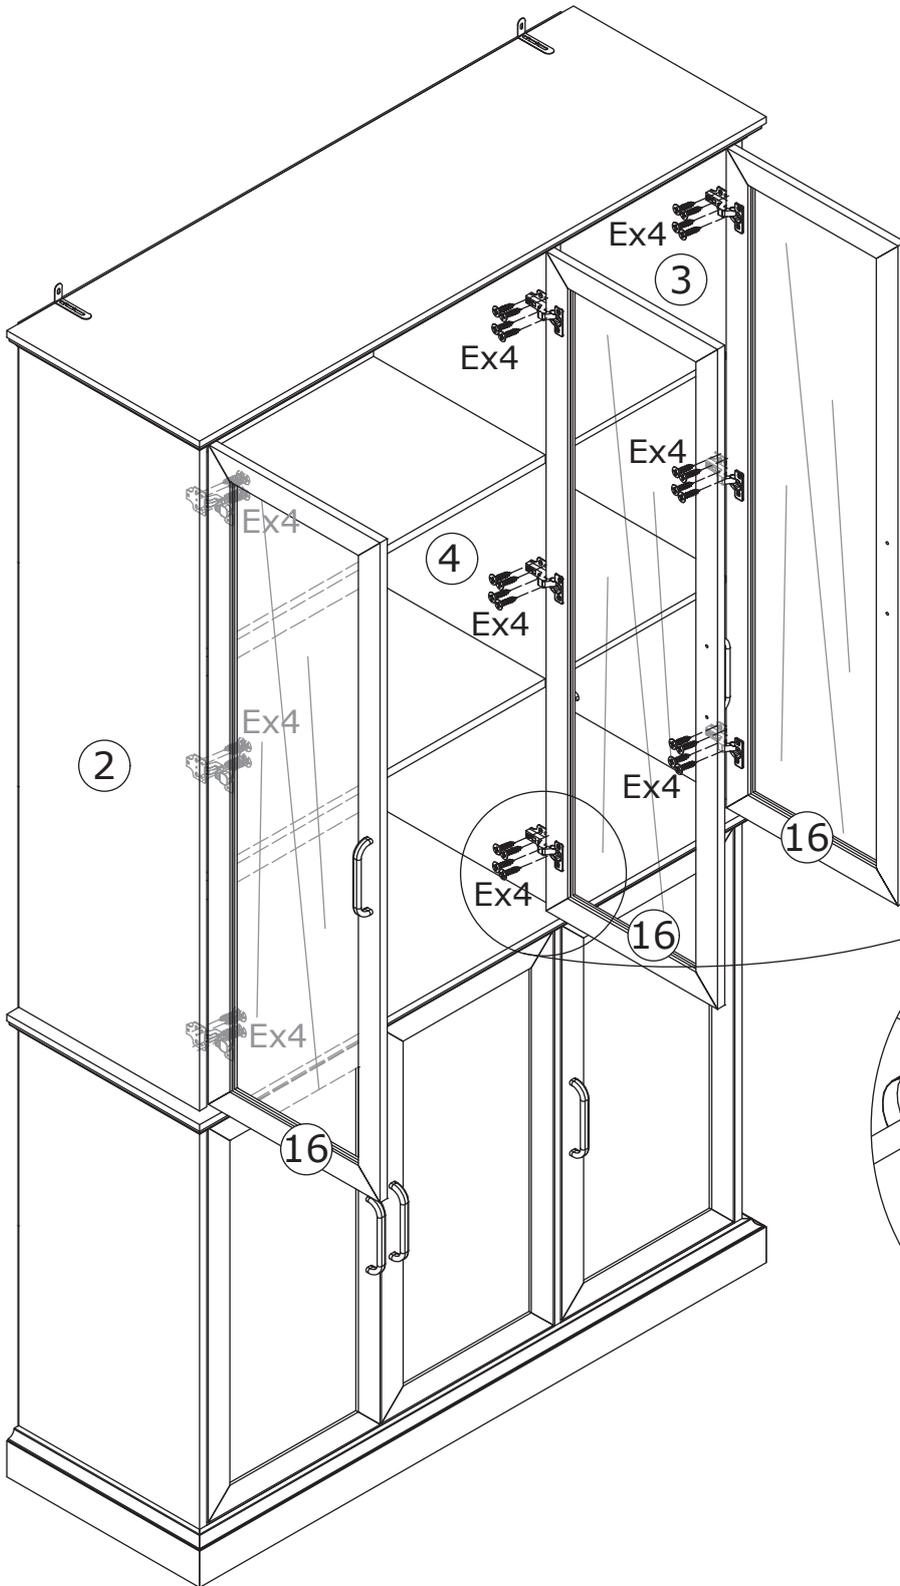


 
Assemble glass door panel 16 to upper component by fixing hinge with screw(E) as shown.

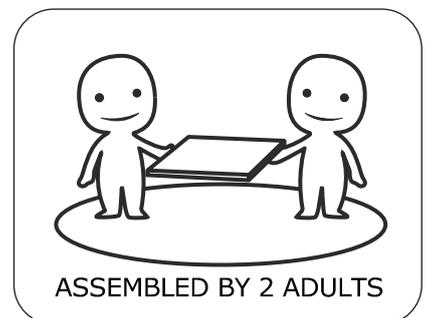




If doors are still not aligned if the hinges are properly correctly, please watch the video.


<https://youtu.be/n0Lb36SoODM>

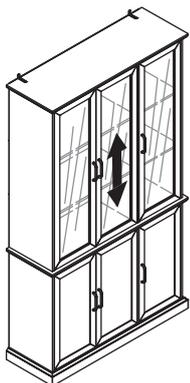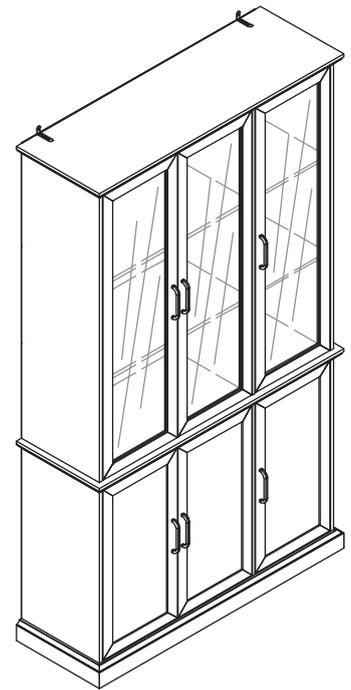



I

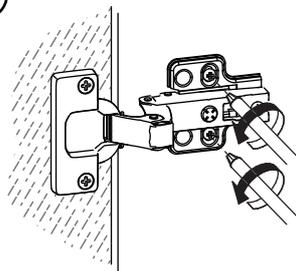


II

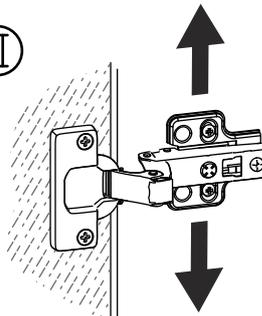


III

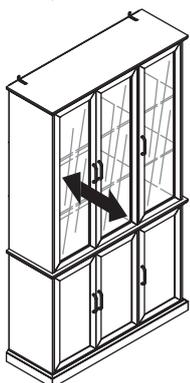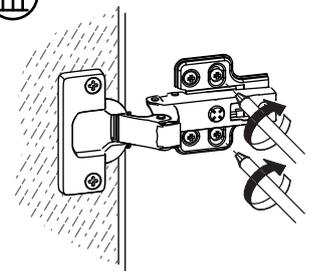



I

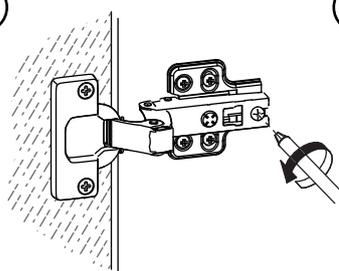


II

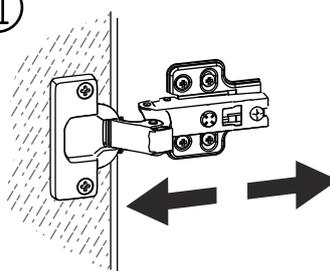


III

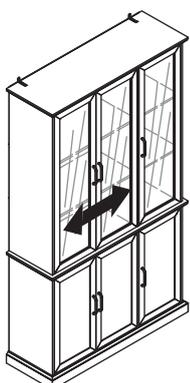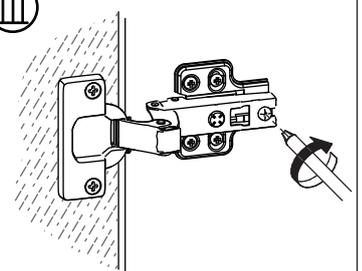

I

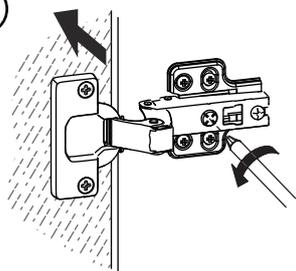

II

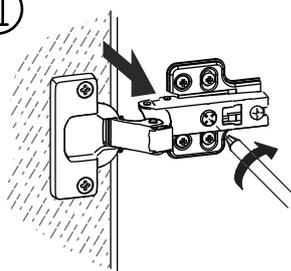

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com




208-820-0068

INSTALLATION



Product Manual

Version: 260146-01-24A-DC

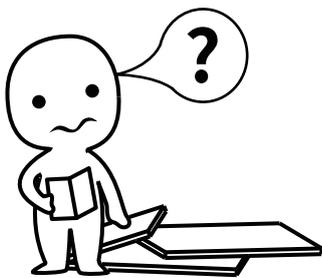


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

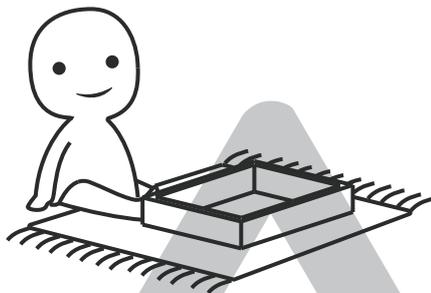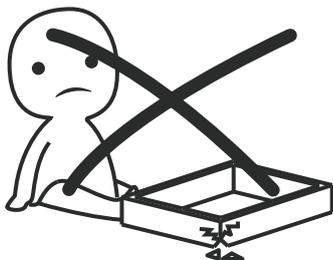


AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

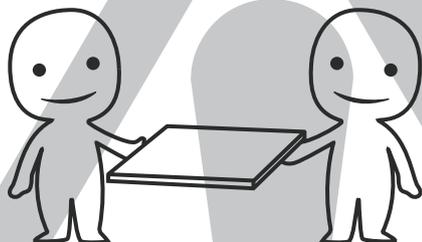

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

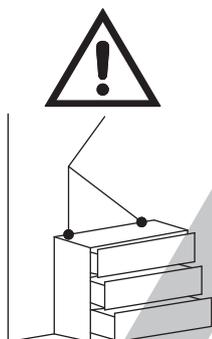

ANTI-TOPPLE WARNING !


Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

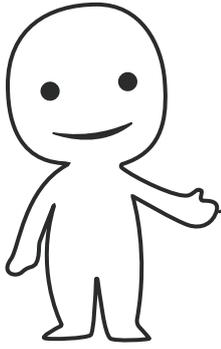

Please prepare the following tools

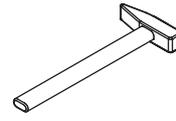  

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 38



 
Ø6 x 35 mm

B x 38




Ø15 x 10 mm

C x 28




Ø6 x 30 mm

D x 4

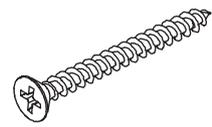


Ø4 x 35 mm

F x 4

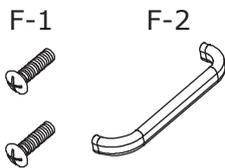


Ø4 x 20 mm

 G x 9



Ø4 x 30 mm

 H x 12



J x 38

 


Ø2.5 x 12 mm

K x 4



L x 8



Ø4 x 12 mm

M x 4




N x 10



P x 60



Ø4 x 14 mm

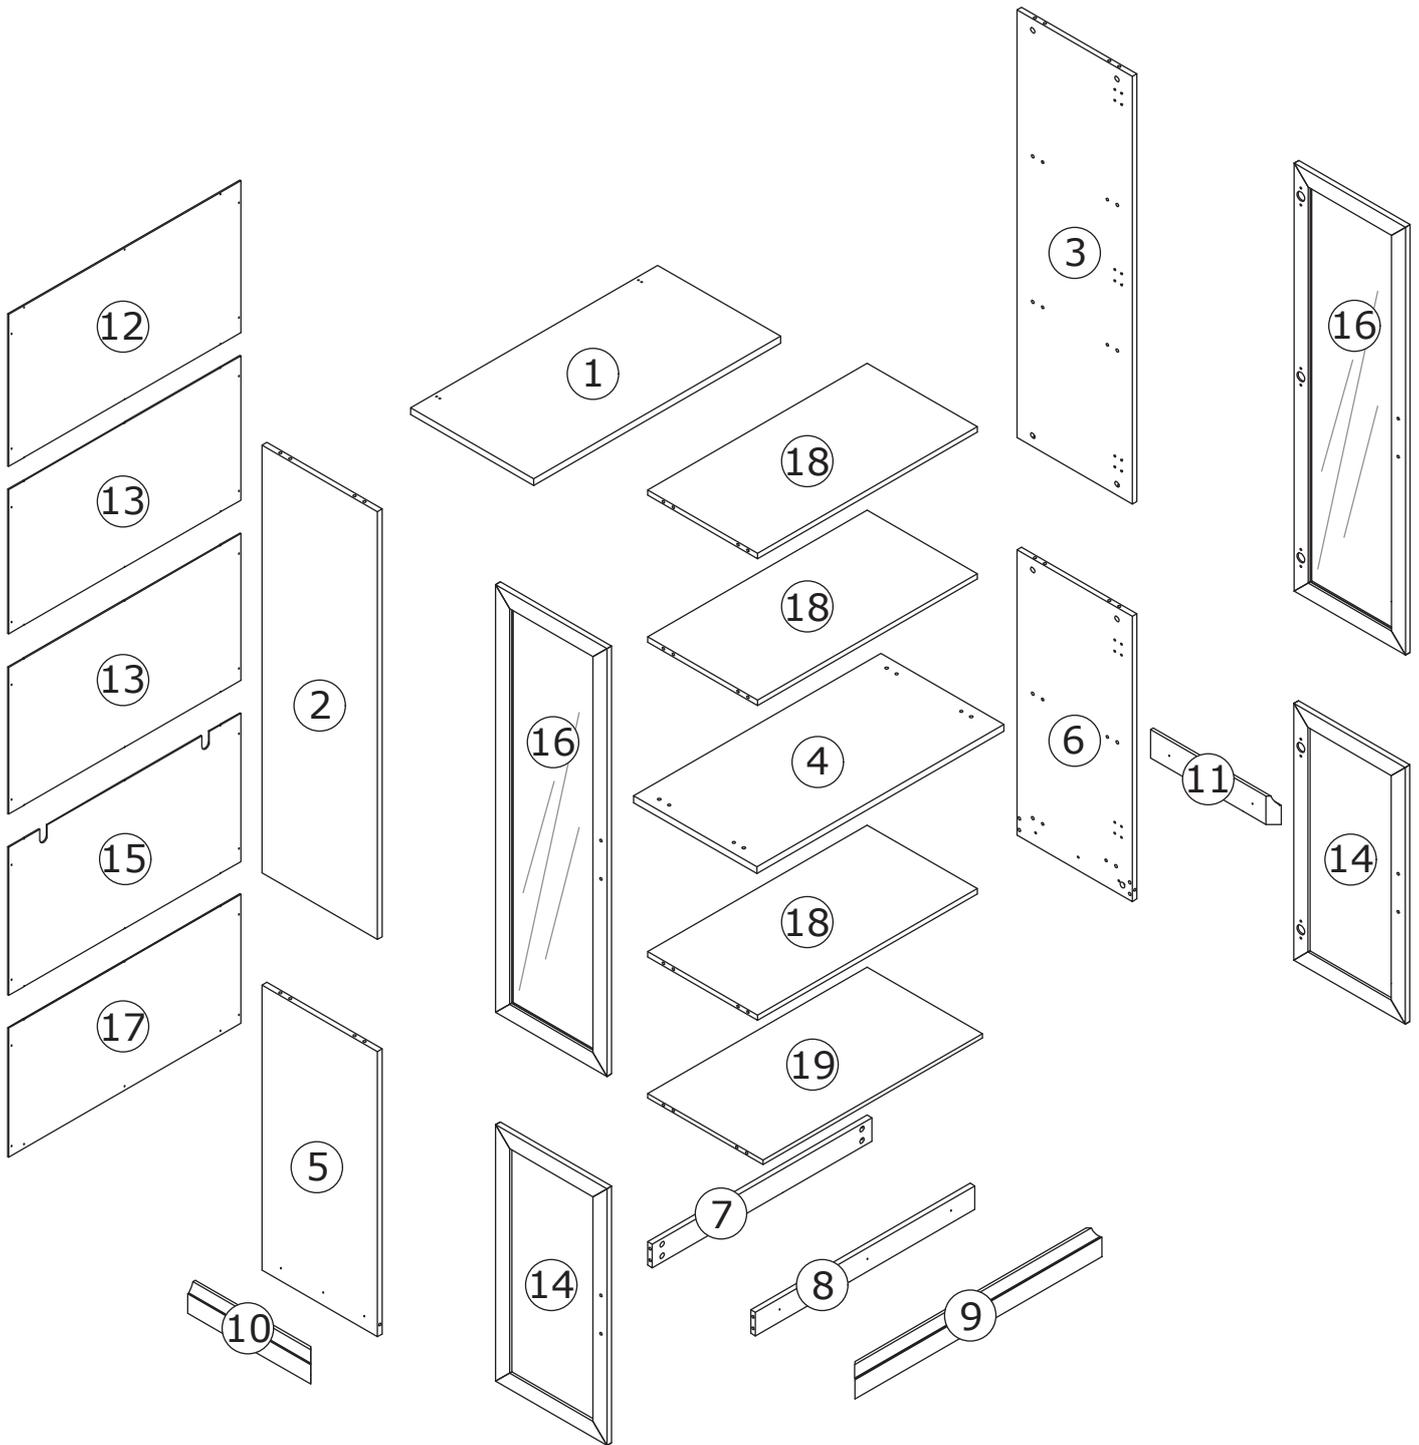

⚠ WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.






*This is a permanent label.
Do not remove!*

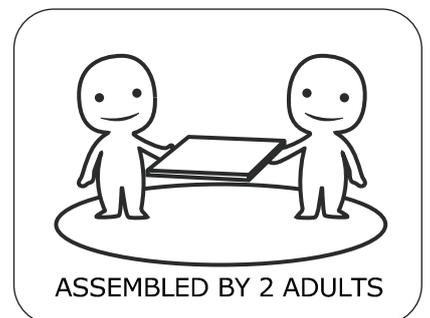


1

 A x 16
Ø6 x 35 mm

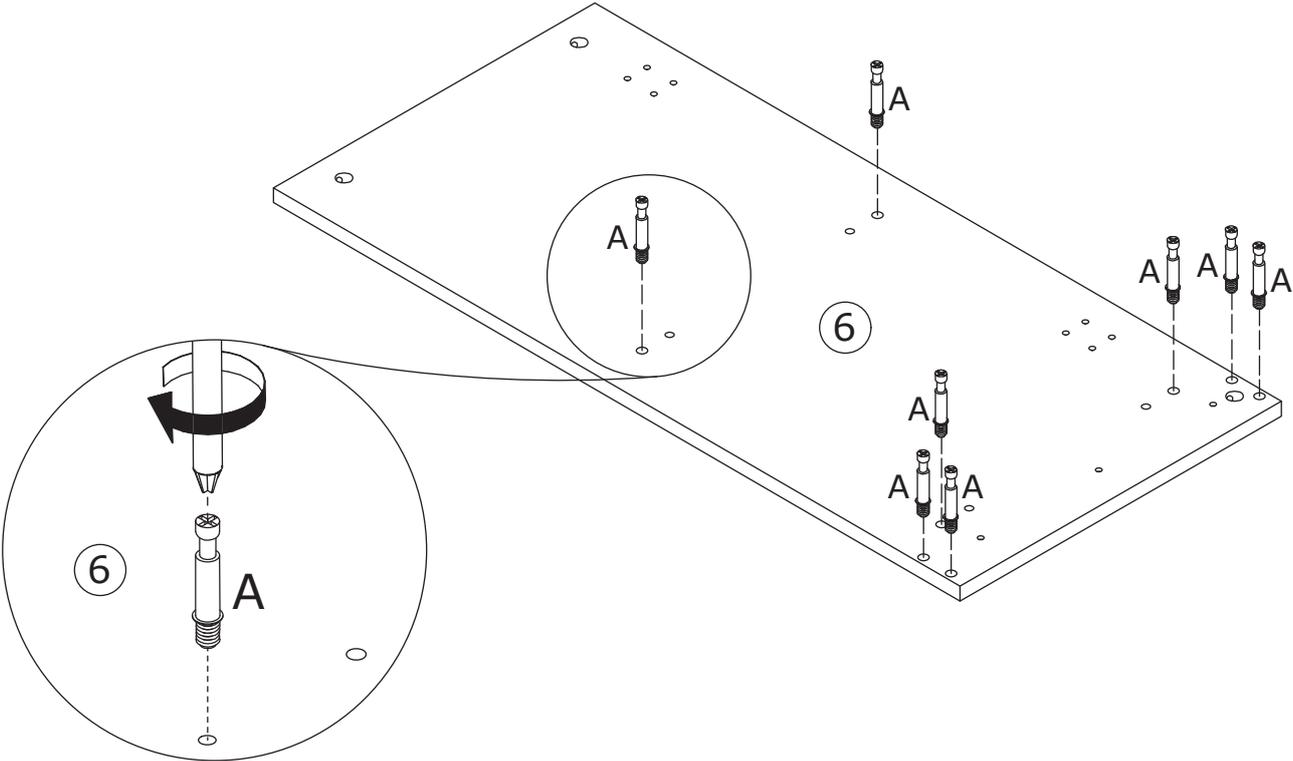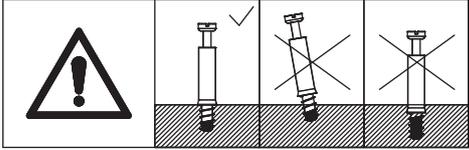





Screw eccentric rod(A) into panel 5 and 6 at first.

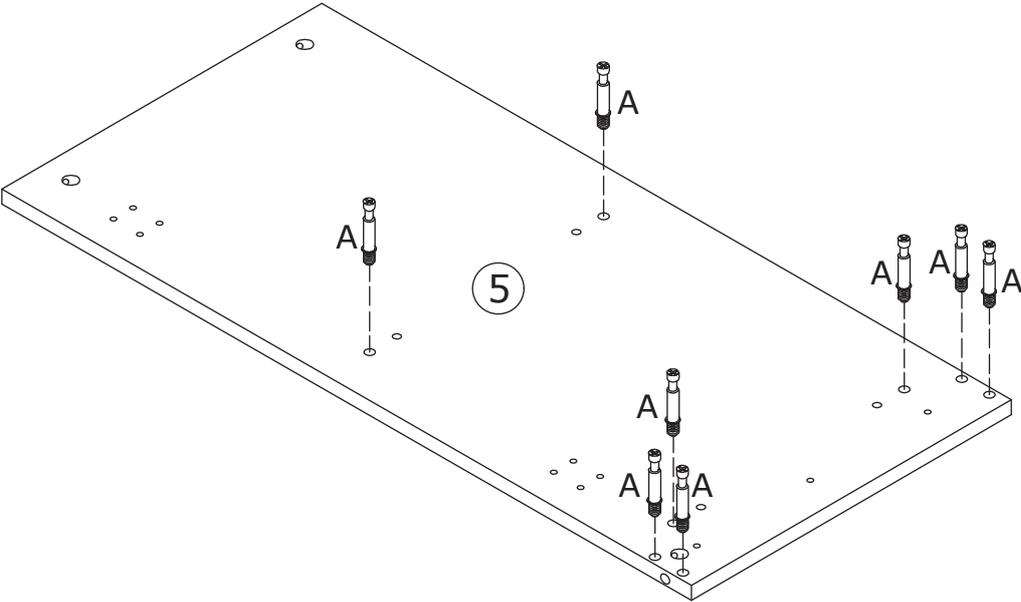

2




B x 8
Ø15 x 10 mm

 C x 4
Ø6 x 30 mm

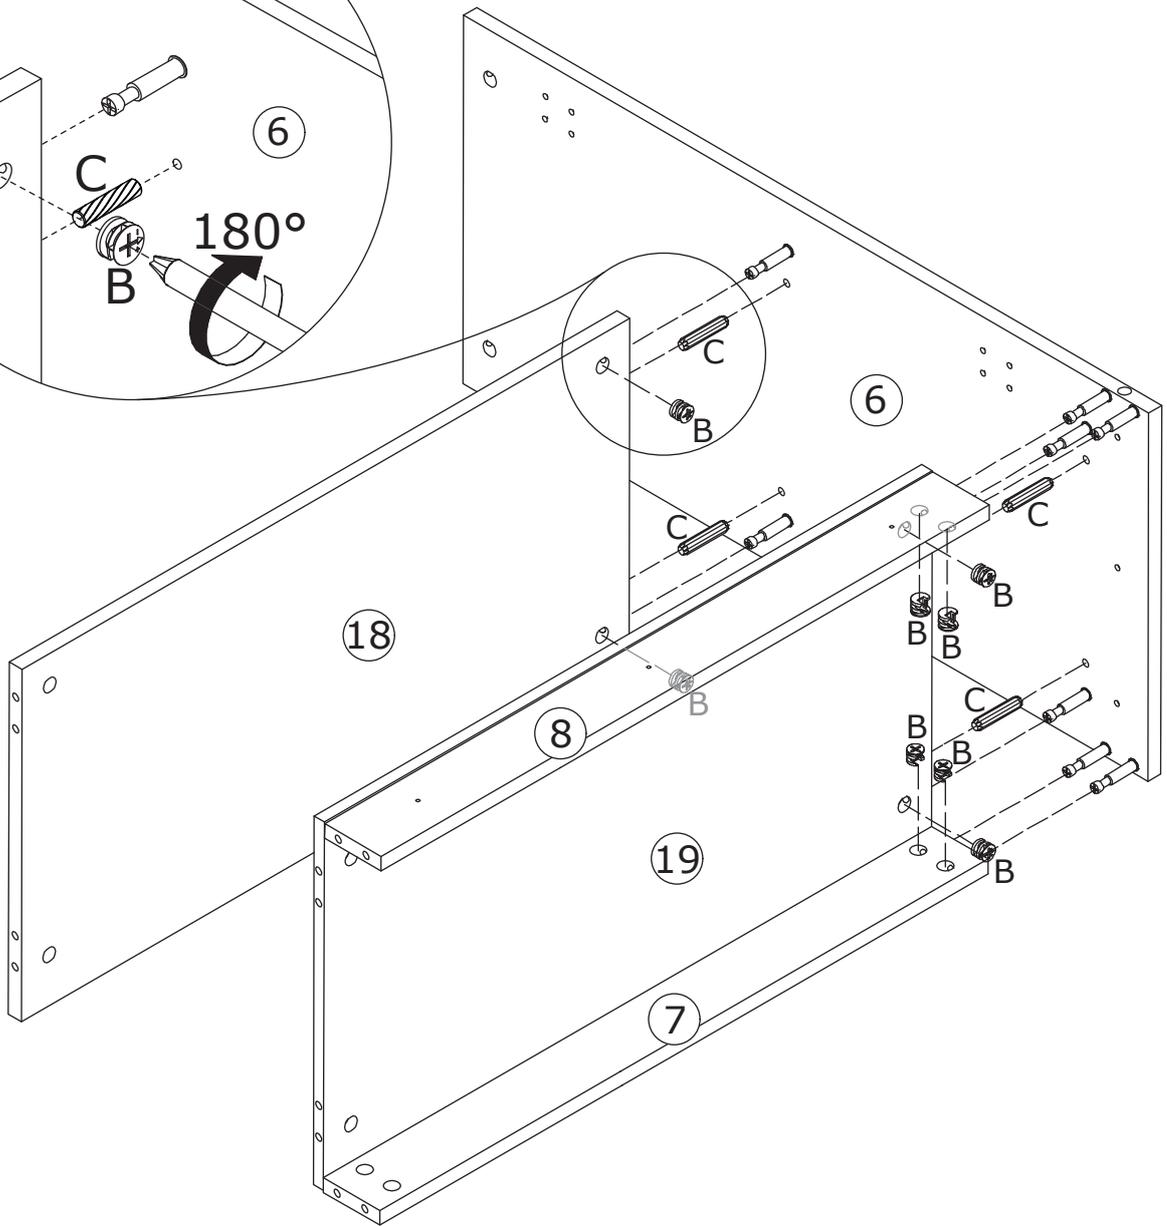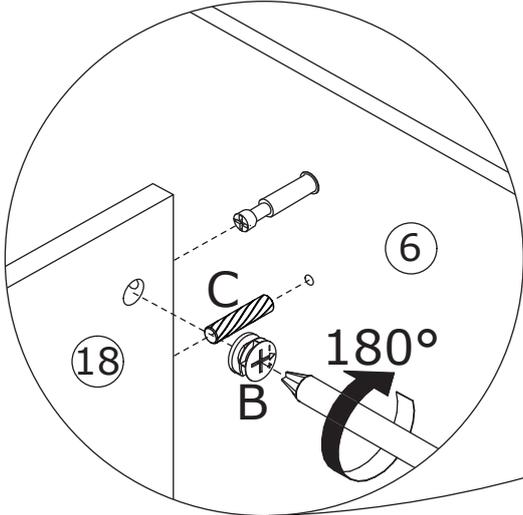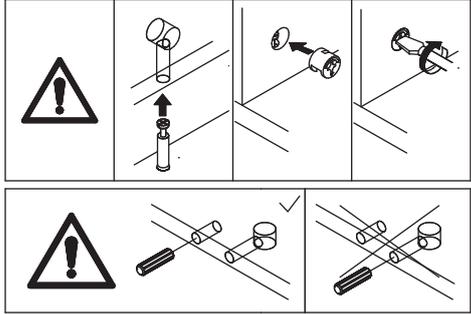



Attach panel 18, 19, 7 and 8 to panel 6 using wooden dowel(C), add cam lock(B) into panel 18,19,7,8 and turn clockwise to tighten as shown.

 3

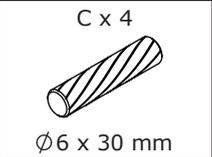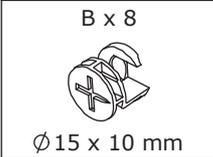

Attach panel 5 to panel 18, 19, 7 and 8 using wooden dowel(C), add cam lock(B) into panel 18,19,7,8 and turn clockwise to tighten as shown.

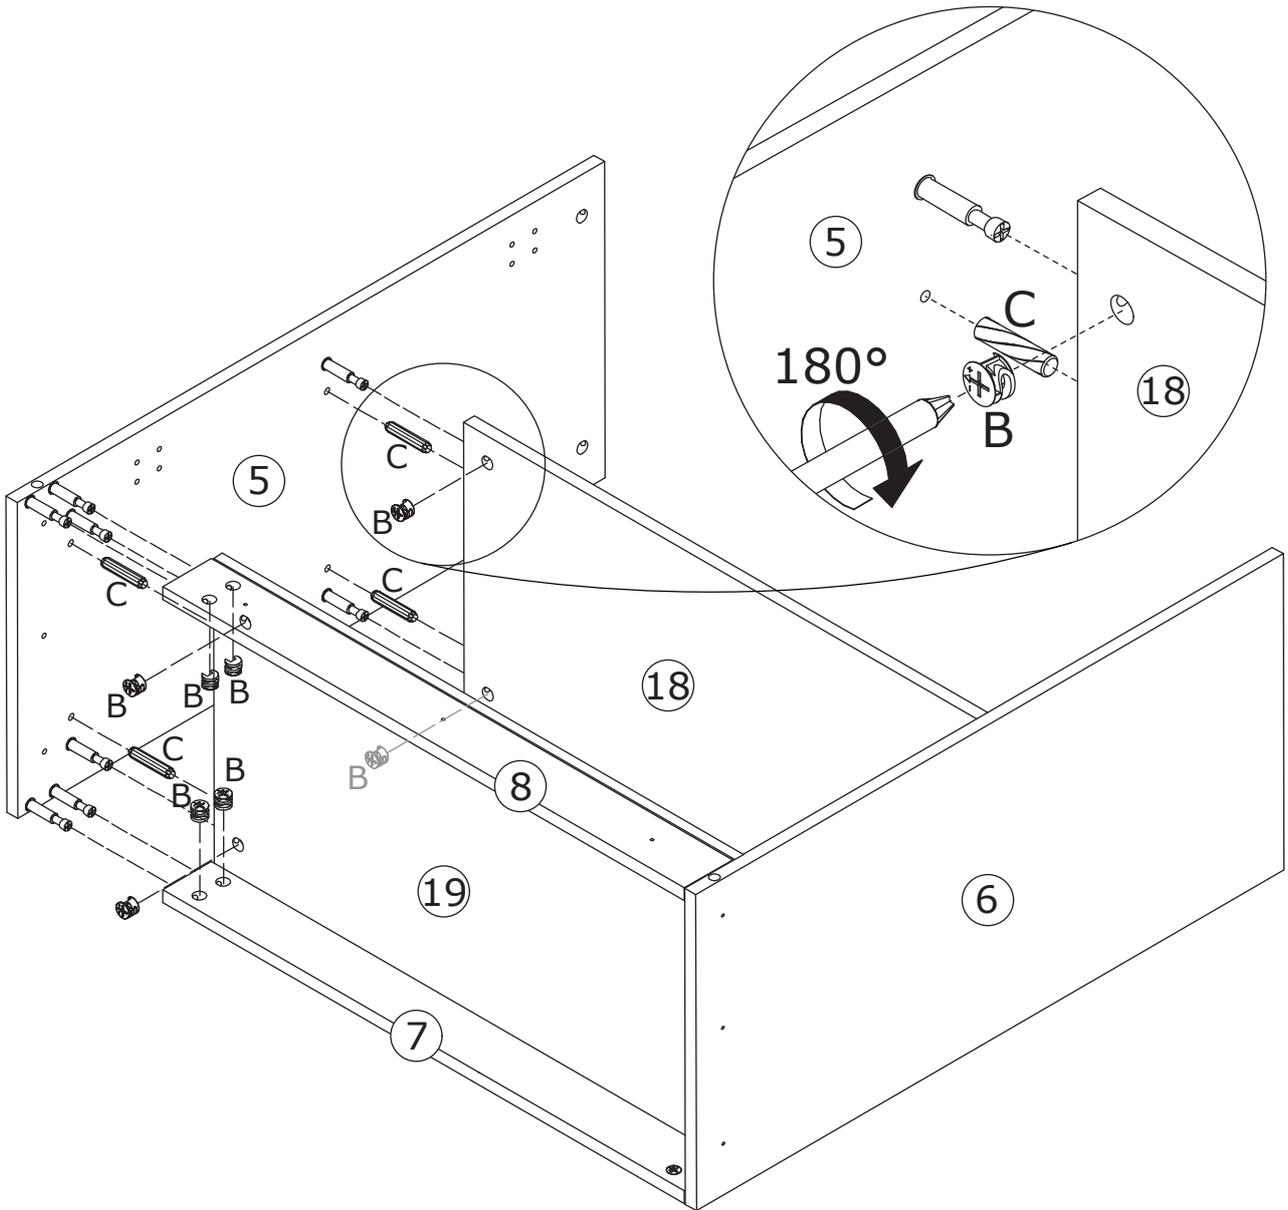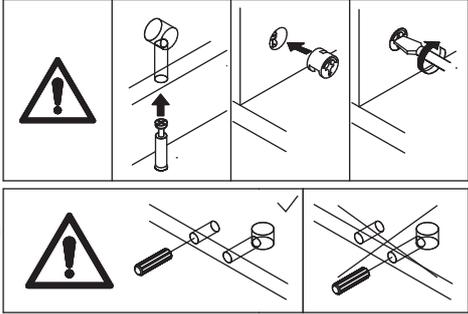

4

A x 2



Ø6 x 35 mm

B x 2





 


Ø15 x 10 mm

G x 9





Ø4 x 30 mm

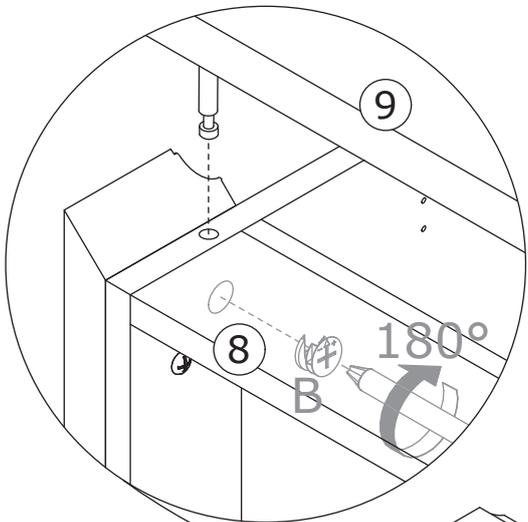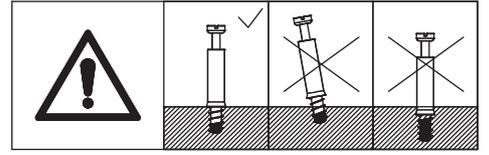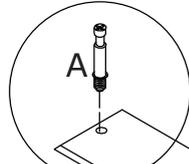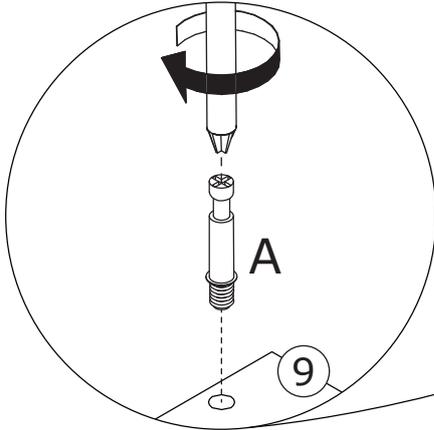






Fix panel 10 and 11 to panel 5 and 6 with screw(G) as shown.

Screw eccentric rod(A) into panel 9 at first. Attach panel 9 to panel 5 and 6, add cam lock(B) into and turn clockwise to tighten as shown.

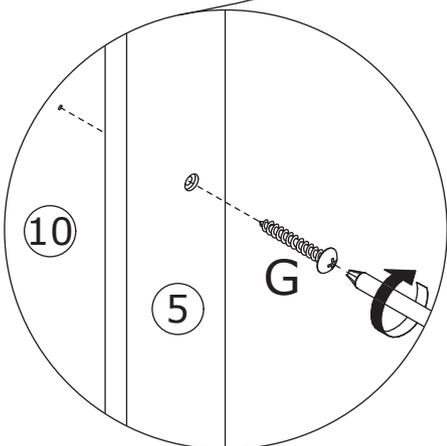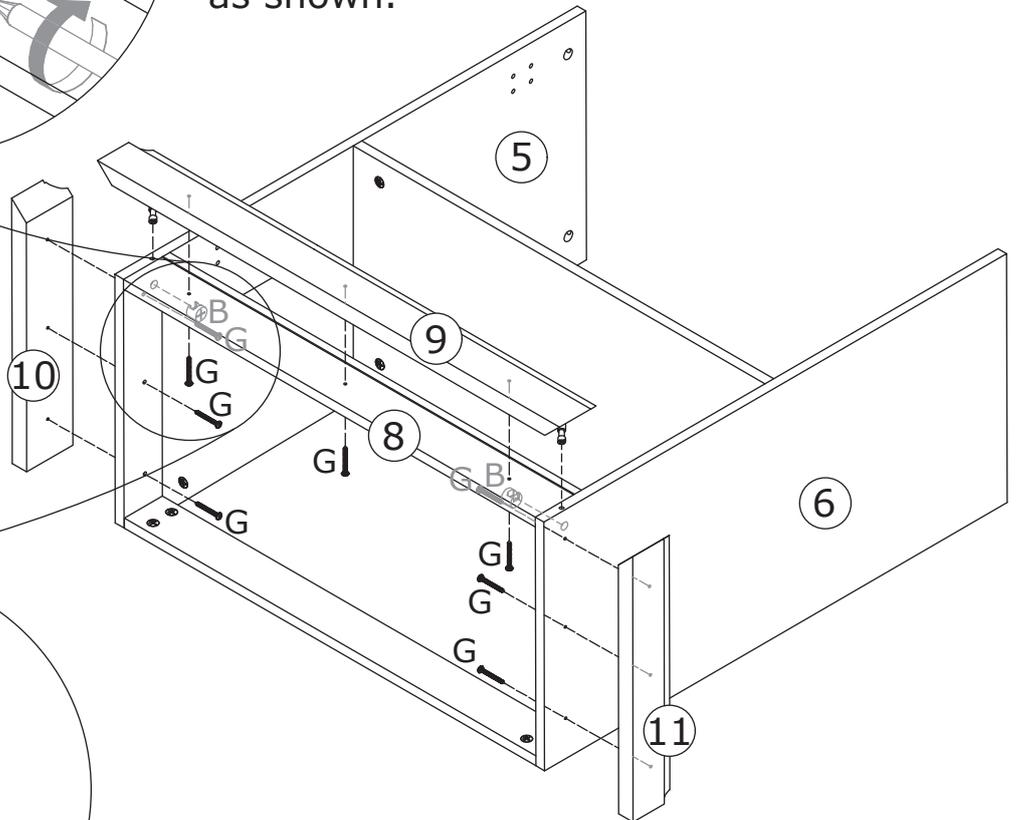





Fix panel 9 to panel 8 with screw(G) as shown.

 5

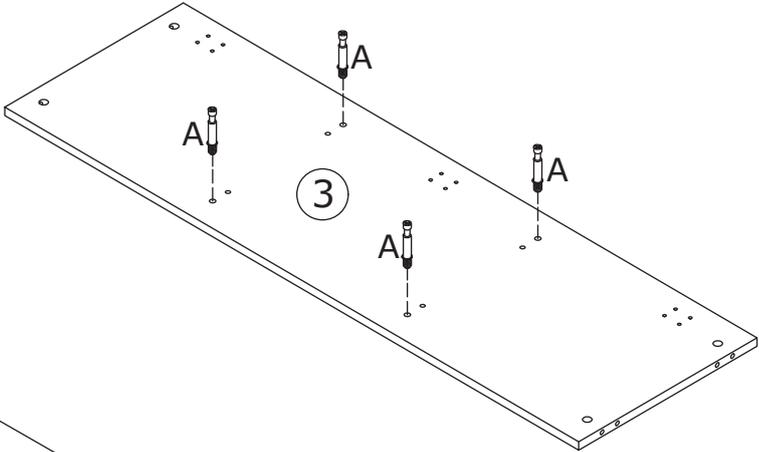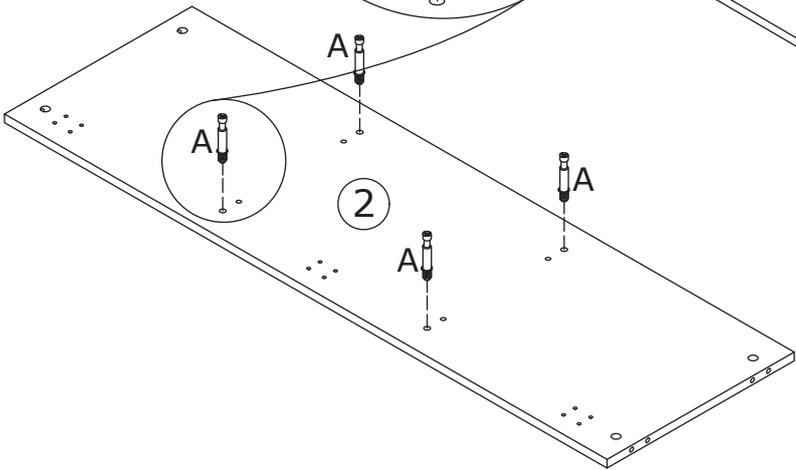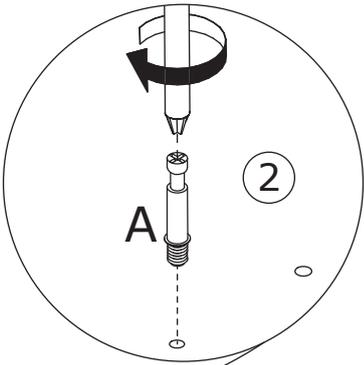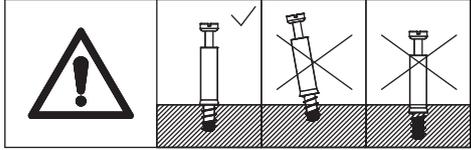



Screw eccentric rod(A) into panel 2 and 3 at first.


 

6

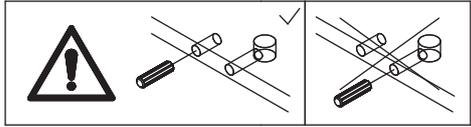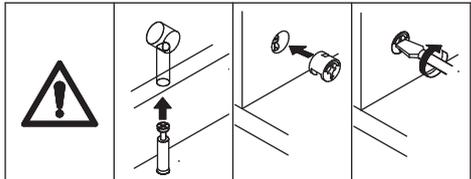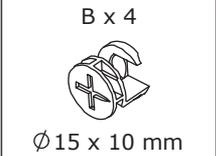




Connect panel 18 to panel 2 using wooden dowel(C), add cam lock(B) into and turn clockwise to tighten as shown.

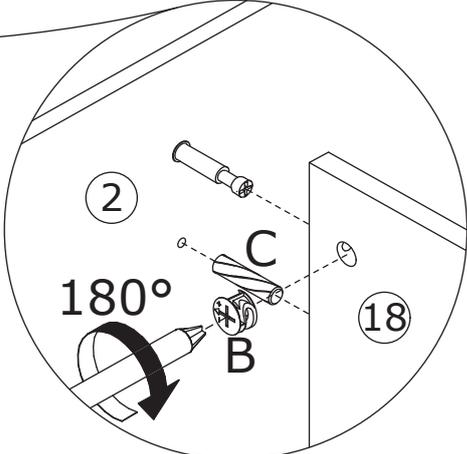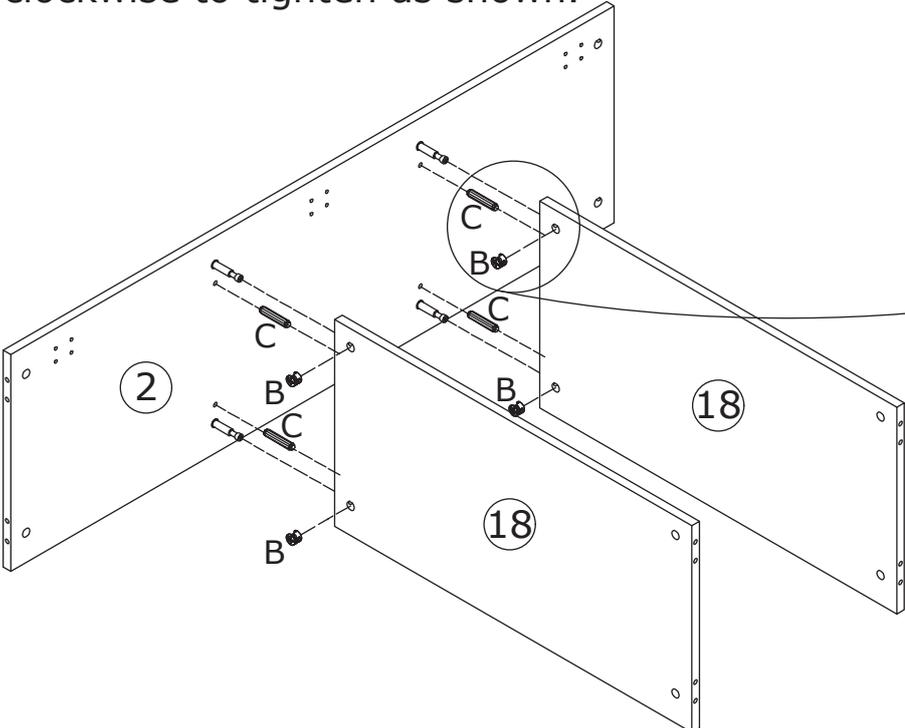





7

 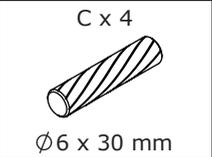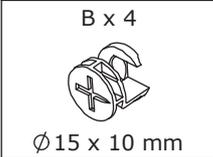


Connect panel 3 to panel 18 using wooden dowel(C), add cam lock(B) into and turn clockwise to tighten as shown.

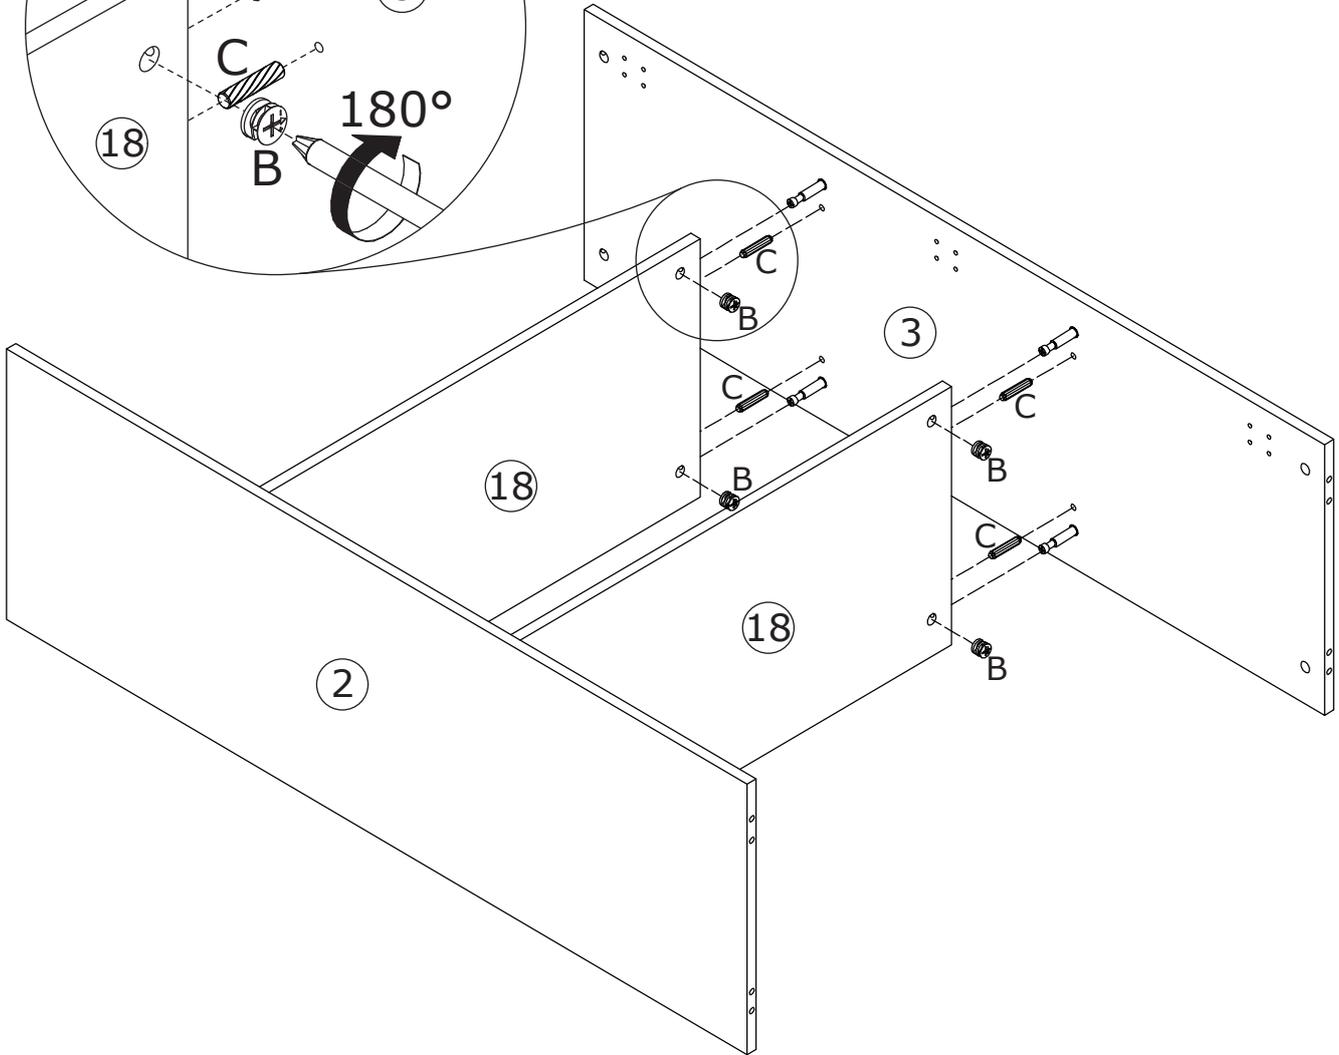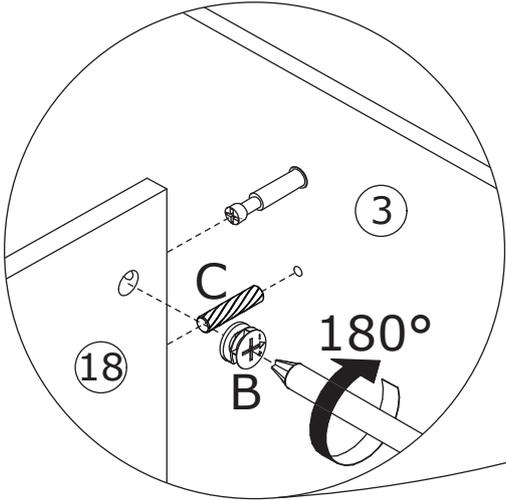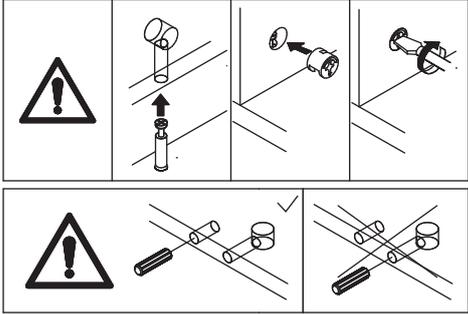


8

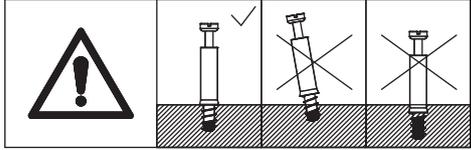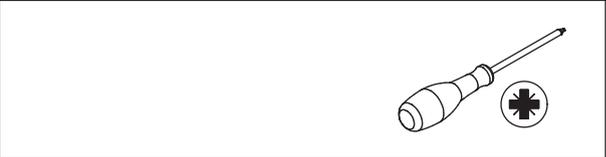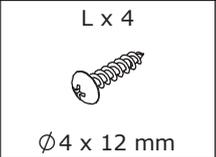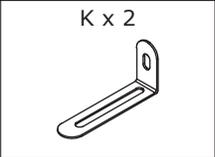

Screw eccentric rod(A) into panel 1 at first.
Flip to back, fix part(K) with screw(L) as shown.

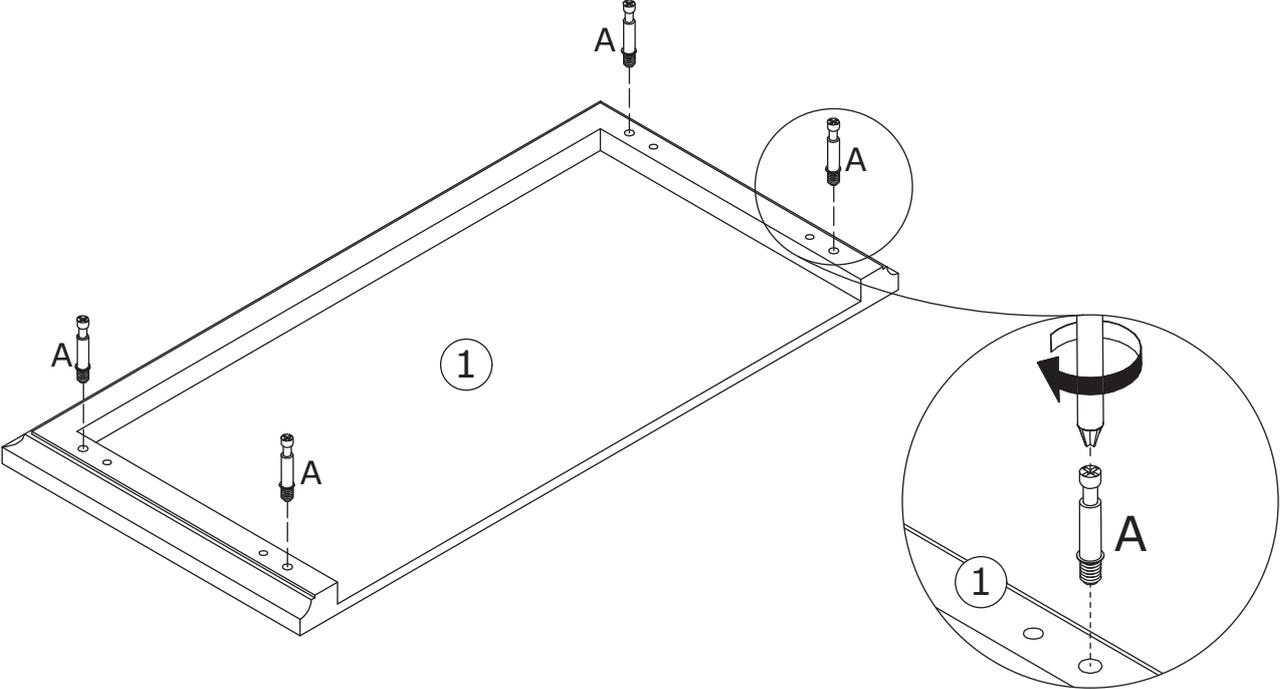





180°

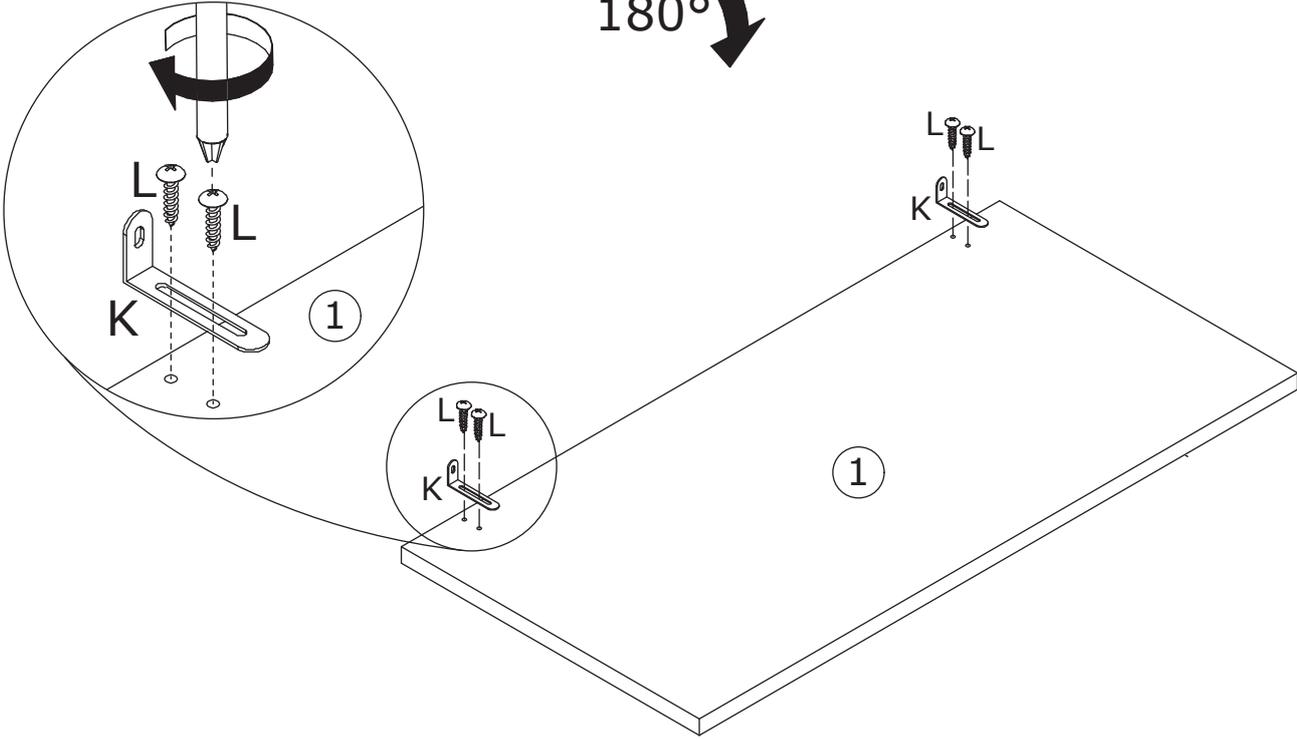

9




B x 4
Ø15 x 10 mm

 C x 4
Ø6 x 30 mm

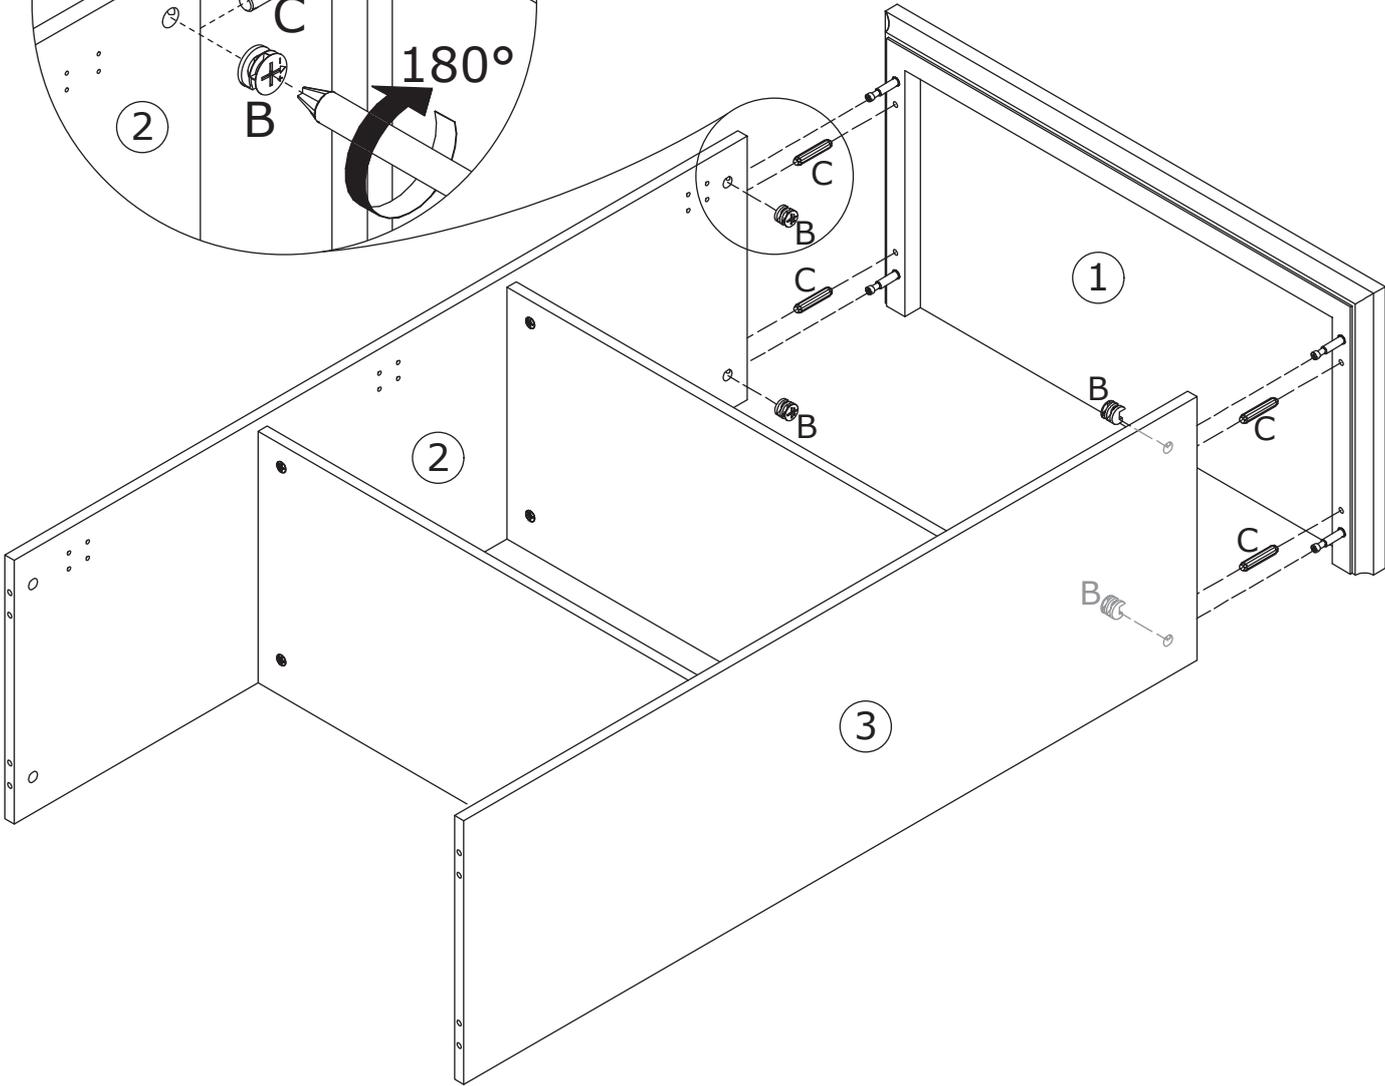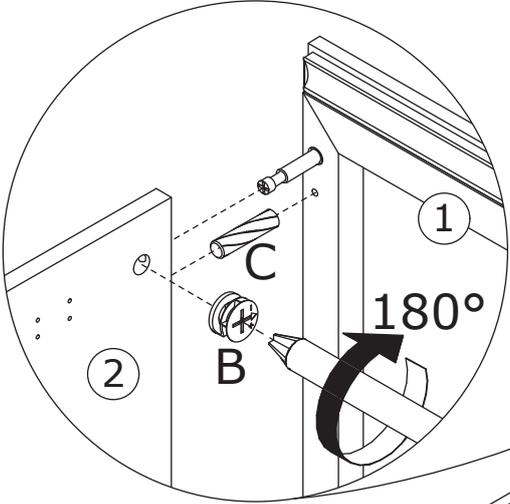
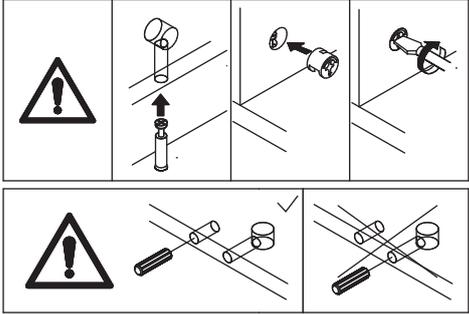



Attach panel 1 to panel 2 and 3 using wooden dowel(C), add cam lock(B) into and turn clockwise to tighten as shown.







10

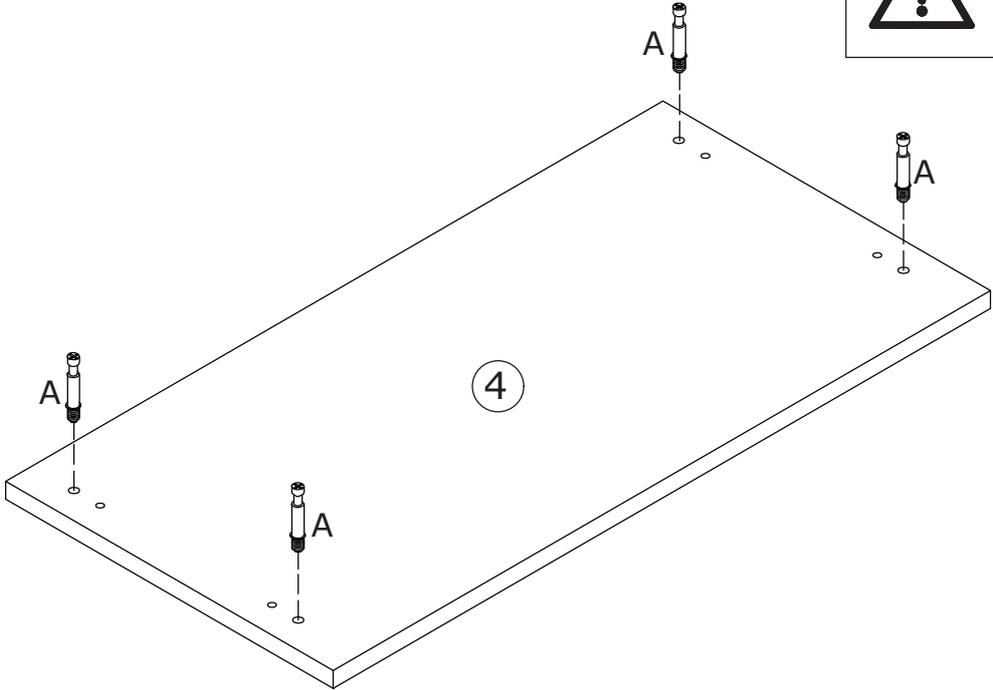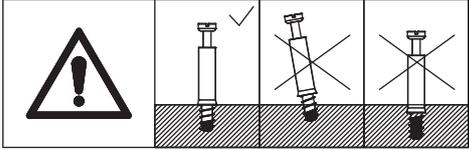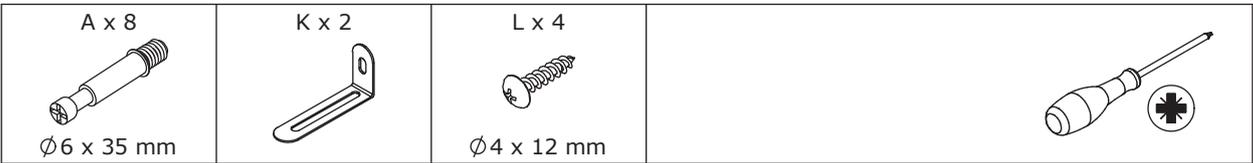

Screw eccentric rod(A) into panel 4 at first. **Flip to back**, fix part(K) with screw(L) and screw eccentric rod(A) into as shown.

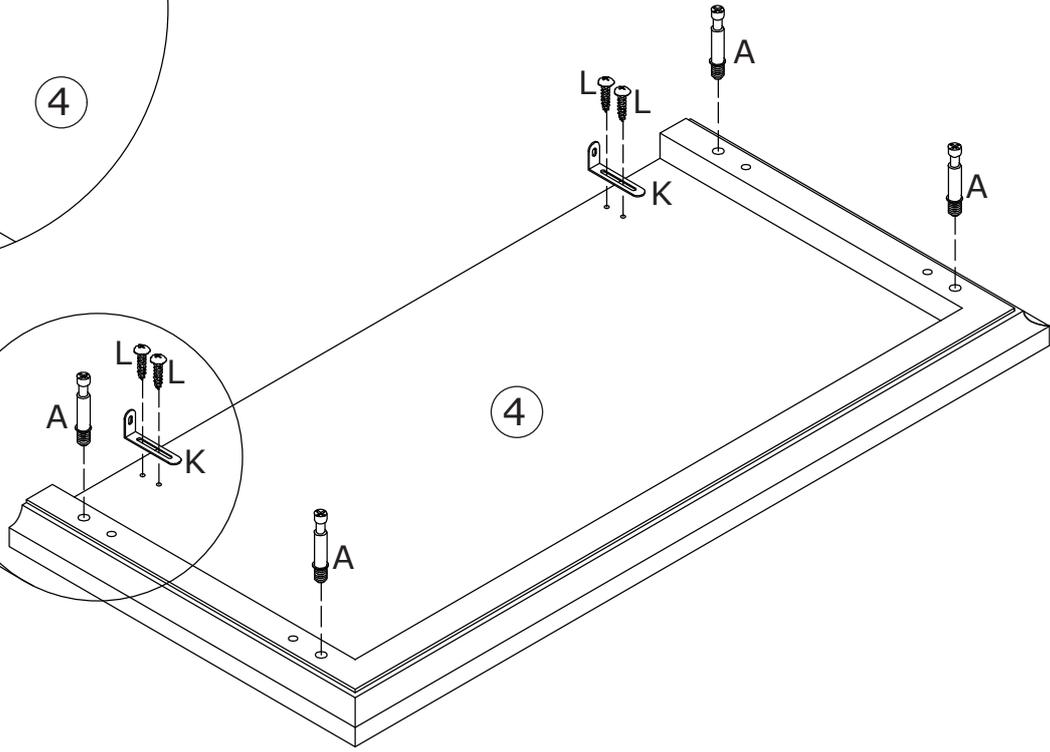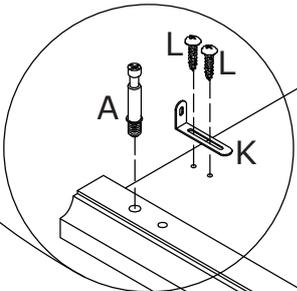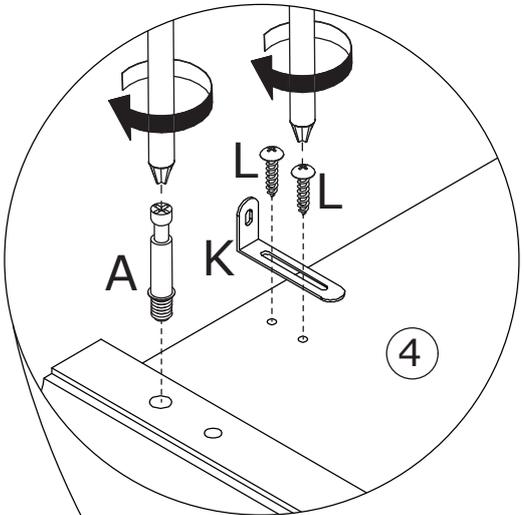


11

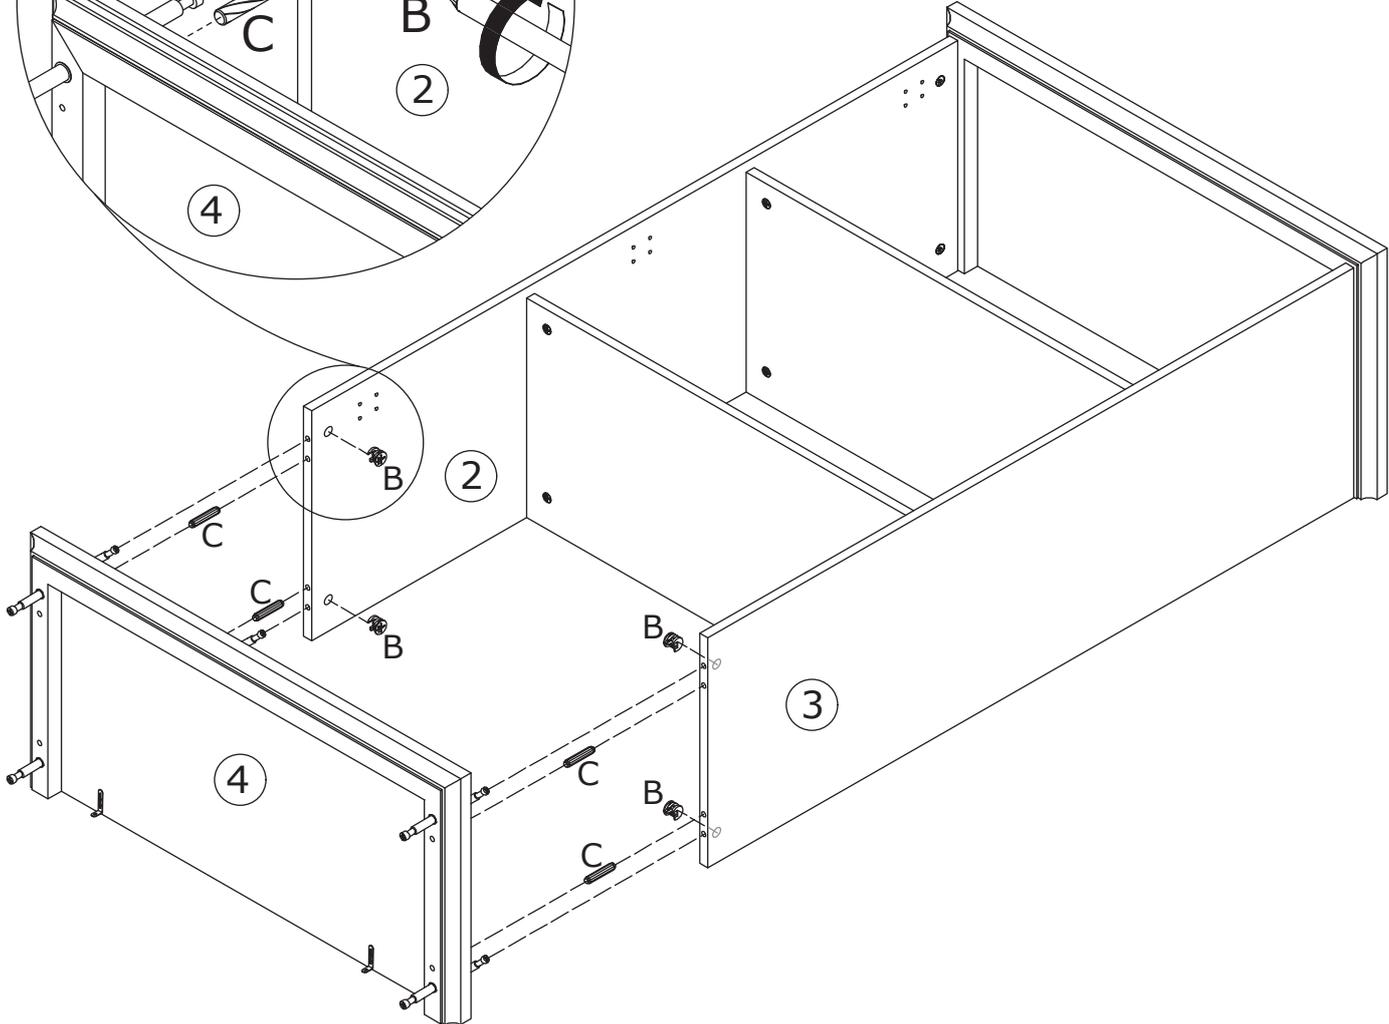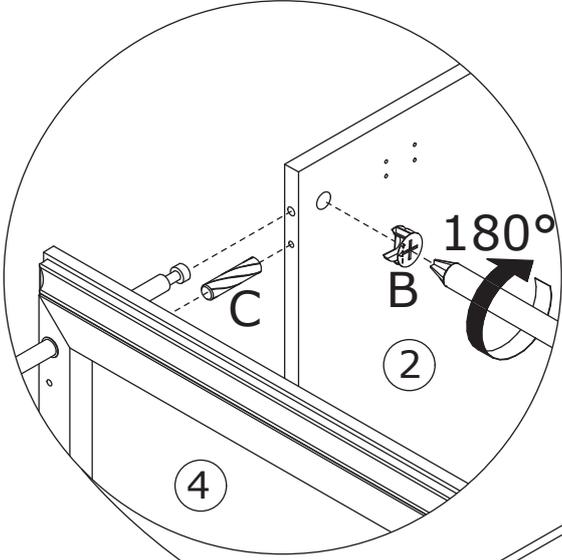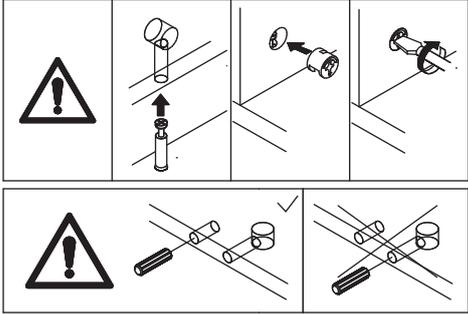 
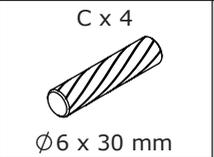
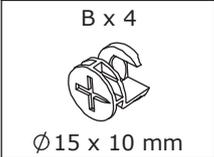


Attach panel 4 to panel 2 and 3 using wooden dowel(C), add cam lock(B) into and turn clockwise to tighten as shown.



 
12

<p>B x 4</p>  <p>Ø 15 x 10 mm</p>	<p>C x 4</p>  <p>Ø 6 x 30 mm</p>	 
--	---	---


Connect the two components using wooden dowel(C), add cam lock(B) into and turn clockwise to tighten as shown.

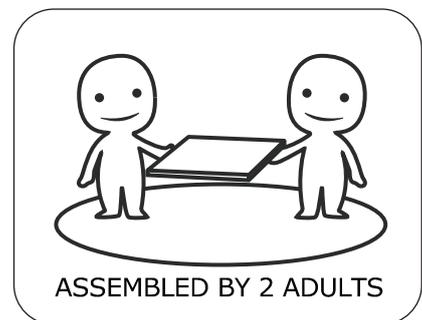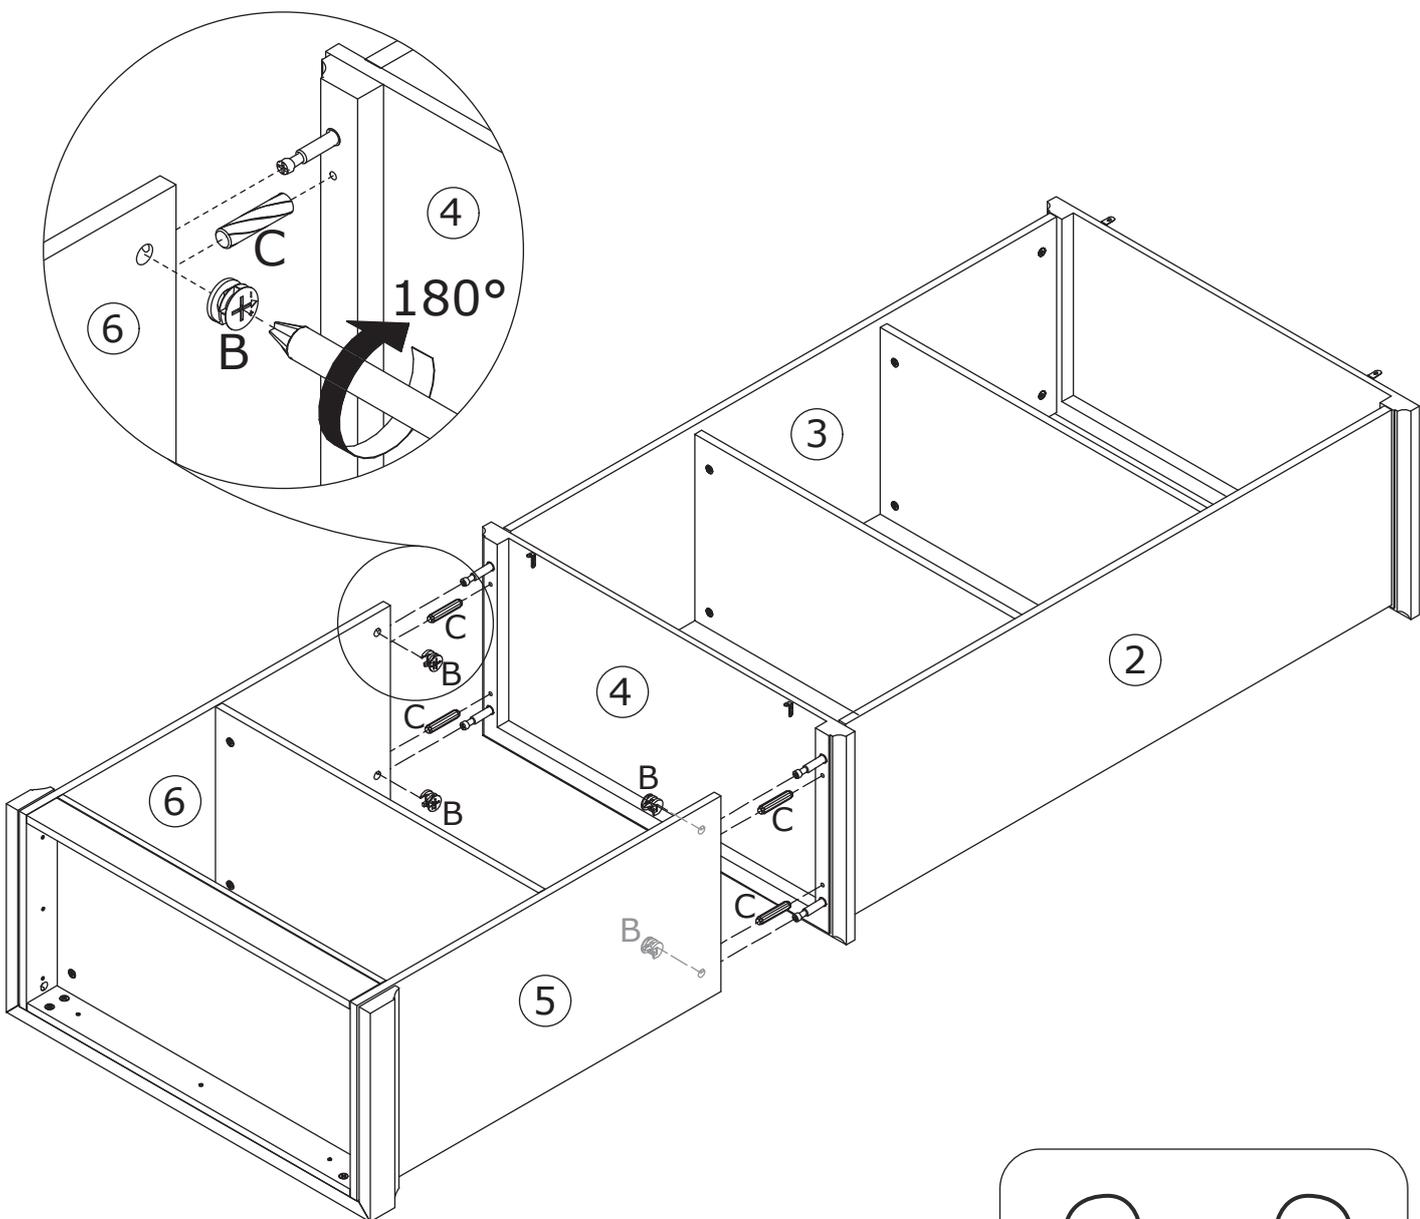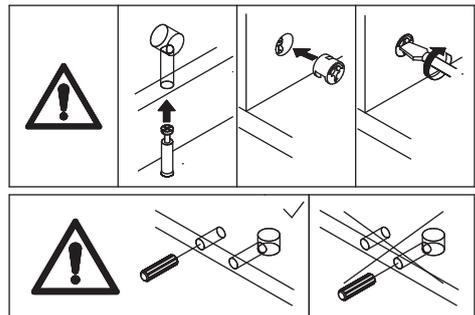


13

 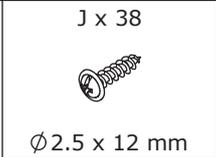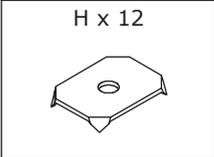


Fix back panel 12, 13, 15 and 17 to the unit with screw(J) at first.
Fix iron sheet(H) to back panels with screw(J) as shown.

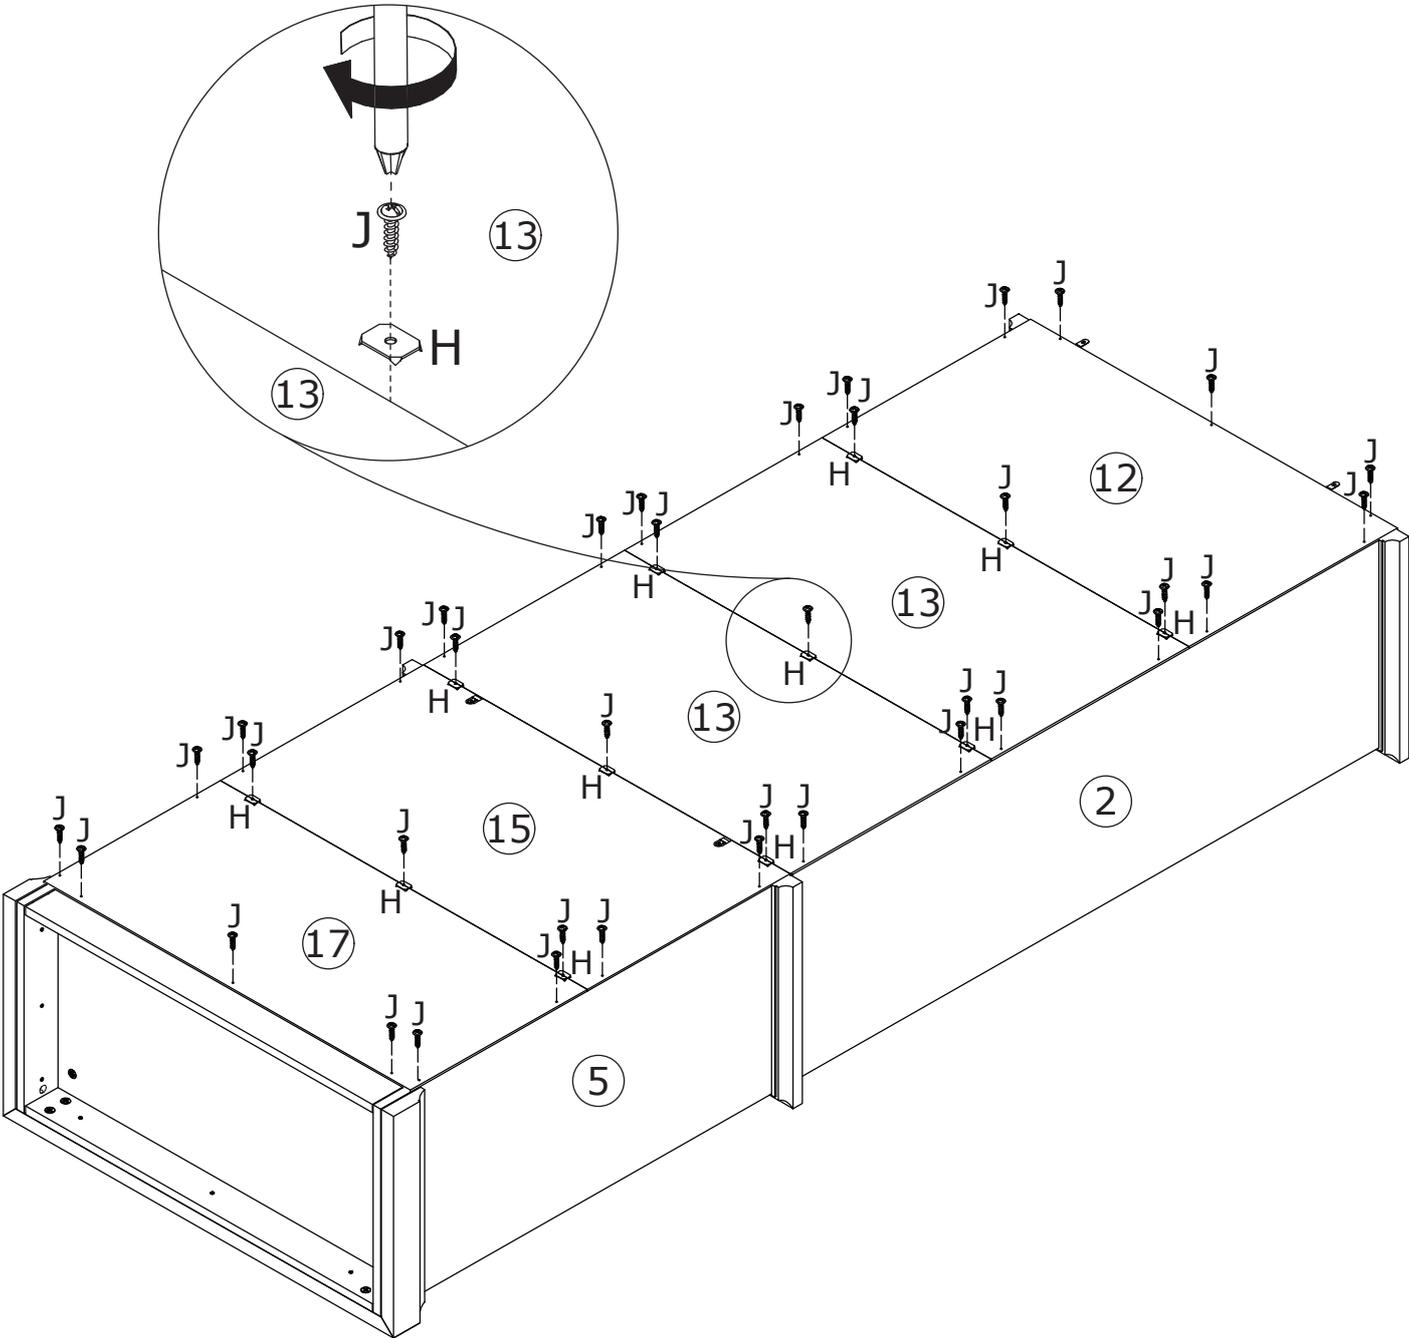


14

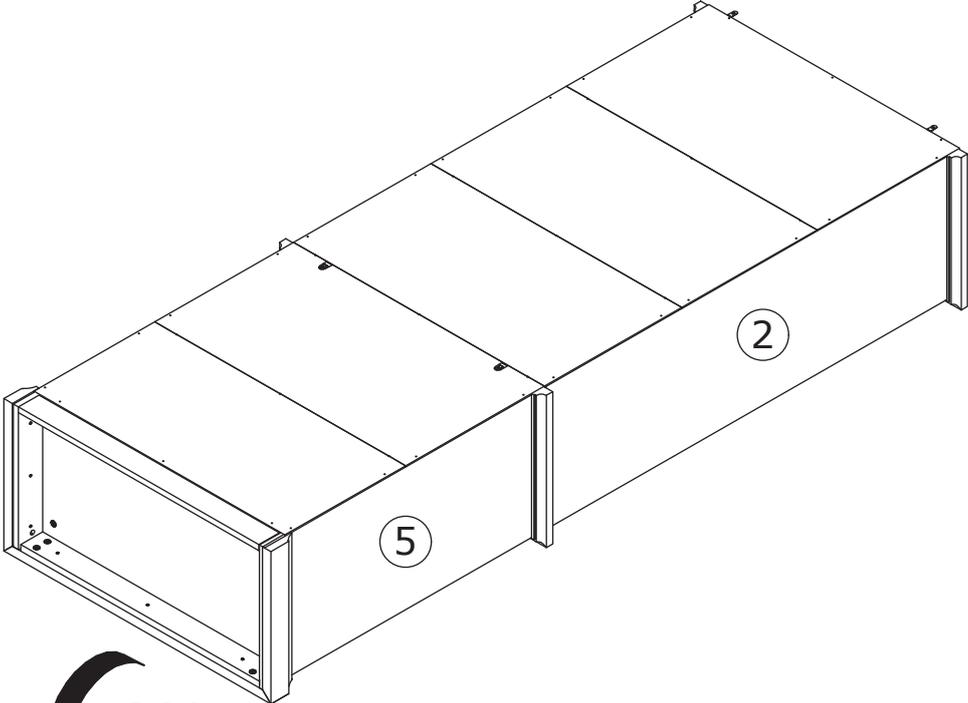






180°

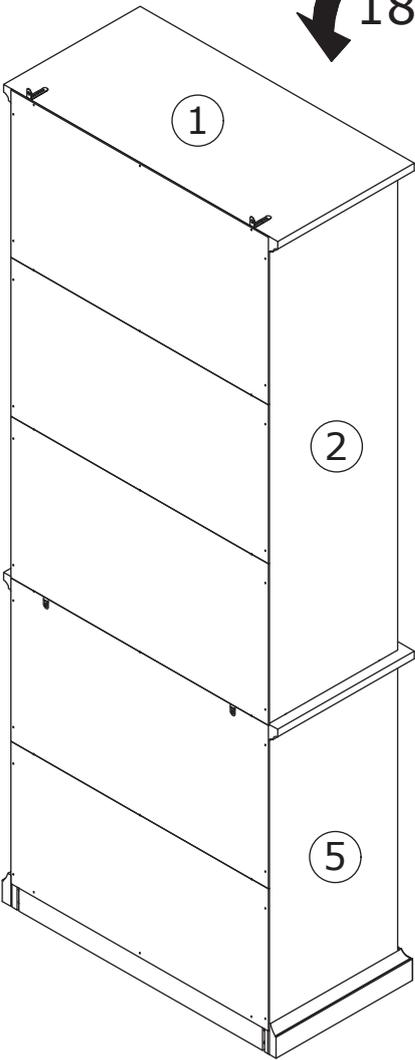


It takes 4 people to stand the cabinet up

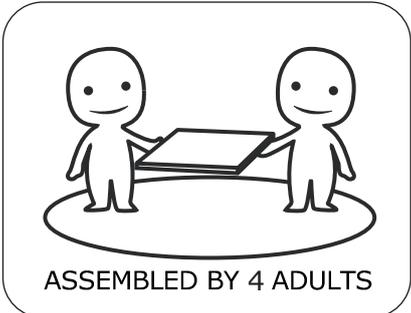








15

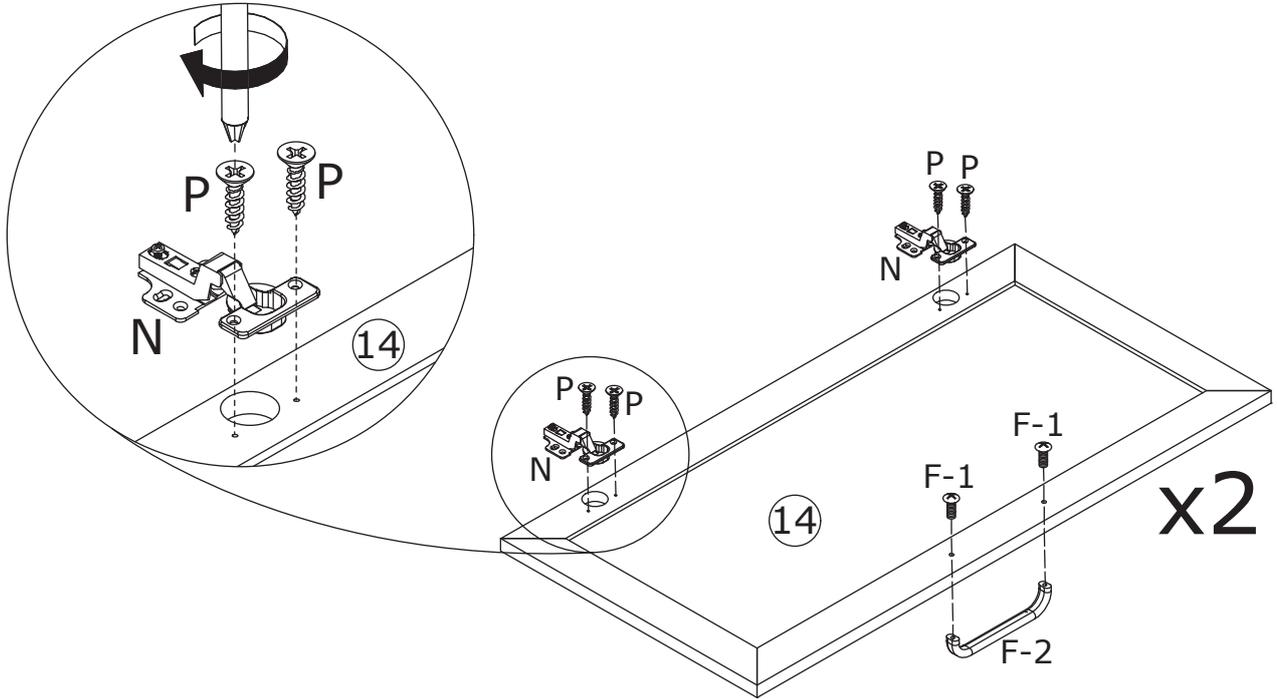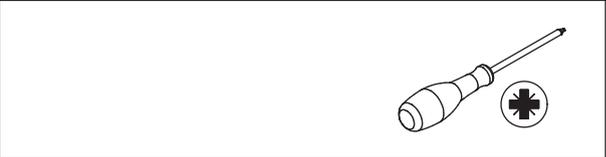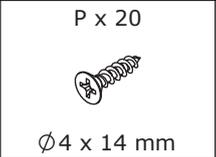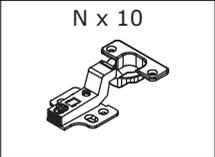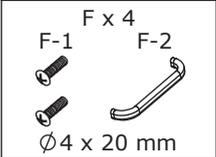




Fix hinge(N) to panel 14 and 16 with screw(P) at first. Fix handle(F) as shown.

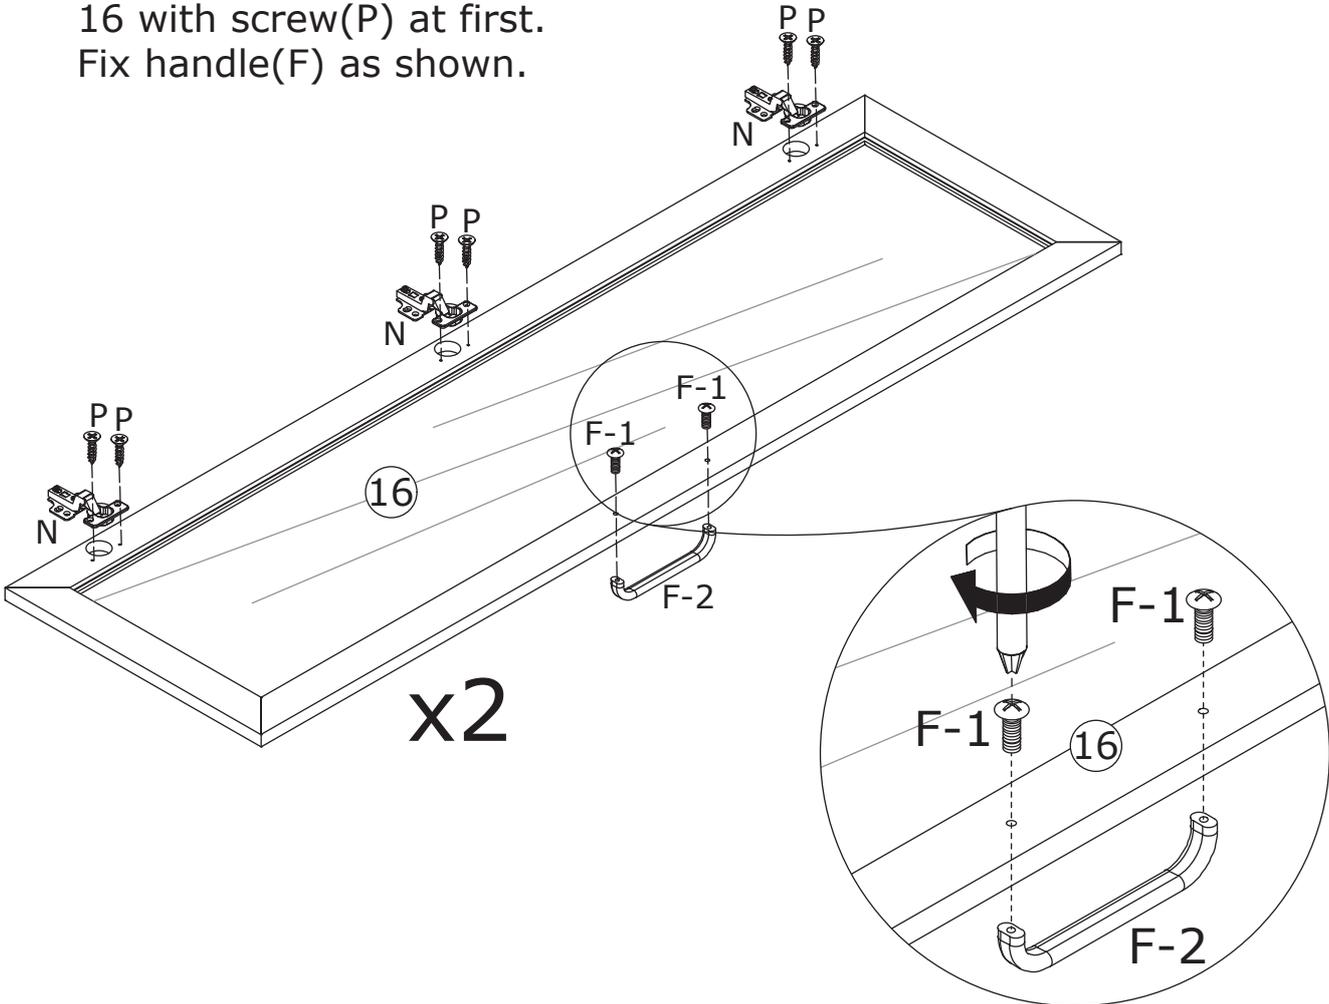


16

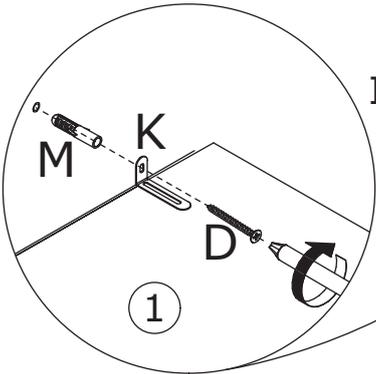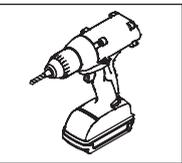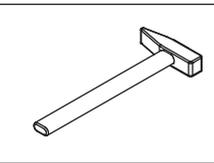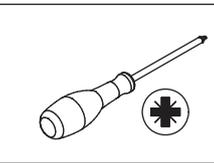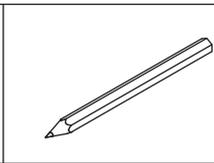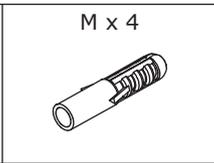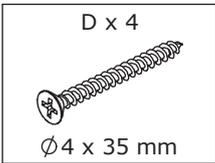


Install anti-tipping device as shown.

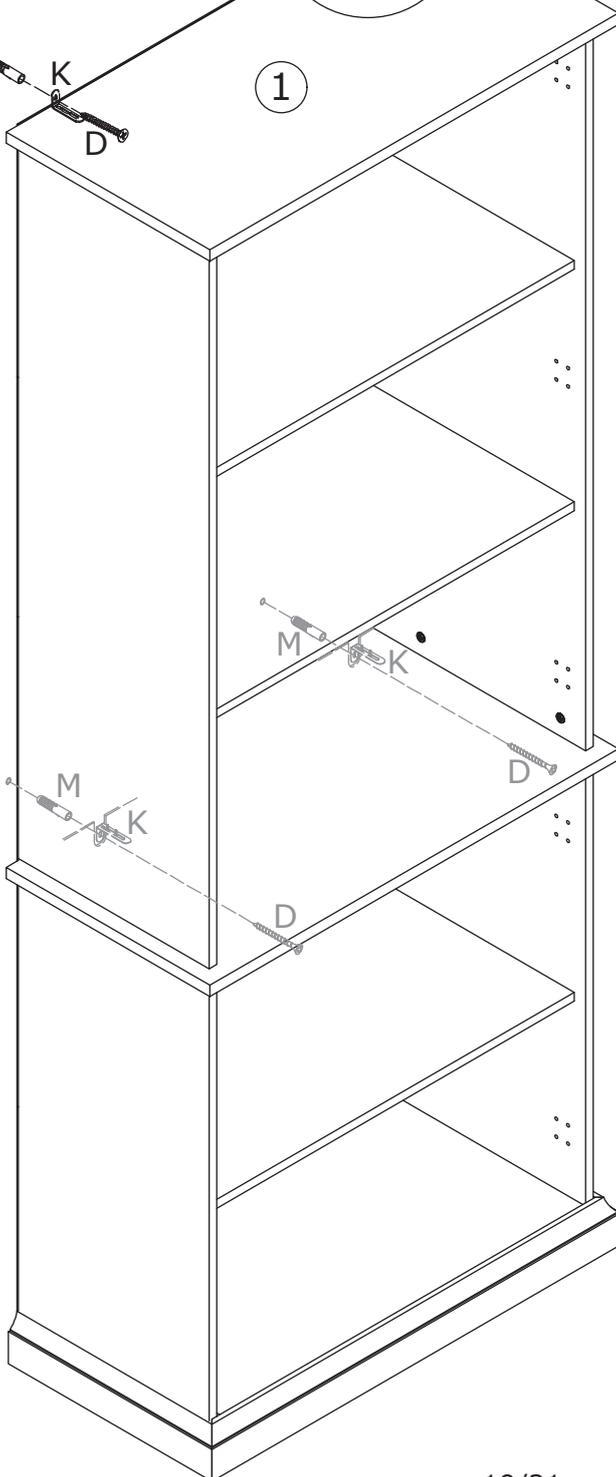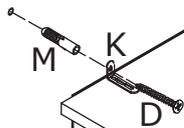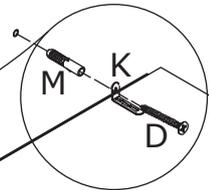


1.

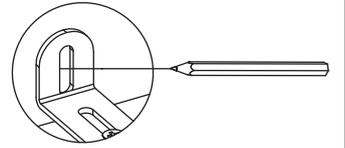


2.

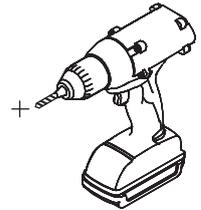



3.

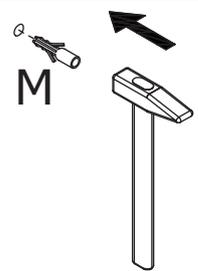

4.



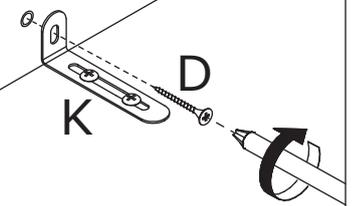



17

 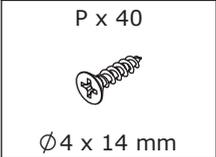

Assemble door panel 14 to lower component by fixing hinge with screw(P) as shown.


 
Assemble glass door panel 16 to upper component by fixing hinge with screw(P) as shown.

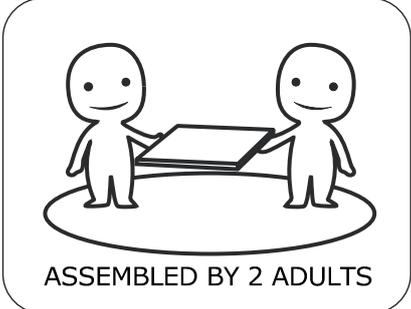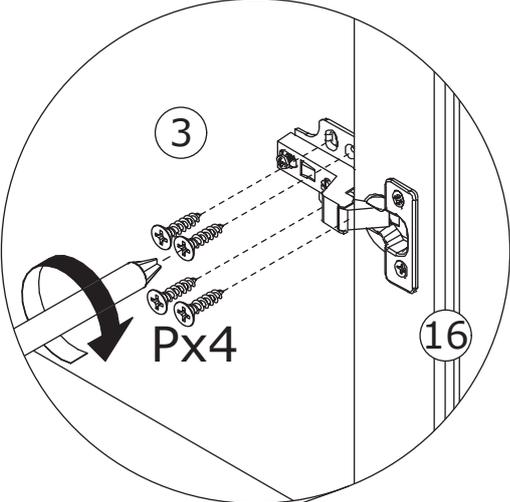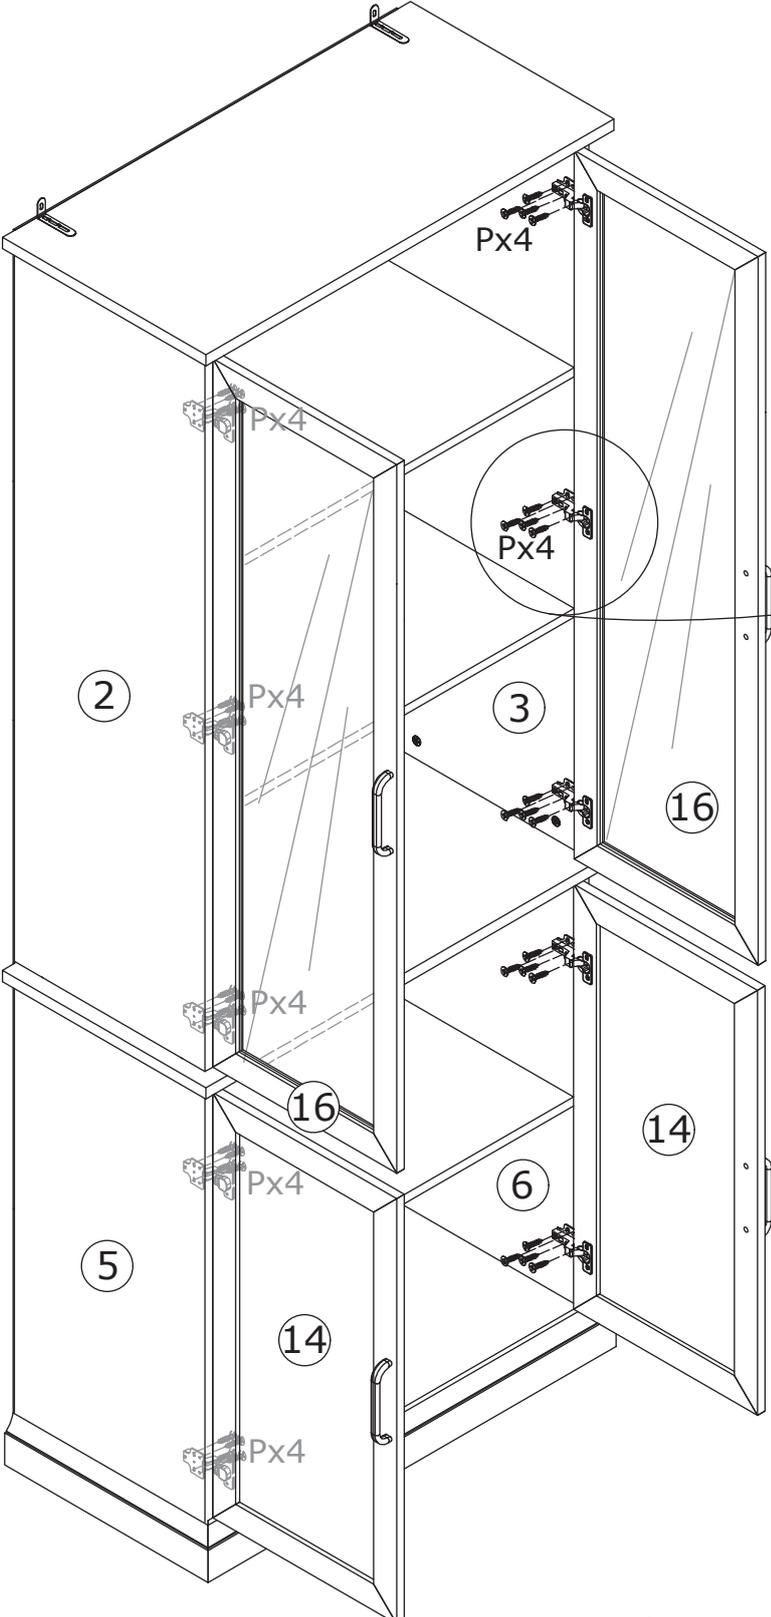




If doors are still not aligned if the hinges are properly correctly, please watch the video.


<https://youtu.be/n0Lb36SoODM>

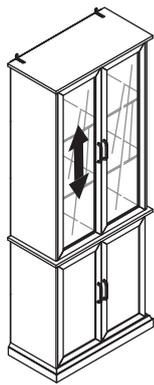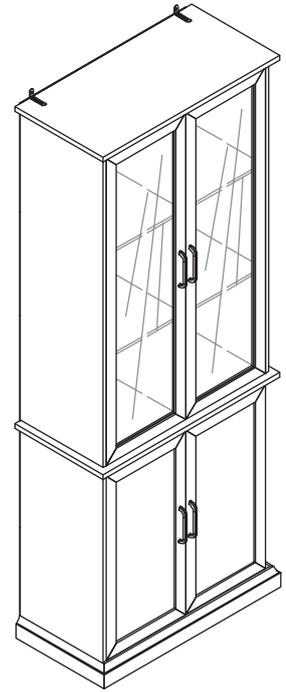



①

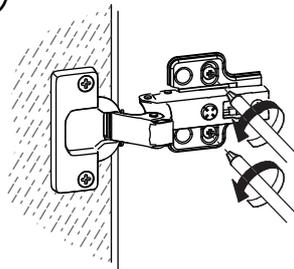


②

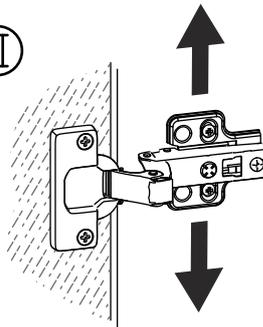


③

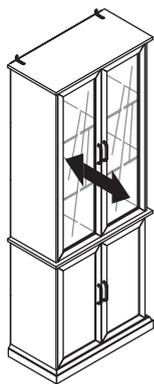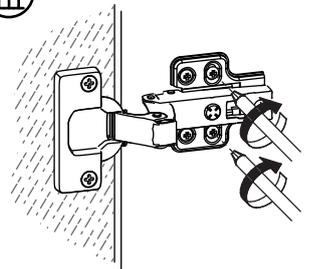



①

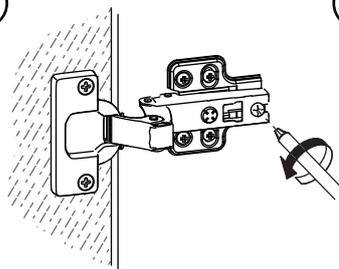


②

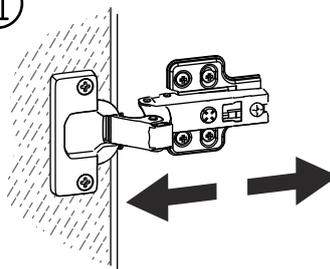


③

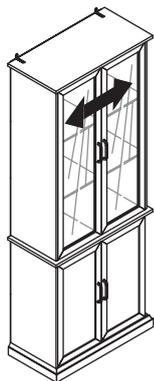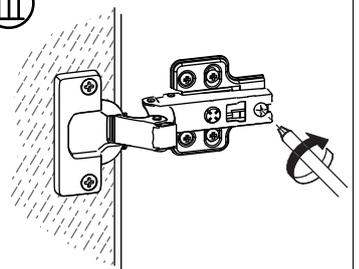

①

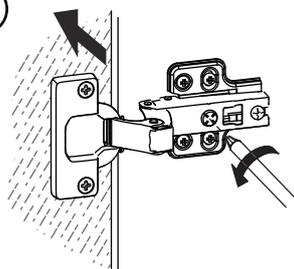

②

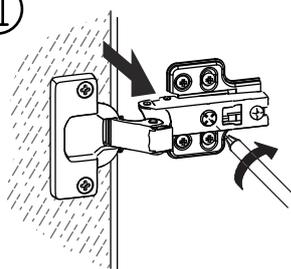

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068