



INSTRUCTIONS FOR USE

INSTRUCCIONES DE USO

PIPE INSULATION TAPE

Self-Adhesive Rubber

Applications:

Use especially for insulating short runs of pipes, valves or joints where it is impractical or next to impossible to install tubular insulation.

Instructions:


1. Remove the release paper as tape is spiral-wrapped around the pipe, overlapping each last turn by 50% and press firmly into place, avoiding stretching product as you go.

RECOMMENDED THICKNESS TO PREVENT CONDENSATION

AIR TEMPERATURE AND RELATIVE HUMIDITY	PIPE TEMPERATURE	
	50° F (10° C)	32° F (0° C)
77° F (25° C) & 50% RH	Single Layer	2 Layers
85° F (29° C) & 70% RH	3 Layers	4 Layers

**"R" means resistance to heat flow. The higher the R value, the greater the insulating power.

For installation of the following items: IT30/8

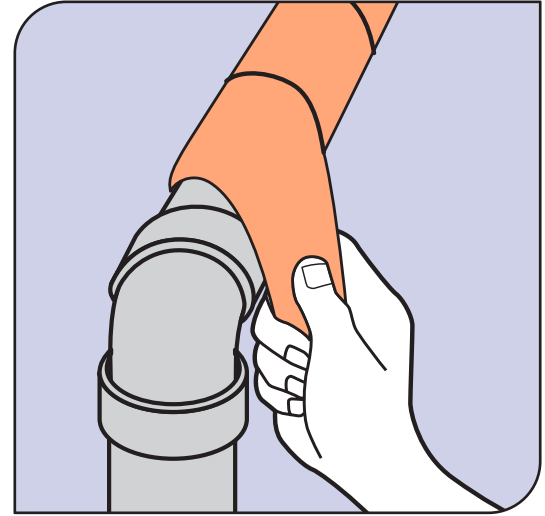

CINTA DE AISLAMIENTO PARA TUBERÍAS

Goma autoadhesiva

Usos:

Use especialmente para el aislamiento de tuberías cortas, de válvulas o de empalmes donde sea impráctico instalar aislamiento tubular.

Instrucciones:

1. Remueva el papel de lanzamiento según envuelva en espiral la cinta alrededor de el tubo, traslapando cada vuelta por 50% y presione firmemente en su lugar, evitando estirar el producto.

GROSOR RECOMENDADO PARA PREVENIR CONDENSACIÓN

TEMPERATURA DEL AIRE Y HUMEDAD RELATIVA	TEMPERATURA DEL TUBO	
	50° F (10° C)	32° F (0° C)
77° F (25° C) & 50% HR	Una Capa	2 Capas
85° F (29° C) & 70% HR	3 Capas	4 Capas

**"R" significa resistencia al flujo de calor. Cuanto más alto es el valor de R, mayor es la energía aislante.

TOOLS NEEDED:
HERRAMIENTAS NECESARIAS:



Follow Us @FrostKing
or www.frostking.com



Thermwell Products Co., Inc.
Mahwah NJ 07430 | Sparks NV 89431

Need help or information
about any Frost King product?
Call **1-877-FROST 20**
3 7 6 7 8

For videos, instructions, hints and tips
visit www.frostking.com/instructions