





 
 
 
 
USER'S MANUAL

Outdoor Acacia Wood Picnic Table Bench Dining Set HW66265 -12 -22




Before You Start

-  Read each step carefully before starting. It is very important to ensure each step followed in correct order, otherwise assembly difficulties may occur.
-  Most of board parts are labeled or stamped on the raw edges. Have a check to make sure all parts are included.
-  Work in a spacious area, preferably on a carpet close to where the unit will be used.
-  Keep the handtools close at hand. Do not use power tools to assemble your furniture. They may scratch or damage the parts.

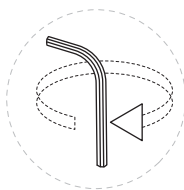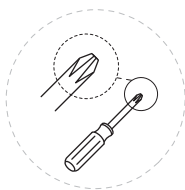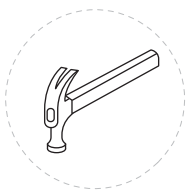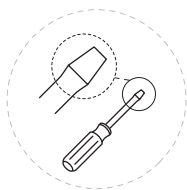


Part List

 
EN




1 x2pcs
Big slat support

 


2 x2pcs
Small slat support

 


3 x1pc
Middle slat support

 

4 x2pcs
Side top

 

5 x1pc
Middle top

 


6 x2pcs
Bench seat




7 x2pcs
Seat apron



 8 x2pcs
Left Steel legs



9 x2pcs
Right Steel legs

 


10 x4pcs
Corner support



11 x1pc
Parasol hole cap



 M4X25 mm Screw
A x82pcs



M5X50mm Screw
B x8pcs



M5X60mm Screw
C x6pcs



M6X60mm Bolt
D x8pcs



 
M6X10mm iron dowel
E x8pcs





M6X25mm Screw
F x28pcs






Allen key
G x2pcs



M6X35mm Tools
H x1pc

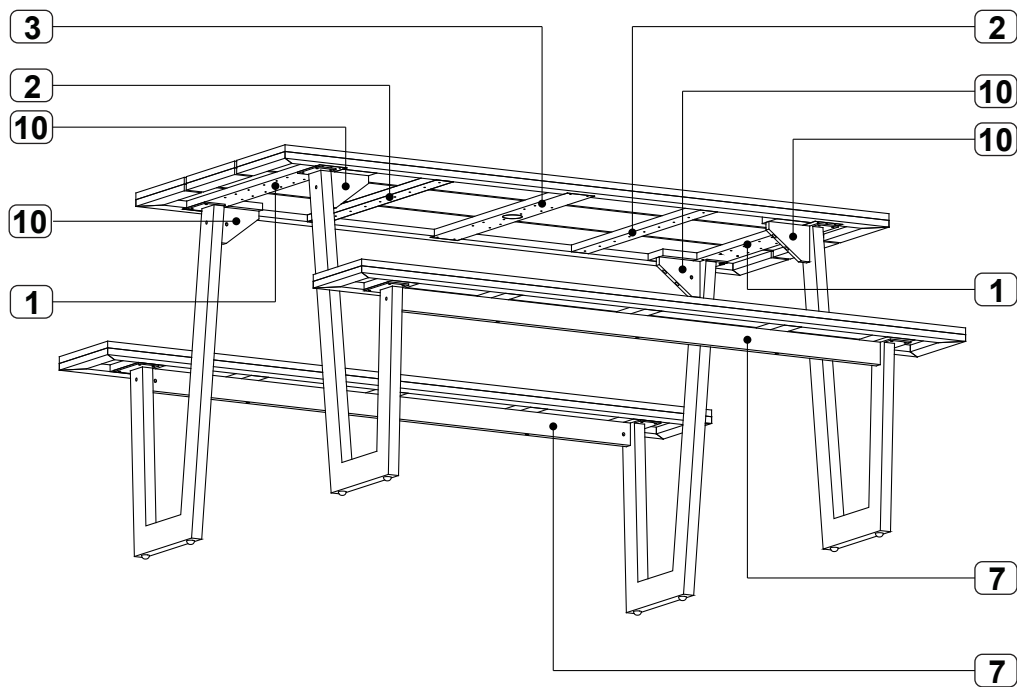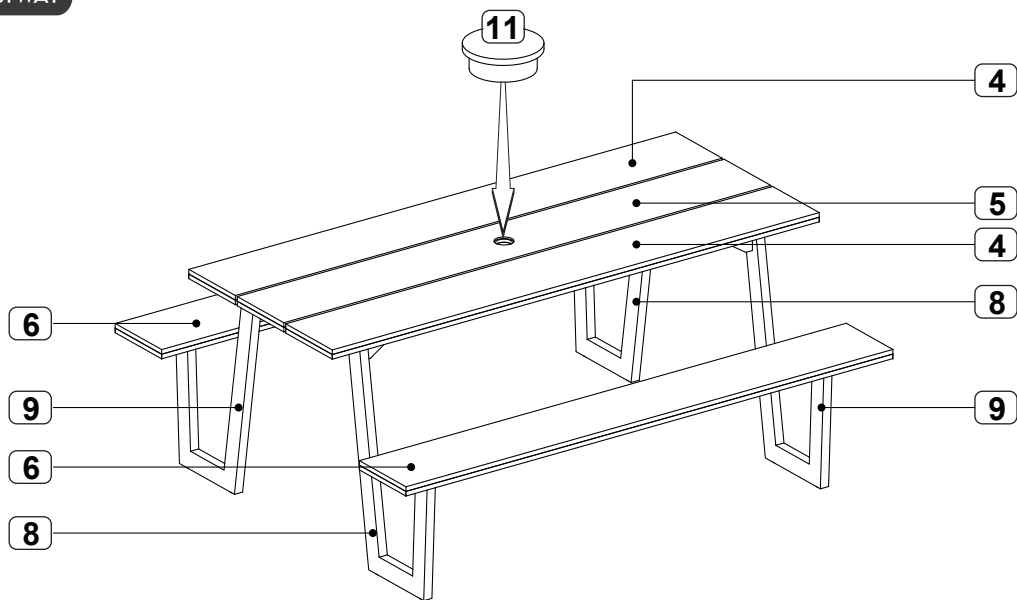  


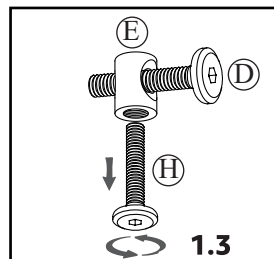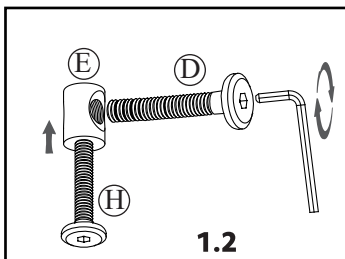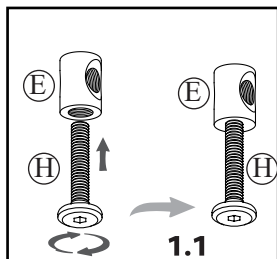   TIPS:**Tips**


1.1 Insert Iron dowels (E) into the holes using the Tools (H),

1.2 fix and tighten Bolt (D)

 
1.3 Remove Tools (H) and repeat for another one




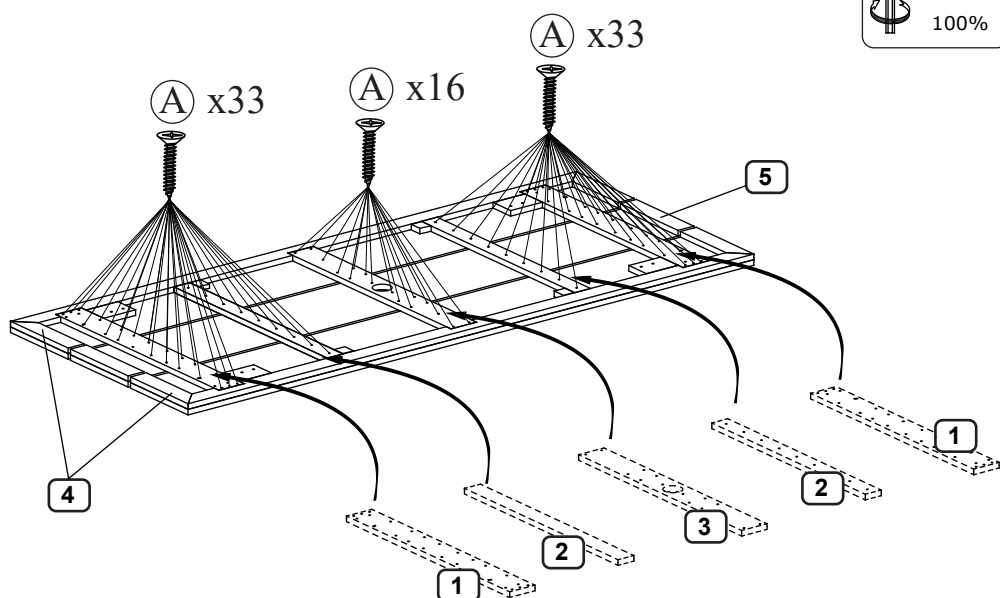
STEP 1

 STEP 2 :

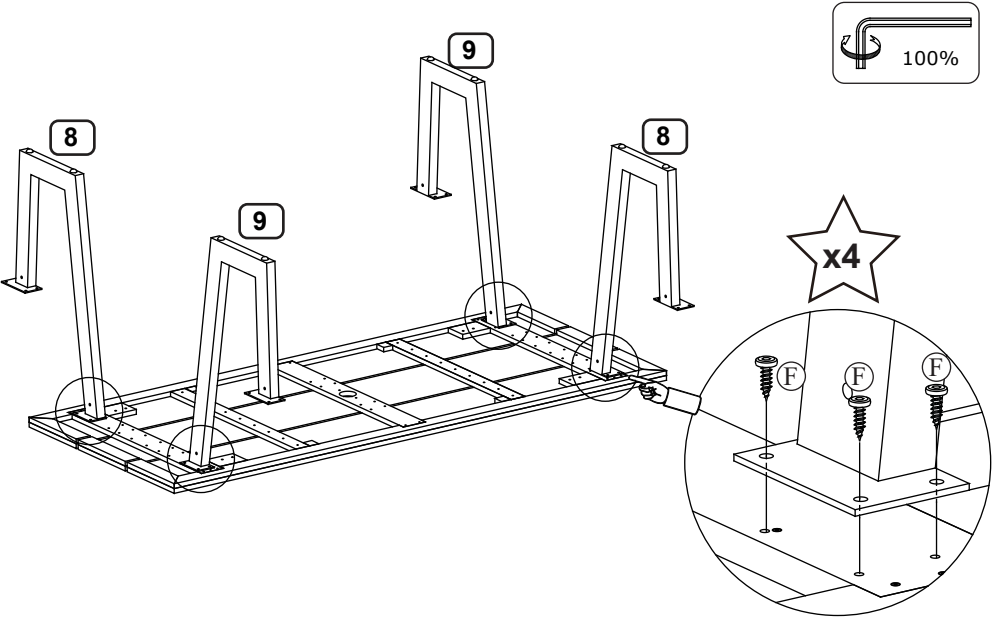


     STEP 3:


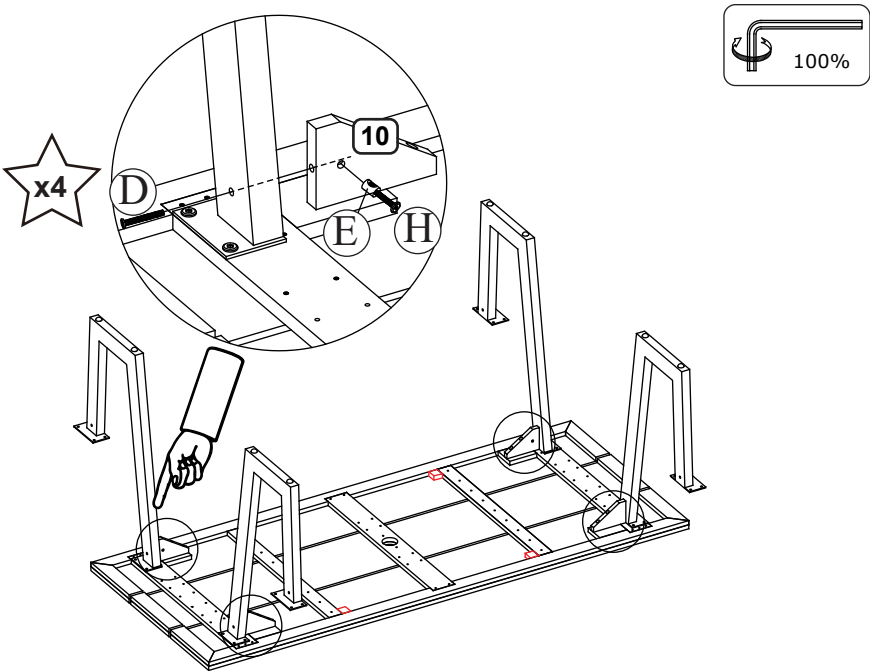


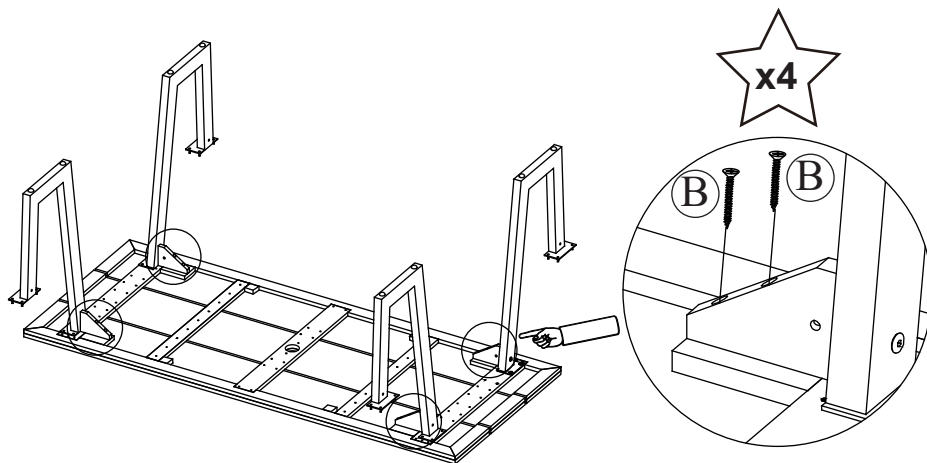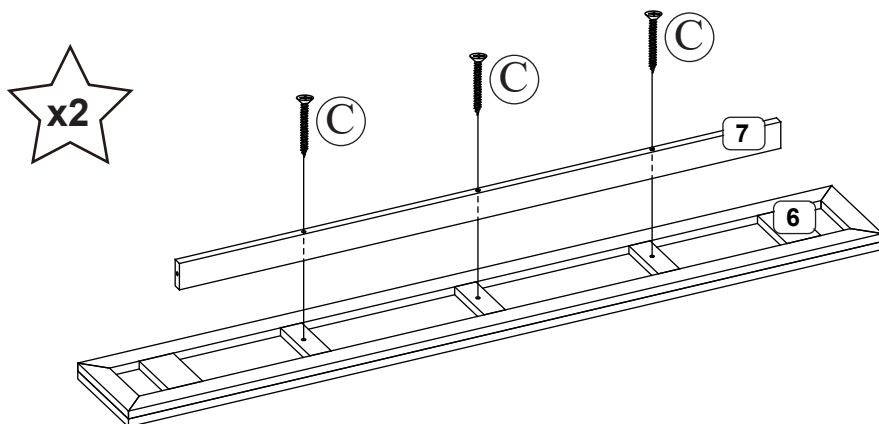STEP 4:**STEP 5:**

 STEP 6 :

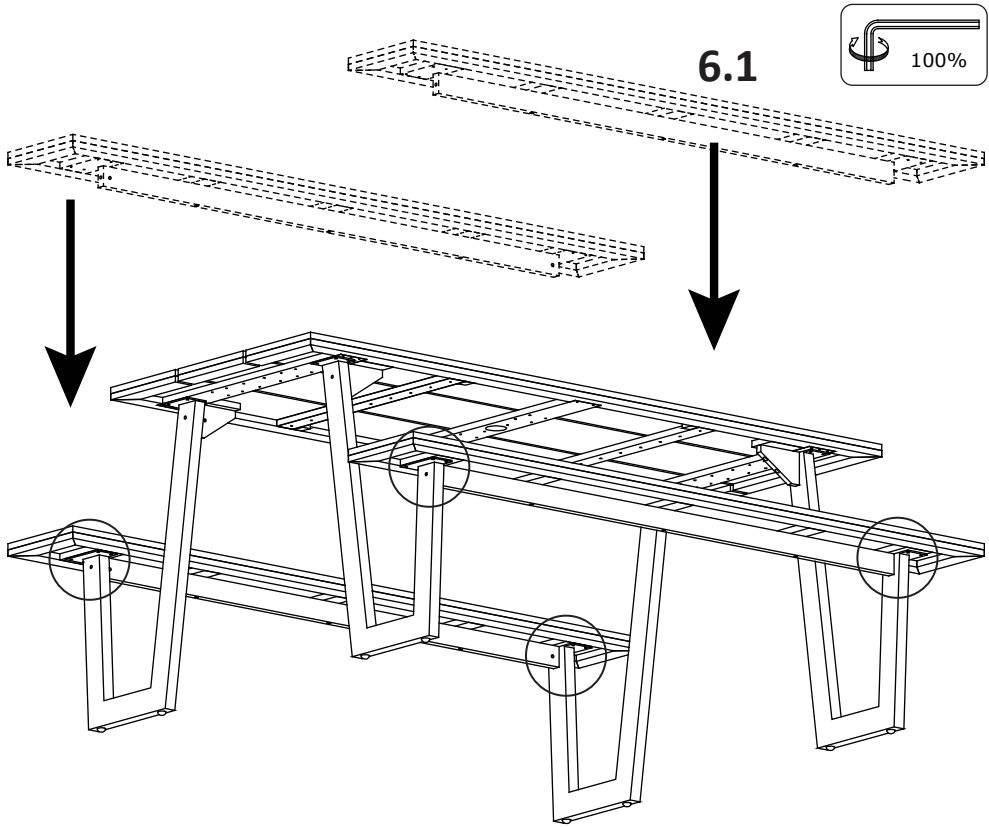


  6.1

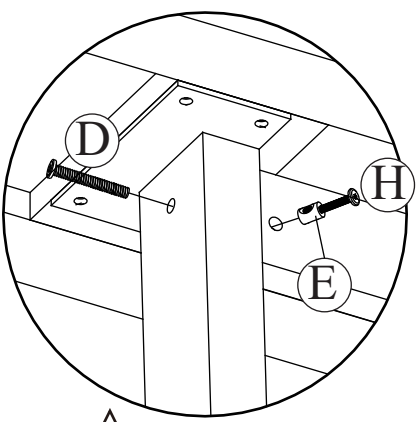

x4

 
6.2

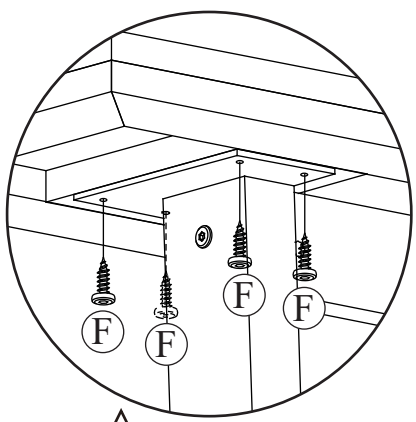


x4

6.3

 STEP 7:

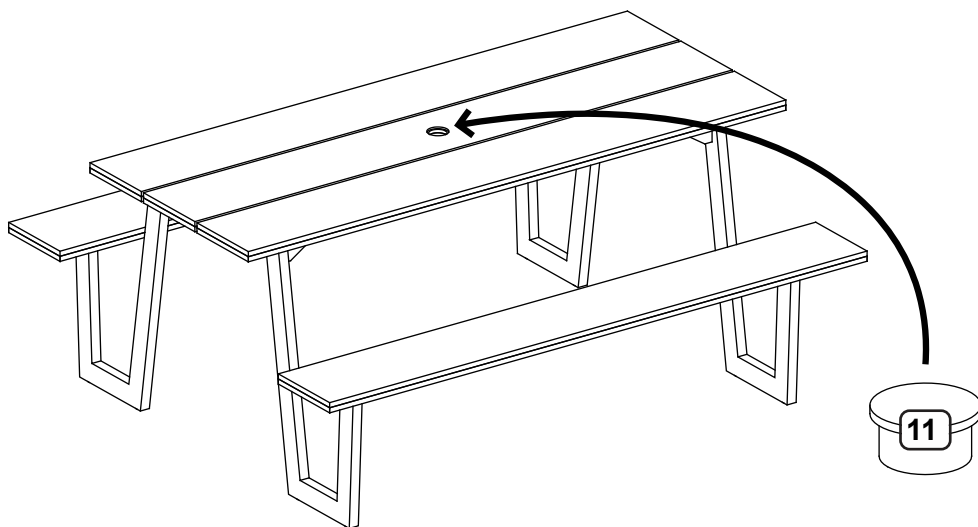**STEP 8: FINISHED**

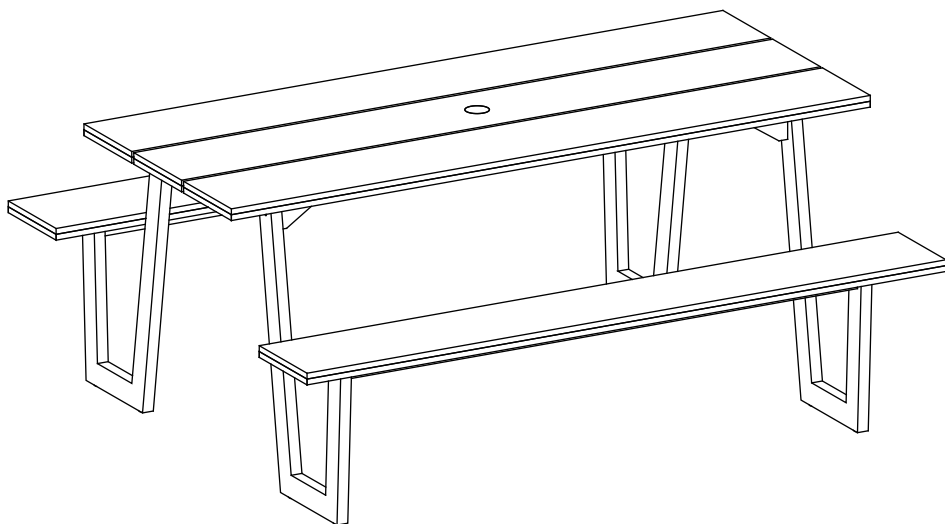 

Care and Maintenance

Use a soft, clean cloth that will not scratch the surface when dusting.

Use of furniture polish is not necessary.

Should you choose to use polish, test first in an inconspicuous area.

Using solvents of any kind on your furniture may damage the finish.

Never use water to clean your furniture as it may cause damage to the finish.

Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.

Check bolts/screws periodically and tighten them if necessary.

Further advice about wood furniture care

Please protect your outdoor furniture with a cover when not in use since long-term sunlight exposure will result in the damage on the surface.

In addition to sunlight damage, wood and metal frame suffers when exposed to extremes in temperature and humidity.

Proper care and cleaning at home will extend the life of your purchase.

Following these important and helpful tips will enhance your furniture as it ages.



Please give us a chance to make it right and do better !

Contact our friendly customer service department for help first.
Replacements for missing or damaged parts will be shipped ASAP !

US office: Fontana UK office: Ipswich AU office: Truganina



Contact Us !

Do NOT return this item.

Contact our friendly customer service department for help first.



US: cs.us@costway.com
UK: cs.uk@costway.com
AU: cs.au@costway.com