 
 



Sideboard

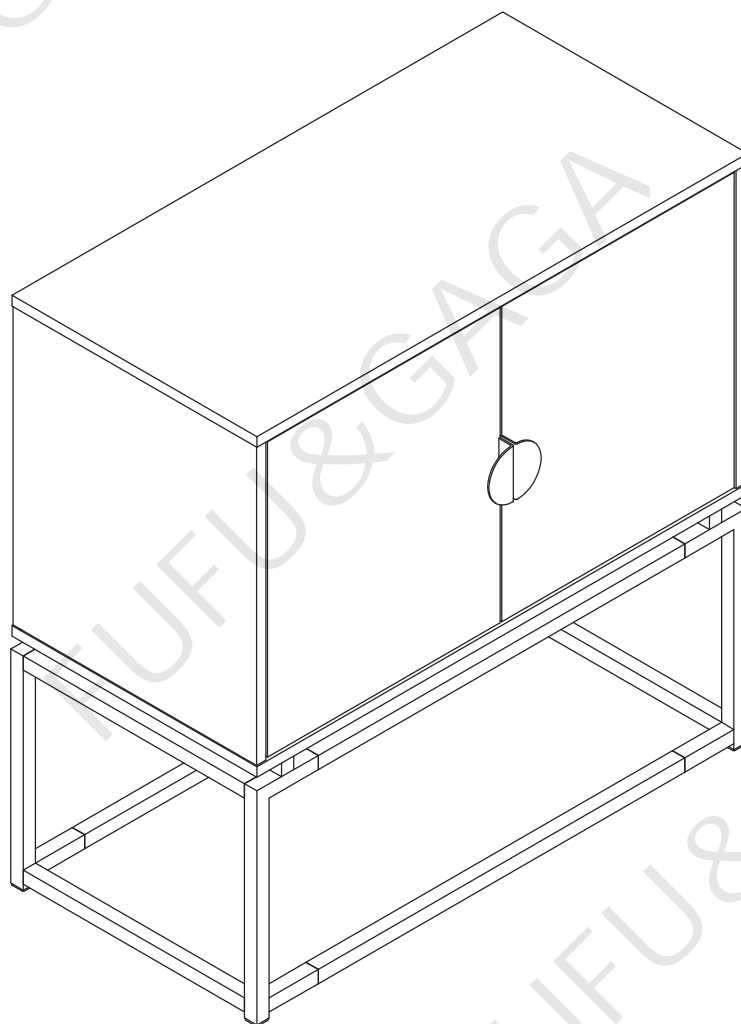

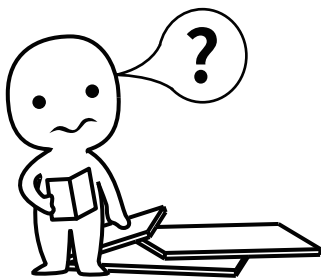


IMPORTANT INFORMATION!

 please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

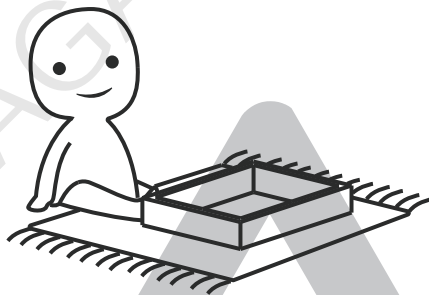



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer - could be a rug.

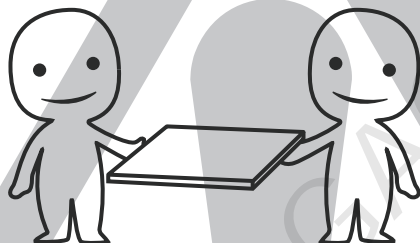

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

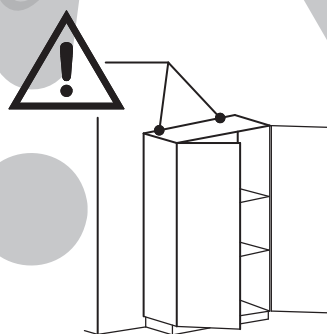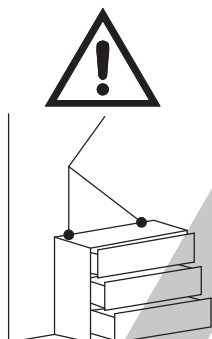

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

 
It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

 
 
 

 

 
 


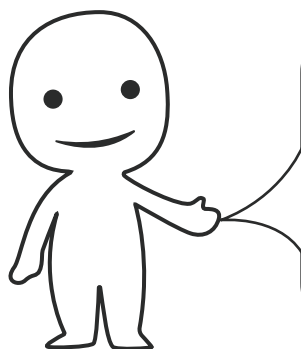
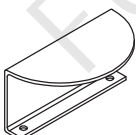 

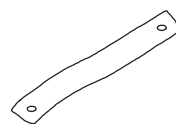 

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

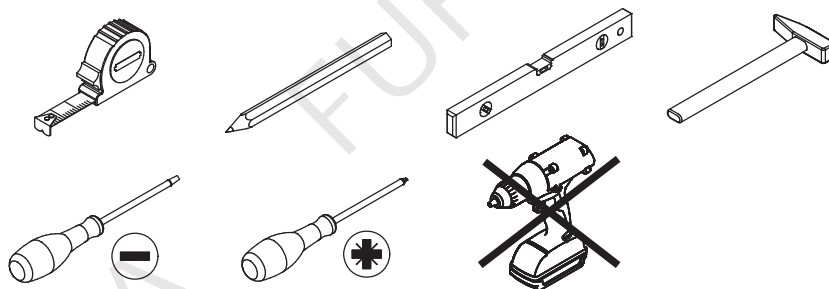


Please prepare the following tools

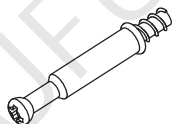


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

<p>A x 8</p>  <p>Ø7 x 35 mm</p>	<p>B x 8</p>  <p>Ø15 x 9 mm</p>	<p>C x 6</p>  <p>Ø4 x 40 mm</p>	<p>D x 12</p>  <p>Ø6 x 30 mm</p>	<p>E x 2</p>  <p>Ø6 x 30 mm</p>
<p>F x 24</p>  <p>Ø6 x 10 mm</p>	<p>G x 4</p>  <p>Ø6 x 45 mm</p>	<p>H x 1</p> 	<p>J x 2</p>  <p>Ø3 x 14 mm</p>	<p>K x 4</p> 
<p>L x 20</p>  <p>Ø4 x 14 mm</p>	<p>M x 2</p> 	<p>N x 2</p>  <p>Ø12 x 4 mm</p>	<p>P x 2</p> 	<p>Q x 2</p>  <p>Ø4 x 12 mm</p>

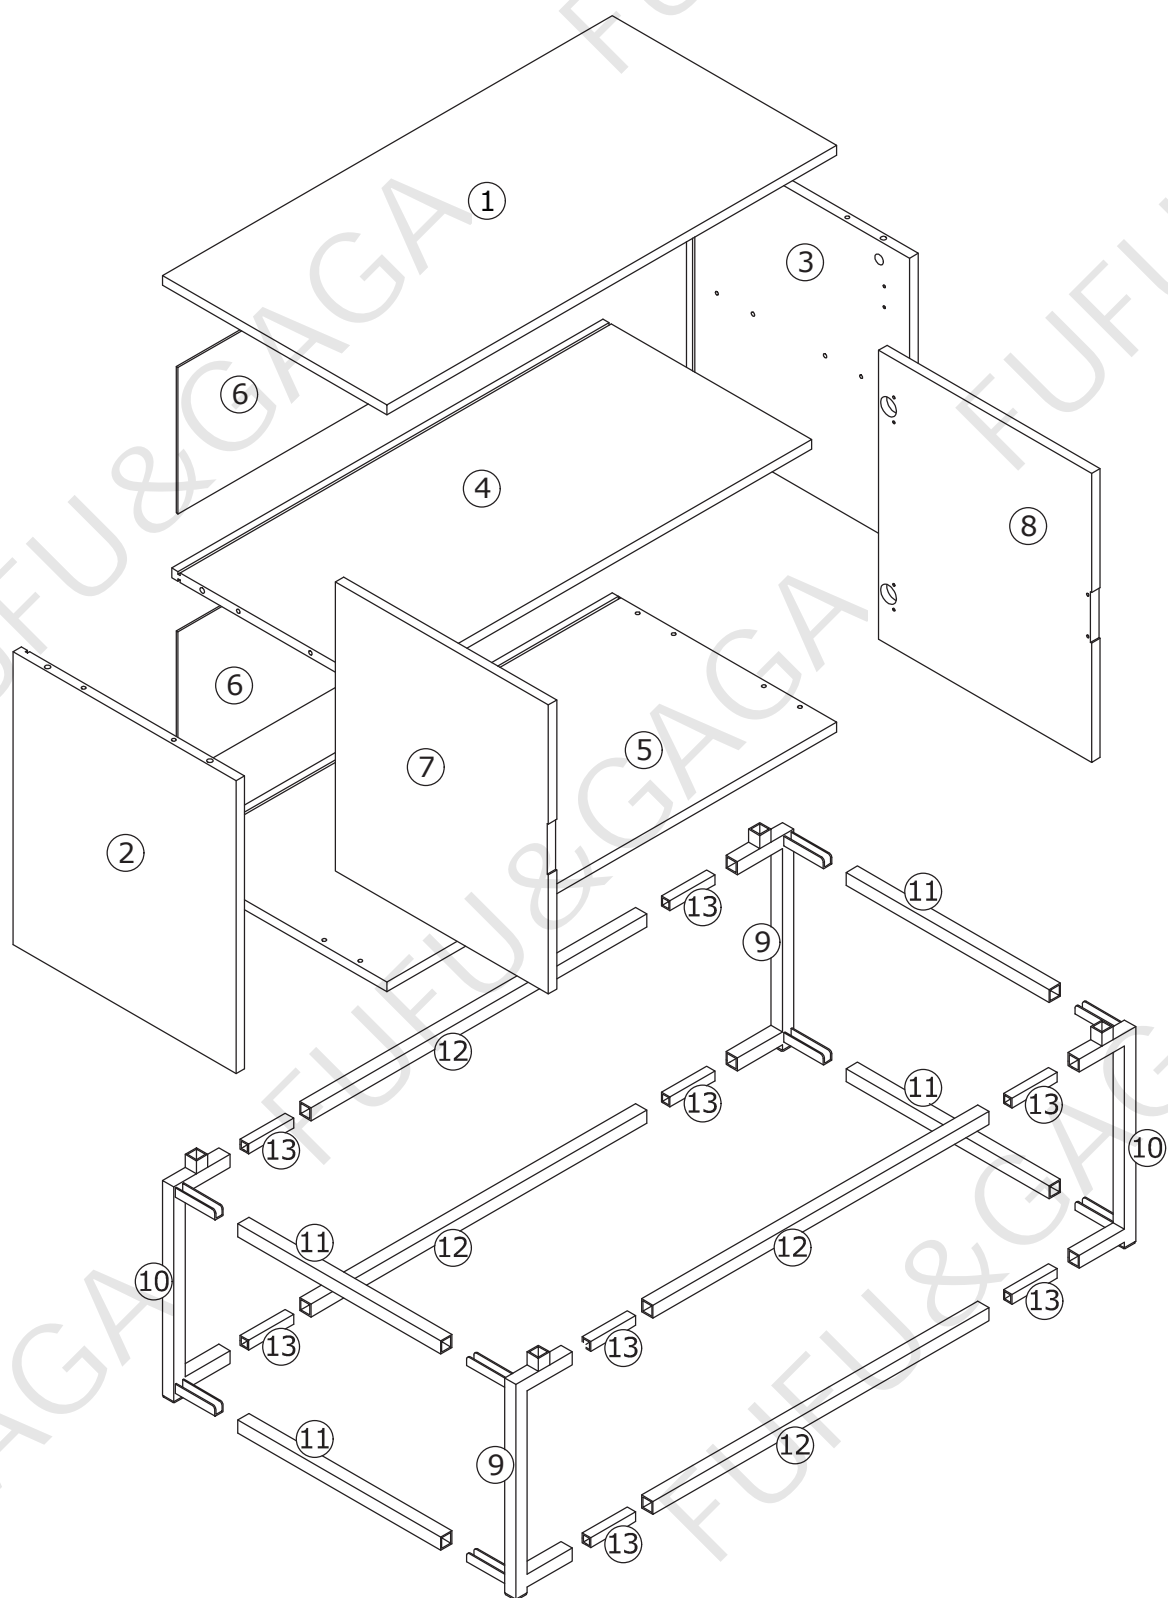 


1

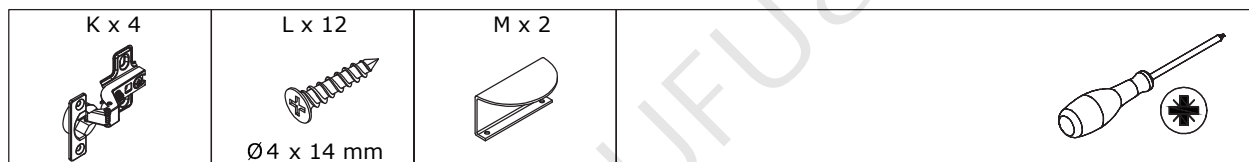 

Fix handles(M)to parts 7 and 8using bolts(L),as shown.


 
Fix hinges (K)to parts 7 and 8using screws (L),as shown.

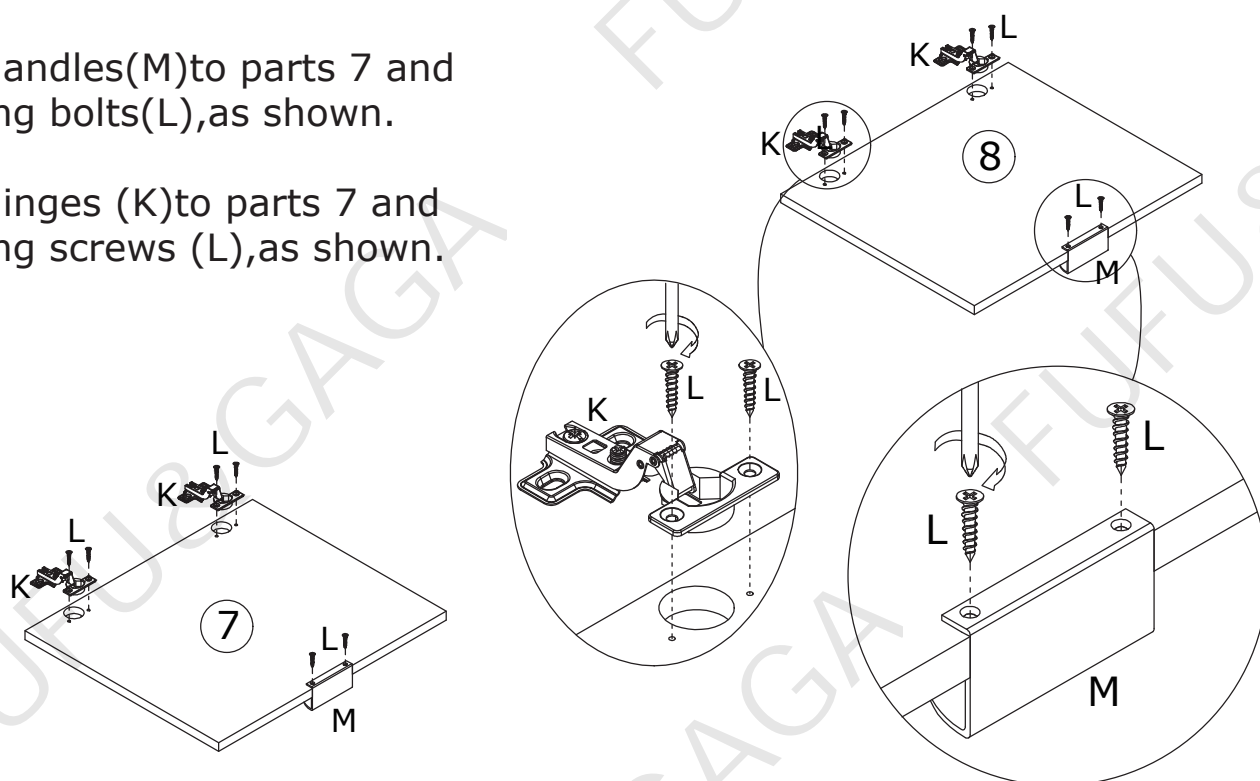

2



  Insert quickfit screws(A)to parts 2 and 3, as shown.

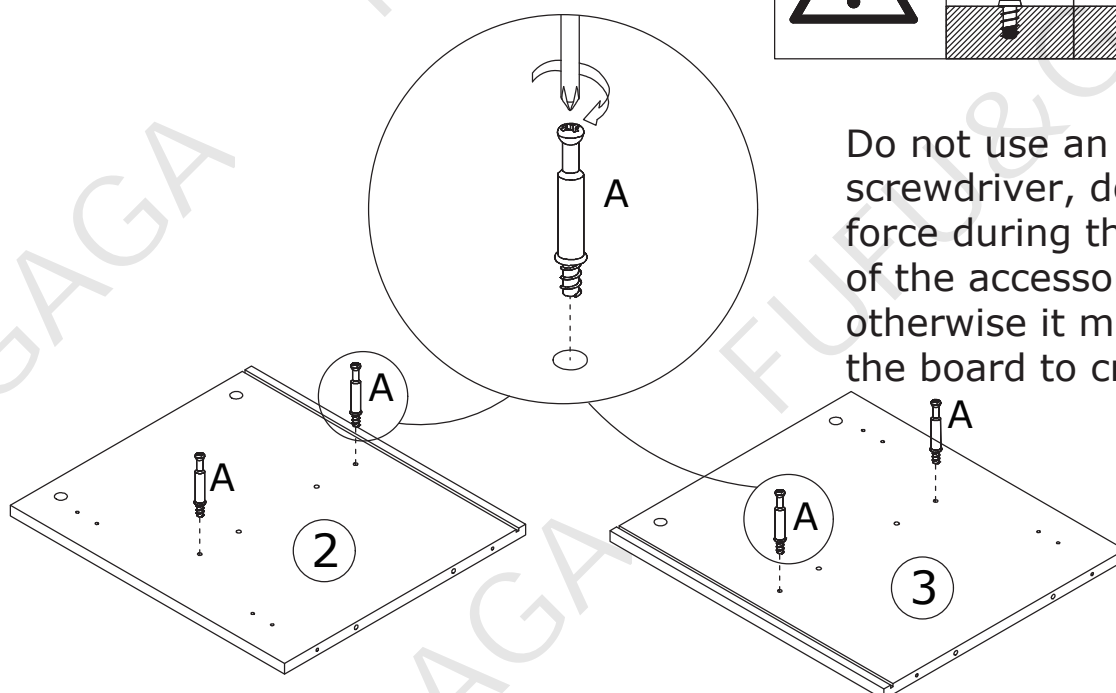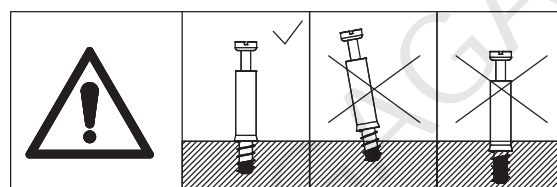

Do not use an electric screwdriver, do not use force during the rotation of the accessories, otherwise it may cause the board to crack

 
 
3



Insert quickfit screws(A) and wooden dowels (D) into parts 2 and 3, as shown.


Insert cam locks(B) into part 4, as shown.

Turn cam locks clockwise to tighten

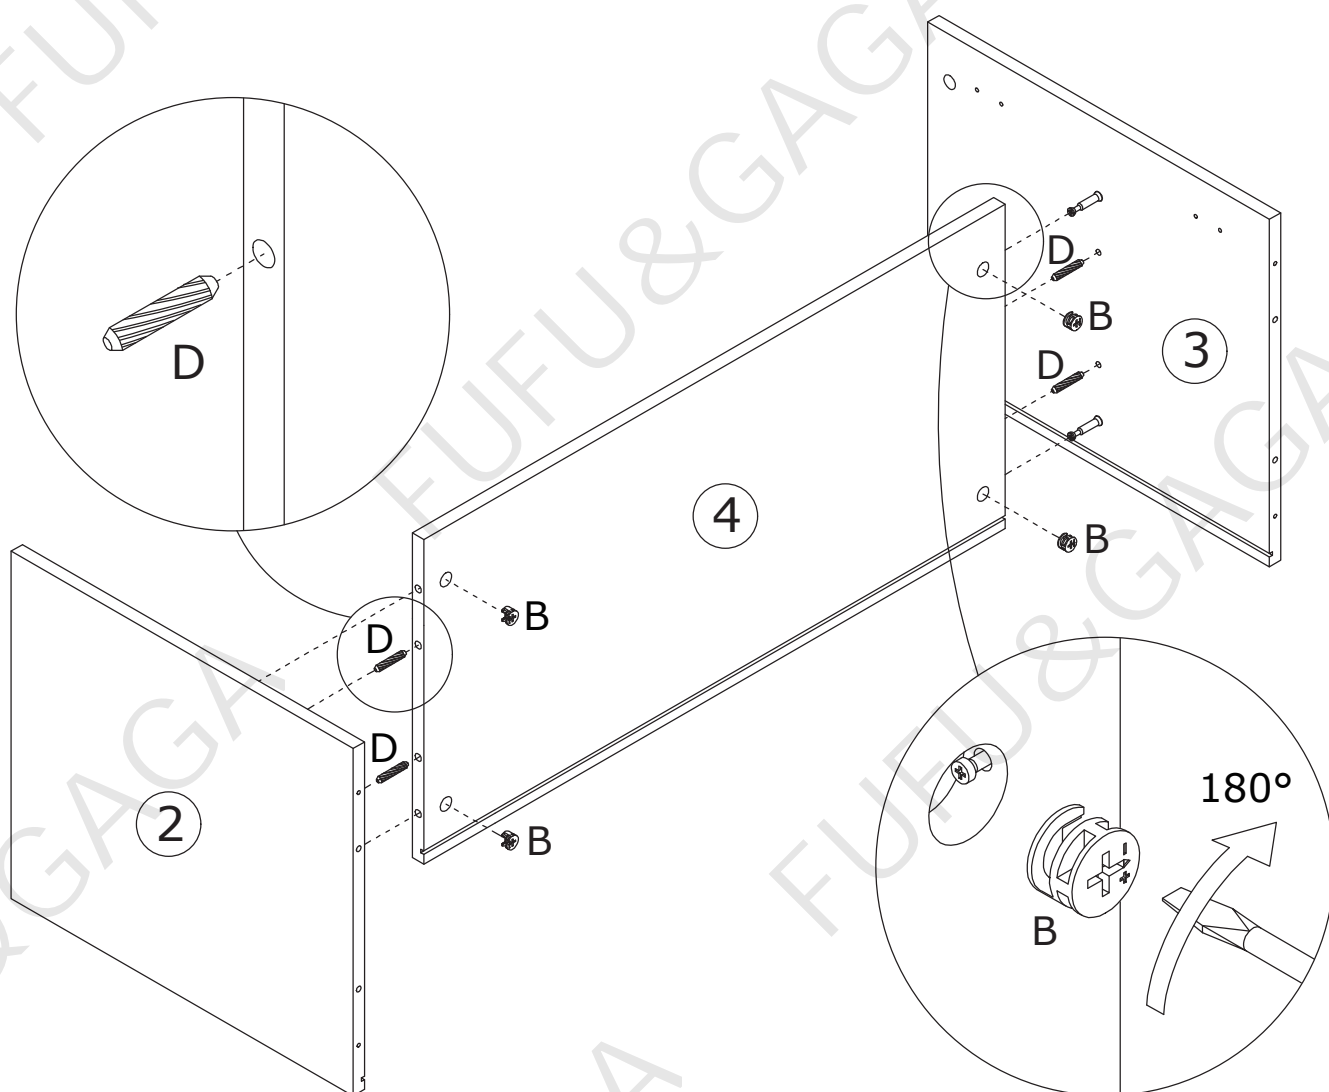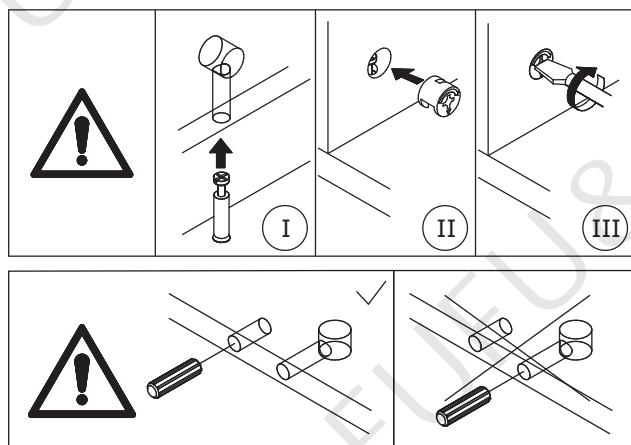

4


 
D x 4



Ø6 x 30 mm


Insert wooden dowels (D) into assembled unit, as shown.

  Slide part 6 into available slot of parts 2,3 and 4, as shown.

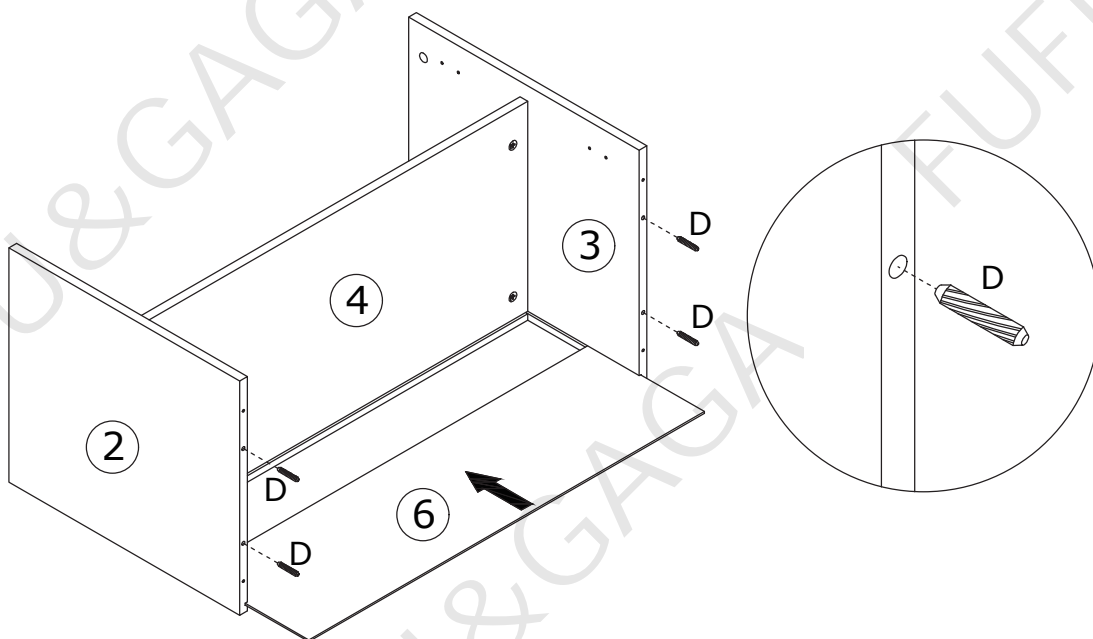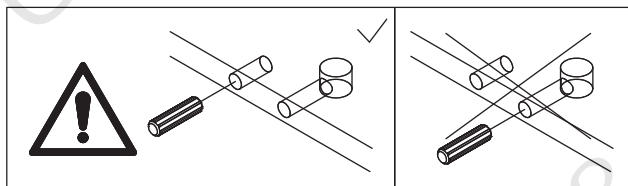

5

 
C x 4



Ø4 x 35 mm



 Attach part 5 into assembled unit using screws (C), as shown.

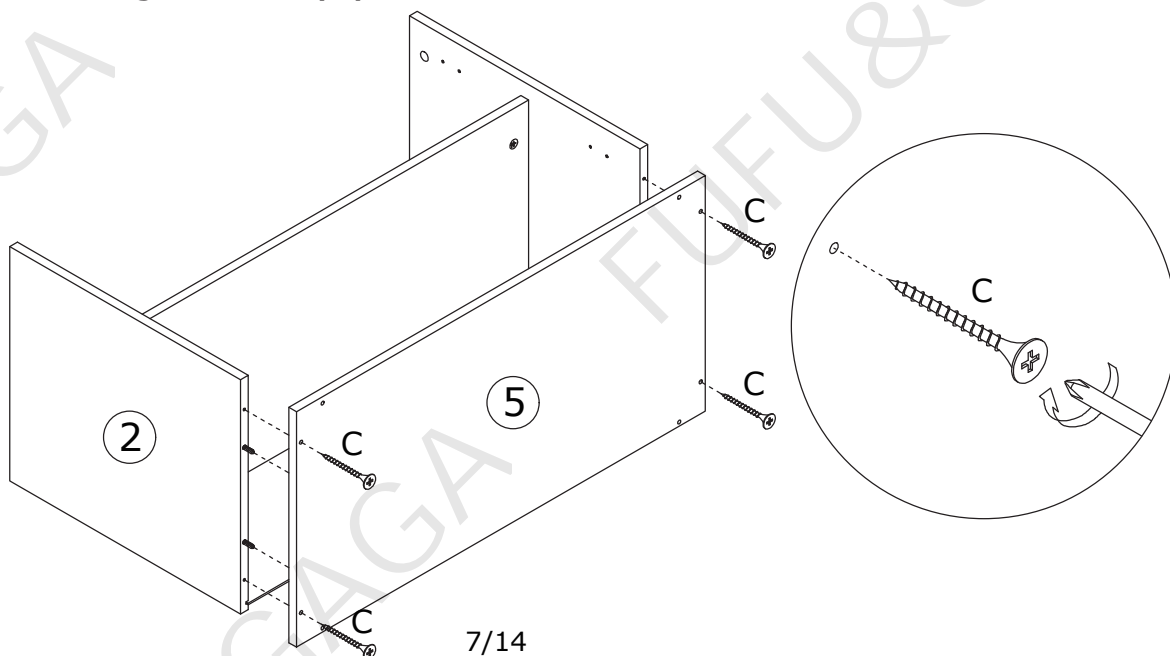


6


F x 8



 Ø6 x 10 mm



 Connect part 9 and part 10 with part 11, and fix by screw F, as shown.

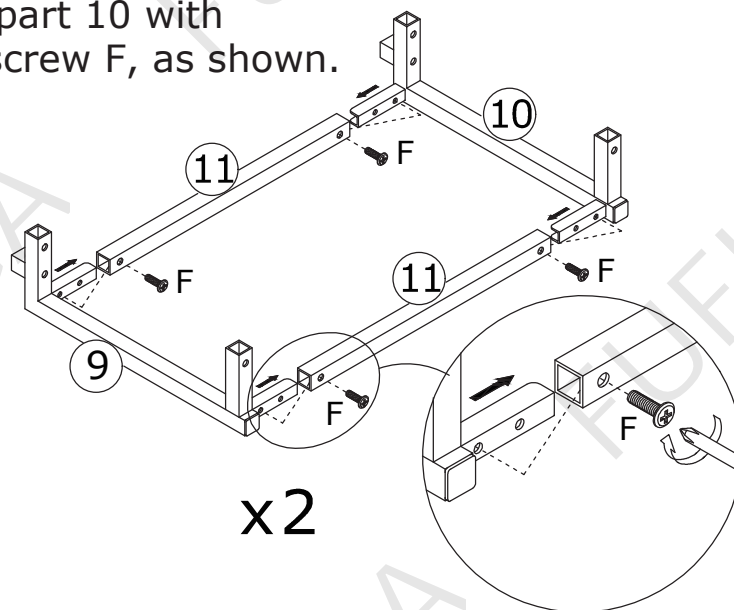


x2

7


F x 16



 Ø6 x 10 mm




 Connect part 9/10 and part 12 with part 13, and fix by screw F, as shown.

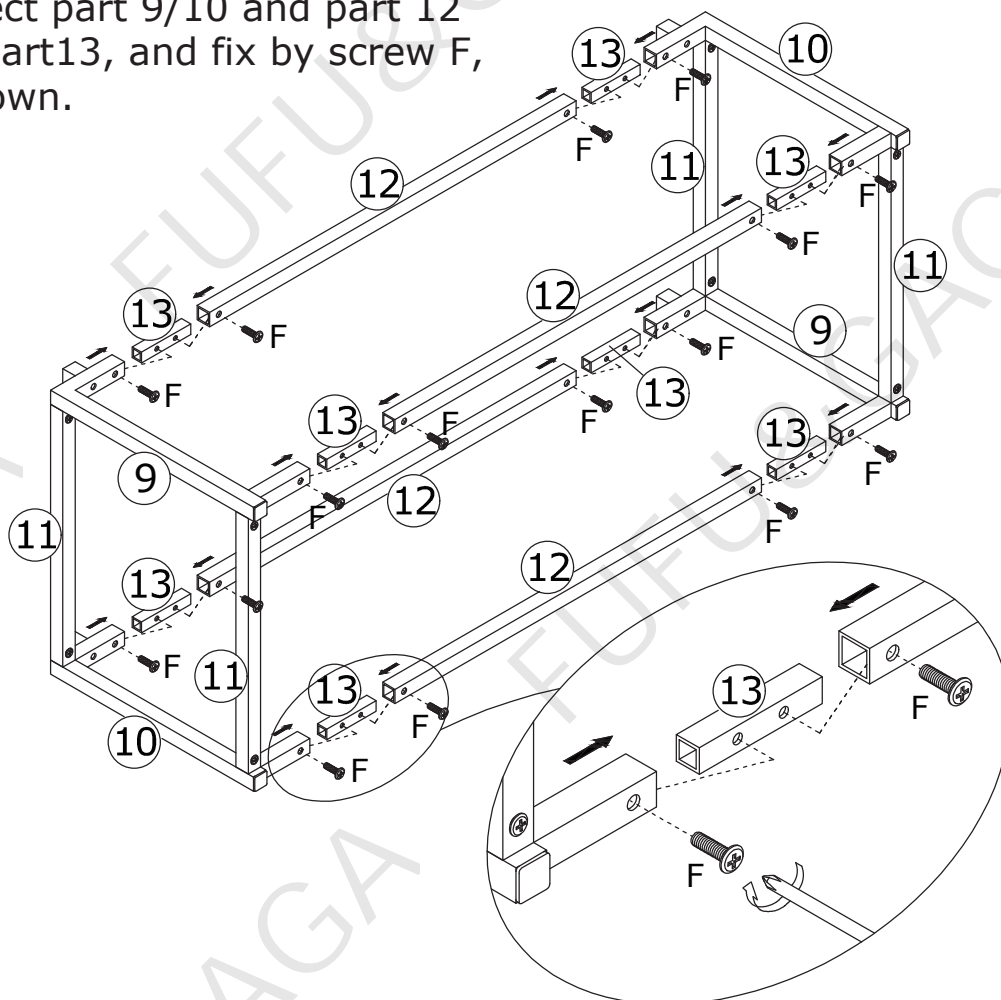


8

 
G x 4



Ø6 x 45 mm

 


 Attached assembled unit to part 5
by using screw G as shown

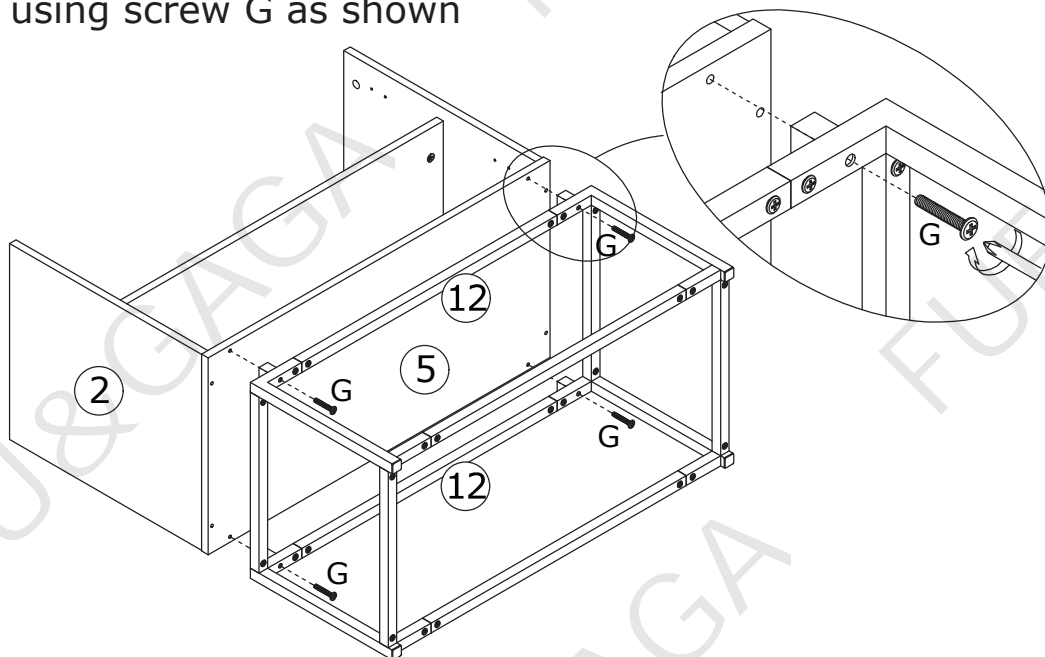



9

 D x 4




Ø6 x 30 mm

  Insert wooden dowels (D) into
assembled unit, as shown.
Slide part 6 into available slot of
parts 2,3 and 4, as shown.

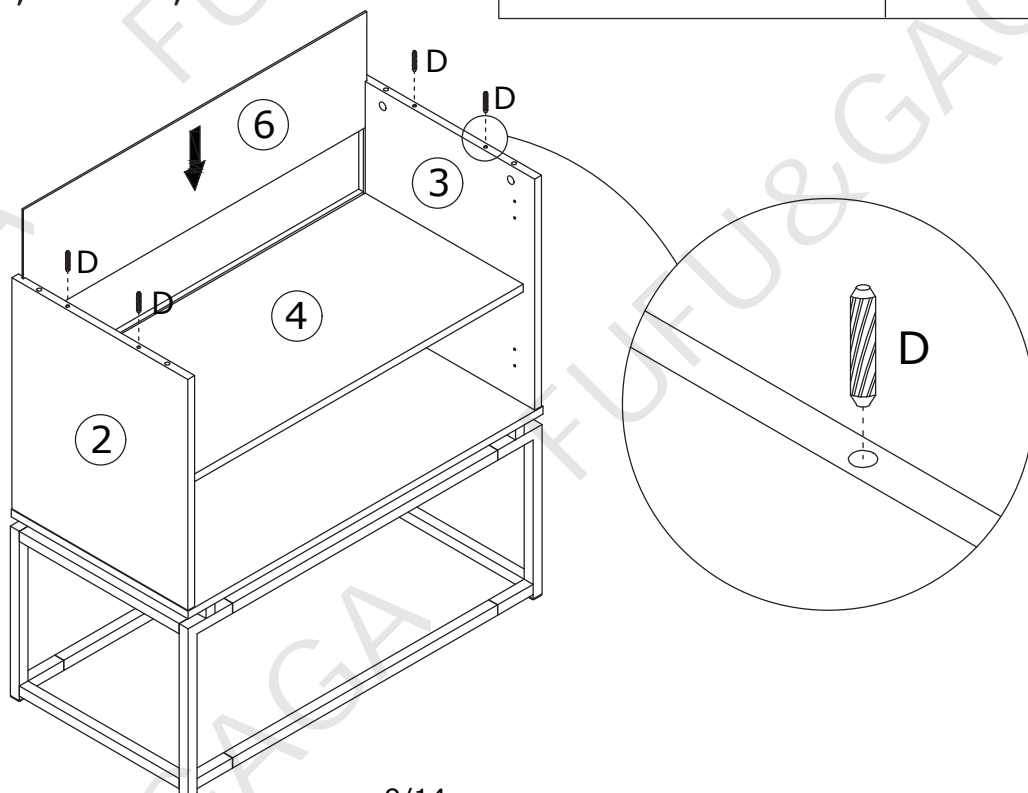
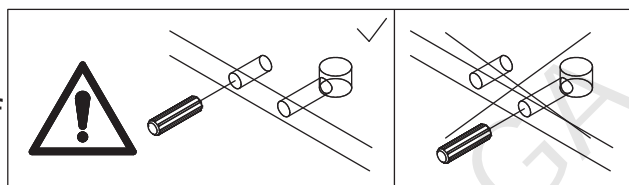


10

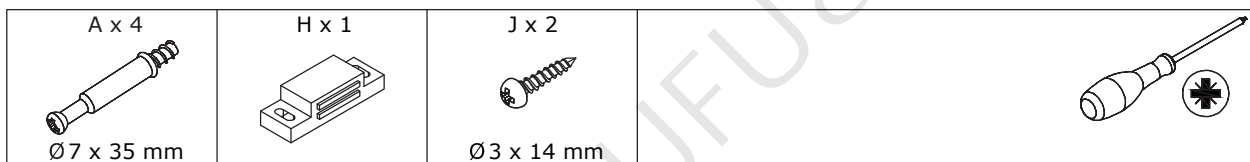 

Insert quickfit screws (A) into part 1

  Fix handles (H) to part 1 using bolts (J), as shown.

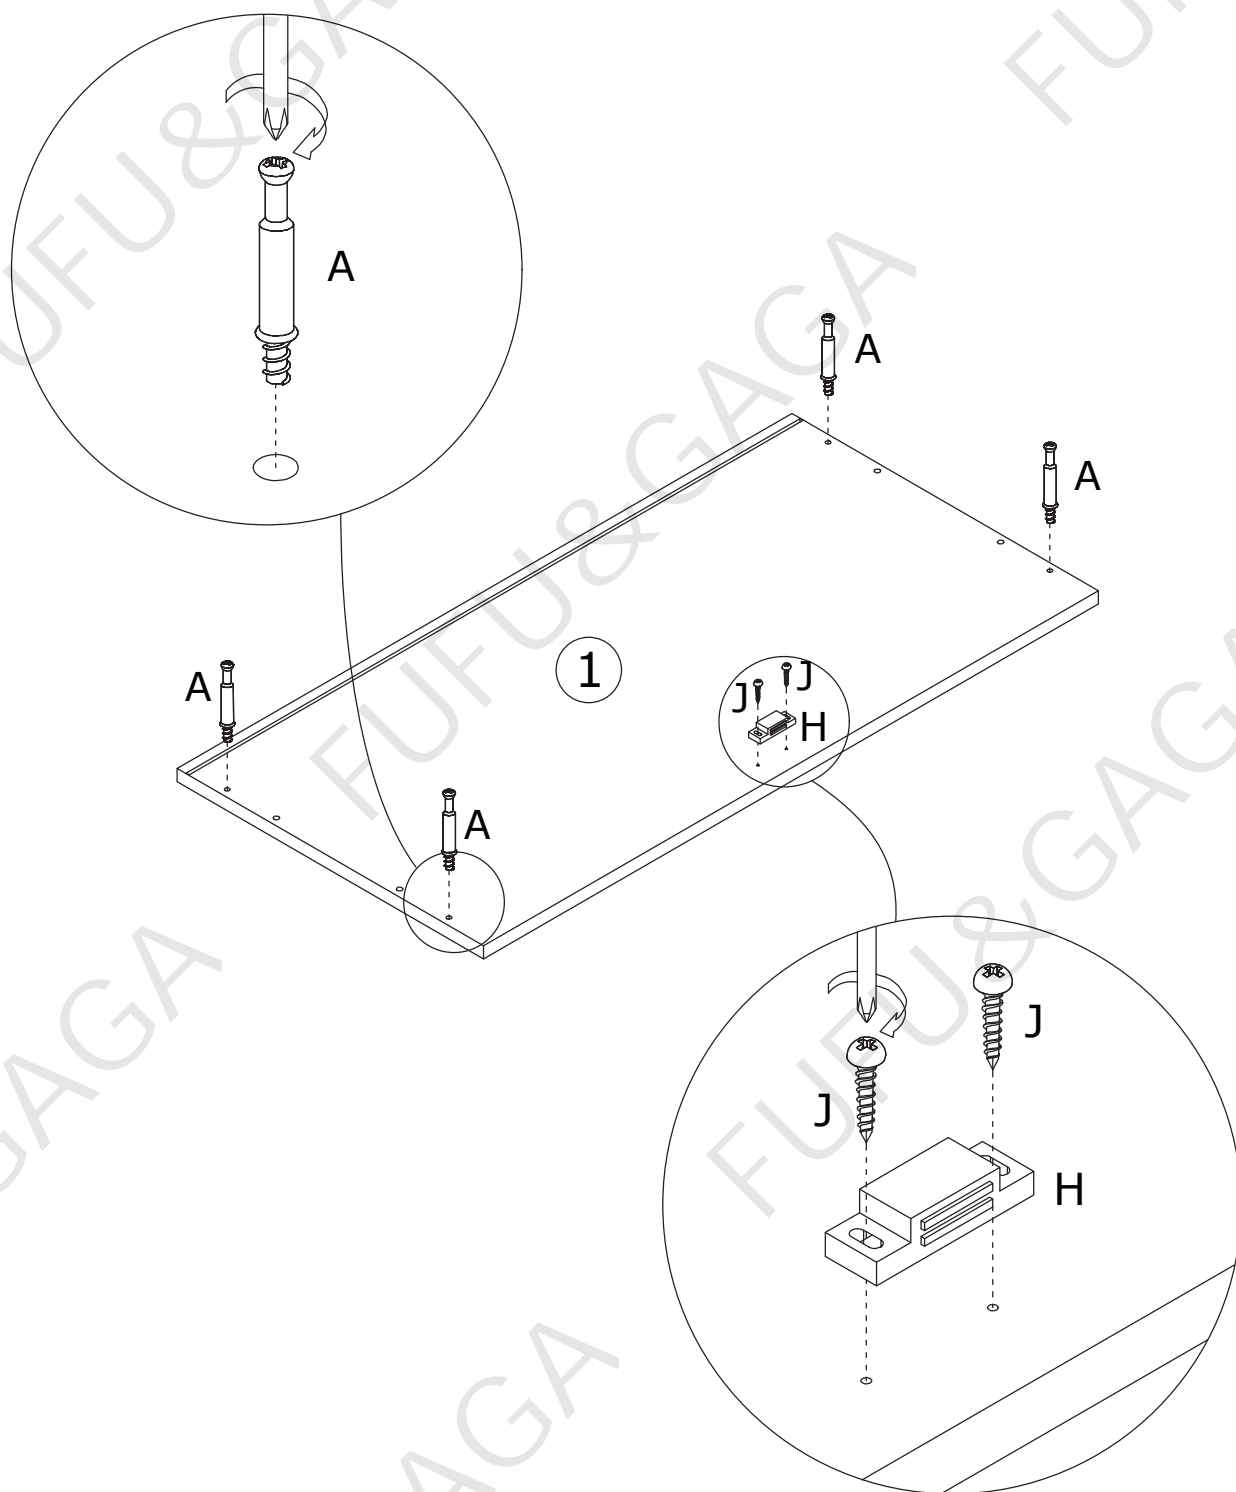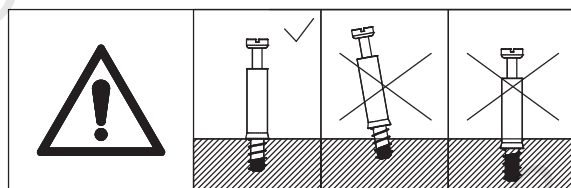


11




B x 4



 Ø15 x 9 mm



   Insert quickfit screws (A) and wooden dowels (D) into part 1, as shown.
Insert cam locks (B) into assembled unit as shown and attach part 1 to assembled unit.
Turn cam locks clockwise to tighten.

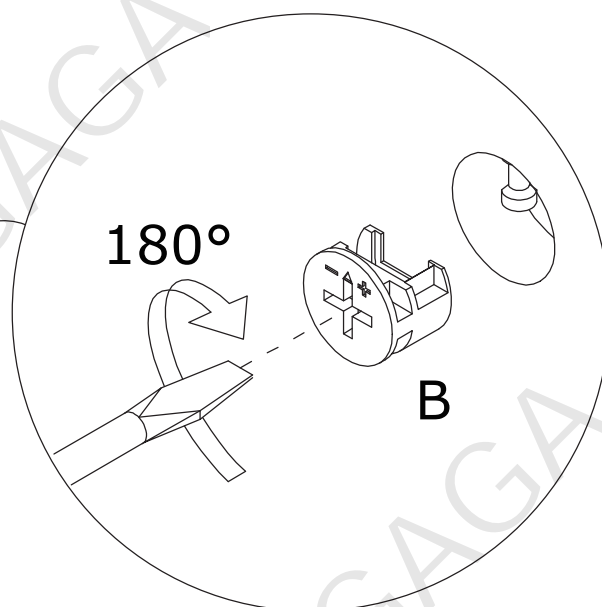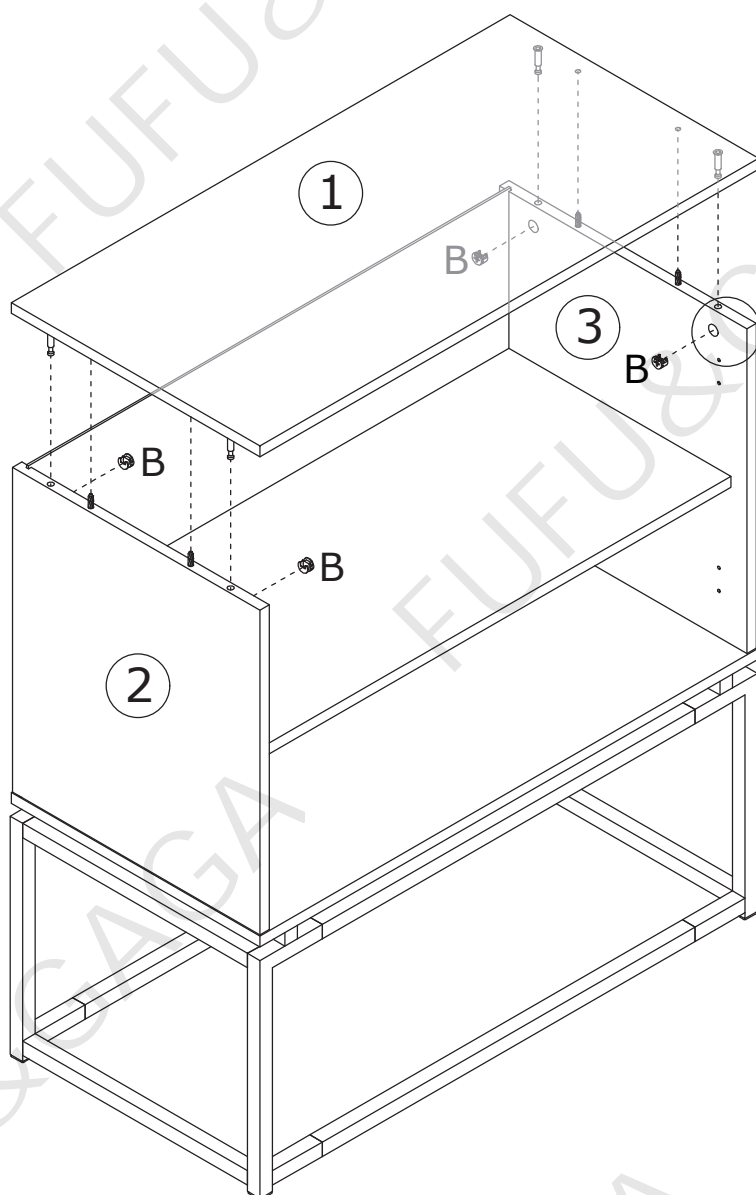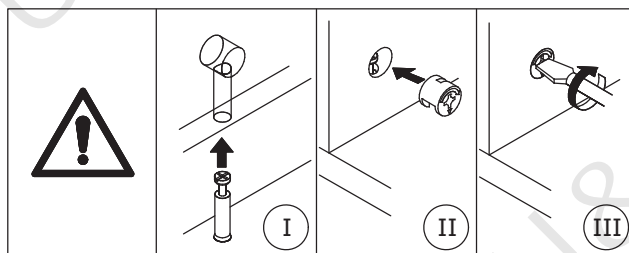


12



L x 8



 
Ø4 x 14 mm



    
 
 
 
 
 
 
 
 
 
 
 
Fix parts 7 and 8 thru attached hinges into assembled unit using screws (L), as shown.

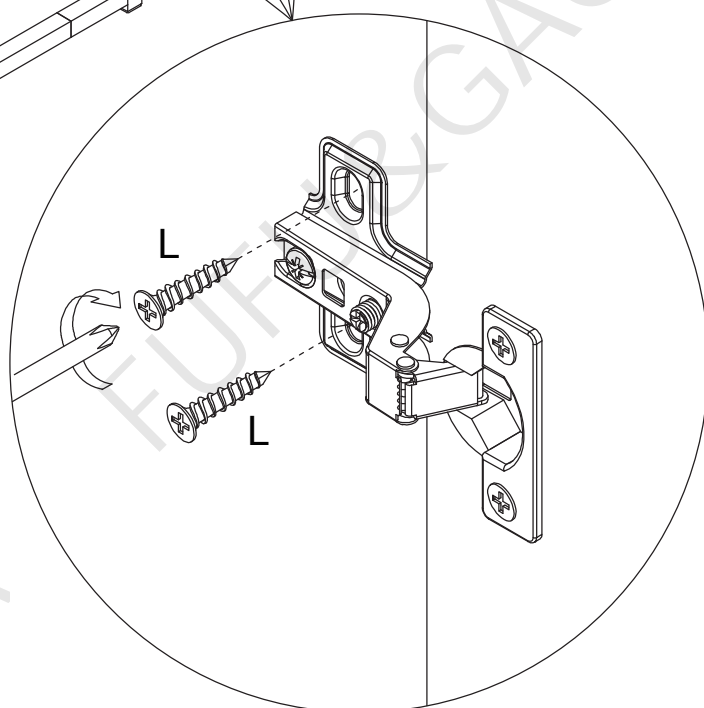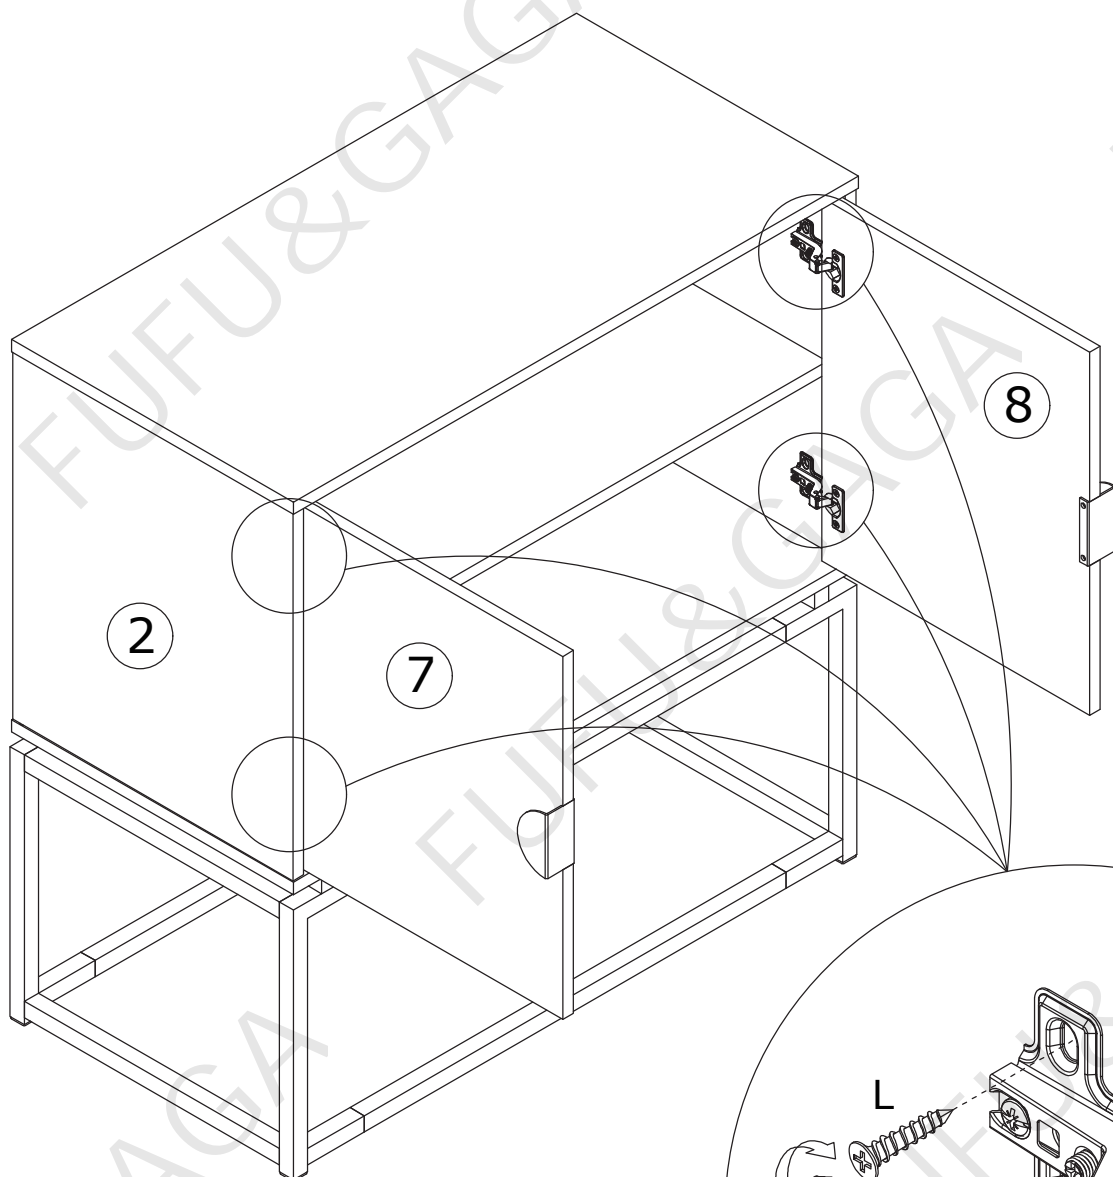

 
 

 

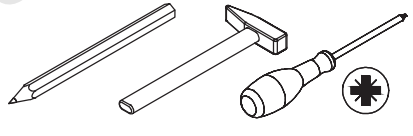 
13




Adjust the length of hinges to avoid a gap between doors as picture shown

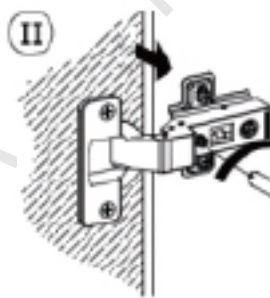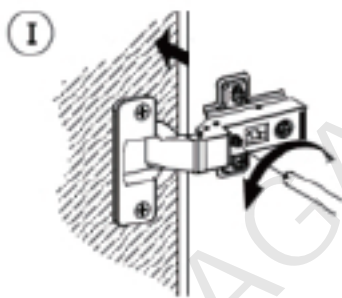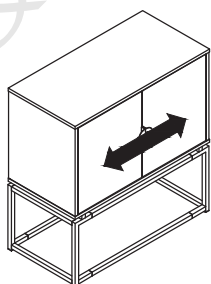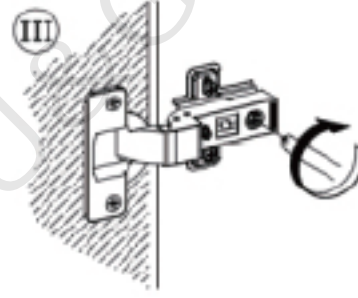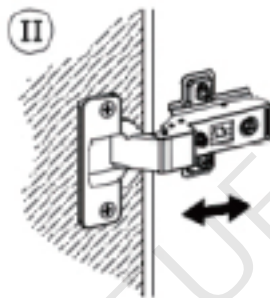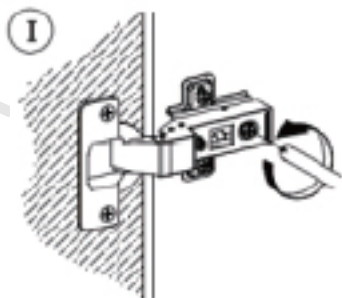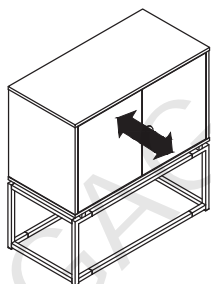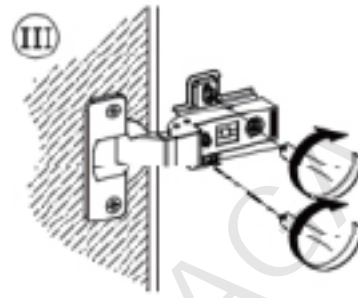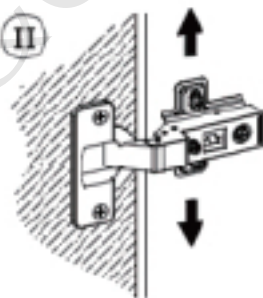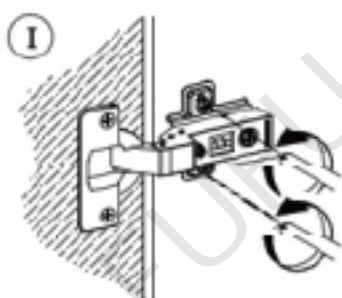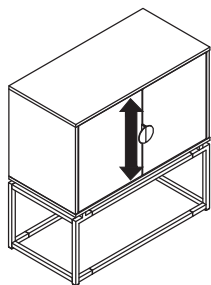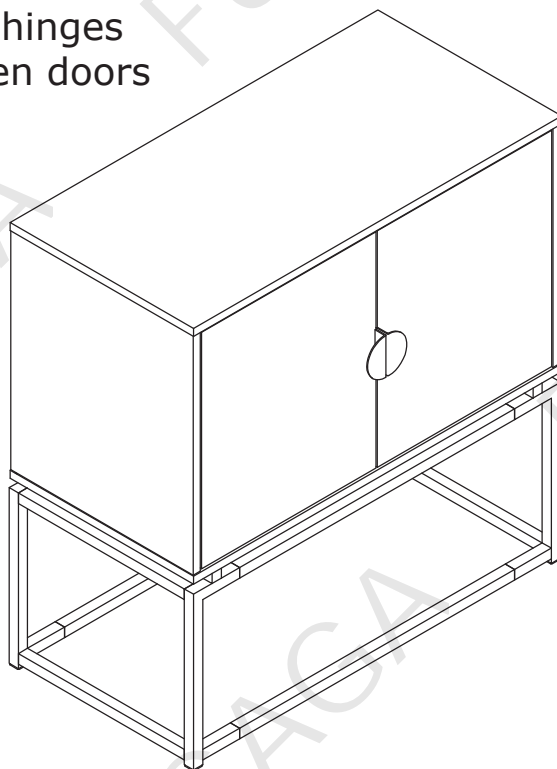


14

C x 2  Ø4 x 35 mm	E x 2  Ø6 x 30 mm	N x 4  Ø12 x 4 mm	P x 2 	Q x 2  Ø4 x 12 mm	
--	--	--	--	---	---

 For extra stability, it is recommended that you fix your buffet large to the wall using the additional hardwares (C, Q, E, N and P), as shown. Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.

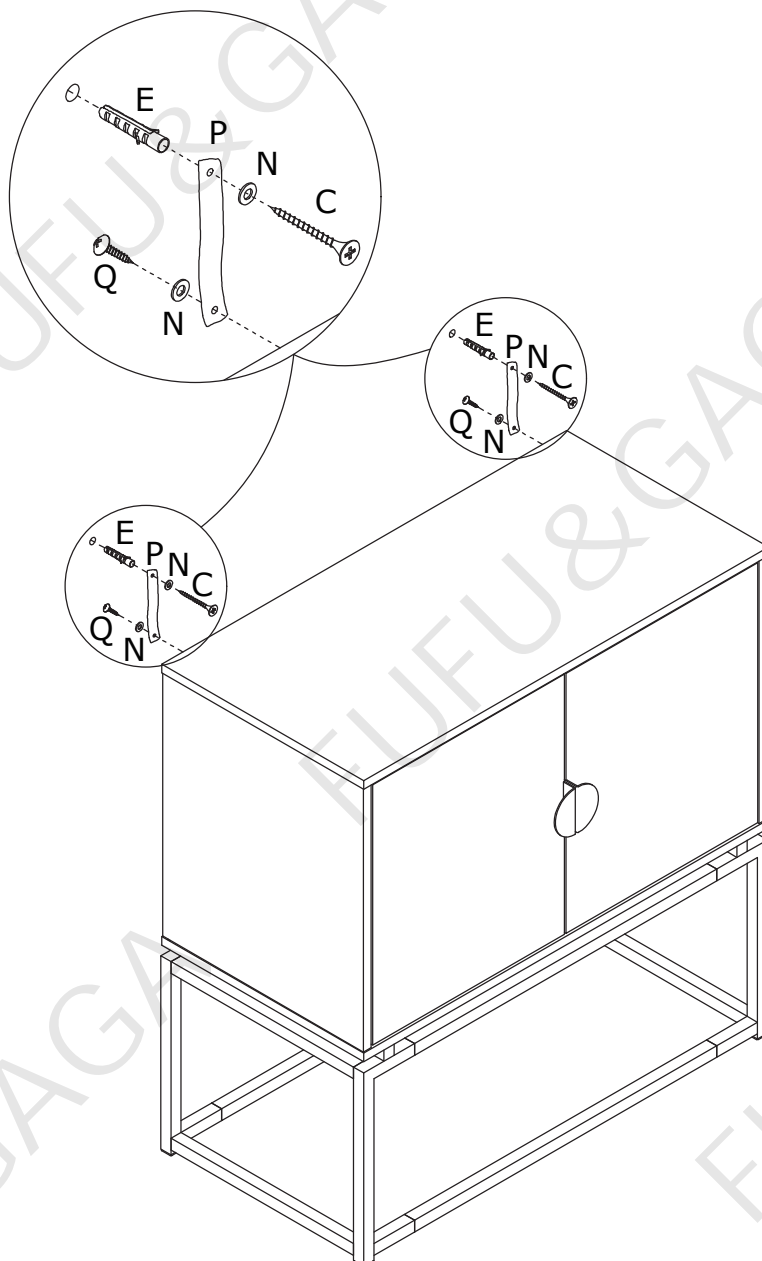

 Please note: the maximum recommended weight for this buffet large is 50kg in total. Please spread load evenly between the shelf and drawer.
Your buffet large is ready for use.

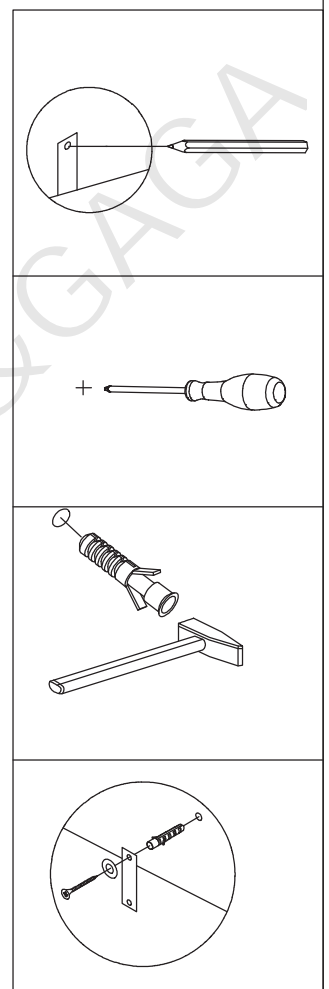

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply visit **feedbackstation@163.com** for further information. Our dedicated After-sale Team will endeavour to answer all messages within 48 hours. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please consult our FAQ section at feedbackstation@163.com as there may be a simple solution to the issue.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.