
HOW TO BUY STAIRPARTS

Use this guide to help you choose the right amount of components for your staircase

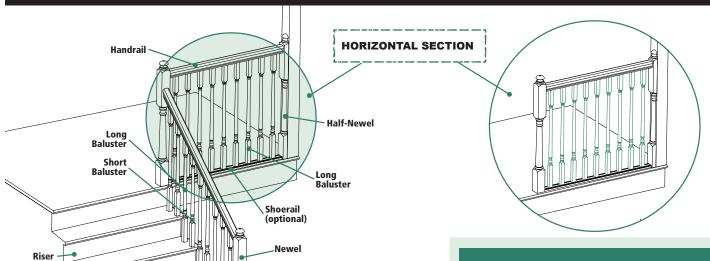

RAILINGS		FOR YOUR USE	
ITEM	TIPS	PRODUCT	QTY
NEWEL	1 at the bottom of the stairs 1 at the top of the stairs 1 when there is a change of direction 1 to divide a long horizontal section		
HALF-NEWEL OR ROSETTE	• 1 when the handrail reaches the wall		

Tread

NEWEL

FASTENERS HANDRAIL

FASTENERS

If you are using balu	sters available in different sizes, fill in this	section.	
SHORT BALUSTER	1 on the front of each tread (Except where the newel is installed directly on the tread)		
LONG BALUSTER	1 at the back of each tread On the horizontal section (see chart)		

and the second s				
If you are using balusters available in only one size, fill in this section.	If you are using balusters available in only one size, fill in this section.			
UNIVERSAL BALUSTER (1 SIZE) • 2 on each tread (Except where the newel is installed directly on the tread) • On the horizontal section (see chart)				
HANDRAIL FEET NEEDED • Stair section: Number of treads + 1 foot • Horizontal section: As measured				
SHOE RAIL • According to your horizontal section length				

• 1 for each newel

• 1 when handrail joins the newel

STAIRCASE		FOR YOUR USE	
ITEM	TIPS	PRODUCT	QTY
TREADS	• 1 tread for each step		
RISERS	• 1 riser for each step		

CHART OF BALUSTERS & PANELS REQUIRED FOR THE HORIZONTAL SECTION

LENGTH OF HORIZONTAL SECTIONS	NUMBER OF 1 1/4" BALUSTERS	NUMBER OF SINGLE IRON OR STAINLESS BALUSTERS	NUMBER OF WROUGHT IRON PANELS
1′0″	3	3	1
1′6″	4	4	2
2′0″	5	5	3
2′6″	7	7	3
3′0″	8	8	4
3'6"	9	9	4
4'0"	10	11	5
4'6"	12	12	5
5′0″	13	13	6
5′6″	14	15	7
6′0″	16	16	8
6'6"	17	17	8
7′0″	19	19	9
7′6″	20	21	9
8'0"	22	22	10
8'6"	23	23	11
9'0"	24	24	12
9'6"	25	26	12
10'0"	27	28	13
10'6"	28	29	14
11′0″	29	30	14
11'6"	31	32	15
12'0"	32	33	16
12'6"	33	34	16