


**ROKU™**

Floodlight  
Camera


**Quick Start  
Guide**

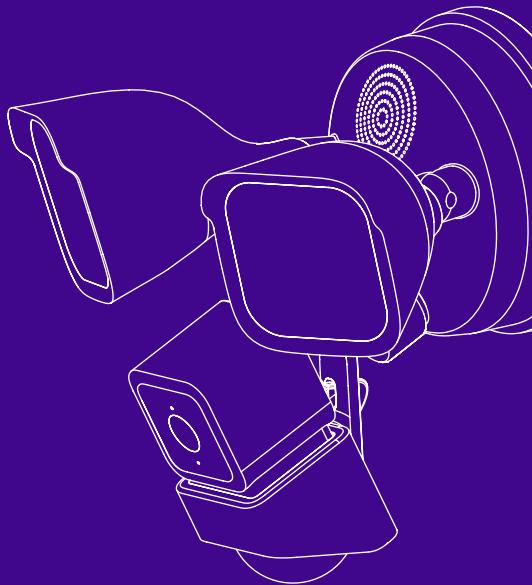



**Before you set up...**  
**Do you have a junction box**  
**with a ground wire?**

If you aren't replacing a current light fixture,  
you may not have the wiring setup you need.

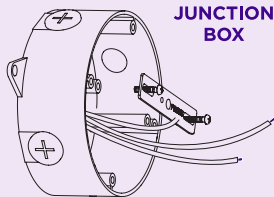

**WARNING**

**Risk of electrical shock!**



Remember to disconnect  
power to your junction  
box using the fuse or  
circuit breaker.

If not, please contact a licensed electrician to  
install one, following your local building codes.

# What's included


## A Roku Floodlight Camera\*

- 1 Speaker
- 2 Camera bracket lock
- 3 LED lamp
- 4 Camera
- 5 Status light
- 6 Microphone
- 7 Motion sensor
- 8 Micro USB port

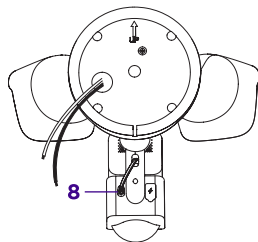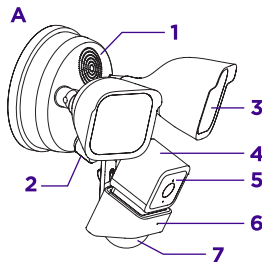


**Assembled  
Floodlight Camera**

- B** Bracket screws #6, #8, #10 (x2) (bag A)
- C** Ground wire screw (bag B)
- D** Floodlight screw (bag C)
- E** Rubber stopper
- F** Mounting bracket
- G** Wire caps (x2)
- H** Hook

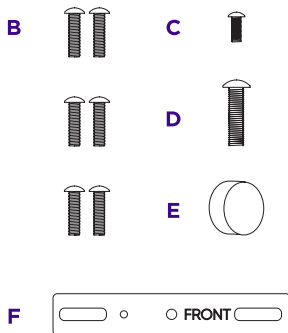

## What you'll need

- Phillips screwdriver
- Ladder
- Your smartphone

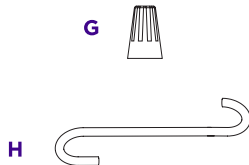


# Let's get started

---

## STEP 1: Download the Roku Smart Home app

Scan the QR code below to download the Roku Smart Home app on your smartphone. Sign in with your Roku account or create one.

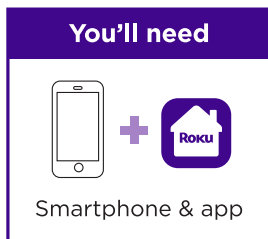

Messaging & data rates may apply.

## STEP 2: Install your camera

In the Roku Smart Home app, tap the “+” button, then “**Add Device**” to find “**Floodlight Camera.**” Follow the instructions to finish setup.


# What's that light mean?

| During setup                          | Status                         |
|---------------------------------------|--------------------------------|
| <b>RED</b> - Solid                    | Powered on and beginning setup |
| <b>RED</b> - Flashing                 | Ready to connect               |
| <b>RED</b> and <b>BLUE</b> - Flashing | Connecting to Wi-Fi®           |
| <b>BLUE</b> - Flashing                | Connected and finishing setup  |


| After setup                   | Status                                       |
|-------------------------------|----------------------------------------------|
| <b>RED</b> - Solid            | Viewing live stream or recording in progress |
| <b>RED</b> - Quickly flashing | Siren in use                                 |
| <b>BLUE</b> - Solid           | Connected and working                        |

# Mounting options


**WALL MOUNT**

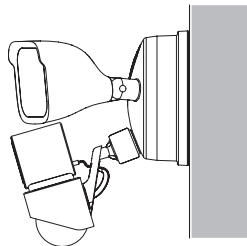


**CEILING MOUNT**

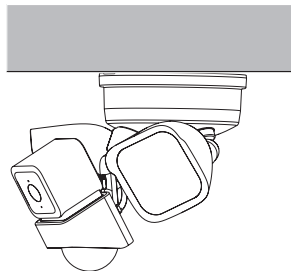

Continue on back ➡

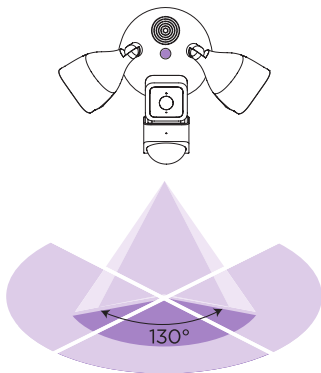


**CAMERA FIELD OF  
VIEW 130°**

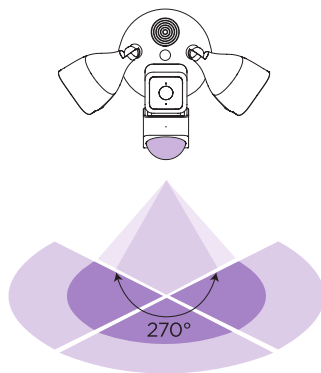

**MOTION AREA FOR  
TRIGGERING THE LIGHTS 270°**

### **Recommended location**

 We recommend installing your floodlight 10 feet above the ground. It will detect motion up to 30 feet away.



## More features are waiting

Unlock the full potential  
of your camera with a  
**Roku Smart Home Subscription.**

Learn more at  
**[go.roku.com/rokusmarthome](https://go.roku.com/rokusmarthome)**

# Need help?



Setup  
videos



Common  
questions



Tips and  
tricks

Visit [go.roku.com/cameras](https://go.roku.com/cameras)

**Roku**

© 2024 Roku, Inc. All rights reserved. Roku, the Roku logo, Roku Smart Home, and the Roku Smart Home logo are the trademarks or registered trademarks of Roku, Inc.



4100001060\_01