

3 AAA batteries required (not included)

BATTERY INFORMATION:

This product includes 2 non-replaceable 1.5 V LR44 batteries for the "Try Me" function.

1. Requires (3) AAA batteries (not included) for normal operation.
2. Do not mix old and new batteries.
3. Do not mix different brands, sizes or types of batteries, such as alkaline, standard (Carbon-Zinc) or rechargeable (Nickel-Cadmium).
4. Non-rechargeable batteries are not to be recharged.
5. Do not force discharge, recharge, disassemble, heat above 140°F (60°C) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
6. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries and keep them away from children.
7. Exhausted batteries are to be removed from the product. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate them
8. Do not expose batteries to fire, as batteries may explode or leak. Even used batteries may cause severe injury or death.
9. Never handle damaged or leaking batteries — this may result in burn injuries or cause serious internal injuries. Do not ingest the battery.
10. Misuse can cause battery to overheat, rupture, leak or explode, resulting in property damage, personal injury or death.
11. Keep away from children. Call a local poison control center for treatment information.

BATTERY INSTRUCTIONS:

1. The "TRY ME" feature is intended for in-store demonstration only. Please remove the "TRY ME" wire and insert 3AAA batteries into the battery compartment during normal operation.
2. Product is safe to use in indoor and outdoor settings.
3. Replace only with (3) AAA batteries.
4. Replace all batteries of a set at the same time.
5. The battery box is located at the back of the product
6. Remove the screw on the battery cover and open.
7. Clean the battery contacts and also those of the device prior to battery installation.
8. Insert (3) AAA batteries with the correct polarity (+ and -).
9. Replace the battery box cover and tighten the screw.
10. The ON TIMER/OFF switch is located on the battery compartment. Slide the switch to the ON position to light up the LED. Switch to the OFF position to turn it off.
11. Slide the switch to "Timer" to activate 6-hours-on,18-hours-off feature.
12. Remove batteries to prevent leakage if the product is not being used for a long period of time.