

## Product Specifications

Rated Voltage	Rated Power	Product Size	Product Weight	Product Material	DustCup Capacity	Power Mode
7.4V DC	60W	11.5*3.0*3.0"	1.8 Lbs	ABS	0.2 L	USB Charge

## Switch

1. Please fully charge the machine before use to ensure normal operation.
2. Please empty the dust cup before each use and clean it up.
3. Press the button once, activate the switch, and the vacuum cleaner will start running.
4. Press the switch again to turn off the vacuum cleaner.

## USB charging

1. The vacuum cleaner uses a 2000mah rechargeable battery, which takes about 4 hours to be fully charged.
2. Please use the USB charging cable that comes with the vacuum cleaner to charge.
3. When charging is over, please unplug the power supply in time to prevent the battery from overcharging.

## Warning and Precautions

1. Before use, check whether the parts are in good condition. If the parts are broken and leaking, repair them in time, and check whether the dust in the dust box has been drained.
2. Before use, the place should be cleared of large, broken fragments, etc., so as not to be sucked into the pipe to block the air inlet or dust channel during work.
3. Do not vacuum up cigarette butts and various liquids that have not been extinguished to prevent malfunction.
4. If you find that the vacuum temperature is too high or make an abnormal sound during use, you must stop using it immediately and ask a professional for inspection and repair.
5. After using the vacuum cleaner, clean up the dust in time to prevent larger objects from blocking the air inlet and exhaust outlet, thereby reducing the power of the vacuum cleaner.

This product has a 1-year limited warranty. For further information please visit our website at [www.techkogroup.com](http://www.techkogroup.com)

Copyright Reserved

☎ 1-888-883-2456

✉ [support@techkogroup.com](mailto:support@techkogroup.com)


Handheld Vacuum Wand

# USER MANUAL




Model: CL-201

## Product introduction

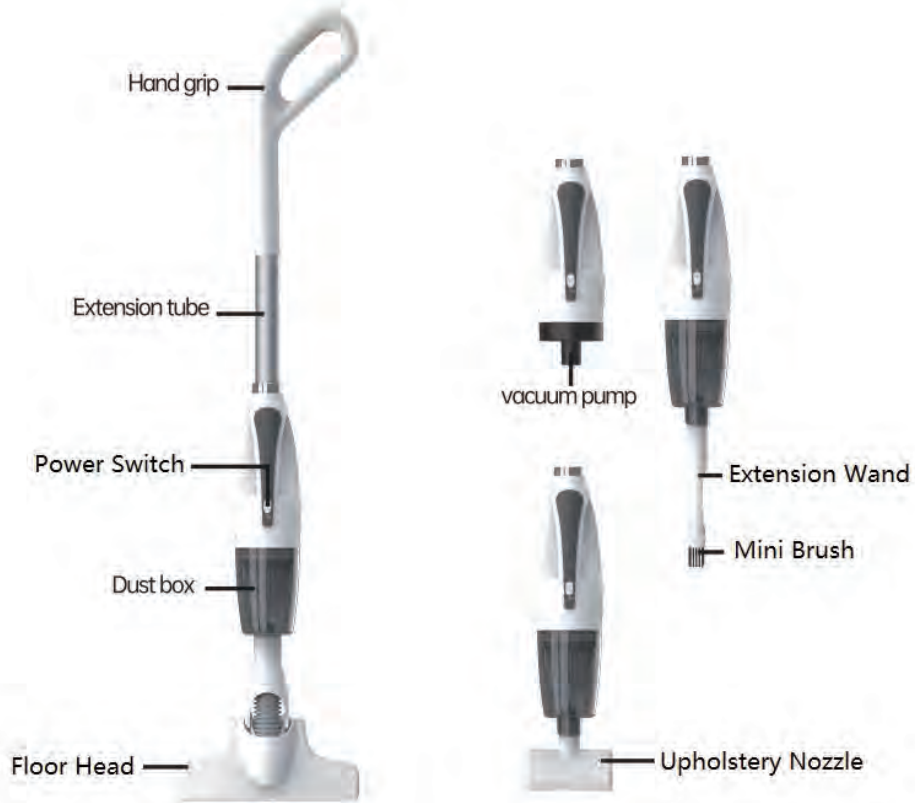

## Product Assembly

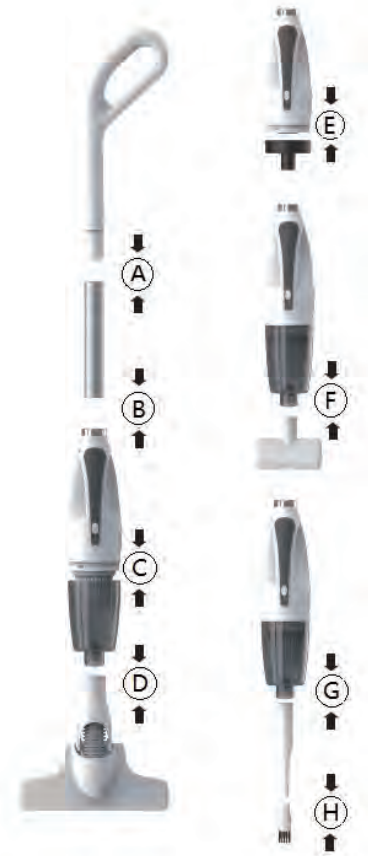

### Floor Vacuum Mode

1. Apply (C) to put the dust filter and dust box into the machine.
2. Attach the hand grip and extension tube to the vacuum(A)&(B)
3. Attach the Floor Head (D)

### Handheld Vacuum Mode

1. Apply (C) to put the dust filter and dust box into the machine.
- 2a. Attach the upholstery nozzle to the vacuum (F)
- 2b. Attach the Extension Wand (G) and Mini Brush (H) to the vacuum.