 
 


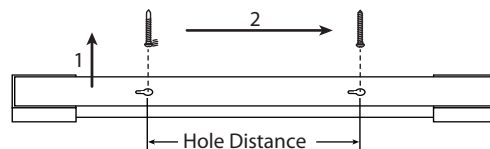

Linkable Under Cabinet Lights Install Guide

MSL-12700WL
MSL-18100WL
MSL-24140WL

www.maxximastyle.com

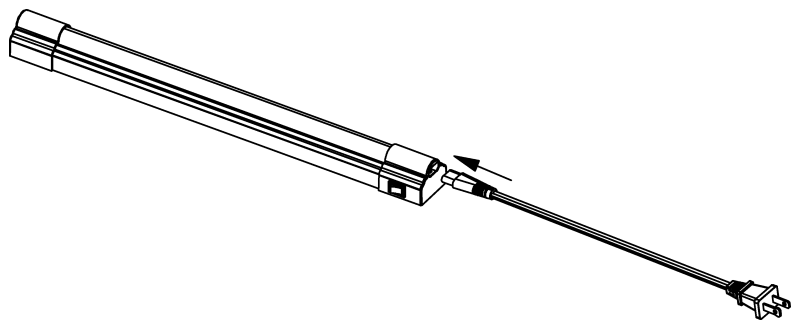

Model Number	Hole Distance
MSL-12700WL	4 5/8 in.
MSL-18100WL	10 5/8 in.
MSL-24140WL	16 5/8 in.

FIXTURE INSTALLATION

Before beginning assembly or installation of the lighting fixture, make sure all parts are present. Compare the parts with the packaging contents listed on the following page. If any part is missing or damaged, do not attempt to assemble, install or operate the fixture.

Estimated assembly time: 10-20 minutes (Installation time will vary depending on skill level and existing wiring conditions).

Tools required for installation (not included): Philips head screwdriver, drill, measuring tape, pen/pencil/ marker.

NOTE:

1. Before mounting the fixture, make sure that the fixture is within 5 feet of a 120V outlet.
Consider the path that the power cord will take when choosing a fixture mounting location.
2. This fixture is intended for installation on wood mounting surfaces such as a cabinet, wardrobe, bookcase, etc.

Step 1: Locate mounting holes: View the table above for mounting screw hole distances. Measure the distance between the 2 screw slots on the light fixture. Find a suitable mounting location and mark the position where the mounting screws will be installed. The screw holes must be exact for the fixture to mount properly.


Step 2: Drill holes and install screws: Caution: Check the cabinet thickness before proceeding. Be careful not to drill through the cabinet. If mounting into wood, drill 1/16" pilot holes 1/2" deep. If mounting into drywall, drill 3/16" holes for the plastic wall anchors. Insert the plastic wall anchors into the holes and carefully tap them into place until they are flush with the surface of the wall. Install the screws and leave them extended about 1/16" to 1/8" off of the surface. You may have to refine this distance later on to ensure proper fitment of the light fixture onto the mounting surface.

Step 3: Attach fixture: Align the wide section of the keyhole slots underneath the fixture with the heads of the mounting screws. (1) Push the fixture onto the screws. (2) Slide the fixture so the screws are secured into the narrow part of the keyhole slots. If fixture is not sitting snug on mounting surface, adjust the screw depth as described in step 2.

Step 4: Connect the power cord: Connect the 5' power cord to the fixture. Plug the cord into a 120V outlet. The light may be turned on or off using the toggle switch on the fixture. **Warning: Do not conceal the power cord inside a wall, ceiling, soffit, kitchen cabinet or similar permanent structure. Do not run the power cord through holes in walls, ceilings or floors that may damage the cord.**

Step 5: Linking multiple fixtures: To link multiple fixtures together, remove the cover on the end cap that is on the opposite side of the power cord (see illustration 1). Using the link cord connect the fixtures as shown in the illustration 2.

 Illustration 1

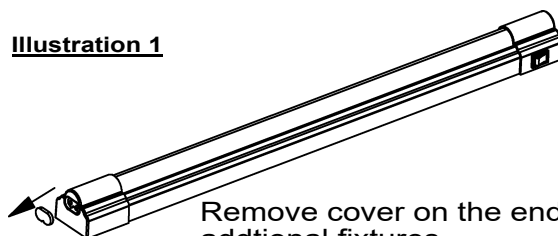


Remove cover on the end cap to add additional fixtures

Maxxima®

Undercabinet Light Install Guide

MSL-12700WL
MSL-18100WL
MSL-24140WL
www.maxximastyle.com

 Illustration 2

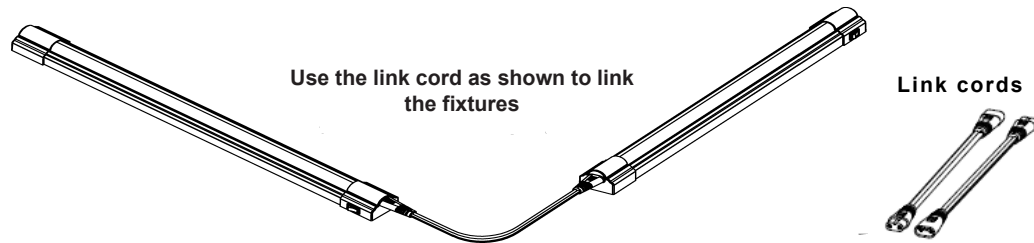



⚠ WARNINGS AND CAUTIONS ⚠

- Risk of electric shock. Before installing this fixture, turn off power at the source. Do not rely on the wall switch alone to turn off the power.
- Do not use this fixture with a dimming circuit. This fixture can only be used with regular electrical switches.
- If you are unfamiliar with electrical installations, consult a qualified electrician before proceeding.
- Risk of fire. Install only in locations where the fixture will not be fully enclosed.
- Risk of electrical shock or fire. Use only on 15 Amp maximum branch circuits.
- Use only insulated staples or plastic ties to secure electrical cords.
- Route and secure the cords so that they will not be pinched or damaged when the cabinet is pushed against the wall.
- This fixture is intended for dry locations only.
- For indoor use only.
- Do not mount this fixture to surfaces with material thickness less than 1/2 inch.
- Do not mount over sinks or stoves.
- Not intended for recessed installation in ceilings or soffits.
- The National Electric Code (NEC) does not permit cords to be concealed where damage from installation may go unnoticed. To prevent fire danger, do not run the cord behind walls, ceilings, soffits, or cabinets where it may be inaccessible for examination. Cords should be visually examined periodically and immediately replaced if any damage is noted.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following 2 conditions:
 - (1) This device may not cause harmful interference.
 - (2) This device must accept any interference received, including interference that may cause undesired operation.

5 YEAR WARRANTY

Maxxima extends a 5 year limited warranty to the original purchase that the products listed are free from defects in material and/or workmanship only. Maxxima will replace any warranted product to the original consumer/purchaser if the product fails because of defects due to workmanship and/or materials within the limited warranty period. Limited warranty is not transferable and applies to the original installation of the Maxxima product. This offer does not constitute in any way a product guarantee and Maxxima does not hereby assume any obligation whatsoever beyond sending a free replacement product.

  PARTS INCLUDED

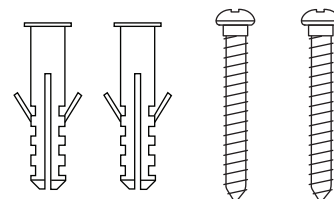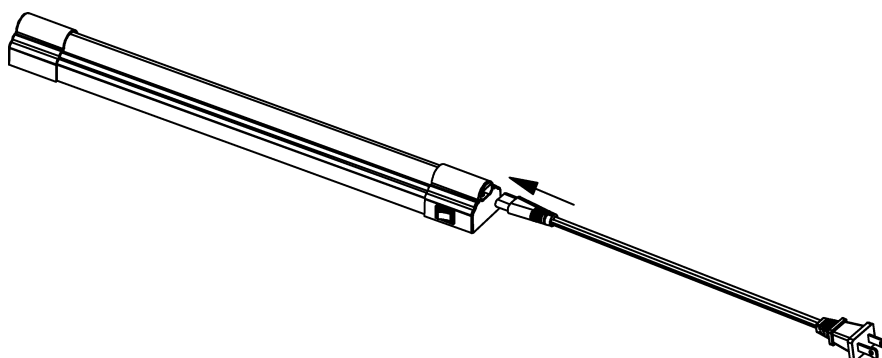

1X Light
1X Power Cord
2X Screws
2X Plastic Wall Anchors