



Panasonic®



## Specifications

- Dimensions: 23 7/8" W x 14" H x 19 7/16" D (606 x 356 x 493 mm)
- Weight: 36.8 lbs (16.7 kg)


### How to open/unlock door

With the door closed, press:

1. The [Door Open] button\*
2. Door release button

NOTE: The locked door will disengage when unit is unplugged.

\*The "Door Open" button will vary by model.

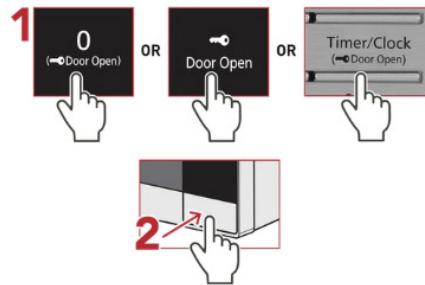

### How to deactivate safety lock

Press:

1. [Turbo Defrost] or [Auto Defrost]
2. [Timer]
3. [Popcorn]

To re-activate the safety door lock, repeat the above steps.

