



MODEL NO. RPJ107-BLACK

Home Theater Projector with Bluetooth

INSTRUCTION MANUAL



 
PLEASE READ BEFORE OPERATING THIS EQUIPMENT

This product is manufactured and sold by Curtis International Ltd. RCA, the RCA logo, the two dogs (Nipper and Chipper) logo, are registered trademarks or trademarks of RCA Trademark Management and are used under license by Curtis International Ltd. Any other product, service, company, trade or product name and logo referenced herein are neither endorsed nor sponsored by RCA Trademark Management or its affiliates.

Ideal for dark viewing environments for optimal performance.
Please note: Projector brightness is measured in ANSI lumens.
Your viewing environment is the deciding factor on how many lumens your projector needs.


To Reduce Image Distortion

- Move the projector as close to the center of the screen as possible.
- The light beam from the projector should be perpendicular to the screen for a rectangular or square image.

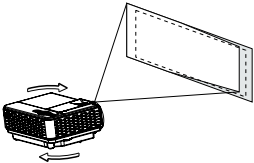

Distance Between The Projector And Screen

 Measure the distance between the projector and where you want to position the screen. This is the projection distance.

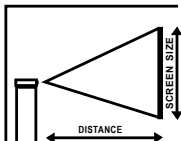


Distance	Screen Size
1.16m	37 inch
1.35m	45 inch
1.51m	50 inch
1.81m	60 inch
2.15m	72 inch

Installing your Projector in the Ceiling

When installing the projector in the ceiling, please purchase a projector mount recommended by an installation professional and follow the instructions that come with the mount. Before installing the projector in the ceiling, please check to make sure the ceiling structure can support the weight of the projector and the mount. If in doubt, please ask the advice from an installation professional.

 NOTE: Projector mount and screw(s) not included

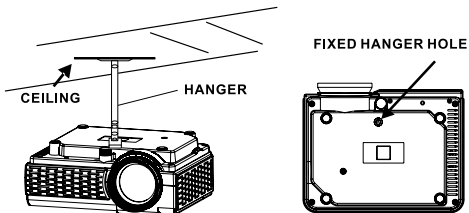

6

Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifier) that product heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.



1

Additional Warnings and Precautions

- Do not look directly into the projector light.
- Don't touch the project lens.
- Mains adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- WARNING:** Changes or modified to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- WARNING:** Shock hazard - Do Not Open.
- Caution and marking information is located at the rear or bottom of the apparatus.
- WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
- Objects filled with liquids, such as vases, shall not be placed on the apparatus.

2

FCC Warning


FCC ID: 2ANH7696PJ28BT

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 In The Box

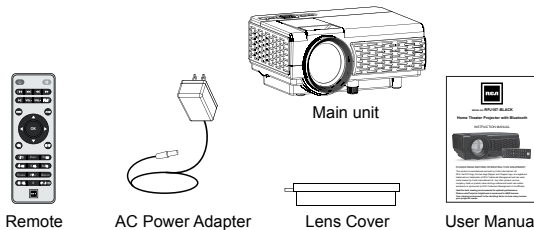

3

 Controls Of Remote

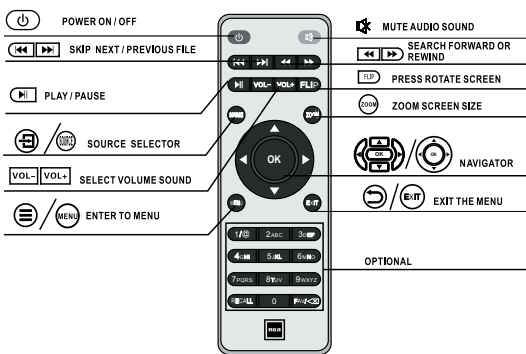


Install / Remove Battery Of Remote

Remove the battery compartment cover on the back of your remote by carefully sliding to open. The battery cover can then be lifted away. Fit the correct batteries (not included), referring to the polarity markings. Finally, replace the cover.


NOTES:

 - Batteries shall not be exposed to excessive heat such as placing under the sunlight or near a fire.
- Please make sure the batteries are installed with their correct polarities.
- Do not mix old and new batteries.
- Use only the same type of batteries.
- Do not dispose of the batteries in fire, battery may explode or leak.
- Do not recharge a non-rechargeable battery

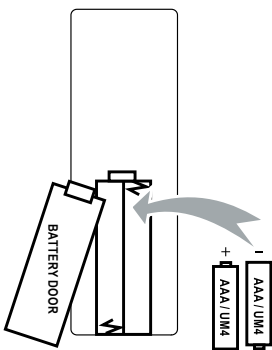

8

 Controls Of Projector

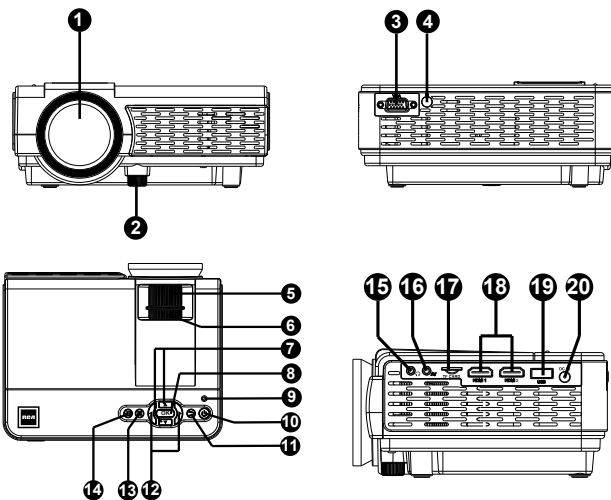

- LENS
- ANGEL ADJ. Knob
- VGA IN Port
- IR Sensor
- FOCUS ADJ. Knob
- TRAPEZOIDAL ADJ. Knob
- ▲/▼ Buttons
- ⊙ Button
- POWER Indicator
- POWER ⏻ Button
- RETURN ⏮ Button
- ⏪/⏩ Buttons
- MENU ⏸ Button
- SOURCE ⏮ Button
- EAR PHONE Jack
- AV IN Jack
- TF Card Slot
- HDMI 1 & 2 Ports
- USB Port
- DC IN Jack


9

Table of Contents

Important Safety Instructions	P1
Additional Warnings and Precautions	P2
FCC Warning	P3
In The Box	P3
Table of Contents	P4
Remove & Close the Lens Cover	P5
Placing Your Projector	P5
To Reduce Image Distortion	P6
Distance Between The Projector And Screen	P6
Installing your Projector in the Ceiling	P6
Adjust the Vertical Location	P7
Adjust the Focus and Keystone	P7
Controls of Remote	P8
Install / Remove Battery Of Remote	P8
Controls of Projector	P9
Install Power Adapter	P10
Main Button Operation	P10
Connect HDMI Show the Image On Projector Screen	P11
Connect AV Show The Image On Projector Screen	P11
Connect VGA Show The Image On Projector Screen	P12
Connect Audio Output (Aux Out / Line Out / Earphones)	P13
Install USB Device And Micro Sd Card "TF"	P13
Using TF Card and USB Playback (Media Player)	P14
Using Bluetooth Playback	P15
Using Projector Menu 1.0	P16
Using Projector Menu 2.0	P17
Using Projector Menu 3.0	P18
Specifications	P19
Warranty Card	P20


4

 Remove & Close The Lens Cover

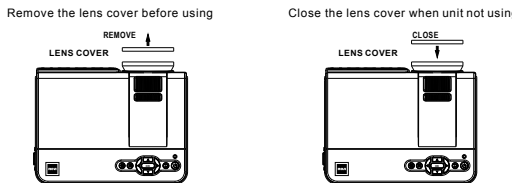

Placing Your Projector

 Your projector can be installed in four different configurations (see picture below):

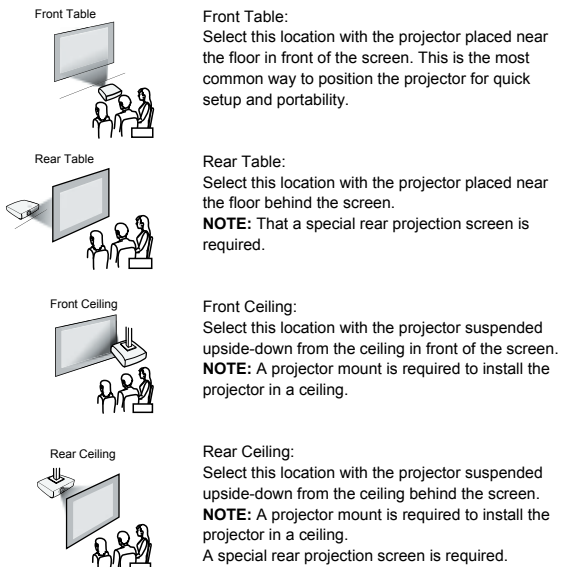


5

Connect HDMI Show The Image On Projector Screen

Refer to the following picture to connect a set top box, a BD/DVD player or a streaming player to the HDMI input.

 - Turn off the unit before connect HDMI cable.
- After connection, press the ⏻ button to turn on unit and power indicator will light GREEN
- Press the ⏮ / SOURCE button to select HDMI 1 or HDMI 2 and the video from the connected device will be shown on projector screen.
- Press the ⏻ button to turn off unit power.

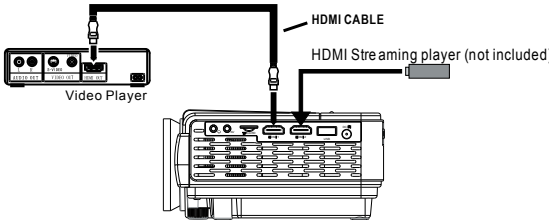


Important Note:
If there is no sound from the internal speakers when playing media contents from a set top box, BD/DVD or streaming players connecting to the HDMI input, please check the set top box or the player's digital audio settings and make sure it is set to "PCM Stereo" mode.

Connect AV Show The Image On Projector Screen

Follow below picture to connect AV cable and device.

 
- Turn off the unit before connect AV cable.
- Use AV cable to connect follow below figure
- After connect, press the ⏻ button to turn on unit and power indicator will light GREEN
- Press the ⏮ / SOURCE button to select AV mode and the video of AV device will show on projector screen
- Press the ⏻ button to turn off unit power

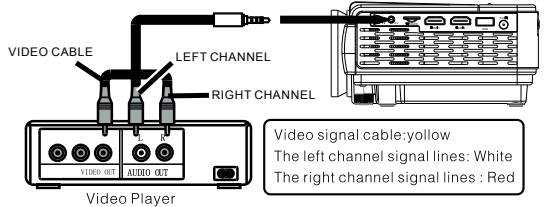

11

Connect VGA Show The Image On Projector Screen

 - Follow below picture to connect VGA cable and device.
1. Turn off the unit before connect VGA cable.
 2. Press the button to turn off power of your projector before connection.
 3. After connect, press the button to turn on unit and power indicator will light GREEN
 4. Press the / SOURCE button to select VGA mode and the video of VGA device will show on projector screen
 5. Press the button to turn off unit power.

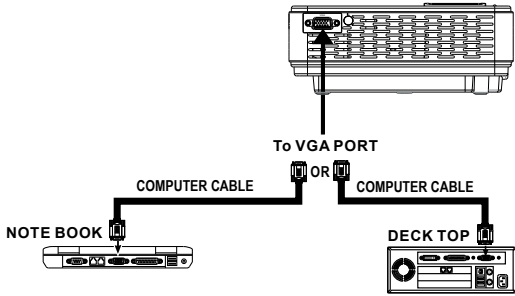


Type	Resolution	Frequency	Field Frequency
PC	VGA	640x480	31.5
			34.7
			37.9
			37.5
			31.4
			35.1
	SVGA	800x600	37.9
			46.6
			48.1
			46.9
			40.3
			48.4
PC	XGA	1024x768	56.5
			70

NOTE: In order to get the sound from the unit, please connect AV IN cable when you connect VGA input.

12

Connect Audio Output (Aux Out / Line Out / Earphones)

 
- Follow below picture to connect audio cable and device.
1. Press the button to turn off power of your projector before connection.
 2. Use audio cable to connect follow below figure.
 3. After connect and turn on both units. Your projector sound from external device now.
 4. After using , turn off both unit

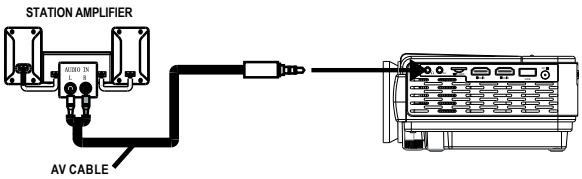

Important Note:
If there is no sound from the stereo audio output when playing media contents from a set top box, BD/DVD or streaming players connecting to the HDMI input, please check the set top box or the player's digital audio settings and make sure it is set to "PCM Stereo" mode.

Install USB Device And Micro Sd Card "TF"

 Follow below picture to install USB and TF card
Turn off the unit before install USB / TF card.

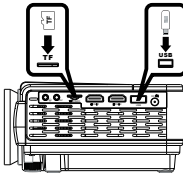

13

Using TF Card And USB Playback (Media Player)

- Install USB / TF device:
1. Turn off the unit before install USB / TF card.
 2. Install the USB device into USB port / Install the TF device into TF slot.
 3. After connect, press the button to turn on unit and the power indicator light GREEN.
 4. Press the / SOURCE button to enter and use buttons to search the USB or TF.
 5. After selection, use buttons to search the PHOTO / MUSIC / MOVIE / TEXT icon and press the button to enter.
 6. Use the button to select C and press button to enter.
 7. Use buttons to search the correct file and press the button to preview playback file and press button of remote to start playback.
 8. Press button to fast search forward and rewind.
 9. Press button to search next or previous file.
 10. During playback, press the button to pause and press again to resume.

NOTE: Remove USB / TF device, press the button twice to turn off power FIRST.

Sub-Menu on Photo screen

1. When photo playback, press the button and more function screen show on lower (figure 1).

2. Use the button to select icon and press the button to play special function.

Figure 1.

Pause Prev. Next Stop R. All R. OFF MUSIC Play..

Info Rota... Rota... Zoom... Zoom... Mov... Slid...

Sub-Menu on Music screen

1. When music playback, press the button and more function screen show on lower (figure 2).

2. Use the button to select icon and press the button to play special function.

Figure 2.

Pause FB FF Prev. Next Stop R. All Set A

R. OFF MUTE Play... Info Goto...

Sub-Menu on Movie screen

1. When movie playback, press the button and more function screen show on lower (figure 3).

2. Use the button to select icon and press the button to play special function.

Figure 3.

Pause FB FF Prev. Next Stop R. All R. OFF

Set A Play... Info Slow... Step... Goto...

Sub-Menu on Text screen

1. When text playback, press the button and more function screen show on lower (figure 4).

2. Use the button to select icon and press the button to play special function.

Figure 4.

 
Prev... Next... Prev. Next Stop MUSIC Play... Info

14

Using Bluetooth Playback

Pairing is the term used when two Bluetooth devices are connected wirelessly for the first time. This allows the devices to see each other and sets up a one to one communication channel between both devices.

- Bluetooth Connection
1. Press the button to turn on unit.
 2. Press the / MENU button to enter the menu screen.
 3. Use the button to select right side menu.
 4. Use the button to select Bluetooth speaker column.
 5. Press the button to select "Bluetooth Speaker On"
 6. Turn on your External Bluetooth Speaker and select to Bluetooth pairing mode
 7. A few seconds, near the BT logo will show the connected External Bluetooth Speaker name in the main function page.
 8. After connection completed, the unit sound to External Bluetooth speaker.



- Disconnect the Bluetooth
1. Press the / MENU button to enter the menu screen.
 2. Use the button to select above menu.
 3. Use the button to select Bluetooth speaker column.
 4. Press the button to select "Bluetooth Speaker Off" that the Bluetooth disconnect.

15

Using Projector Menu 1.0

Press / MENU button to enter projector menu.

Picture Mode Standard
Color Temperature Medium
Aspect Ratio Auto
Noise Reduction Middle
PC Setting
Reduce Display 100%

USE / TO SELECT

Picture Mode Standard

USE / TO SELECT

Color Temperature Medium

USE / TO SELECT

Aspect Ratio Auto

USE / TO SELECT

Noise Reduction Middle

USE / TO SELECT

Reduce Display 100%

Use / to select different picture effect to 'Standard / Soft / User / Vidid. Use / or / to select Contrast / Brightness / Color / Sharpness digit if chose User item. Follow below figure.

Use / buttons to select different color temperature to Cool / Medium / Warm / User. Use / or / to select Red / Green / Blue digit if chose User item. Follow below figure.

Use / buttons to select screen ratio AUTO / 4:3 / 16:9. Follow below figure.

Use / buttons to select Off / Low / Middle / High / Default.

Use / buttons to select 75% - 100%

Picture Mode	Parameter
Customer define	0-100
Contrast	0-100
Brightness	0-100
Color	0-100
Sharpness	0-100

Color Temperature	Parameter
Customer define	0-100
RED	0-100
GREEN	0-100
BLUE	0-100

Aspect Ratio	Parameter
4:3	The signal in a 4:3 aspect ratio projection image
16:9	The signal in a 16:9 aspect ratio projection image

16

Using Projector Menu 2.0

Press / MENU button to enter projector menu, press / buttons to select SOUND menu.

Sound Mode Standard
Balance 0
Auto Volume Off
Bluetooth Speaker Off

USE / TO SELECT

Sound Mode Standard

USE / TO SELECT

Balance 0

USE / TO SELECT

Auto Volume Off

USE / TO SELECT

Bluetooth Speaker Off

Use / to select different sound effect Standard / Music / Movie / Sports / User.

Use / or / to select Treble and Bass digit if chose User item. Follow below figure to set digit.

Use / buttons to select Balance level to -50 to +50.

To select On / Off

To select On / Off

Sound Mode - User	Parameter
Treble	0-100
Bass	0-100

17

Using Projector Menu 3.0

Press / MENU button to enter projector menu, press / buttons to select OPTION menu.

OSD Language English
Restore Factory Default
Rotate 0
OSD Duration 30 S
Software Update(USB)

USE / TO SELECT

OSD Language English

USE / TO SELECT

Restore Factory Default

USE / TO SELECT

Rotate 0

USE / TO SELECT

OSD Duration 30 S

USE / TO SELECT

Software Update(USB)

Use button to select different language. Follow below figure.

Use / buttons to select Y or N. If choose "Y" that your unit will go to factory default setting.

To select different project direction Normal / left-right mirror / up-down mirror / left-right and up-down mirror.

To select 5S, 10S, 15S, 20S, 25S, 30S, Never

For service center use only

Czech	English	French	Hungarian	Polish	Romanian	Slovak
Danish	Spanish	Croatian	Portuguese	Dutch	Serbian	Simplified Chinese
German	Greek	Italian	Norwegian	Romanian	Finnish	

Ideal for dark viewing environments for optimal performance.
Please note:Projector brightness is measured in ANSI lumens.
Your viewing environment is the deciding factor on how many lumens your projector needs.

18

Specifications

Bluetooth Version	4.2
Light Source Type	LED
White light output	ANSI IDMS V1.03 SECTION 15.3 33 LMS
White brightness output	ANSI IEC/ISO 21118 33.1LMS
Display Native Resolution	800 x 480 RGB
HDMI Input Supported Video Resolution.	1080p , 1080i , 720p, 576i , 480p, and 480i
Power Consumption	Operating 30W; Standby 1.1W
Power Input	DC 12V , 2.5A
Connect Included Adapter	
Included Adapter	Input AC100-240V,50/60Hz
Connect DC input of unit	Output DC12V, 2.5A
Display Color	16.7M
Projection Size	37-100 inch
Input Port	AV/ VGA / HDMI X 2
USB Port	Support USB device up to 32GB Support format Mpeg1, Mpeg2, Mpeg4, mp3, Jpeg
TF Card	Support TF card up to 32GB Support format Mpeg1, Mpeg2, Mpeg4, mp3, Jpeg
Net Weight (unit)	0.95 KG
Product Dimensions	7.9" L x 6.1" D x 3.3" H

Specifications are typical, individual units might vary. They are subject to continuous improvement without notice and without incurring any obligation.

For service assistance and product information, please call: 1-800-968-9853.
Pour obtenir assistance et information appelez: 1-800-968-9853.
Curtis International Ltd.
7045 BECKETT DRIVE, UNIT 15,
MISSISSAUGA, ON, L5S 2A3
www.curtisint.com

19

To make a warranty claim, do not return this product to the store. Please email support@curtiscs.com or call 1-800-968-9853.

90 day Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does **not** cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

20