

Use & Care

Igloo Playmate Gripper - 22 Can

Lowe's Item 128184

Lunch, Sports & Events, Golf & Turf

Care

Wipe interior and exterior soft surfaces with a clean cloth before and between uses. Spot clean soft surfaces with mild detergent and water, as needed. To prevent stains and odors, empty cooler of contents after use. Tougher stains on hard liner may be cleaned with dilute solution of baking soda and water. Ensure all cleaning agents are thoroughly rinsed and the cooler is dry before storage.