

# IMPORTANT SAFEGUARDS

When using this or any other electrical appliance, always follow these basic safety precautions, especially when children are present.



## READ ALL INSTRUCTIONS BEFORE USE

**WARNING-To reduce the risk of fire, electric shock, serious personal injury and property damage please note the following:**

This appliance is not intended for use by children. Keep the appliance out of the reach of children and pets. Extra caution is necessary when using this appliance near children.

Always ensure the product is unplugged from the electrical outlet and allowed to cool before assembling, disassembling, relocating, or cleaning it.

Do not leave the appliance unattended while it is in use. Always unplug the appliance from the electrical outlet when not in use and before cleaning

Do not immerse or expose the Base, Power Cord, or Plug of this appliance in water or other liquids.

Do not touch hot surfaces. Use handles or knobs when handling product. Use protective oven mitts or gloves when removing the Lid or handling hot containers to avoid burns or personal injury.

This appliance generates heat during use. Please take the proper precautions to avoid burns, fire, and personal or property damage.

Do not use attachments not recommended or sold by the Manufacturer as it may cause fire, electric shock or injury. Attachments, when furnished, may become hot during use. Allow any attachments to cool before handling them.

Do not place appliance on or near a hot gas burner, in a heated oven, or other heated surfaces.

Use the product in a well-ventilated area. Keep at least 4-6 inches of space on all sides of the product to allow adequate air circulation.

Use appliance on a table or sturdy flat surface.

Keep the appliance away from curtains, wall coverings, clothing, dishtowels, or other flammable materials.

Do not plug or unplug the appliance from the electrical outlet with a wet hand.

This appliance is intended solely for non-commercial, non-industrial, household use in cooking of food for human consumption; do not use the product outdoors or for any other purpose.

Do not operate the appliance empty.

Do not let cord hang over edge of table or counter where it may be tripped over or pulled. Do not allow cord to touch hot surfaces.

Do not operate the appliance if it has a damaged power cord or plug, if wires are exposed, if it malfunctions, if it is dropped or damaged, or if the motor housing is dropped in or exposed to water.

This appliance has no user-serviceable parts.

Do not attempt to examine or repair this appliance yourself. Only qualified service personnel should perform any servicing. Take the appliance to the appliance repair shop of your choice for inspection and repair.

Do not put any stress on the power cord where it connects to the appliance, as the power cord could fray and break.

## **SPECIAL INSTRUCTIONS:**

Extreme caution should be exercised when using containers constructed of other material other than metal or glass.

A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord. An extension cord is not recommended for use with this product, but if one must be used:

The marked electrical rating must be at least as great as that of the product.


If the product is of a 3-prong grounding type, the extension cord must be a grounding-type 3-wire cord.

Arrange the extension cord so that it will not drape over the countertop or tabletop where it can be tripped over or pulled.

**WARNING:** This product is equipped with a polarized plug (one blade is wider than the other blade) to reduce the risk of electrical shock. This is a safety feature. The plug will fit into a polarized outlet only one way. If you are unable to insert the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless you can fully insert the plug into the extension cord. Do not alter the plug. Do not attempt to defeat the safety purpose of the polarized plug.

**SAVE THESE INSTRUCTIONS  
FOR FUTURE REFERENCE**

## Parts:

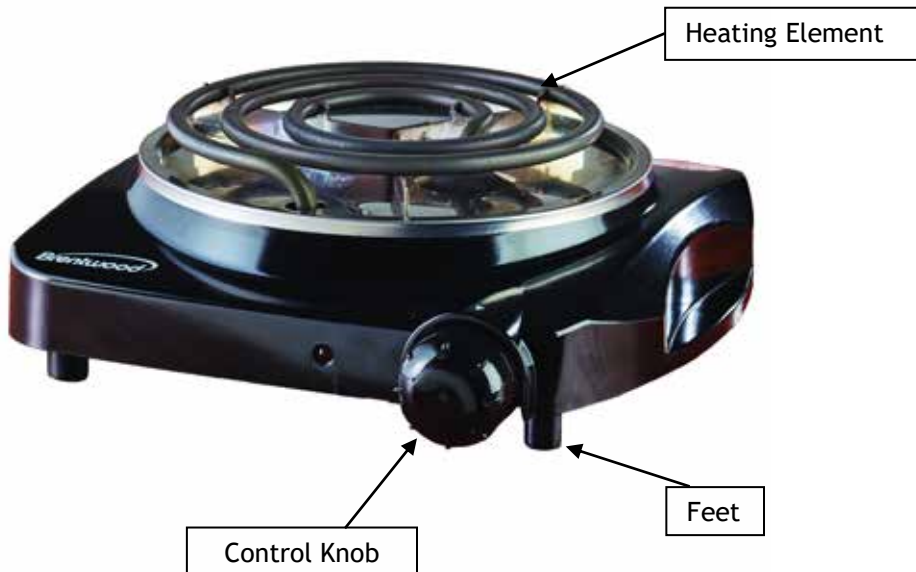

## Before First Use

**IMPORTANT:** Please check all packaging material carefully before discarding as there may be accessory parts contained within the packaging material.

### **WARNING:**

Before plugging in, check to see that the electric circuit is not overloaded with other appliances. This unit should always be operated on a separate 120Volt AC outlet.

Be certain that your unit is resting on a leveled flat countertop. Avoid using pans that are unstable and easily tipped.

## Using Your Electric Burner:

**WARNING: Avoid contact with moving parts.**

1. Place pan on heating element.
2. Turn control knob from the "OFF" position to the desired temperature position between LOW - HIGH
3. The heating element will energize and heating will begin immediately.

**CAUTION:** The whole burner, except the control knob, will become hot. Do not touch while in use.

4. When cooking is complete, turn control knob back to "OFF" position.

**TIP:** If the burner is not to be in use for a long period of time, it is highly recommended to unplug the unit from the outlet. This prevents any accidental burns or injury.

### **Cleaning Your Electric Burner or Hot Plate:**

**WARNING:** Always unplug the product and allow it to cool before cleaning or storing it.

**NOTICE:** Never immerse burner, plug or cord in water or any other liquid.

Use a damp towel or sponge to clean the surface of burner, the burner ring, the drip pan and the base.

Wipe the drip pan a damp towel or sponge. Do not attempt to remove the entire heating element.

Never use harsh abrasives or steel wool pads on any part of the unit.

## ONE-YEAR LIMITED WARRANTY

FOR ONE YEAR FROM THE DATE OF PURCHASE, WHEN THIS APPLIANCE IS OPERATED AND MAINTAINED PER INSTRUCTIONS FURNISHED WITH THE PRODUCT, BRENTWOOD APPLIANCES, INC. WILL REPLACE THE PRODUCT WITH AN EQUIVALENT UNIT OR A NEW UNIT, SOLEY AT OUR OPTION.

### TO OBTAIN WARRANTY SERVICE AND TROUBLESHOOTING INFORMATION:

Call Customer Service at 1-888-903-0060 in the U.S.

### BRENTWOOD will not pay for:

1. Service calls to correct the installation of your appliance, to instruct you how to use your appliance, to replace house fuses or correct house wiring, or to replace light bulbs.
2. Repairs when your appliance is used in other than normal, single-family household use.
3. Pickup and delivery
4. Damage resulting from accident, alteration, misuse, abuse, fire, flood, improper installation, acts of God, or use of products not approved by Brentwood Appliances.
5. Repairs to parts or systems resulting from unauthorized modifications made to the appliance.
6. Service or warranty support for units located and/or operated outside the United States.

**NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY FOR A PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. MANUFACTURER FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS PRODUCTS SHALL BE BINDING ON BRENTWOOD APPLIANCES, INC. REPAIR OR REPLACEMENT IS THE EXCLUSIVE REMEDY OF THE CONSUMER. BRENTWOOD APPLIANCES, INC. SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. NOT WITHSTANDING THE FOREGOING CONSUMERS RECOVERY AGAINST BRENTWOOD SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY BRENTWOOD. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.**

Some states or provinces do not allow the exclusion or limitation of incidental or consequential damage or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to province. **Outside the 50 United States, this warranty does not apply. Contact you authorized Brentwood Dealer to determine if another warranty applies.**

**Keep this Warranty and your sales slip together for future references. You must provide proof of purchase for in-warranty service.**

Write down the following information about your appliance to better help you obtain assistance or service if you ever need it. You will need to know your complete model number and serial number. You can find this information on the model and number label / plate.

### CUSTOMER RECORD

Date of Purchase \_\_\_\_\_ Store/Dealer \_\_\_\_\_  
Model No.: \_\_\_\_\_ Serial No.: \_\_\_\_\_