

10341LF

2. Adjust the water flow by Slotted Screwdriver









