



Use & Care

28-qt Iceless Thermoelectric Portable Cooler

Model# 00040369

Use

Lunch, Sports & Events

Care

DISCONNECT COOLER FROM POWER SOURCE PRIOR TO CLEANING. DO NOT ALLOW WATER TO ENTER INSIDE OR OUTSIDE FAN VENTS IN COOLER.

Wipe interior and exterior surfaces clean before storing and between uses.

To prevent stains and odors, empty cooler of contents after use. Light dirt or stains can be cleaned with water or mild detergent. Tougher stains may be cleaned with diluted solution of baking soda and water. Ensure all cleaning agents are thoroughly rinsed and the cooler is dry before storage.