 
 




PRODUCT INSTRUCTION

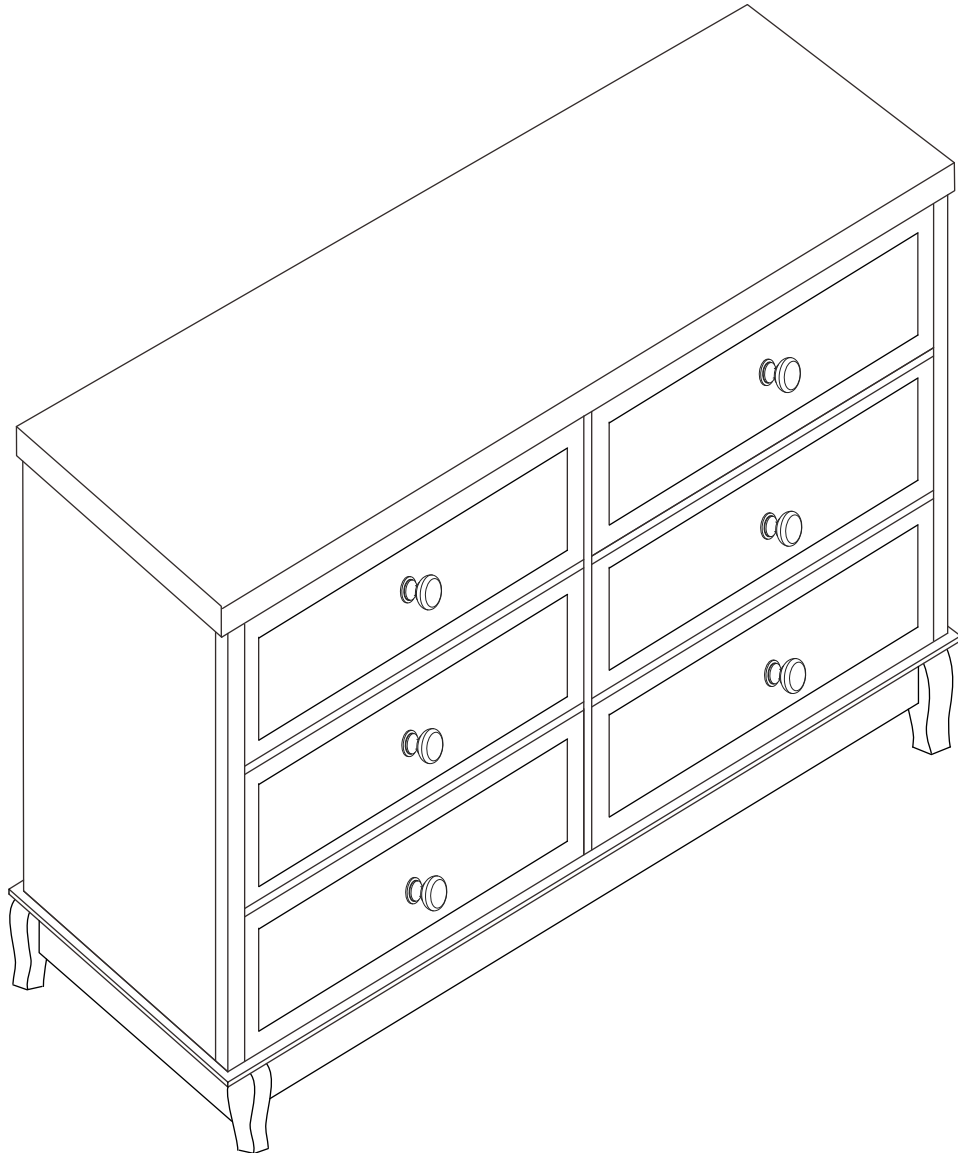

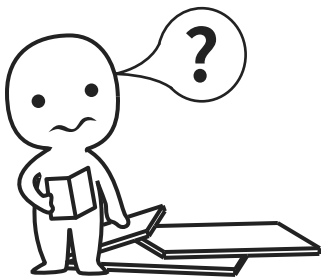


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

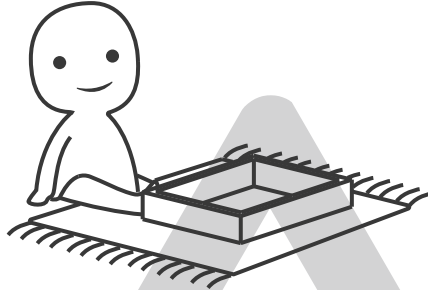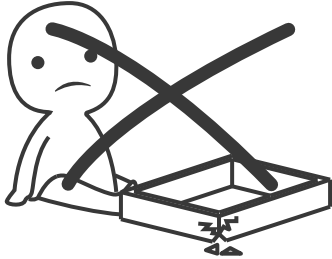



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

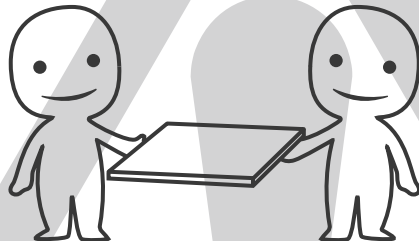

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

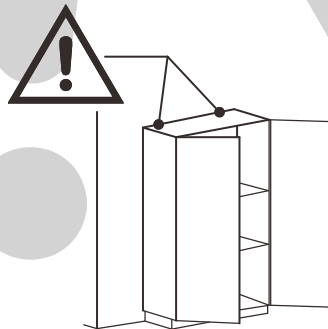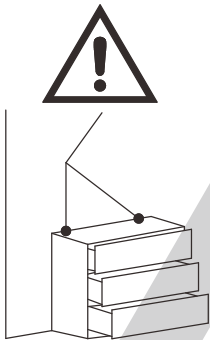

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

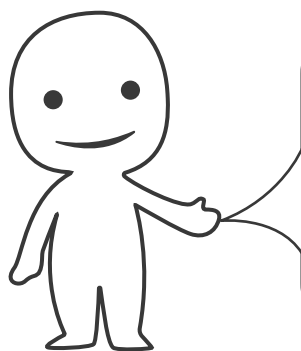


Please prepare the following tools

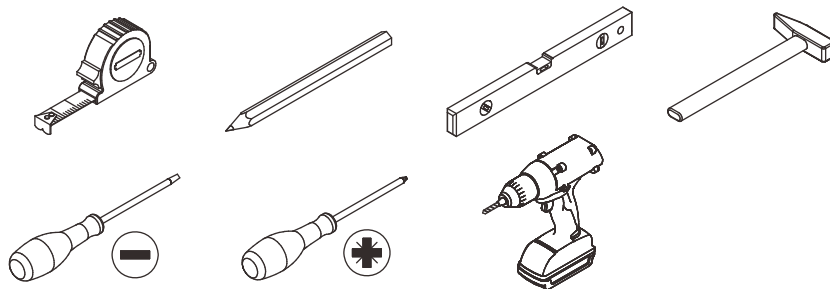 


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 32+1




Bx 74+1

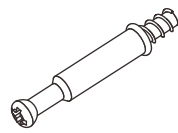 

Ø 6 x 35 mm

 Cx 74+1




Ø 15 x 10 mm

Dx2



Ø 4 x 12 mm

 Ex 10

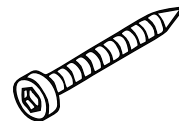

Ø 5 x 40 mm

F x 6



Ø 4 x 16 mm

G x 6

 


H x 48+1




Ø 3 x 12 mm

J x 1



K x 2

 


Ø 4x 35 mm

L x 6




 M x6




Ø 3 x 14 mm

 N x 42+1



Ø 4 x 30 mm

 
P x 2




Q x 2



 CLX 6




CRX6

 


   
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 

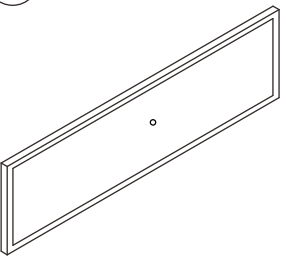 
 

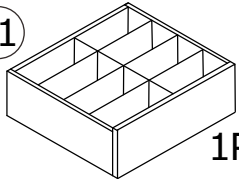 

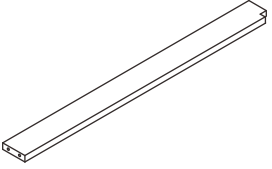 
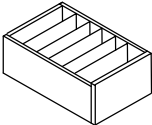 
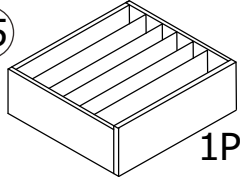 
DLX6







DRX 6



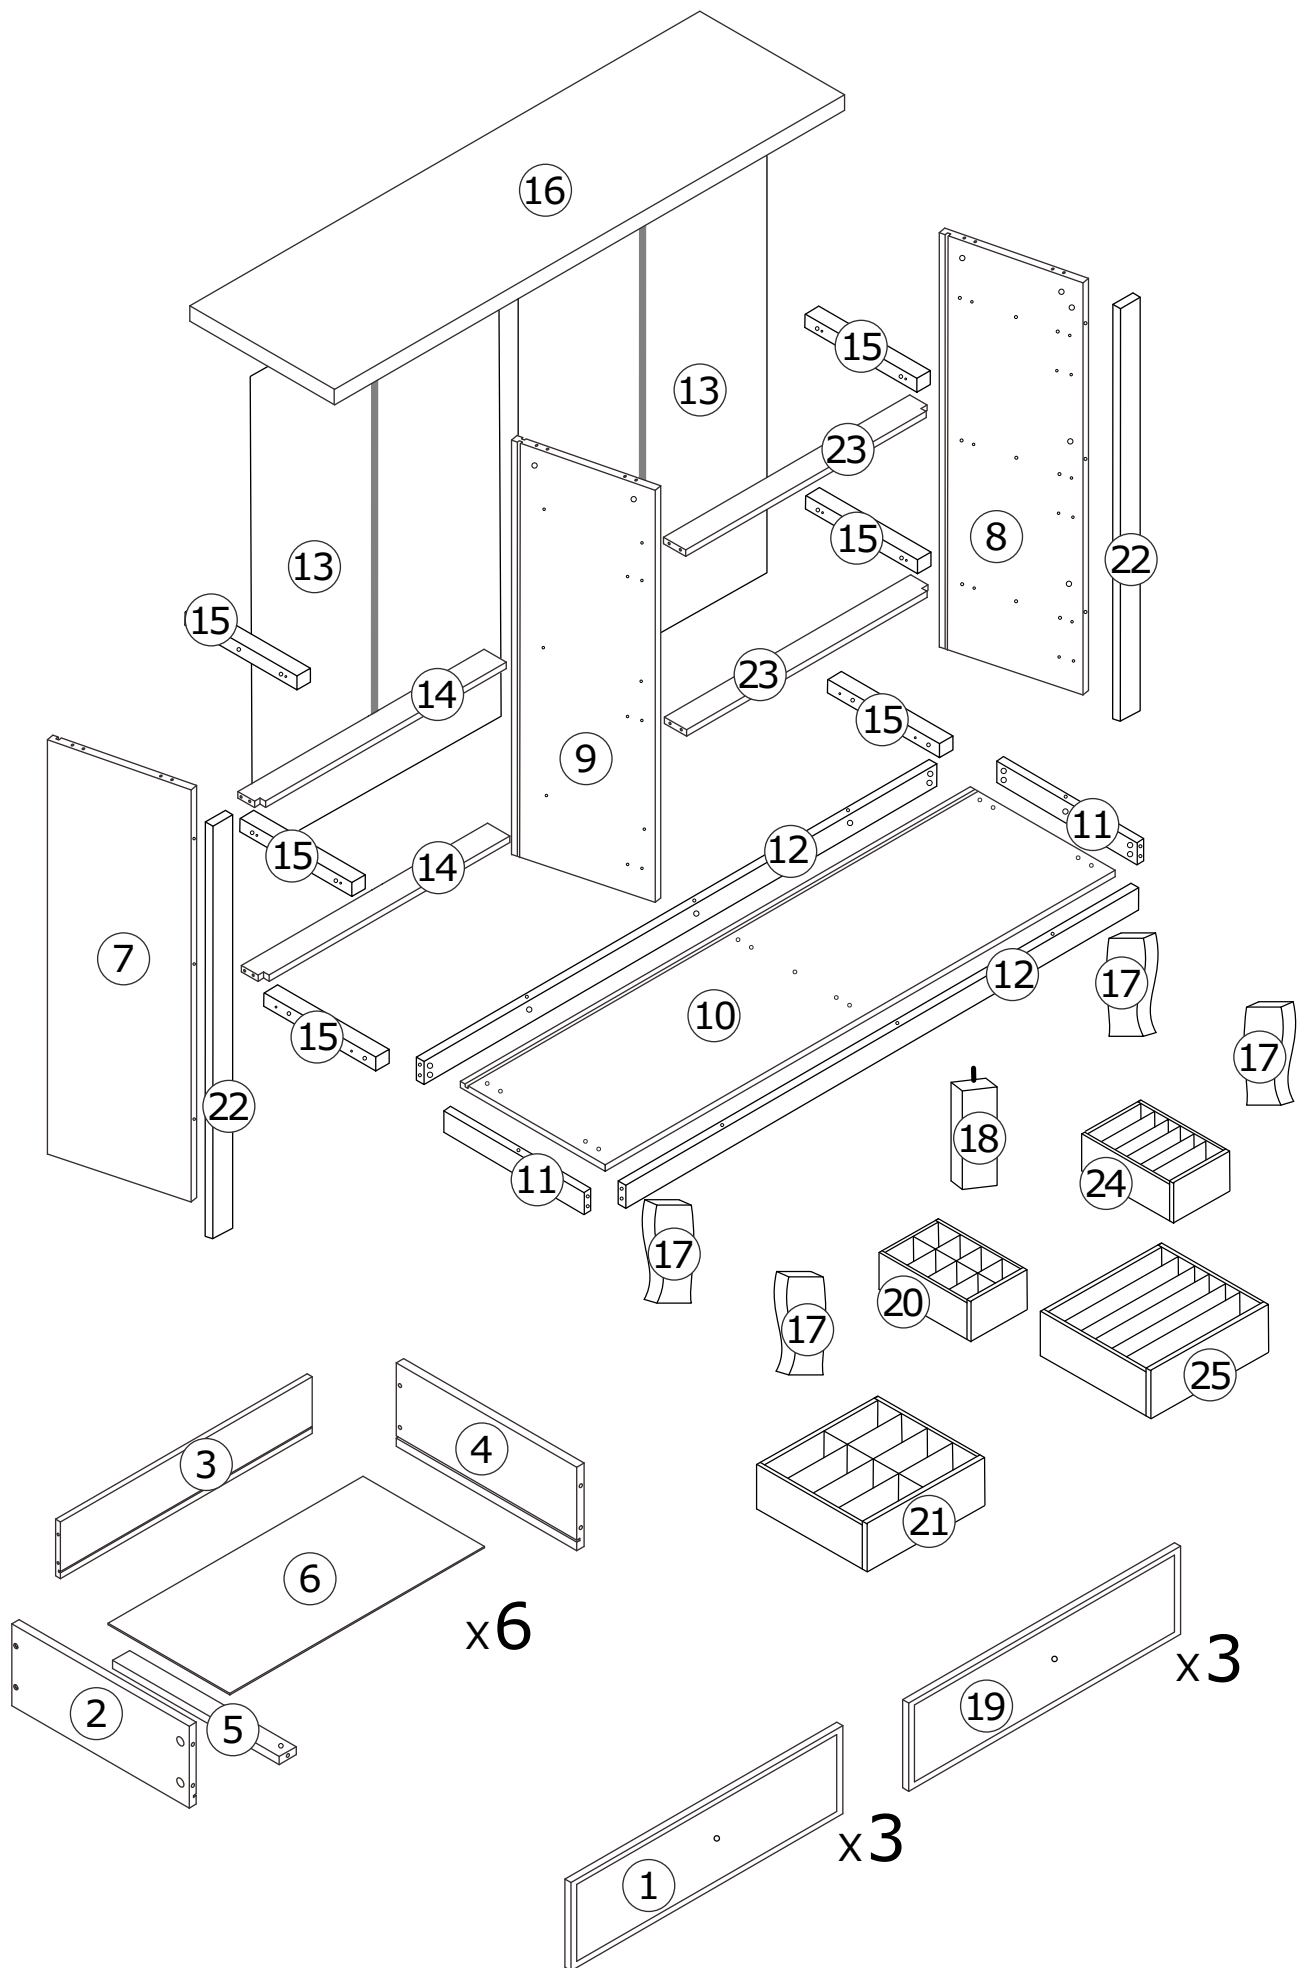
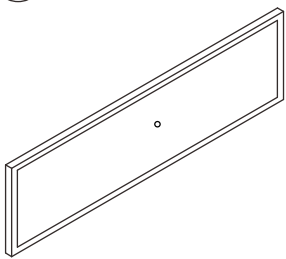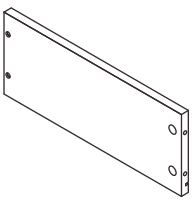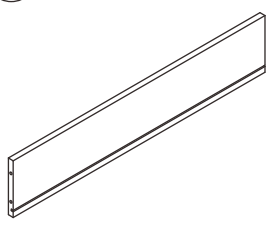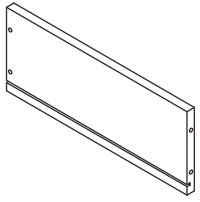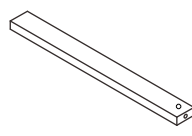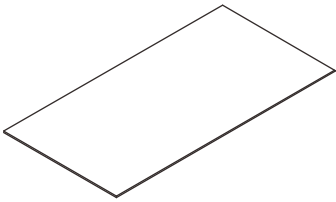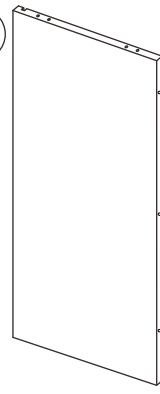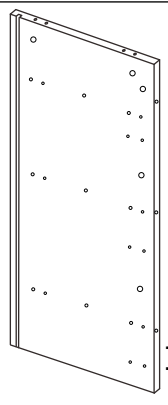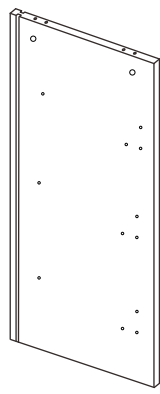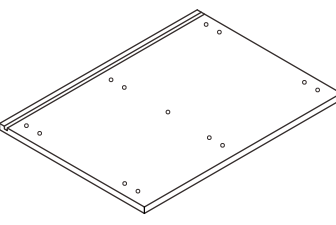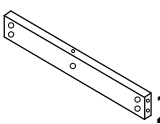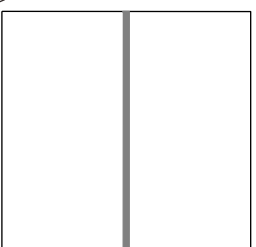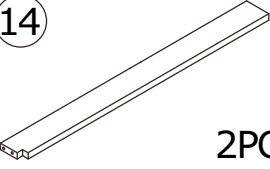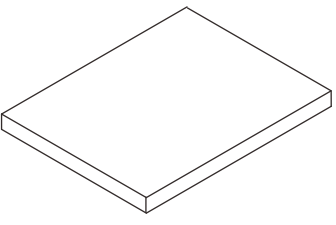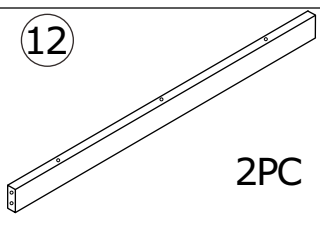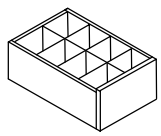
<p>①</p>  <p>3PC</p>	<p>②</p>  <p>6PC</p>	<p>③</p>  <p>6PC</p>	<p>④</p>  <p>6PC</p>
<p>⑤</p>  <p>6PC</p>	<p>⑥</p>  <p>6PC</p>	<p>⑦</p>  <p>1PC</p>	<p>⑧</p>  <p>1PC</p>
<p>⑨</p>  <p>1PC</p>	<p>⑩</p>  <p>1PC</p>	<p>⑪</p>  <p>2PC</p>	<p>⑬</p>  <p>2PC</p>
<p>⑭</p>  <p>2PC</p>	<p>⑯</p>  <p>1PC</p>	<p>⑫</p>  <p>2PC</p>	
<p>⑮</p>  <p>6PC</p>	<p>⑳</p>  <p>1PC</p>	<p>⑰</p>  <p>4PC</p>	<p>㉑</p>  <p>3PC</p>
<p>㉒</p>  <p>6PC</p>		<p>⑱</p>  <p>1PC</p>	
<p>㉓</p>  <p>1PC</p>	<p>㉔</p>  <p>2PC</p>	<p>㉕</p>  <p>2PC</p>	<p>㉖</p>  <p>1PC</p>
			<p>㉗</p>  <p>1PC</p>

 
 
 
 
1

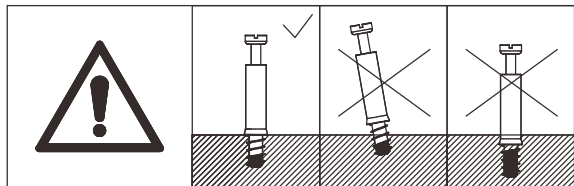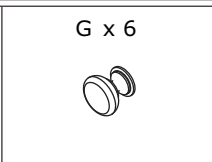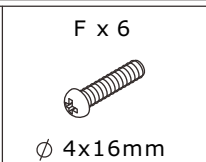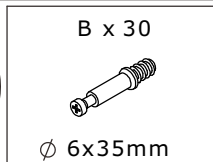

Insert screws(B)into part 1,19
 as shown.

Fix handle(G) to part 1and19using bolts(F),
 as shown.

    Do not use an electric screwdriver,do not use
 force during the rotation of the accessories,
 otherwise it may cause the board to crack.

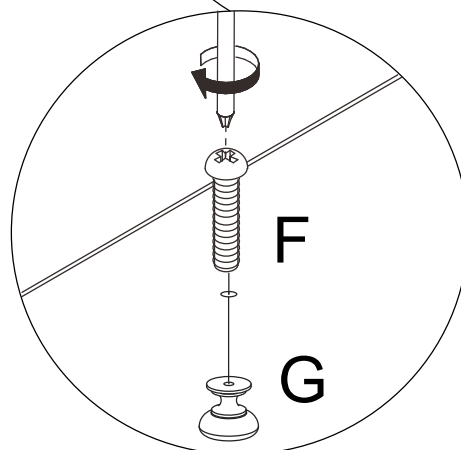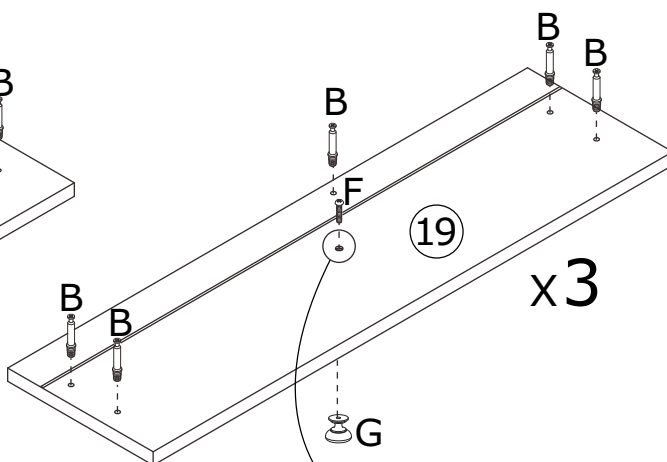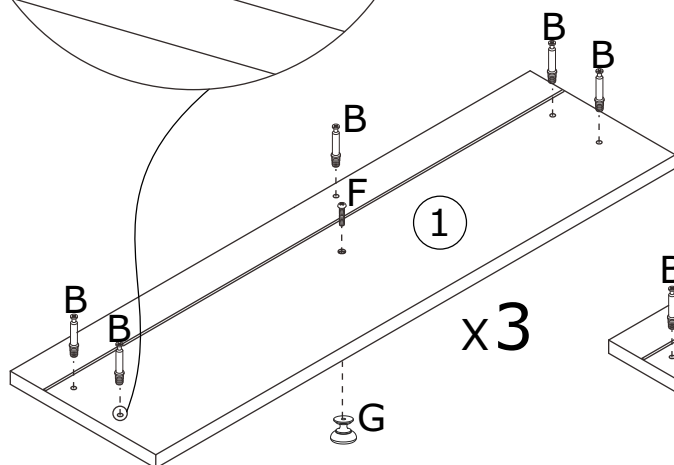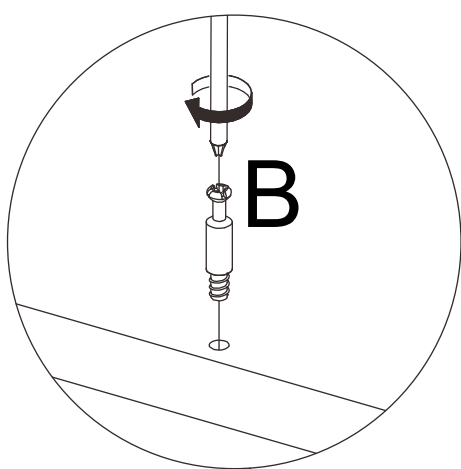


2


N x 30



Ø 4x30mm






 


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

Attach parts 2,4and 5 to part 3 using screws(N),as shown.
Slide part 6 into available slot ofparts 2,3and4,as shown.

 


E




Ø 5 x 40 mm

K




Ø 4 x 35mm


N



 Ø 4 x 30mm



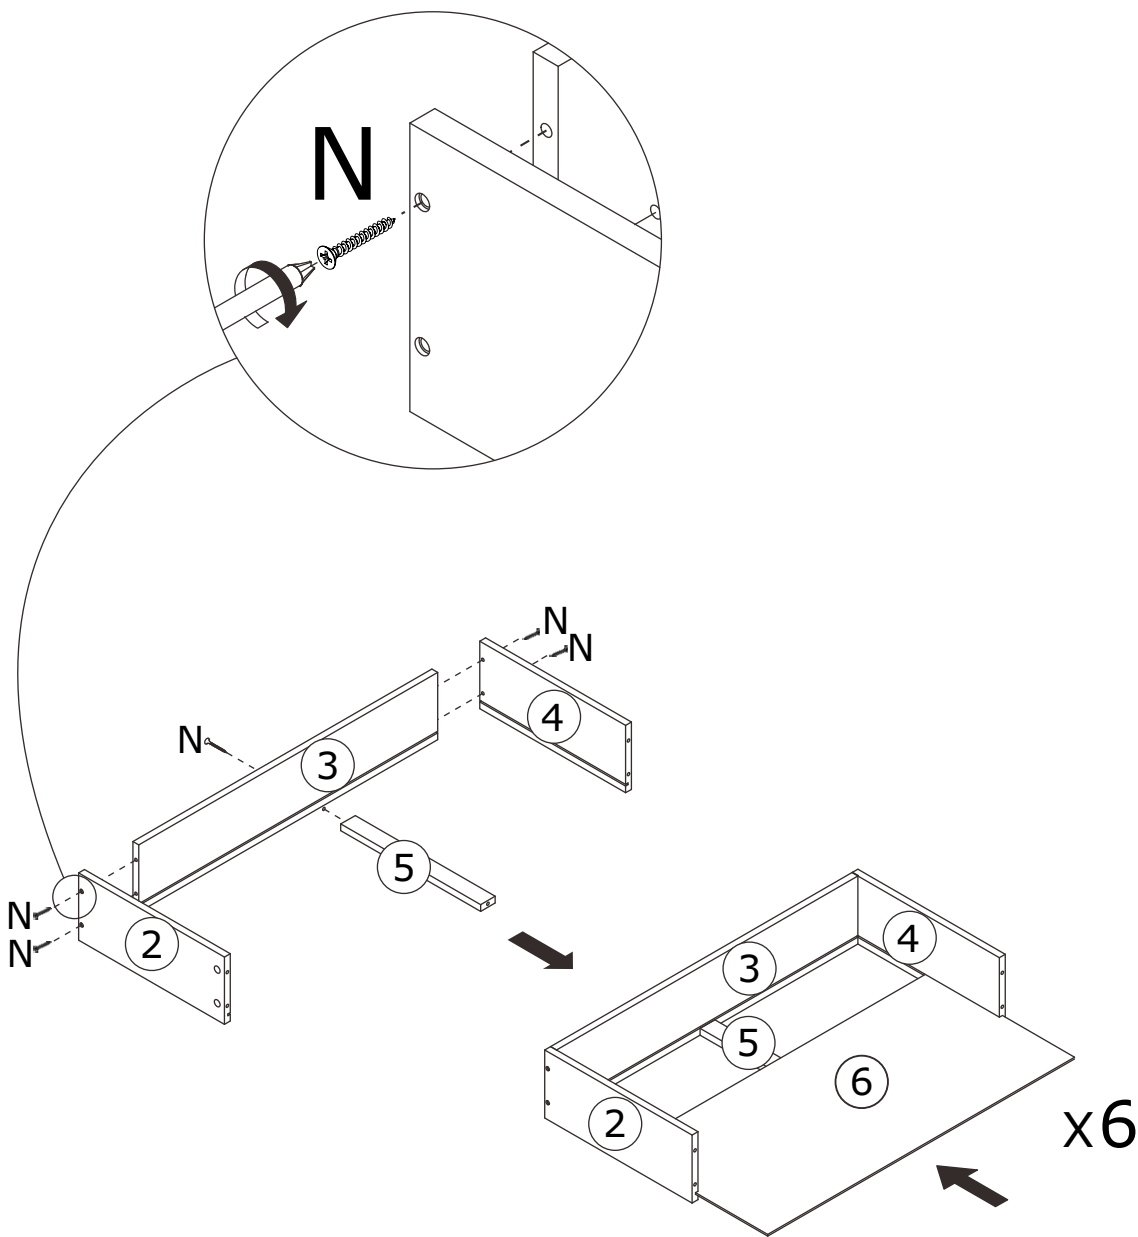


3



C x 30

    Ø 5x10mm

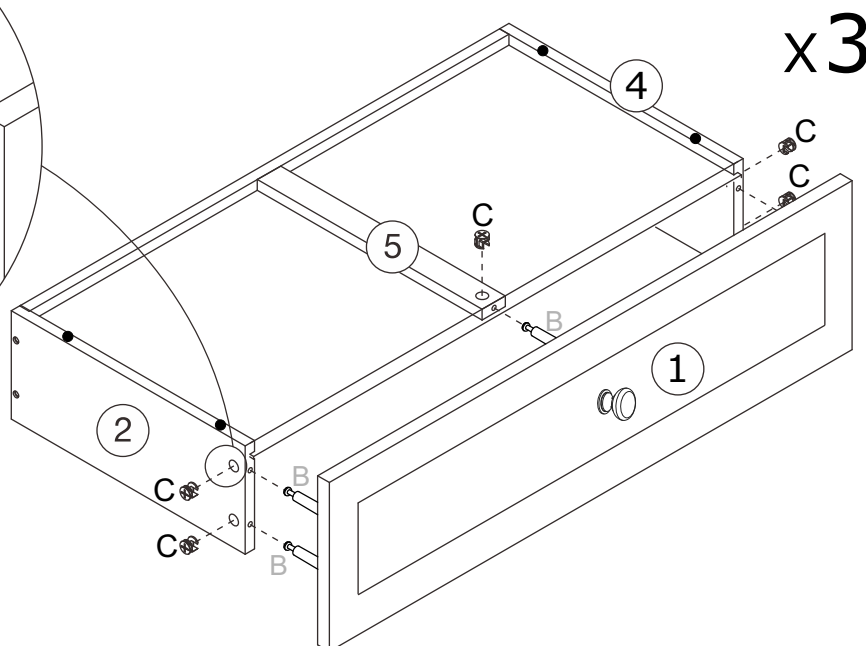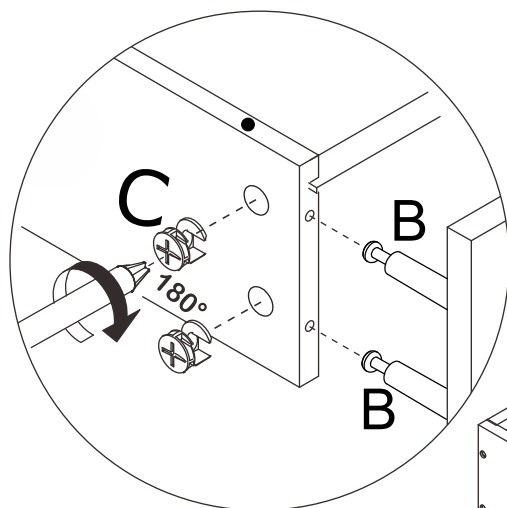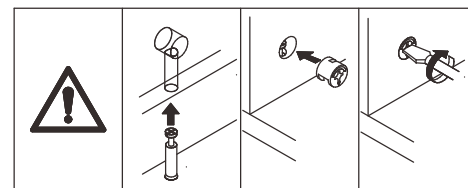

  Insert cam locks (C) to parts 2,4 and 5 and attach part 1, as shown.
 Turn cam locks clockwise to tighten.

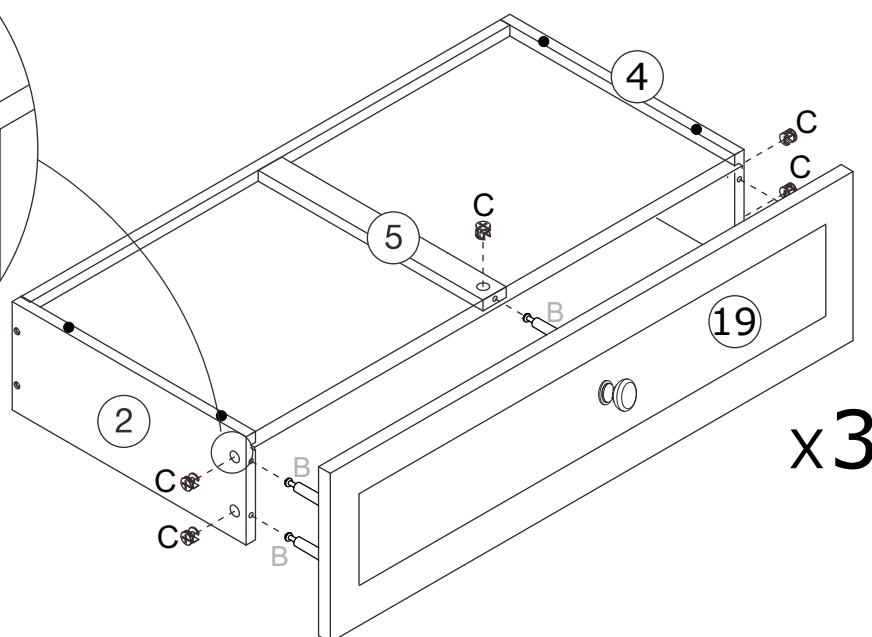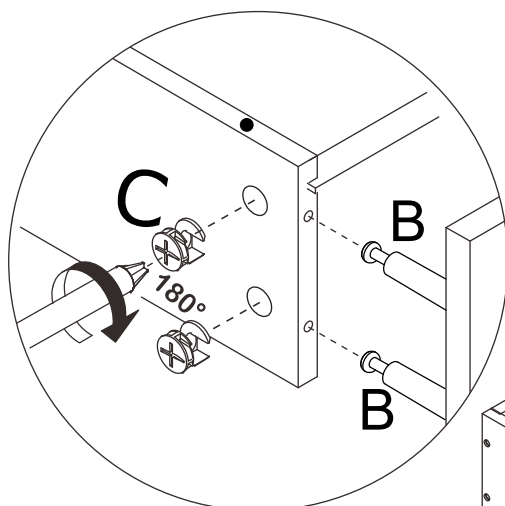

Insert cam locks (C) to parts 2,4 and 5 and attach part 3, as shown.
 Turn cam locks clockwise to tighten.




4

Hx 24





Ø 3 x 12mm

 DL x 6



DR x 6

  

Fix right inner drawer runner(DR) and left inner drawer runner(DL) to assembled unit using screws(H),as shown.



H

 
 
 
 


Ø 3 x 12 mm


M



Ø 3 x 14mm

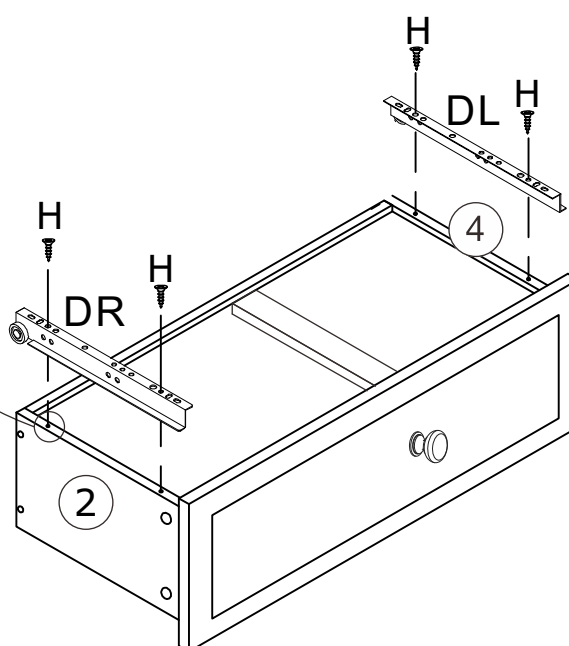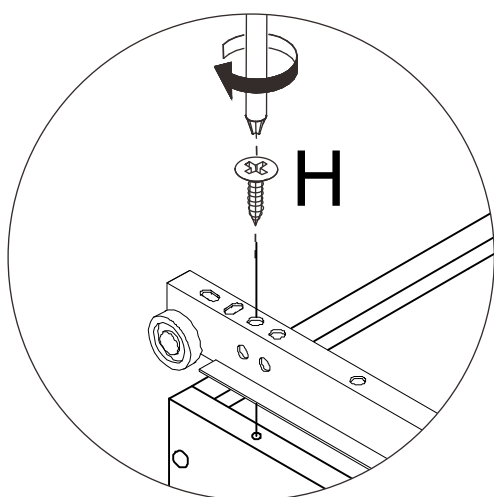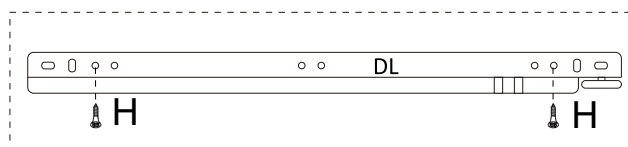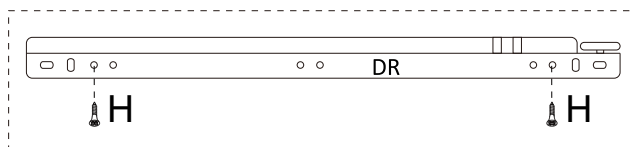



x6

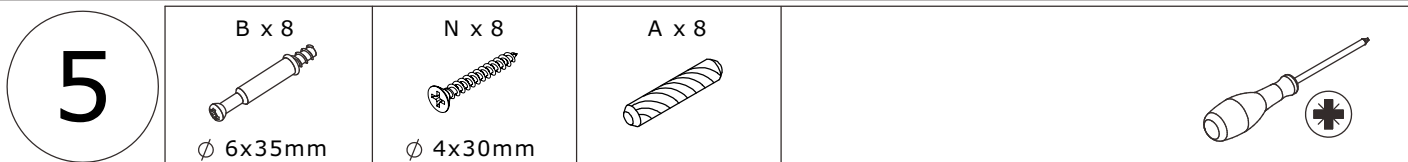 

Insert wooden pin (A) to parts 7 and 8n at first. Fix part 15 to parts 7 and 8 with screw (N) as shown.

Insert screws(B)into part 7,8,9 as shown.

  Do not use an electric screwdriver,do not use force during the rotation of the accessories, otherwise it may cause the board to crack

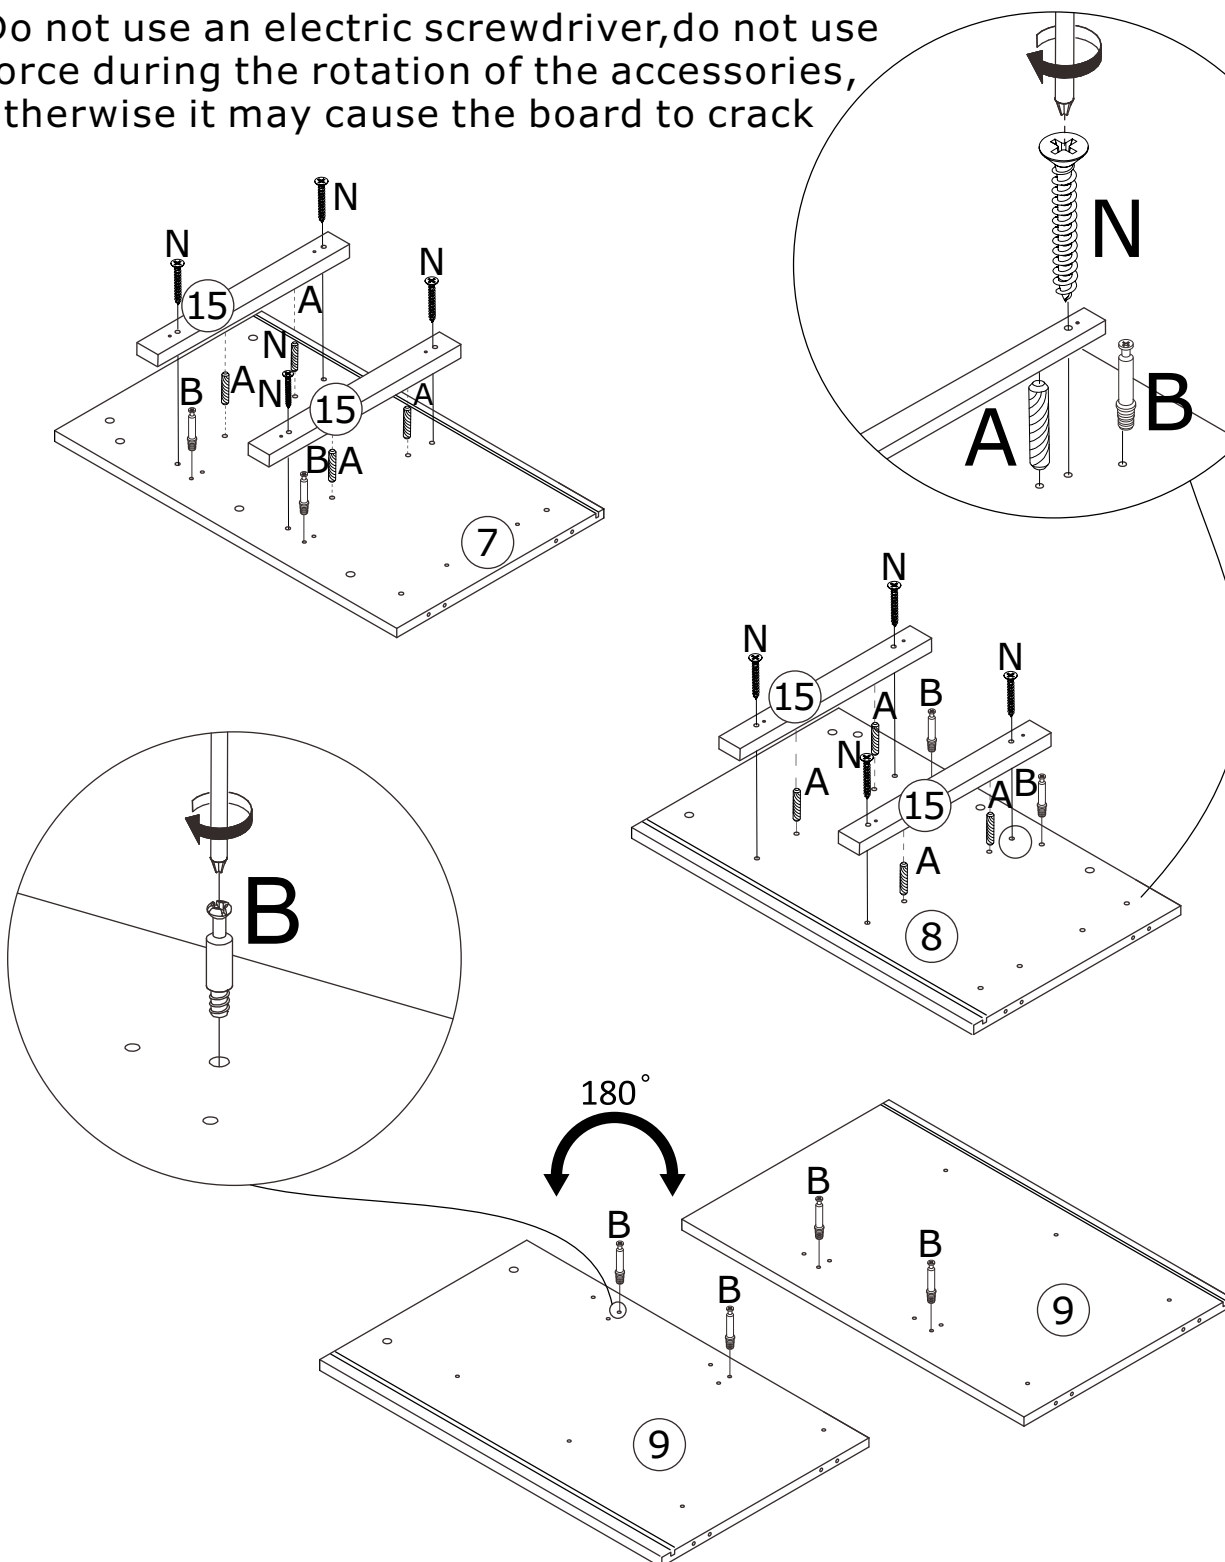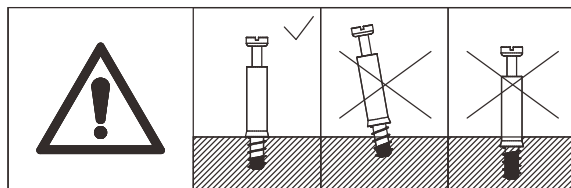


6

H x 20




Ø 3x12mm

 CL x 5



CR x 5

 

According to the position of the hole shown in figure (CL, CR), fix the slide bar on panel 7, 8, 9 with Screw H, as shown.



H

 
 
 
 
 
 
 
 


Ø 3 x 12 mm


M




Ø 3 x 14mm

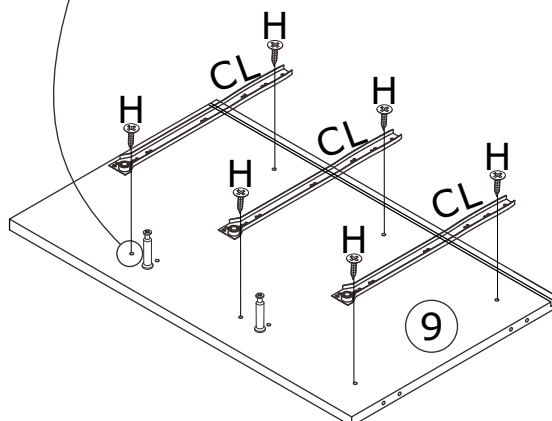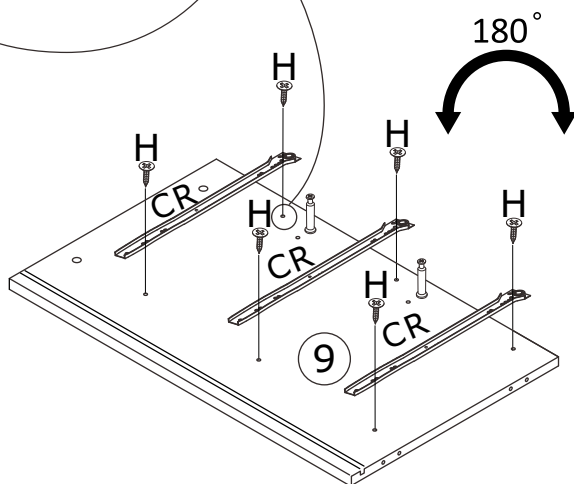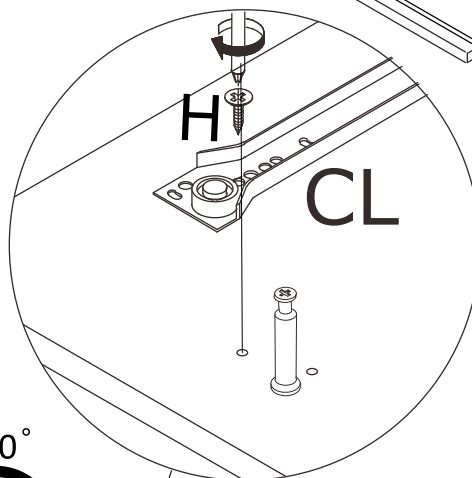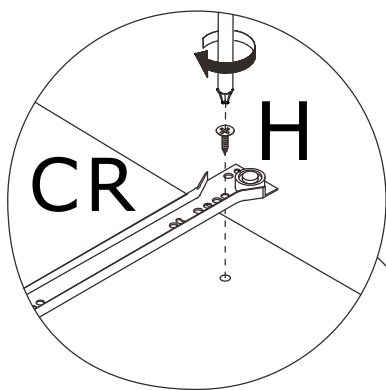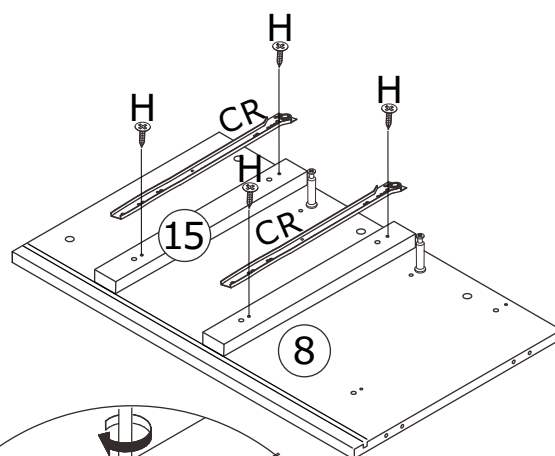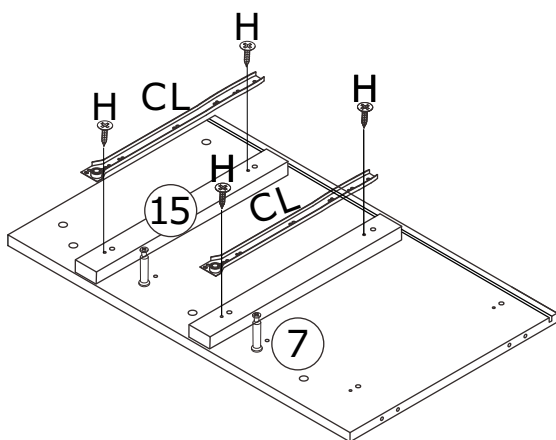

7

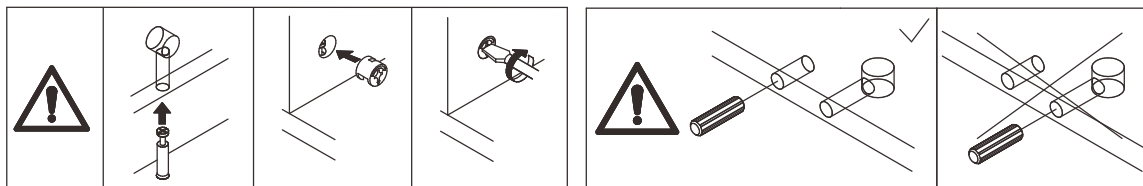 


 Insert wooden dowel(A)to parts 7&9, as shown.
Insert cam lock(C) into part 14 to connect parts 7&9,
and turn clockwise to tighten.

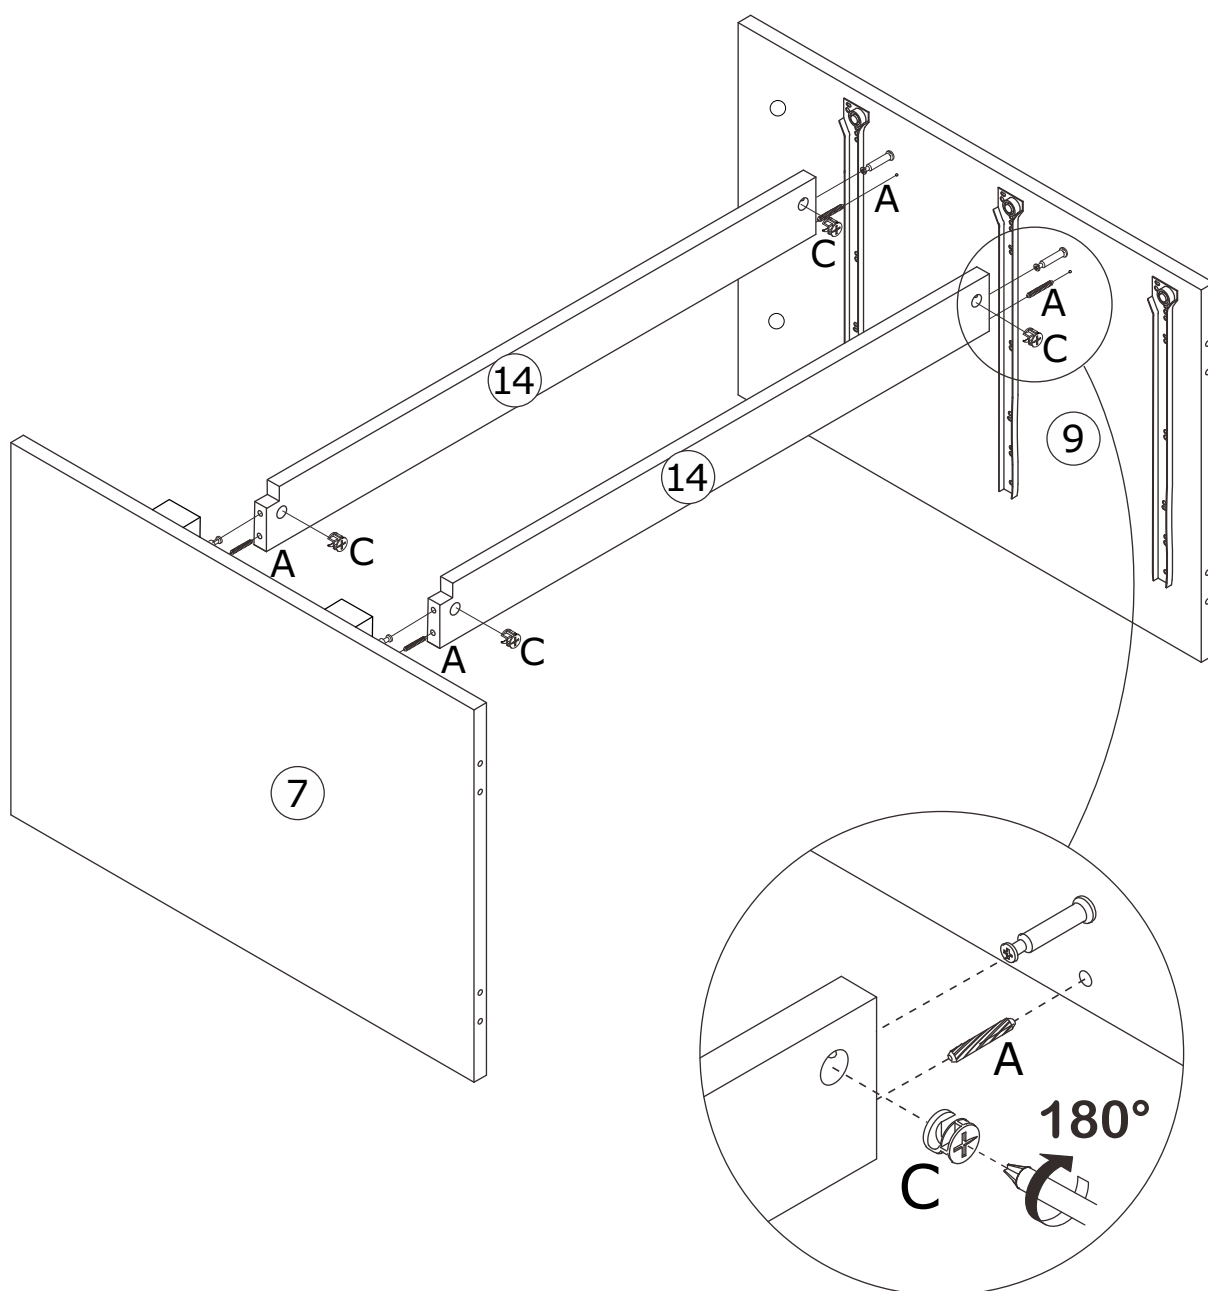

8

 A x 4









Ø 3x12mm


C x 4



    
 
 
Ø 15x10mm

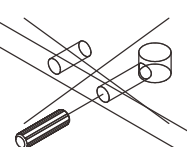

 Insert wooden dowel(A) to parts 8&9, as shown.
Insert cam lock(C) into part 23 to connect parts 8&9,
and turn clockwise to tighten.

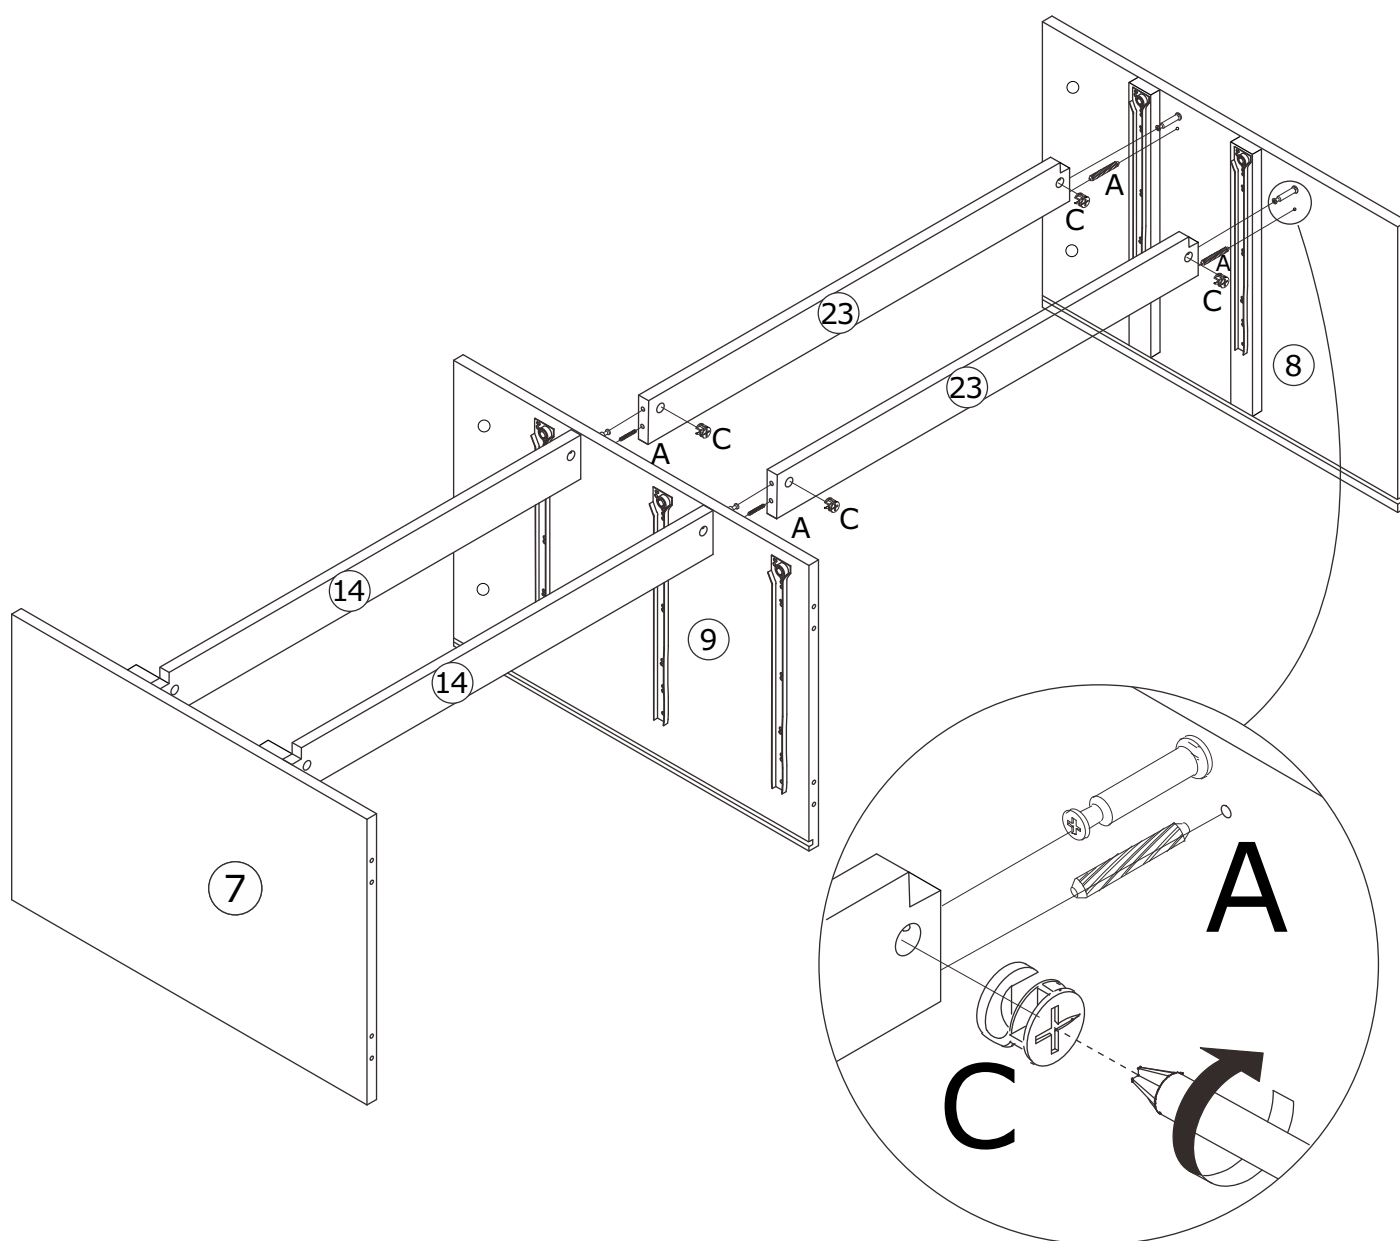


9

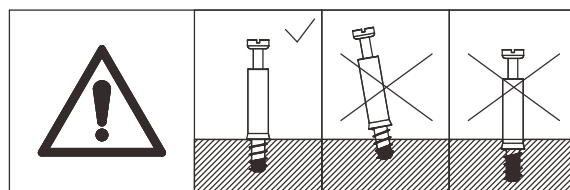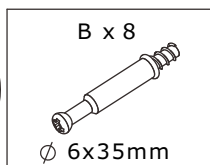   


Insert screws(B)intopart 10
as shown.

 Do not use an electric screwdriver,do not use
force during the rotation of the accessories,
otherwise it may cause the board to crack

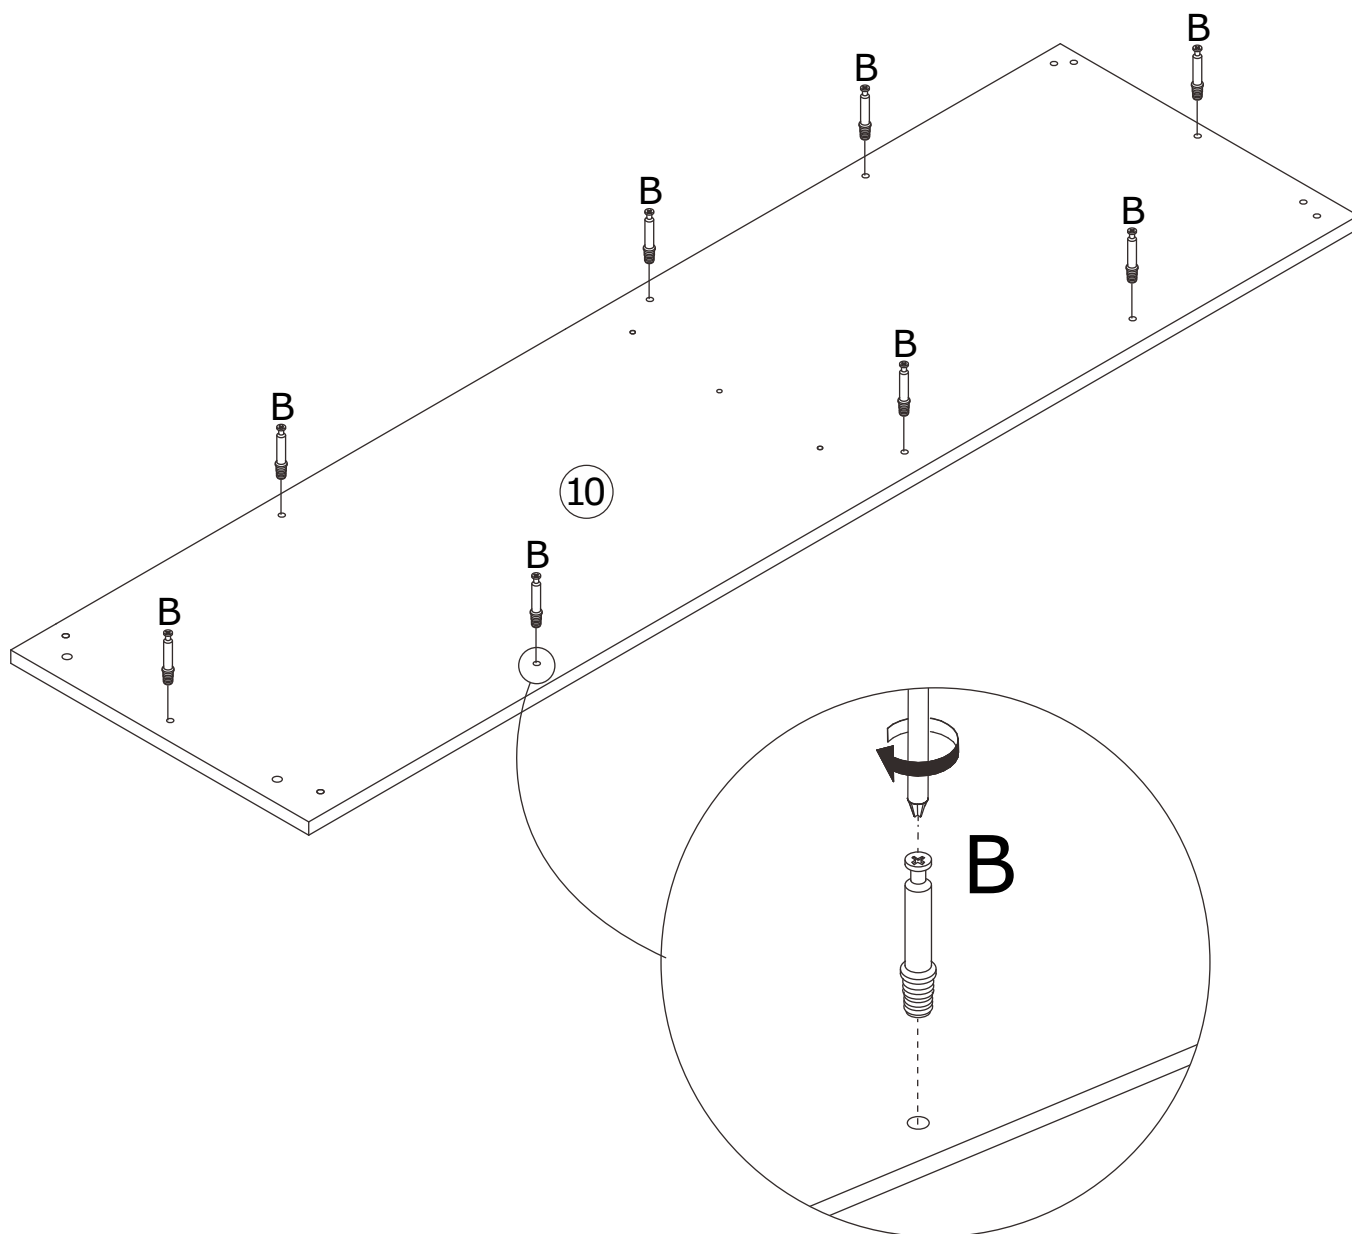

10

 A x 6



E x 6

 
 
 


Ø 5 x 40 mm

J x 1



Rotate clockwise foot 18 to part 10 as shown. Insert wooden pin (A) into part 7,8 and 9 as shown. Attach part 10 to part 7,8 and 9 with screw (E) and tool (J) as shown in figure.

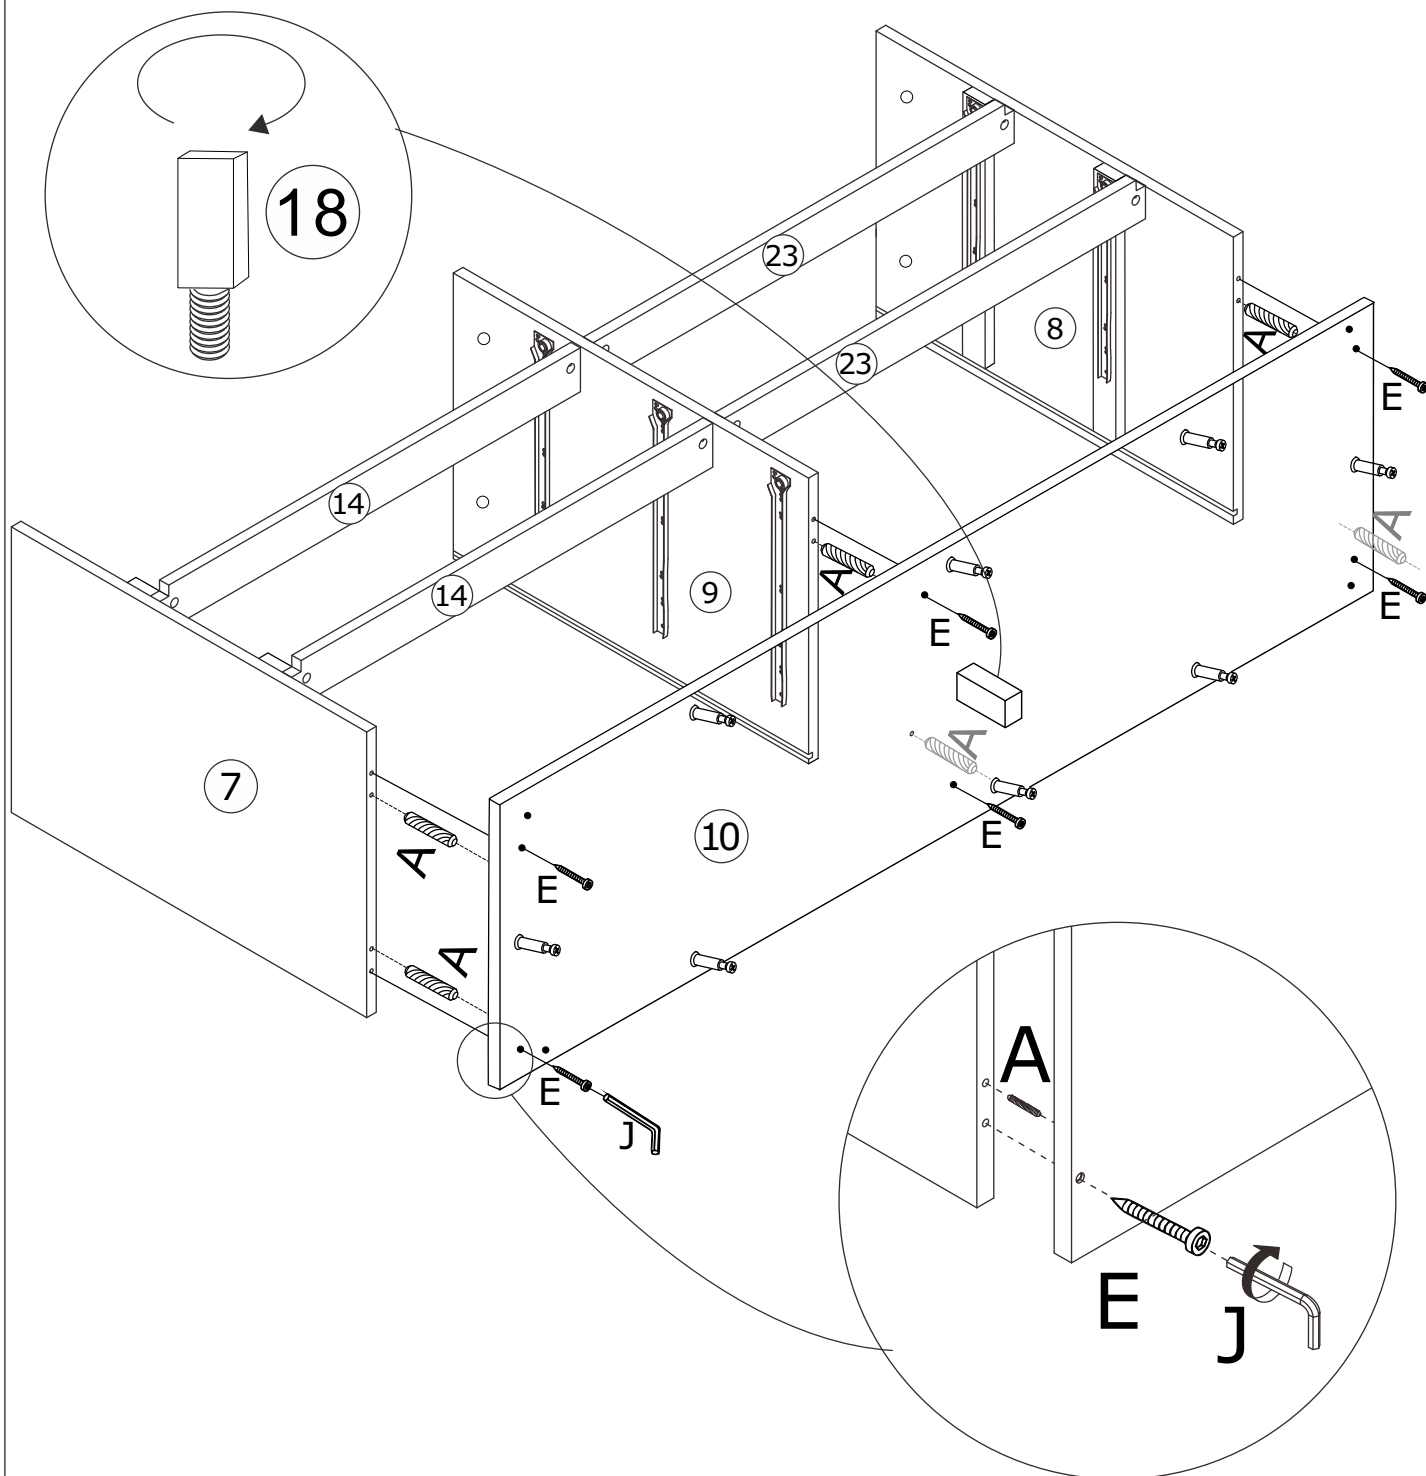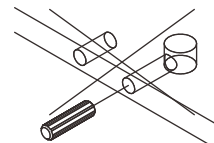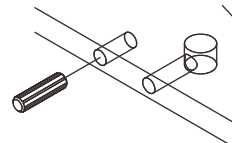


11

B x 16




 Ø 6x35mm

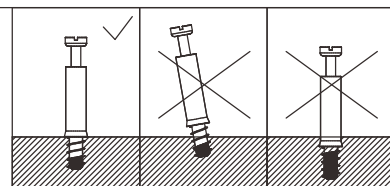

Do not use an electric screwdriver, do not use force during the rotation of the accessories, otherwise it may cause the board to crack

 Insert screws(B) into part 17 as shown.

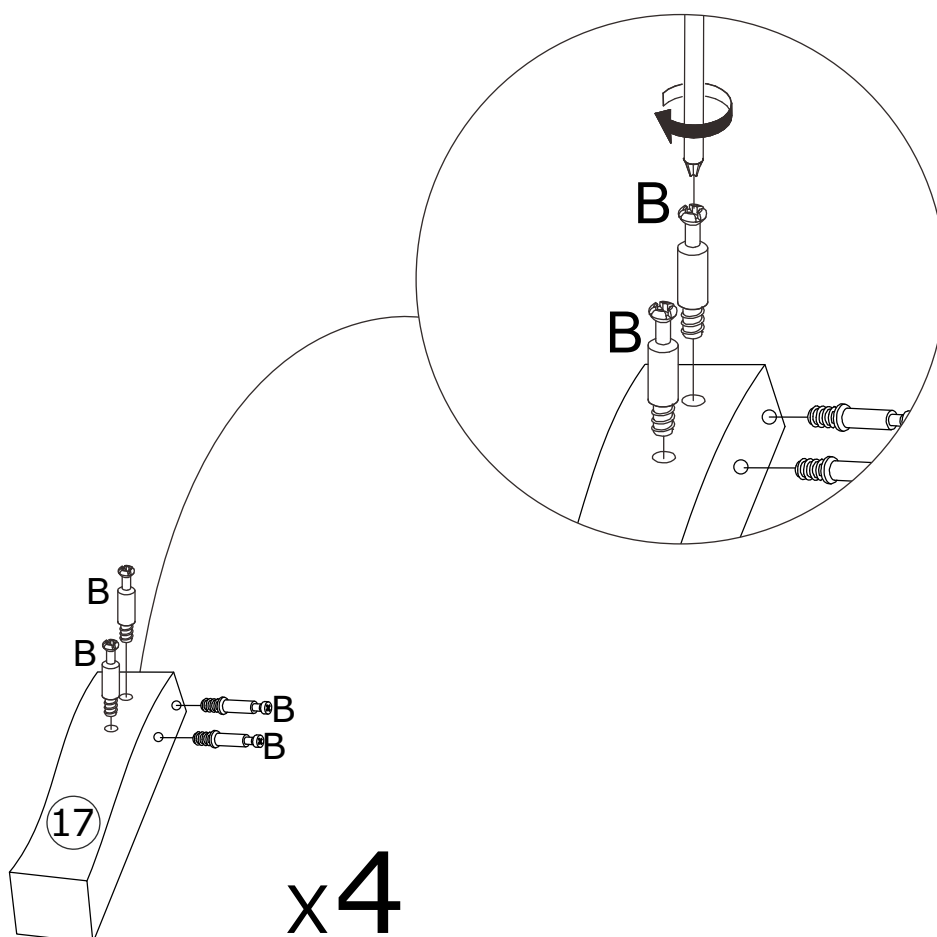


x4

12



C x 8



 Ø 15x10mm



  Connect part 17 with part 11, insert the cam lock(C) into part 11 and turn clockwise to tighten.

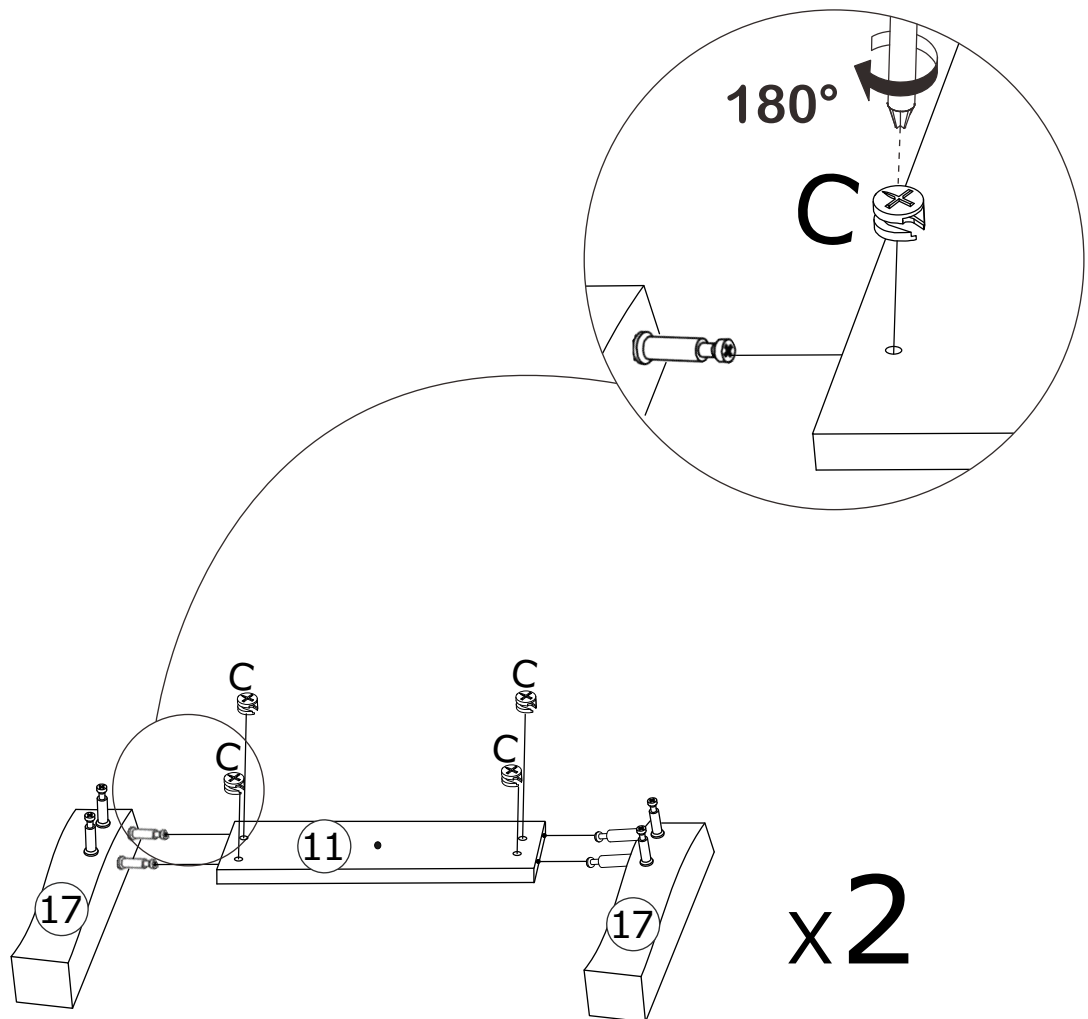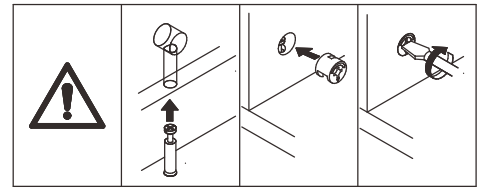


13



C x 8



 Ø 15x10mm



  Connect 2 assembled leg components with part 12, insert the cam lock(C) into part 12 and turn clockwise to tighten, as shown.

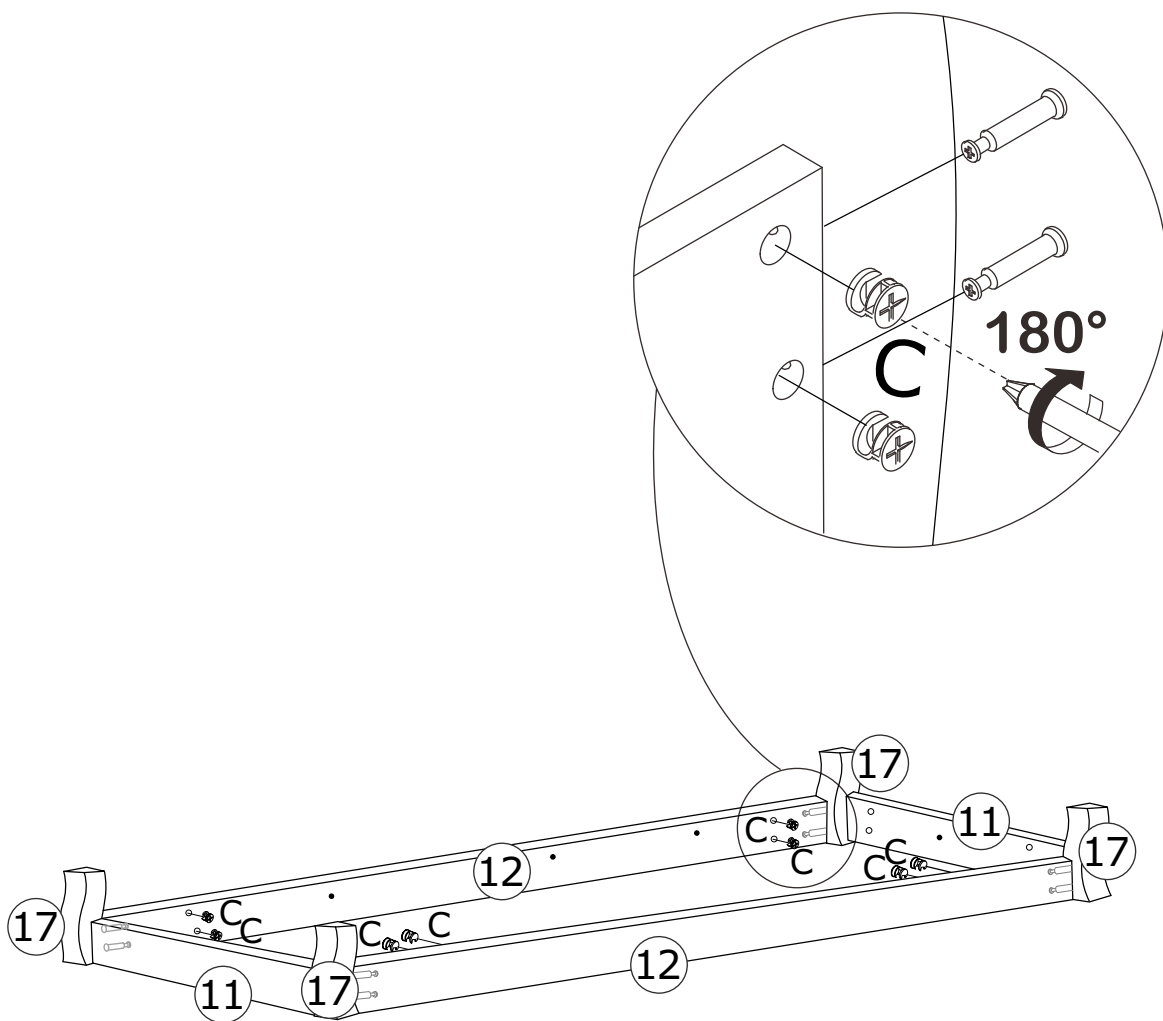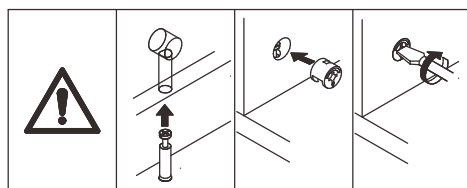


14



C x 8



 Ø 15 x 10 mm




  Attach the assembled leg frame to part 10, insert the cam lock (C) into part 11 and 12, then turn clockwise to tighten, as shown.

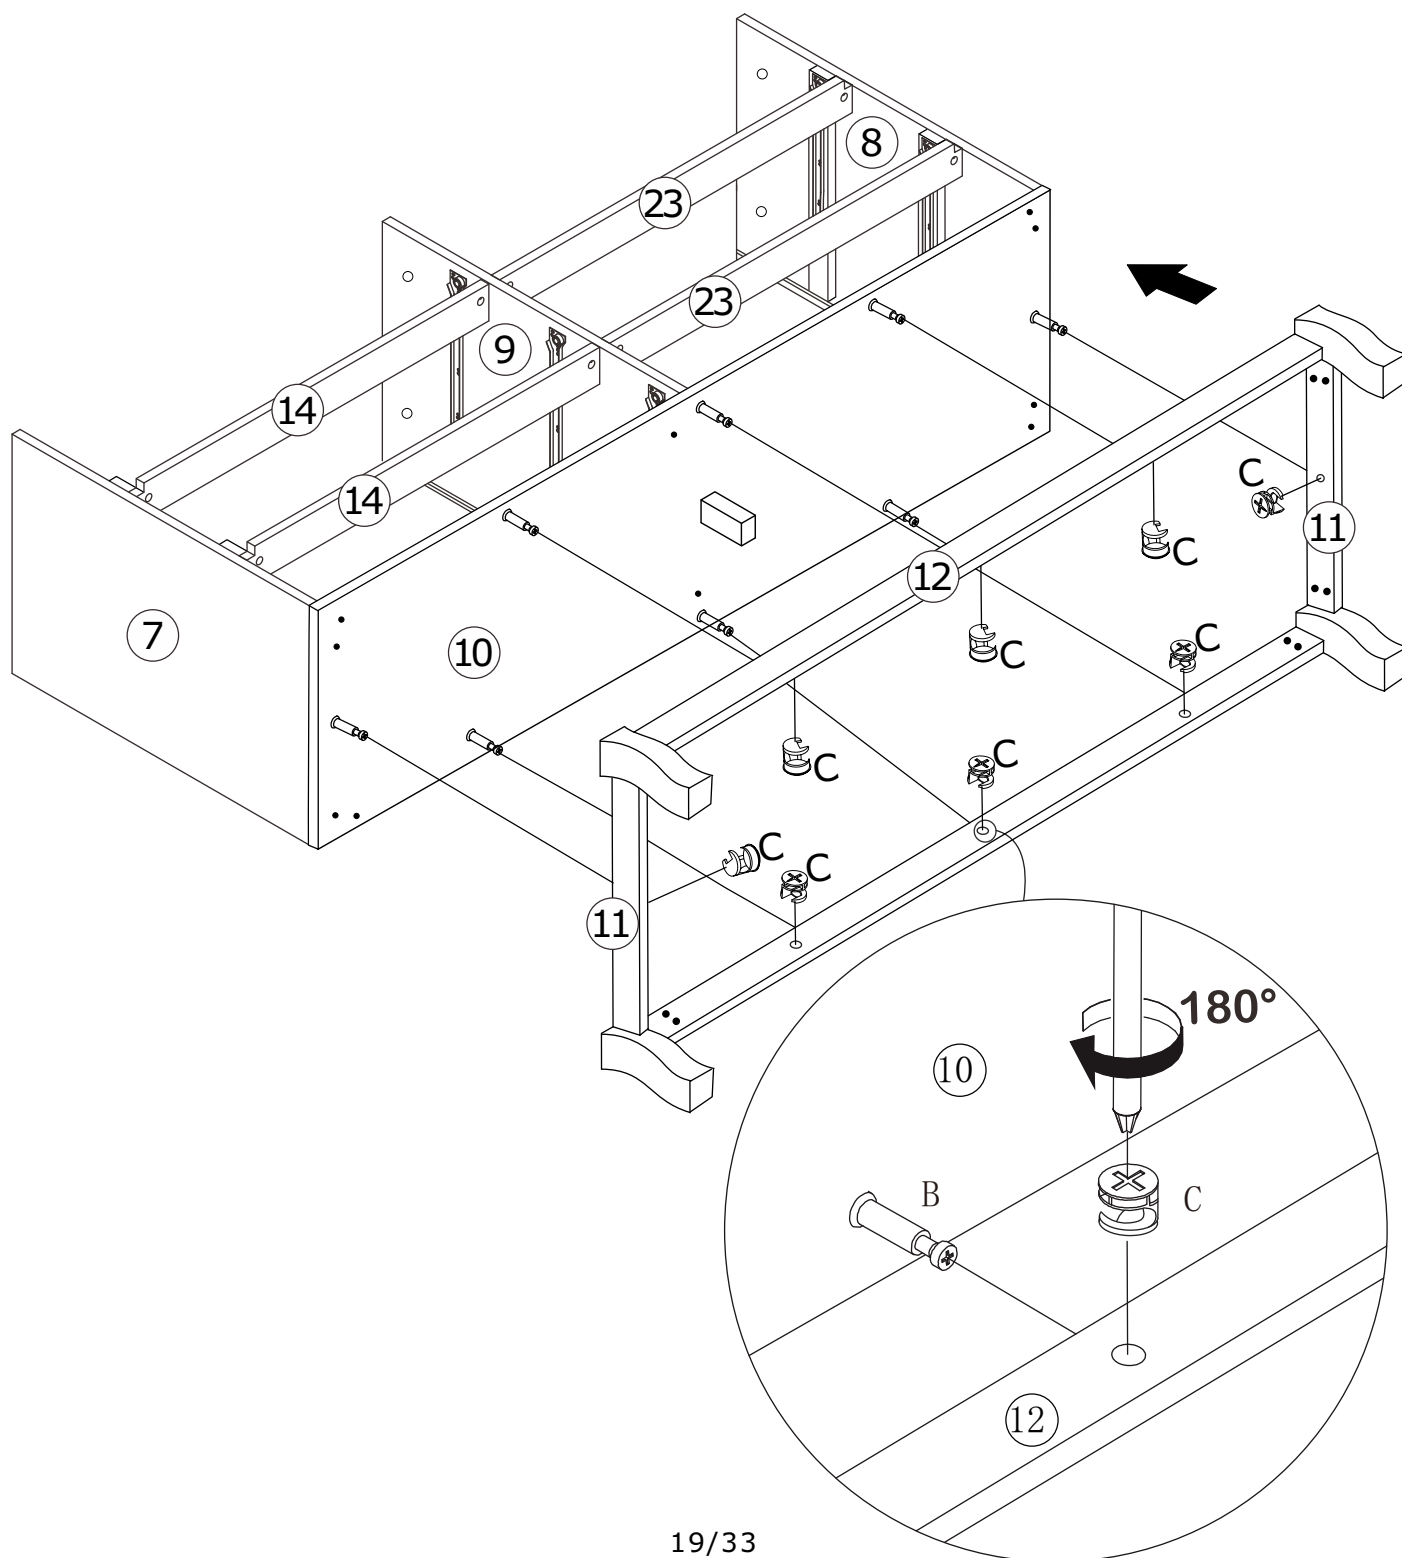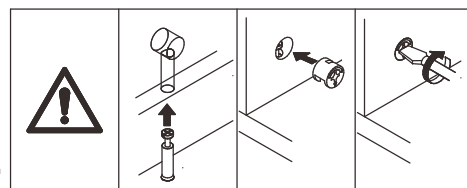


15

 E x 4



Ø 5 x 40 mm

 

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 


E





Ø 5 x 40 mm

K







Ø 4 x 35mm

  Fix The screw (E) to part 10 with the tool (J) , as shown in figure.

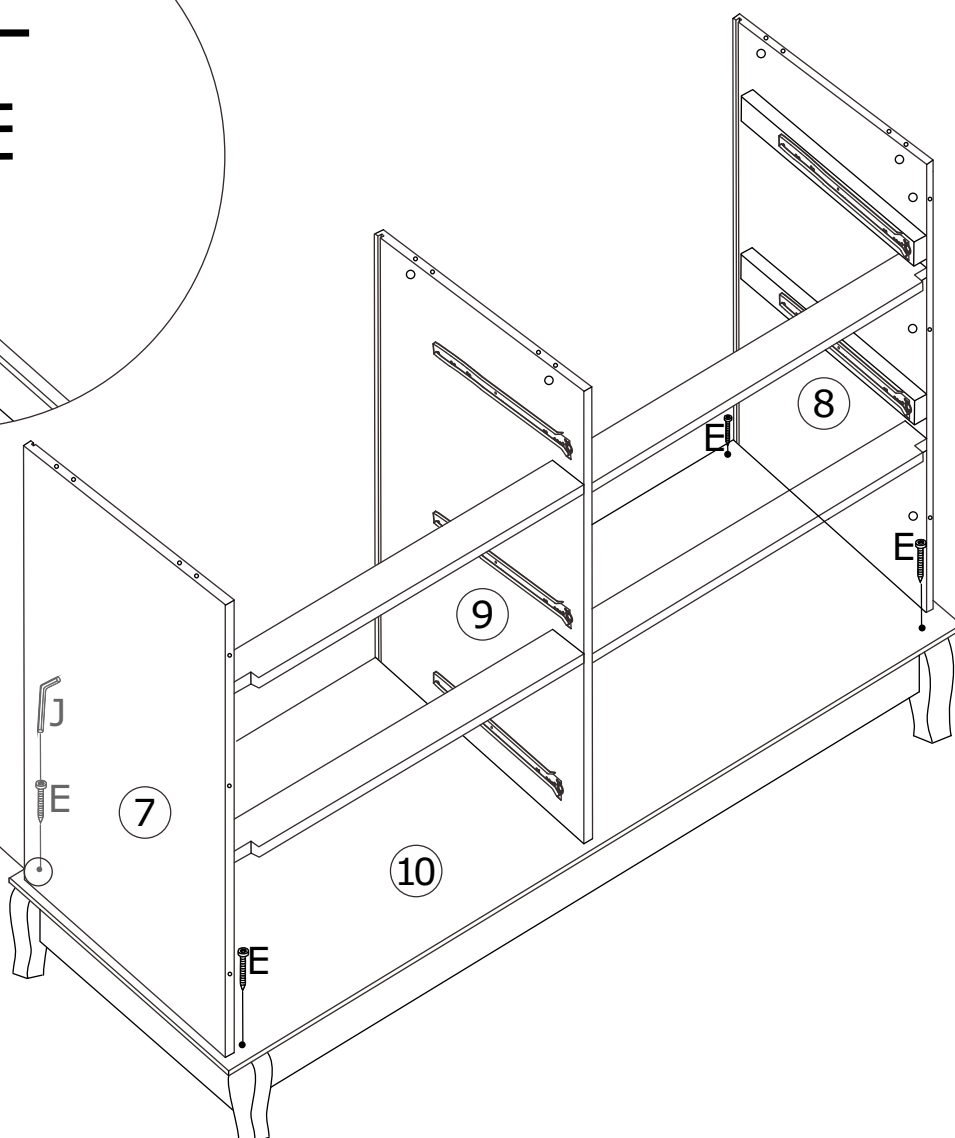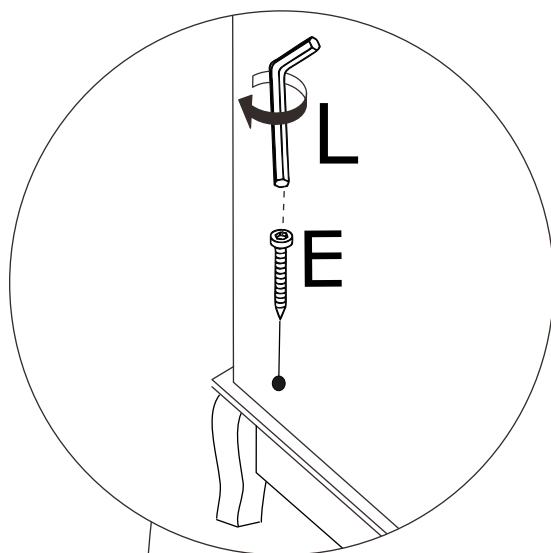

16

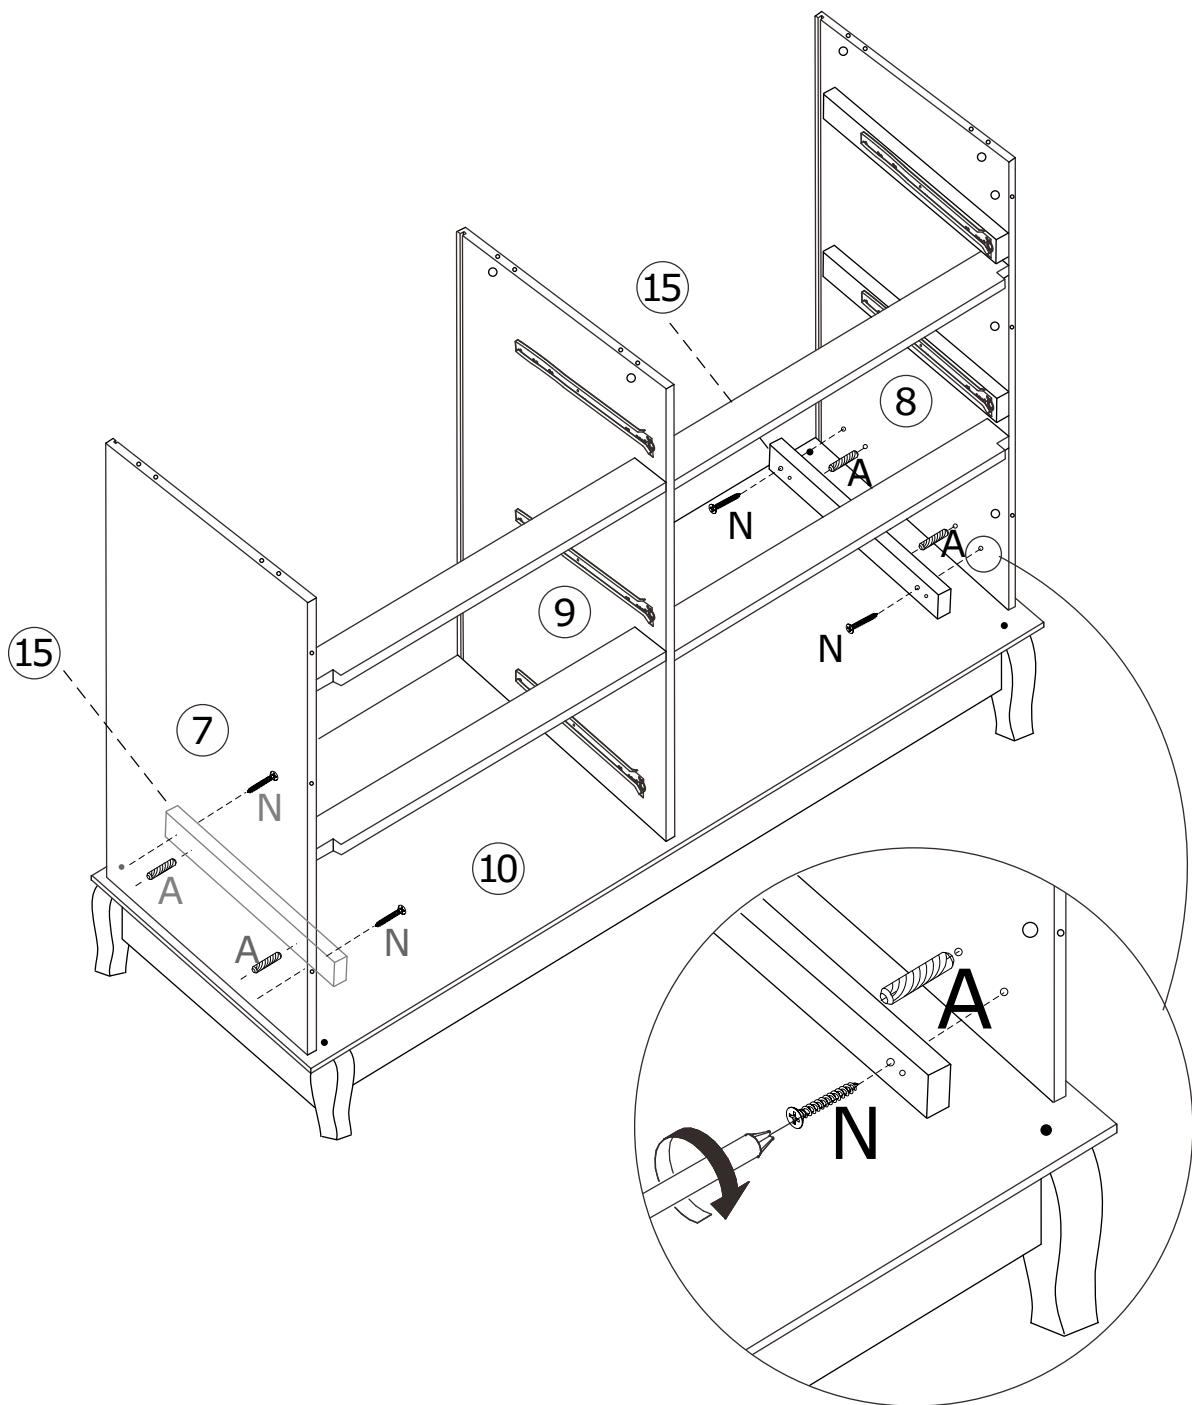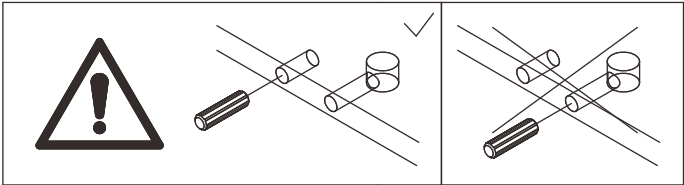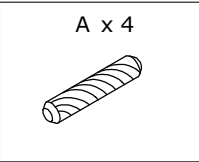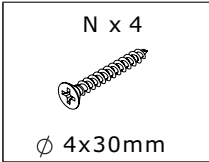    


17

H x 4




Ø 3x12mm

 CL x 1



CR x 1

 

H

 
 


Ø 3 x 12 mm

M



Ø 3 x 14mm

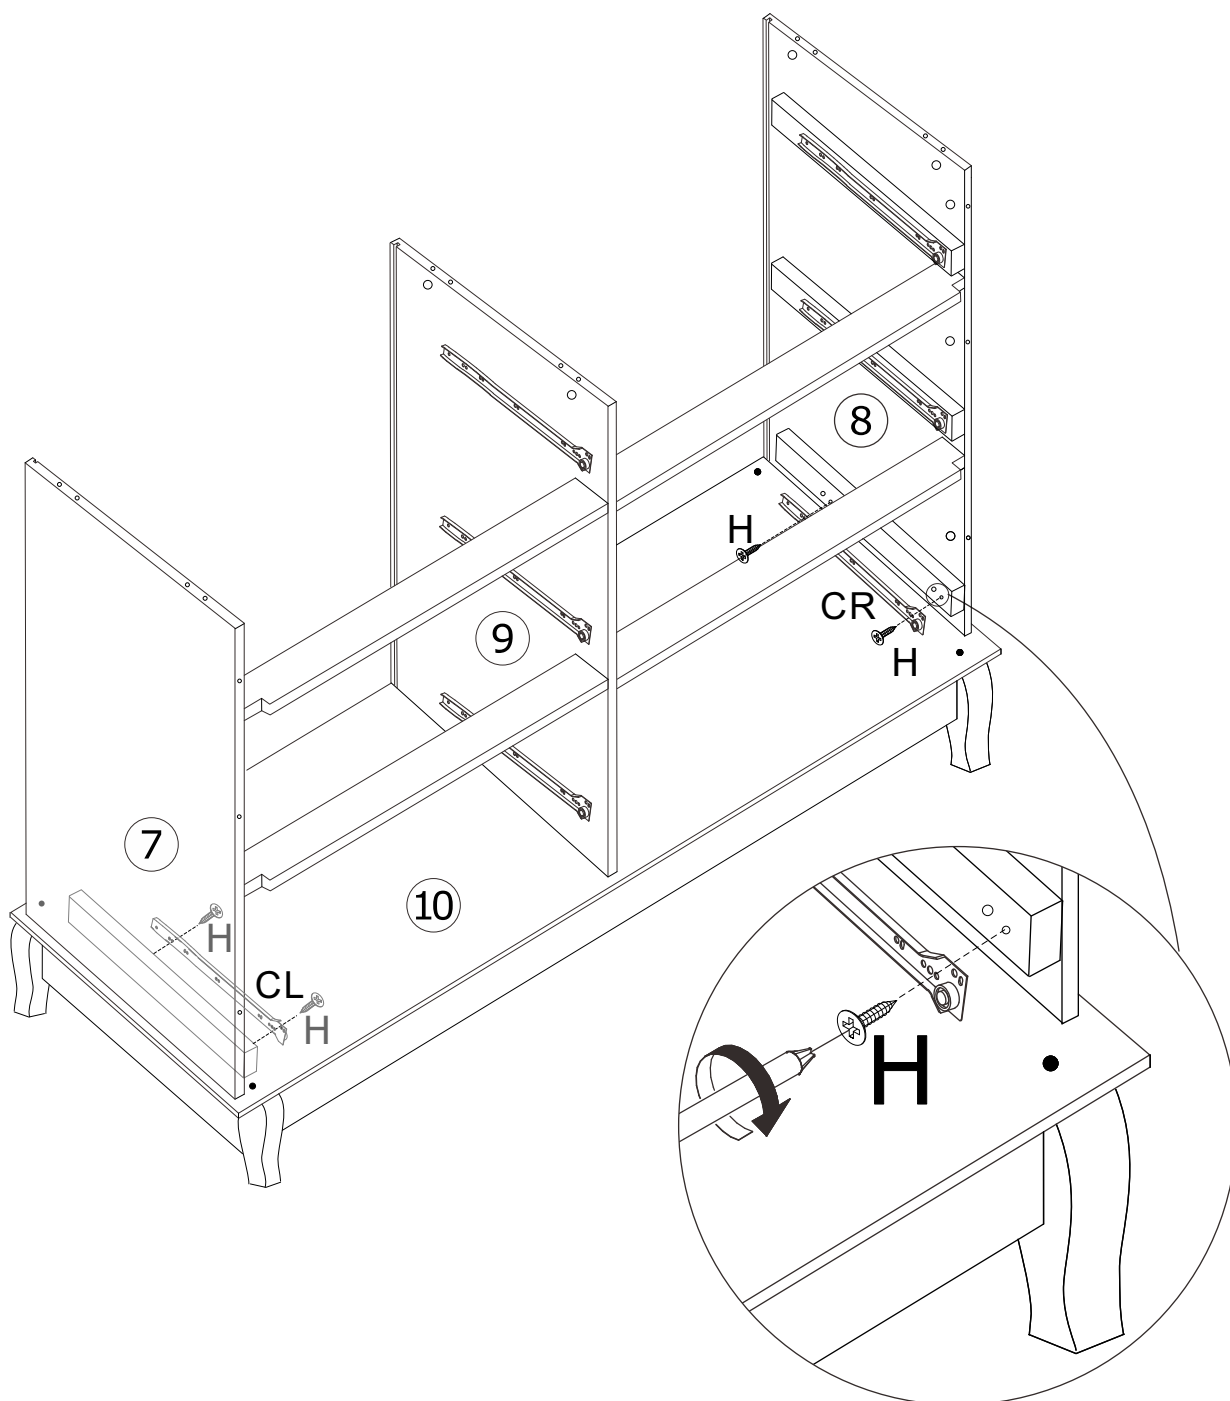
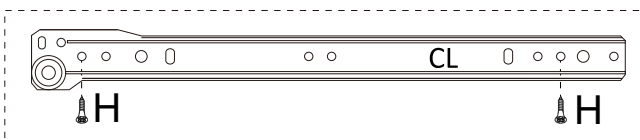


18

B x 6




  Ø 6x35mm

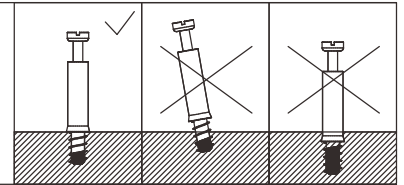

Do not use an electric screwdriver, do not use force during the rotation of the accessories, otherwise it may cause the board to crack

 Insert screws(B) into part 22, as shown.

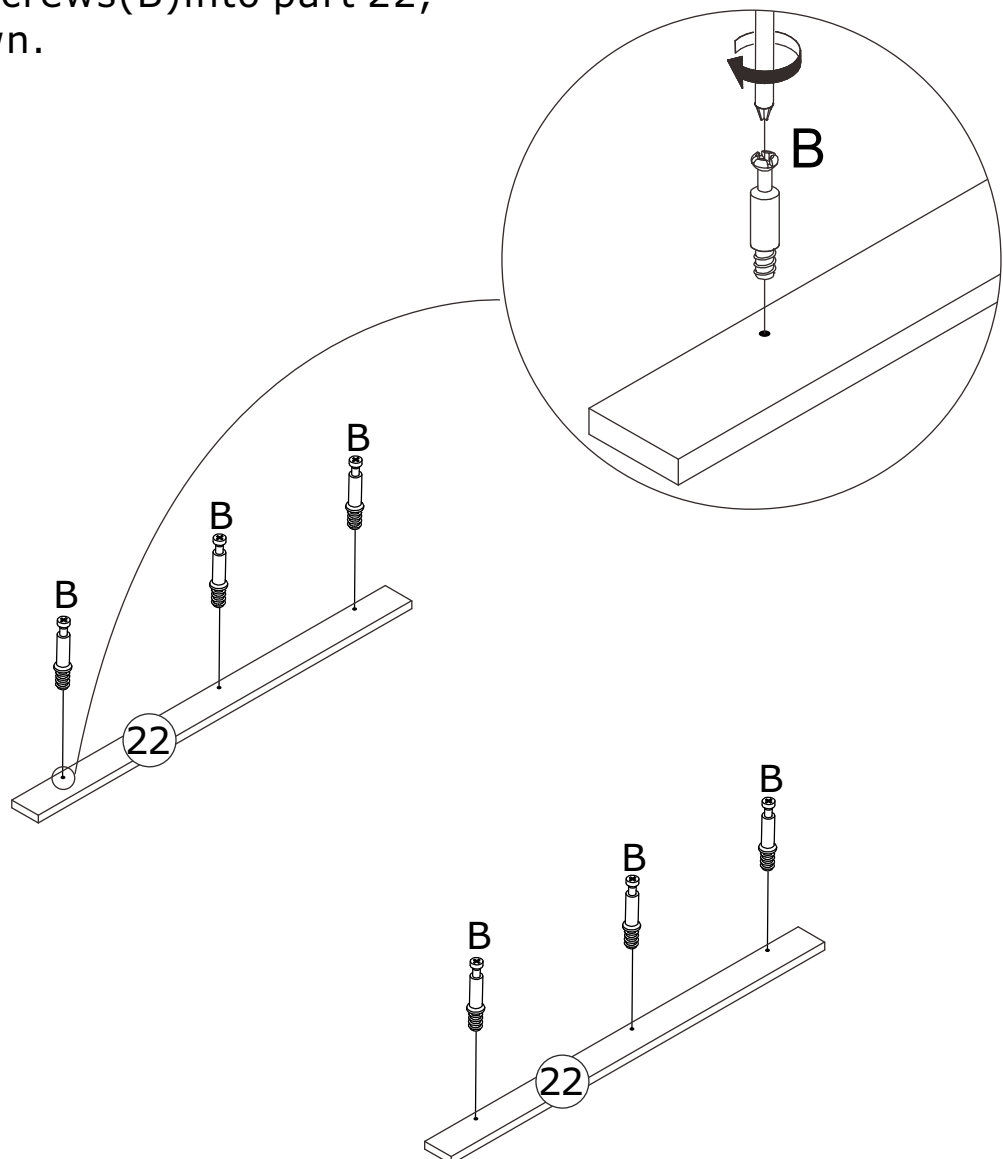


19




C x 6



 Ø 15 x 10 mm




   Attach part 22 to part 7 and 8, insert the cam lock(C) into part 7,8 and turn clockwise to tighten, as shown.

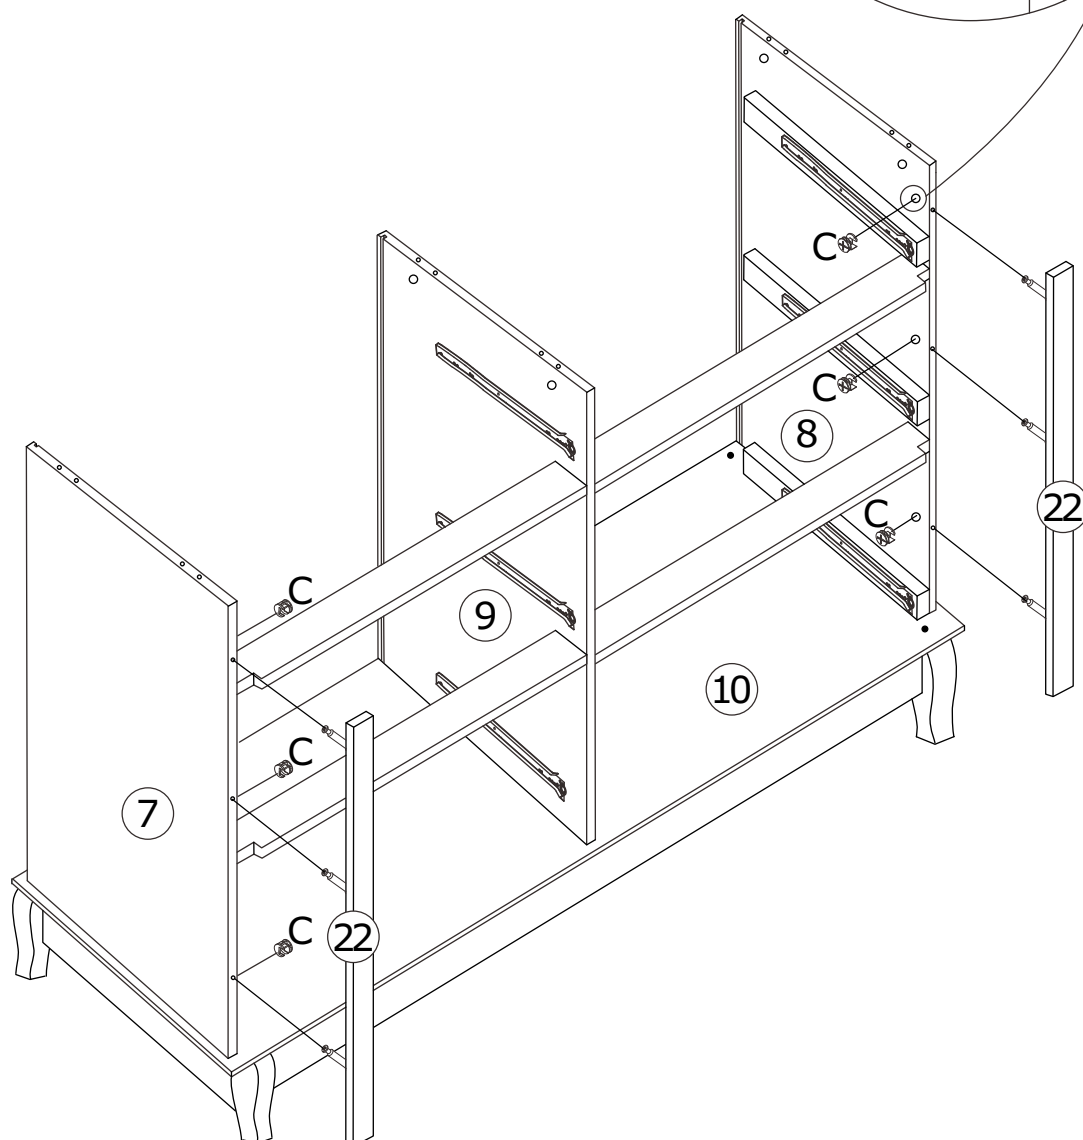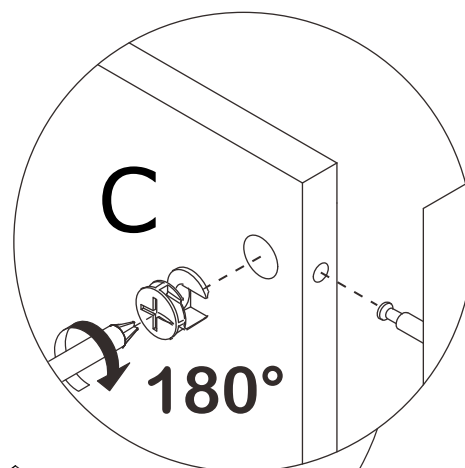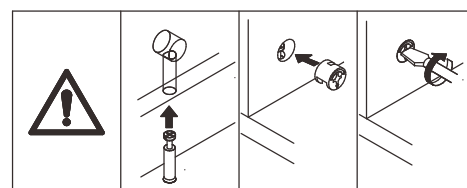



20

 Slide part 13 into available slots of part 7,8 and 9, as shown.

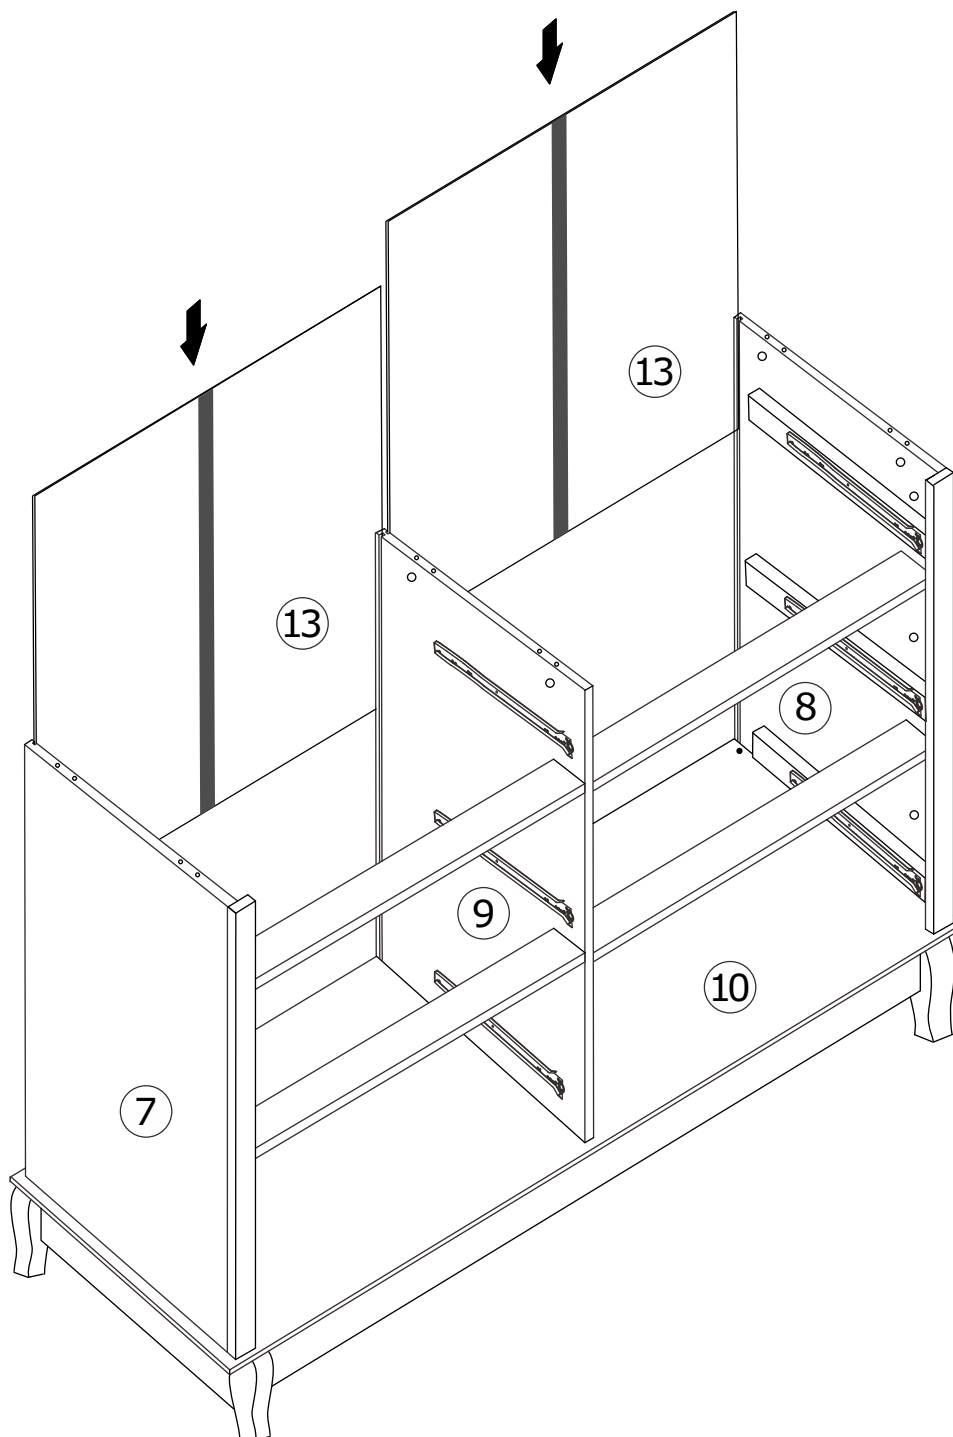


21

  B x 6

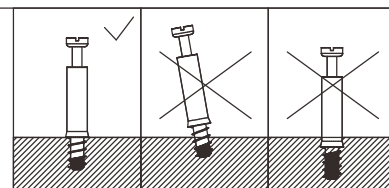


Insert screws(B)intopart 16
as shown.

 Do not use an electric screwdriver,do not use
force during the rotation of the accessories,
otherwise it may cause the board to crack

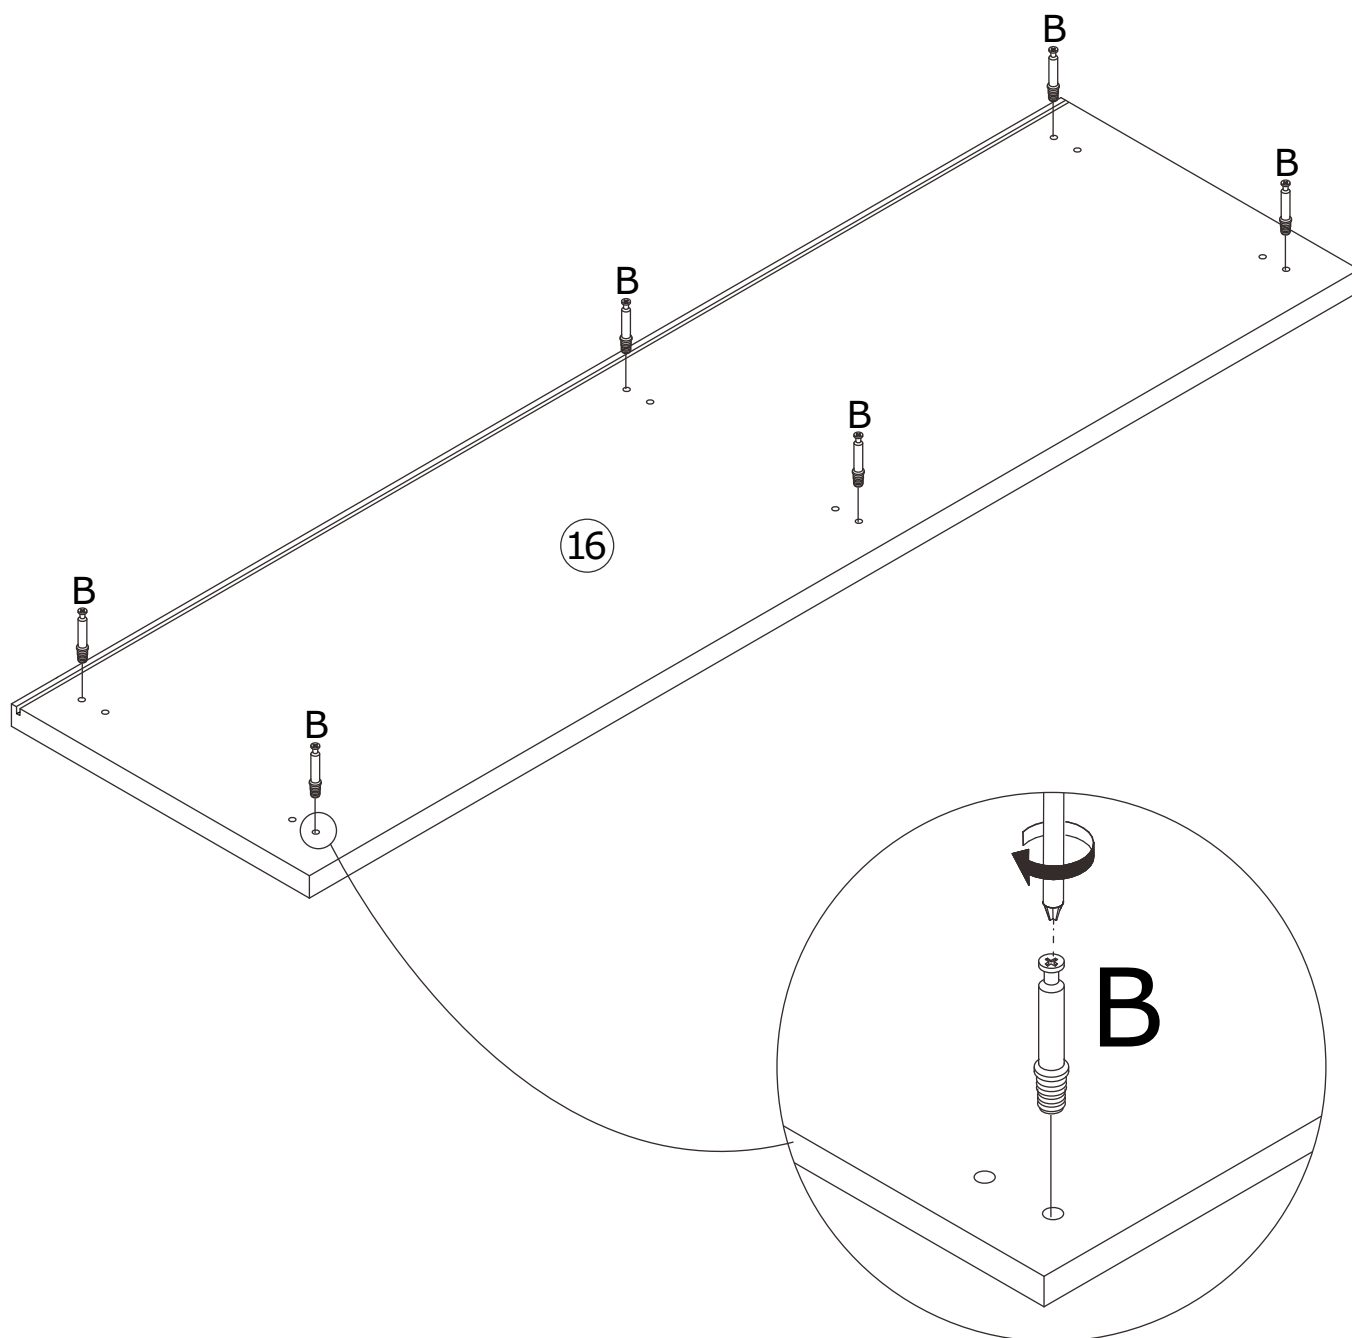

22

 
A x 6



C x 6










 Ø 15 x 10 mm




Insert wooden dowel(A) to parts 7,8 and 9, as shown.

       Cover part 16, insert cam lock(C) into part 7,8 and 9, turn clockwise to tighten.

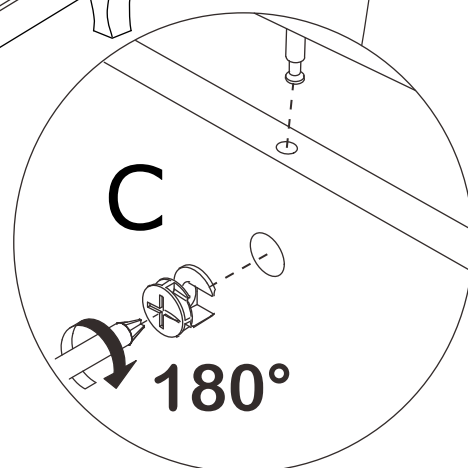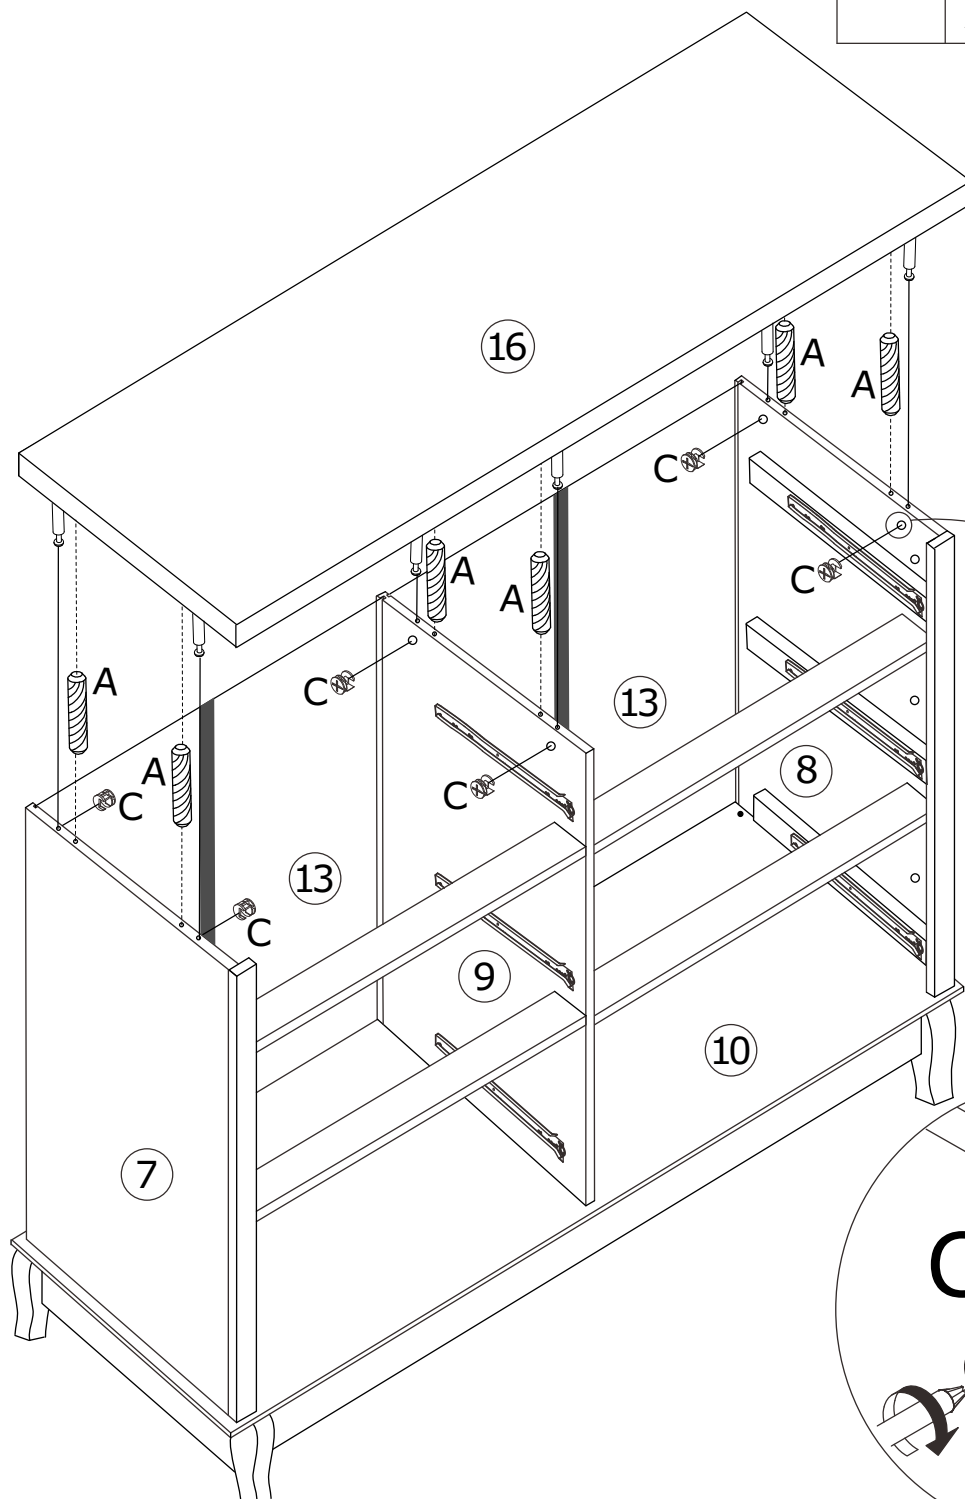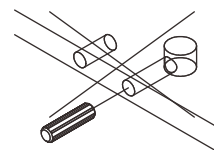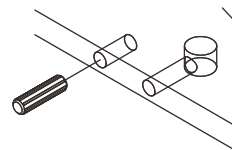

 The drawer slides must be aligned with the internal rails, otherwise the drawer will tilt.

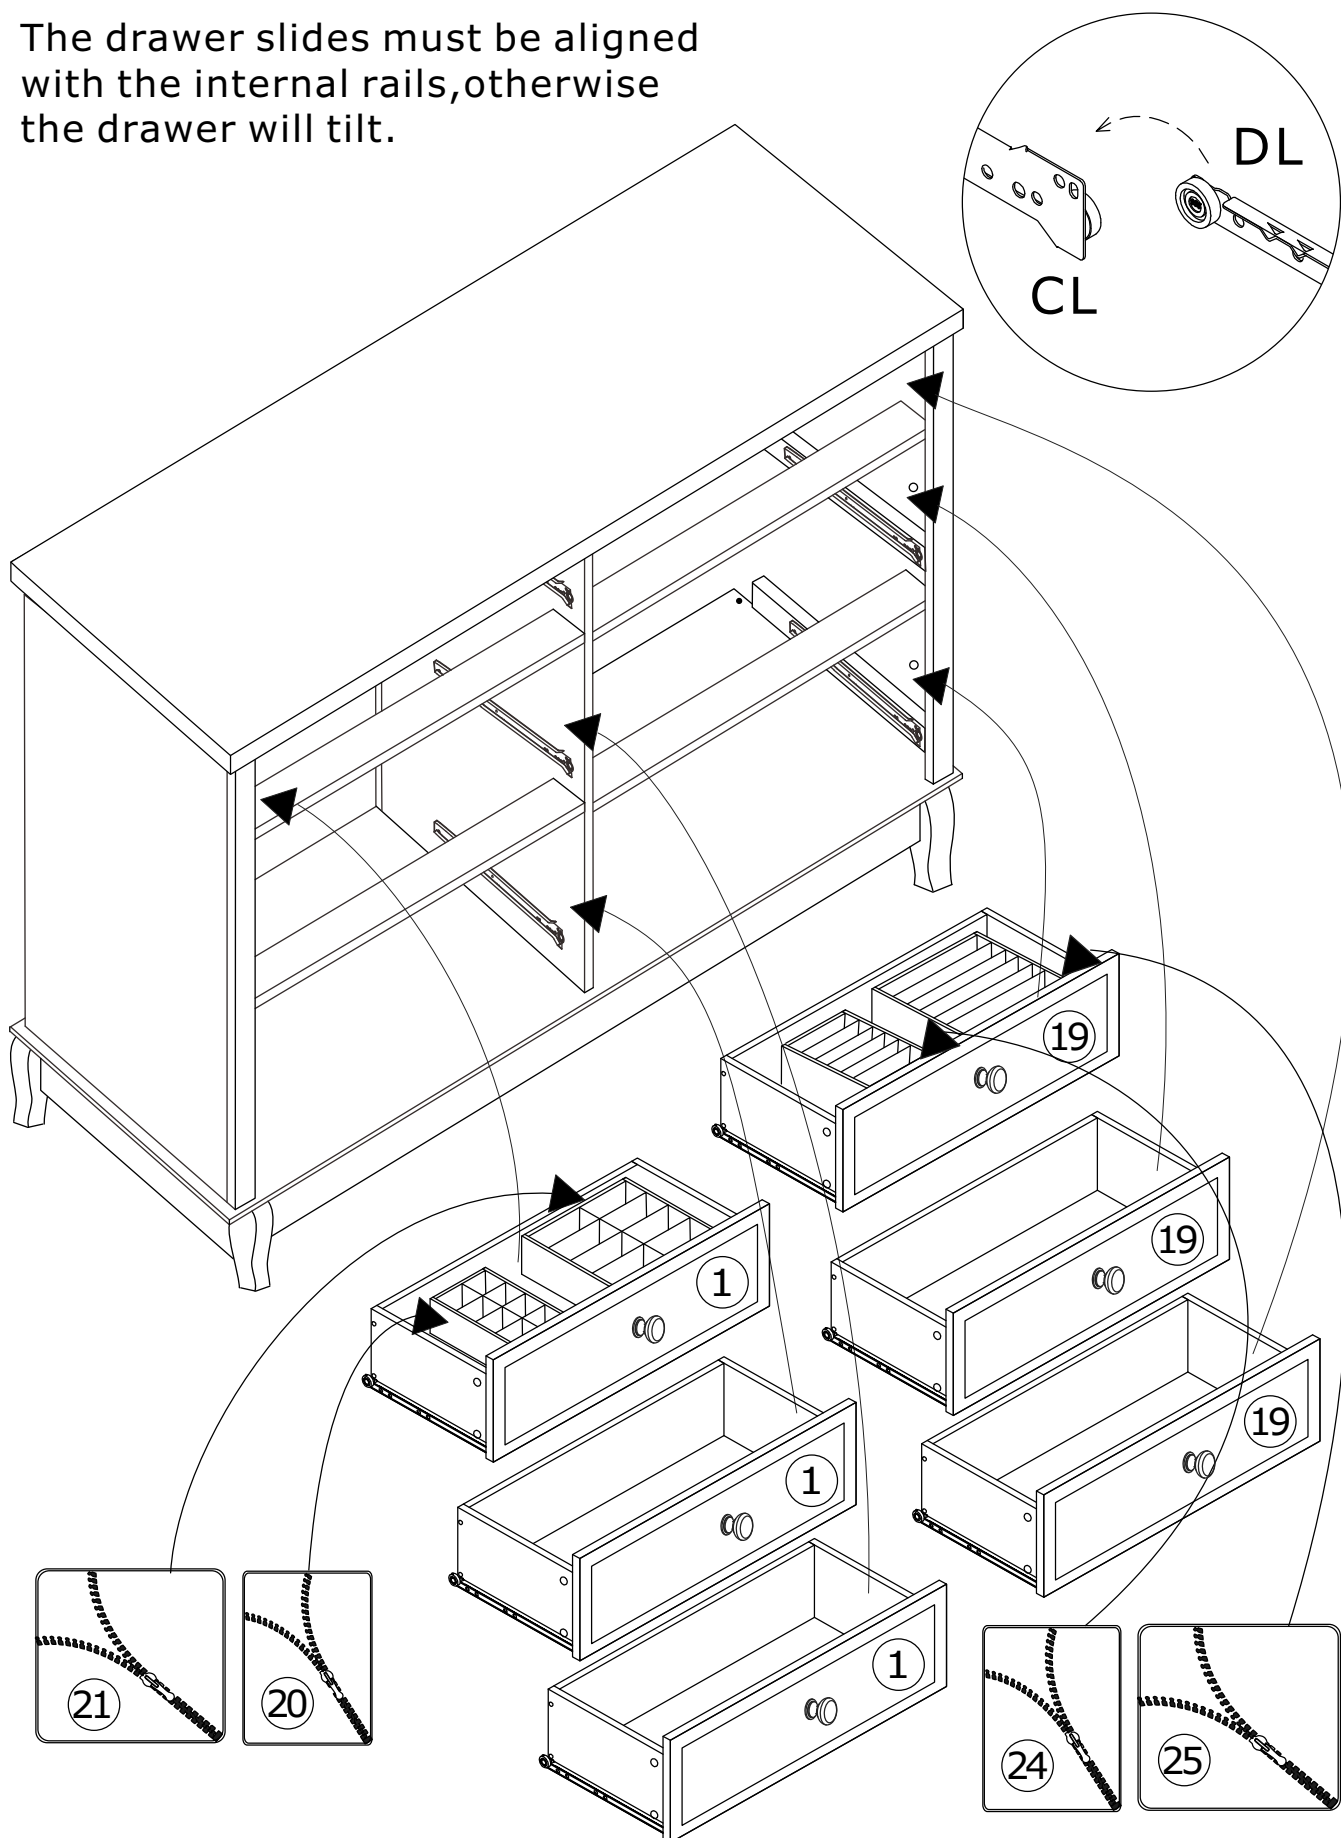

24

D x 2



Ø 4 x 12 mm

L x 6

 


M x 12



Ø 3 x 14 mm




Q x 2



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

Fix anti-pour(Q) using nail(D) as shown.

   Fix parts (13) using nails(M), and assembled with clamp (L) , as shown in figure.

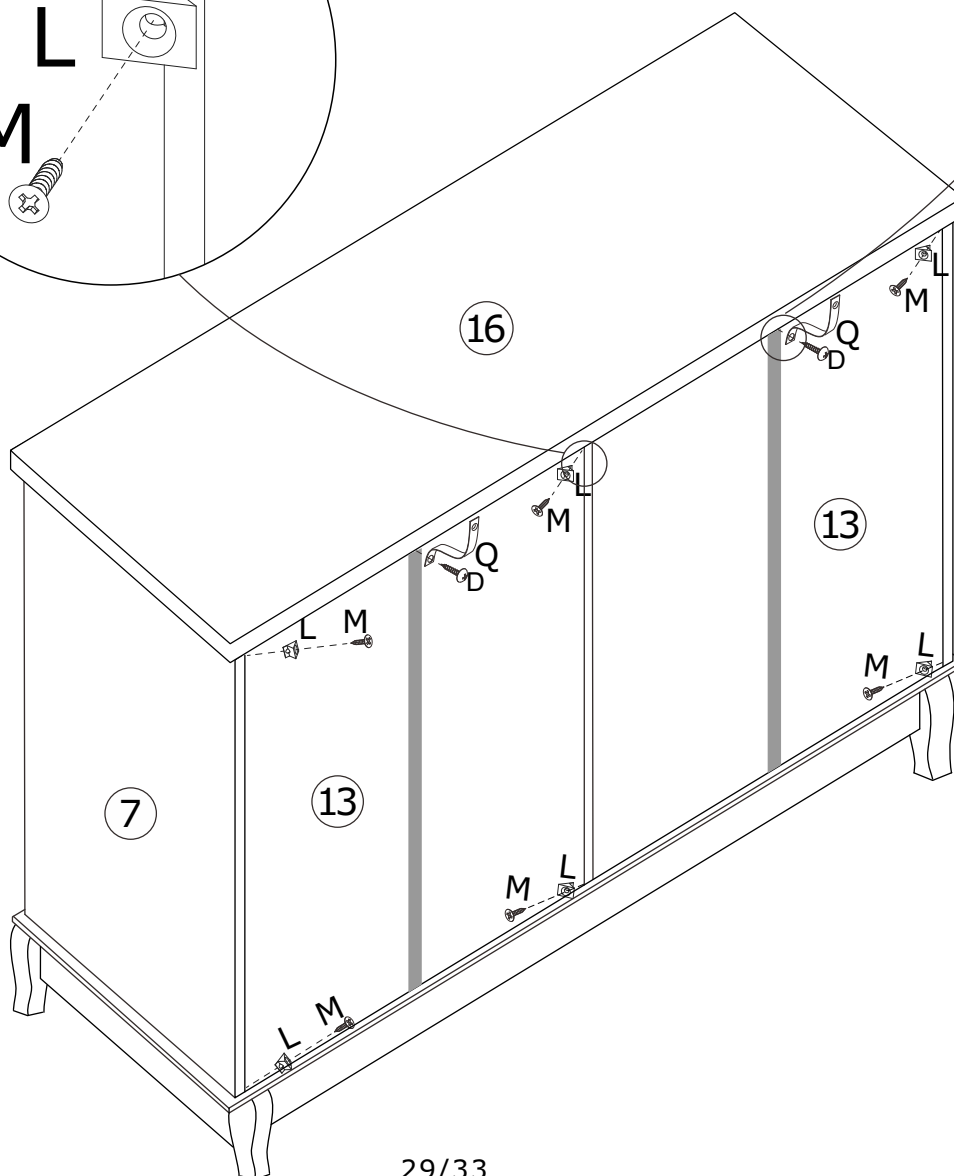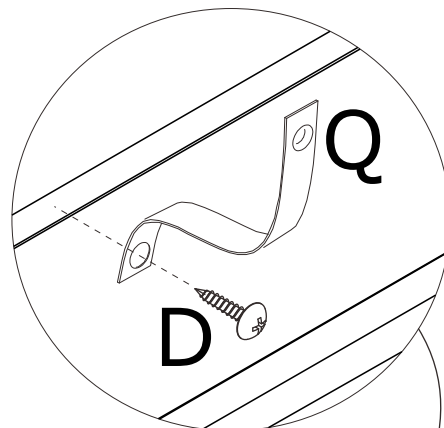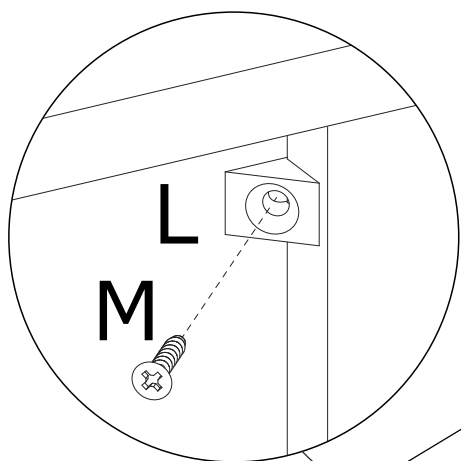

25

 
 
 
 
P x 2



K x 2











Ø 4 x 35 mm

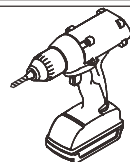



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

For extra stability, it is recommended that you fix your drawer to the wall using the additional hardware (P, K and Q), as shown.

          Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.

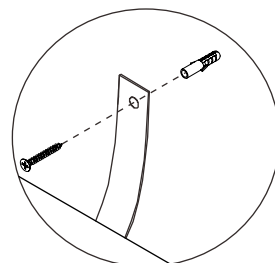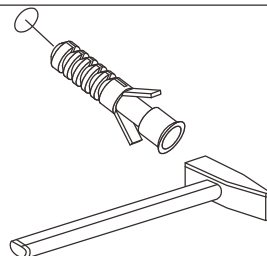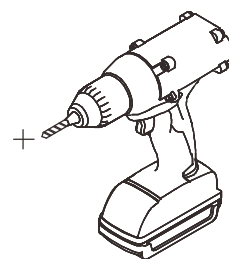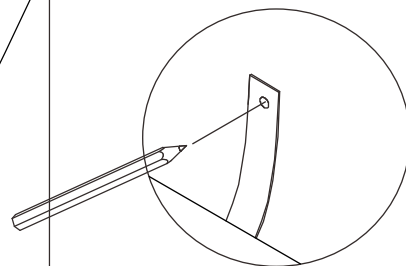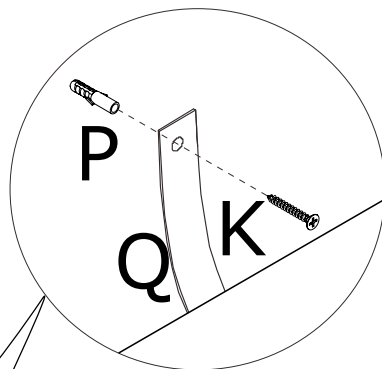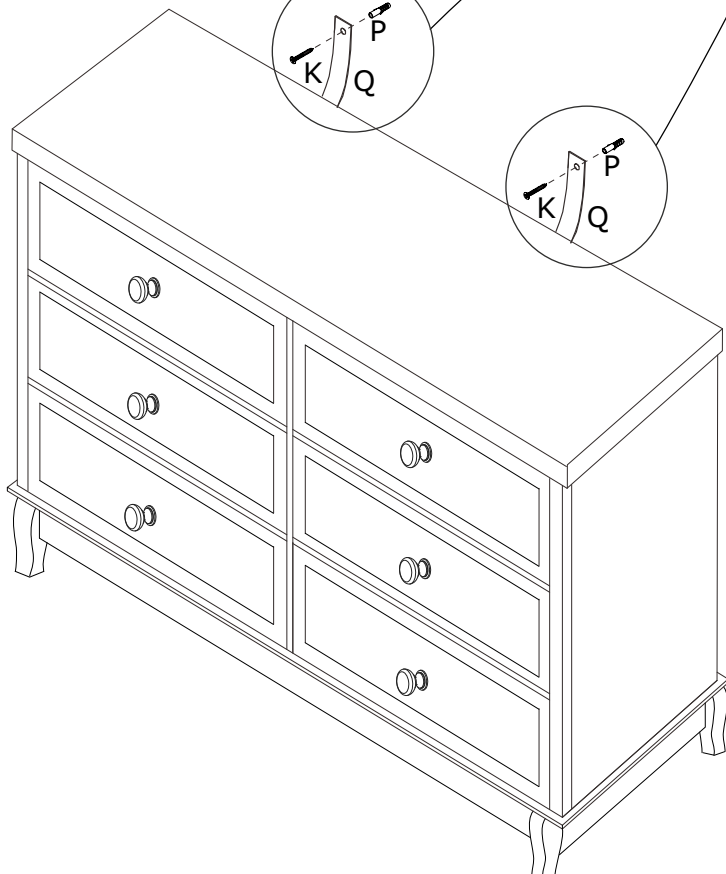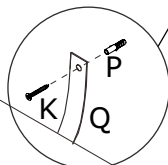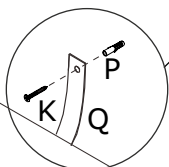

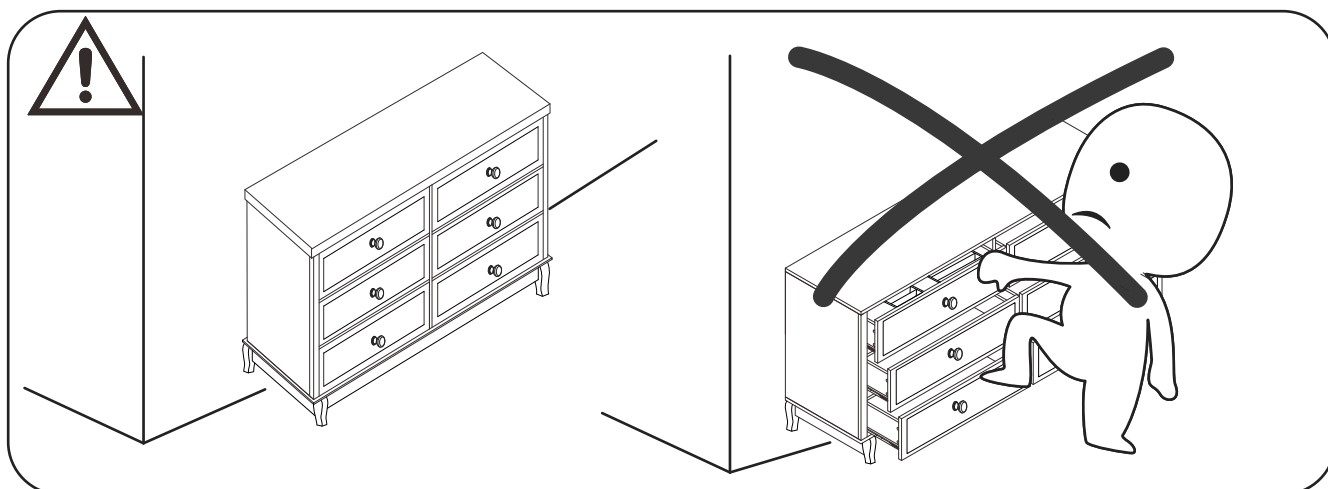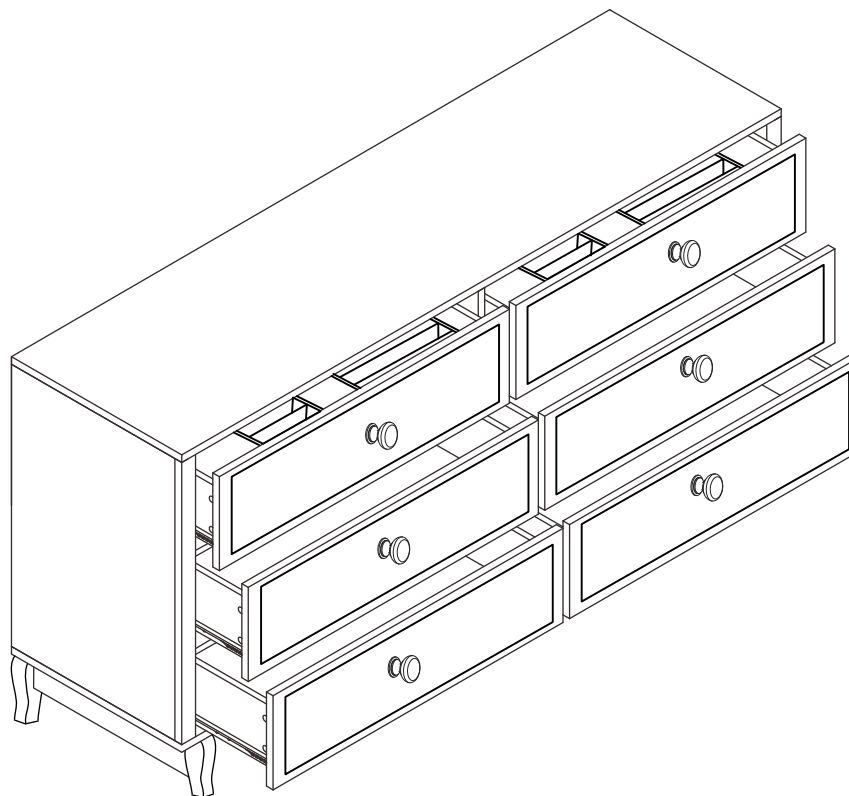

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please consult our FAQ section at feedbackstation@163.com as there may be a simple solution to the issue.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.