 
 


ASSEMBLY INSTRUCTION

 
SKU:N725P186649

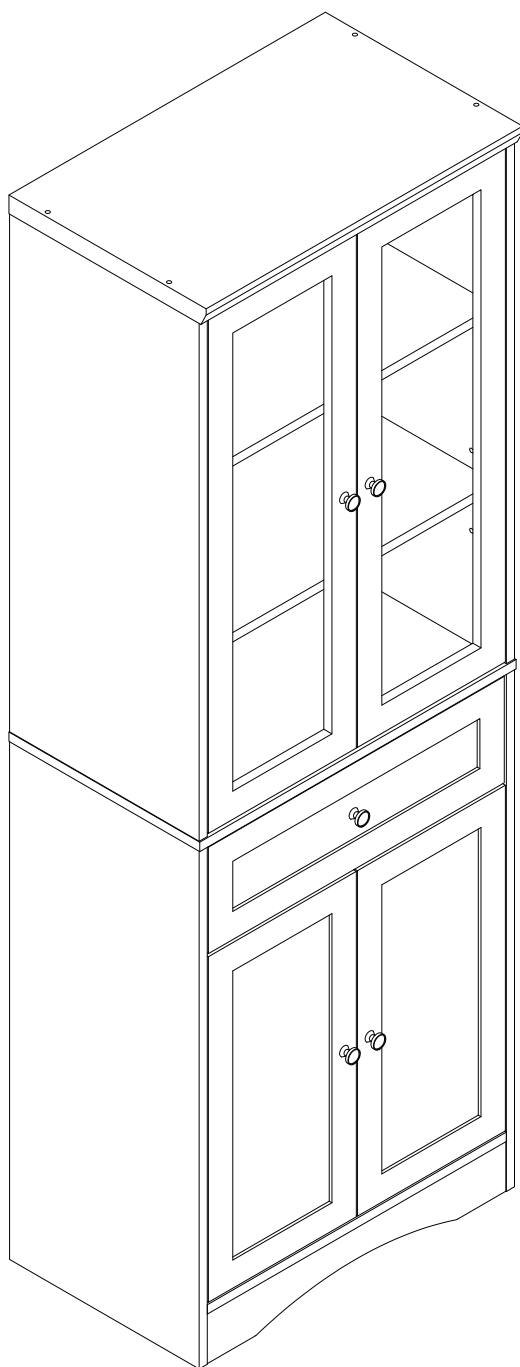

PARTS LIST

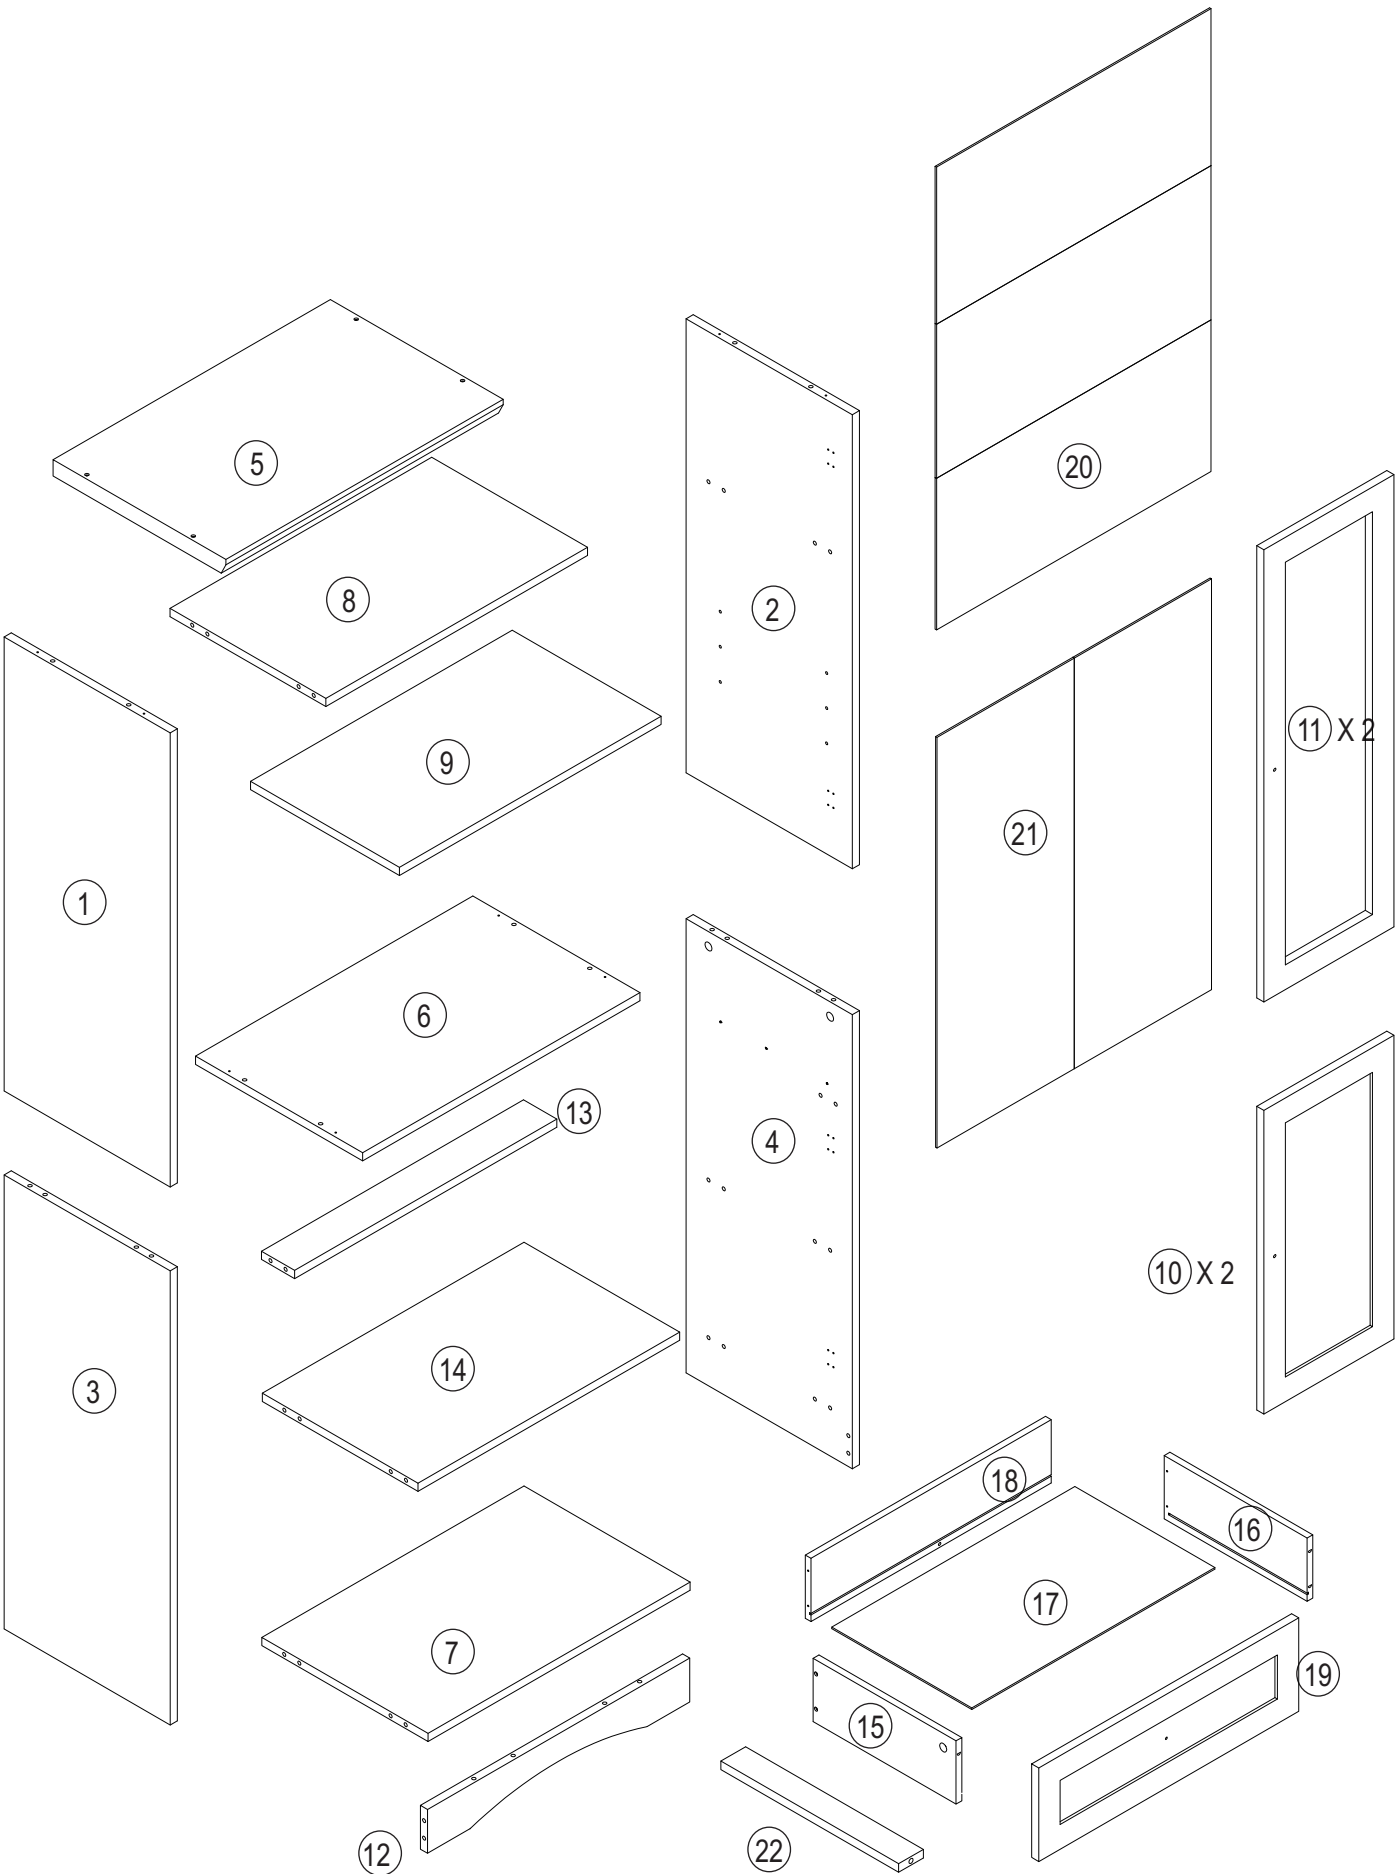


1

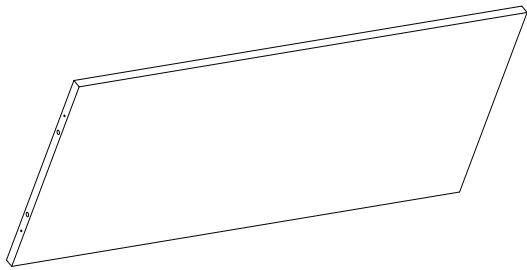


X1

 2

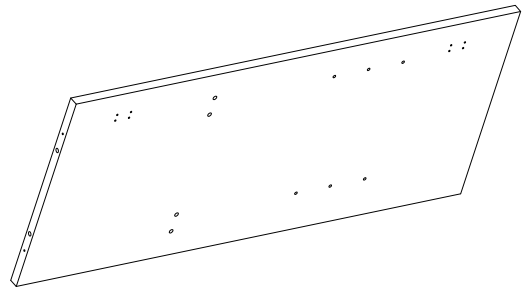


X1

 3

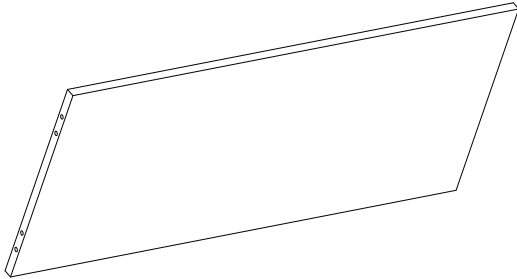


X1

 4

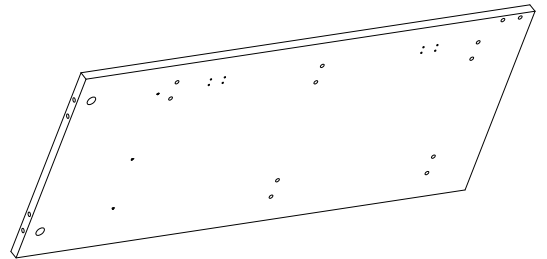


X1

 5

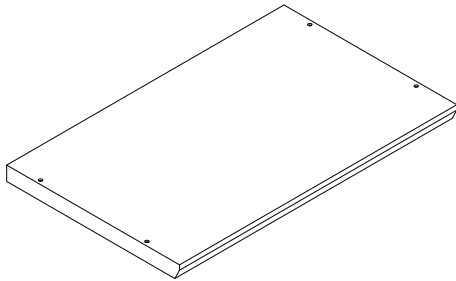


X1

 6

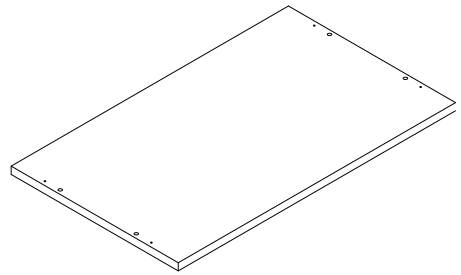


X1

 7

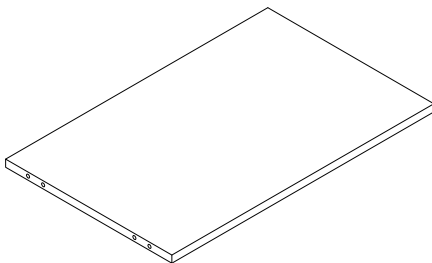


X1

 8

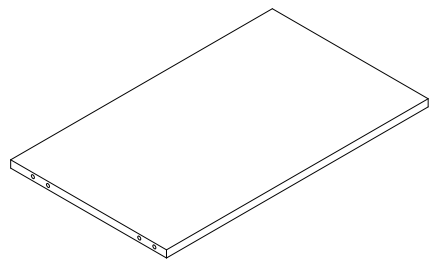


X1

 9

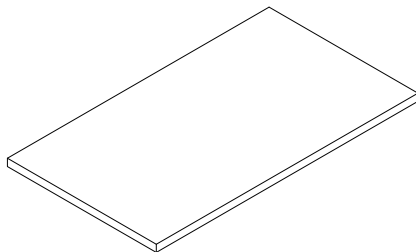


X1

 10

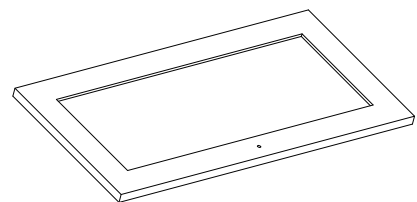


X2

 11

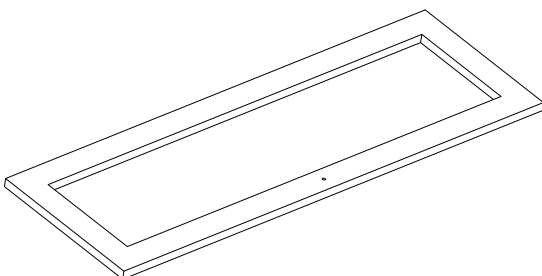


X2

 12

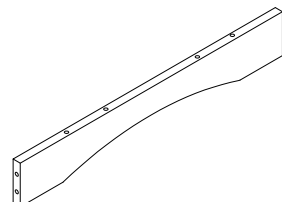


X1

 13

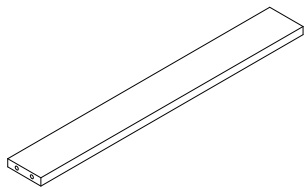


X 1

 14

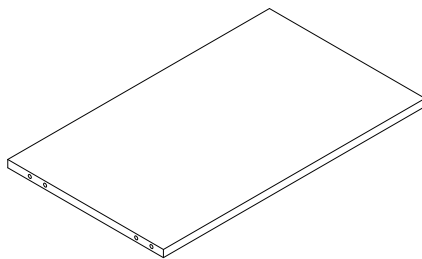


X 1

 15

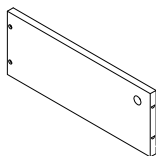


X 1

 16

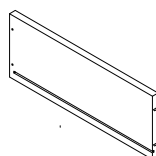


X 1

 17

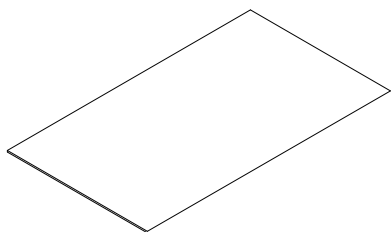


X 1

 18

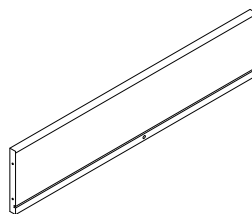


X 1

 19

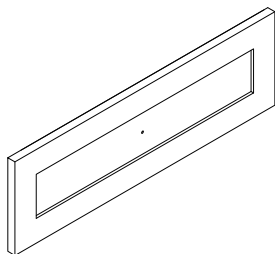


X 1

 20

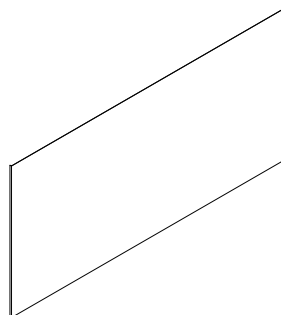


X 3

 21

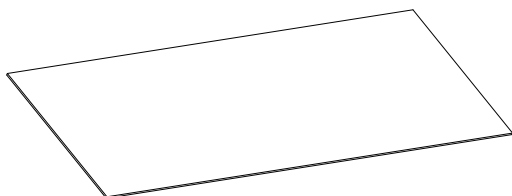















X 2

 22




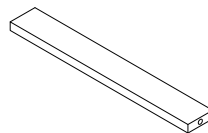


X 1

           
 
 
 
Hardware:

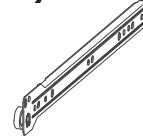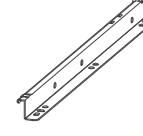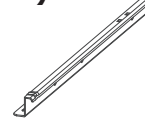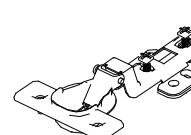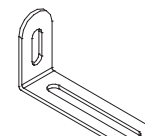 27 x A	 27 x B	 30 x C	(CL)  1 x D
(CR)  1 x D	(DL)  1 x D	(DR)  1 x D	 10 x E Ø3.5*12
 2 x F Ø4*35	 12 x G	 1 x H	 4 x I
 4 x J Ø3*14	 4 x K	 5 x L Ø4*30	 5 x M
 4 x N M4x16	 8 x O	 48 x P Ø4*14	 1 x Q M4x10
 2 x R	 2 x T Ø4*14	 2 x U	 42 x V
 1 x W	 2 x X Ø3*16	 6 x Y	

    
STEP 1

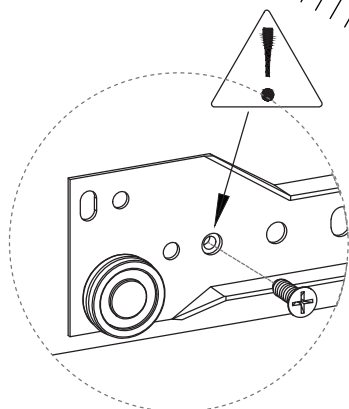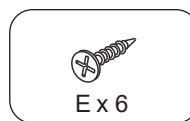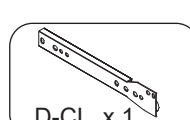

    
STEP 2

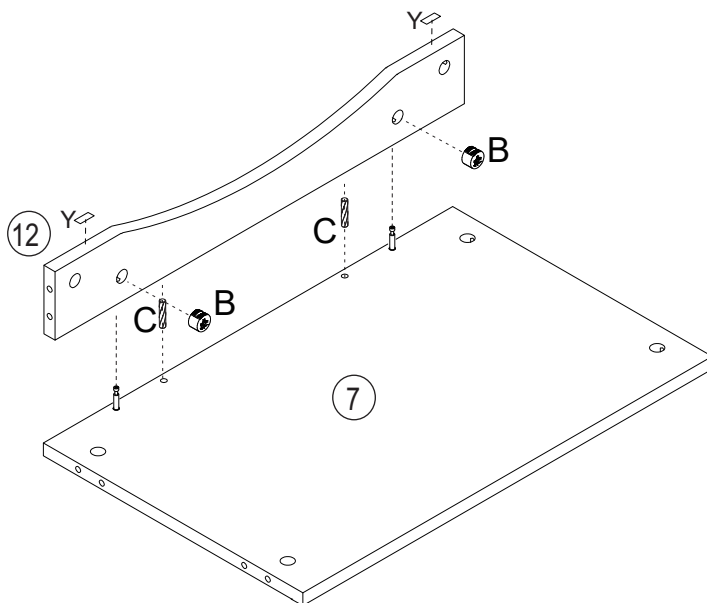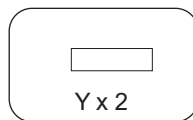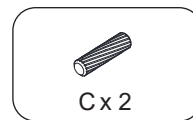

 
STEP 3

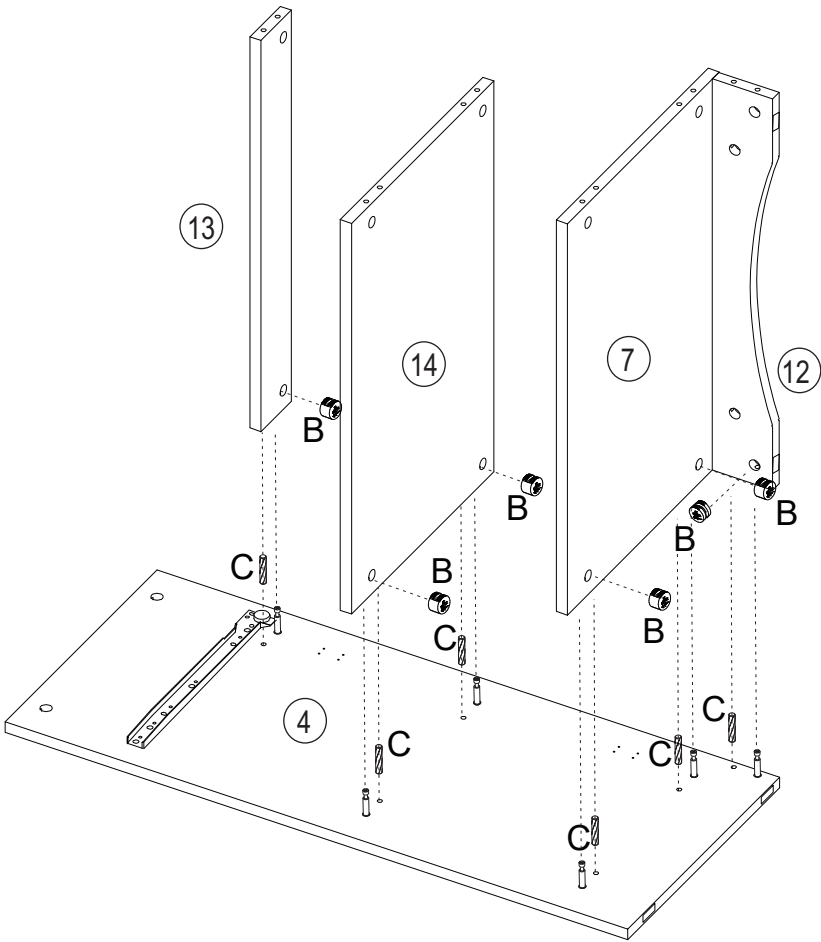

 
STEP 4

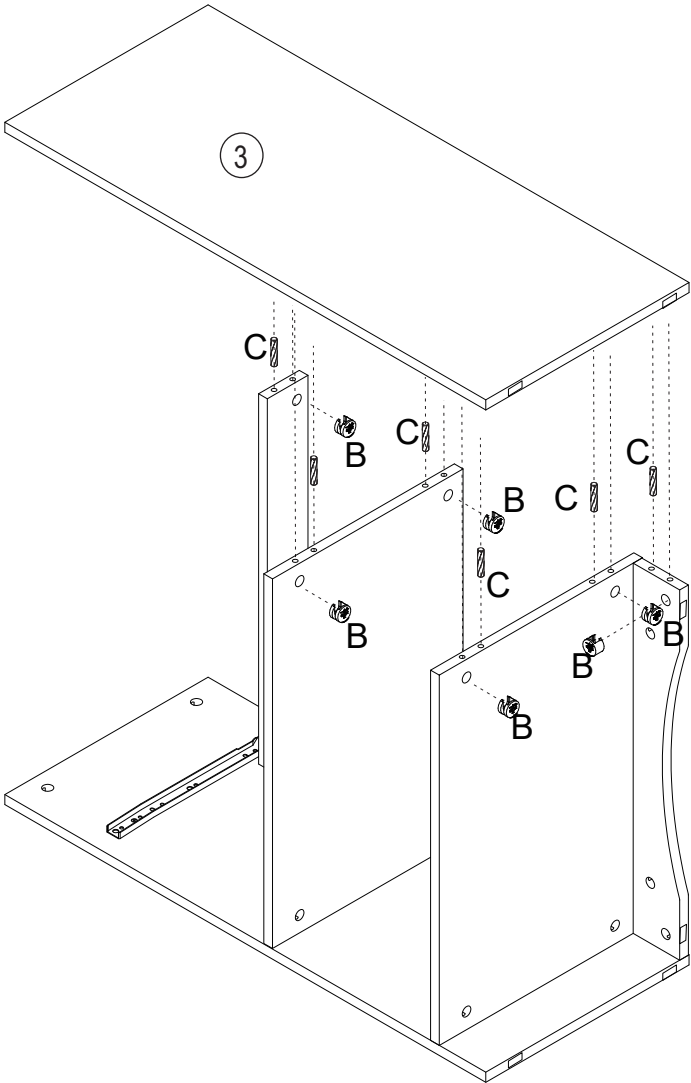




 
STEP 5

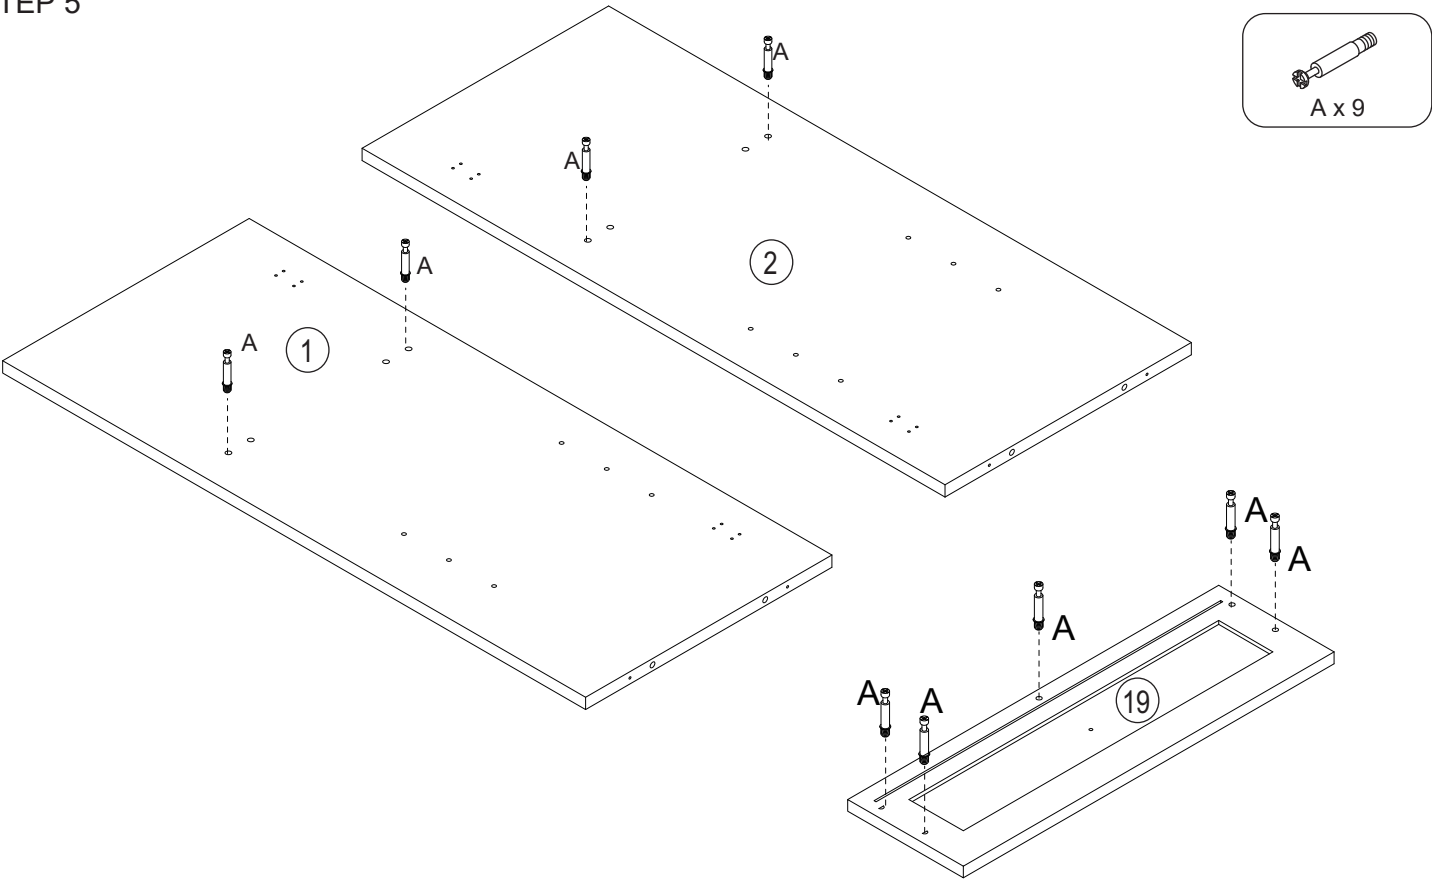






 
STEP 6

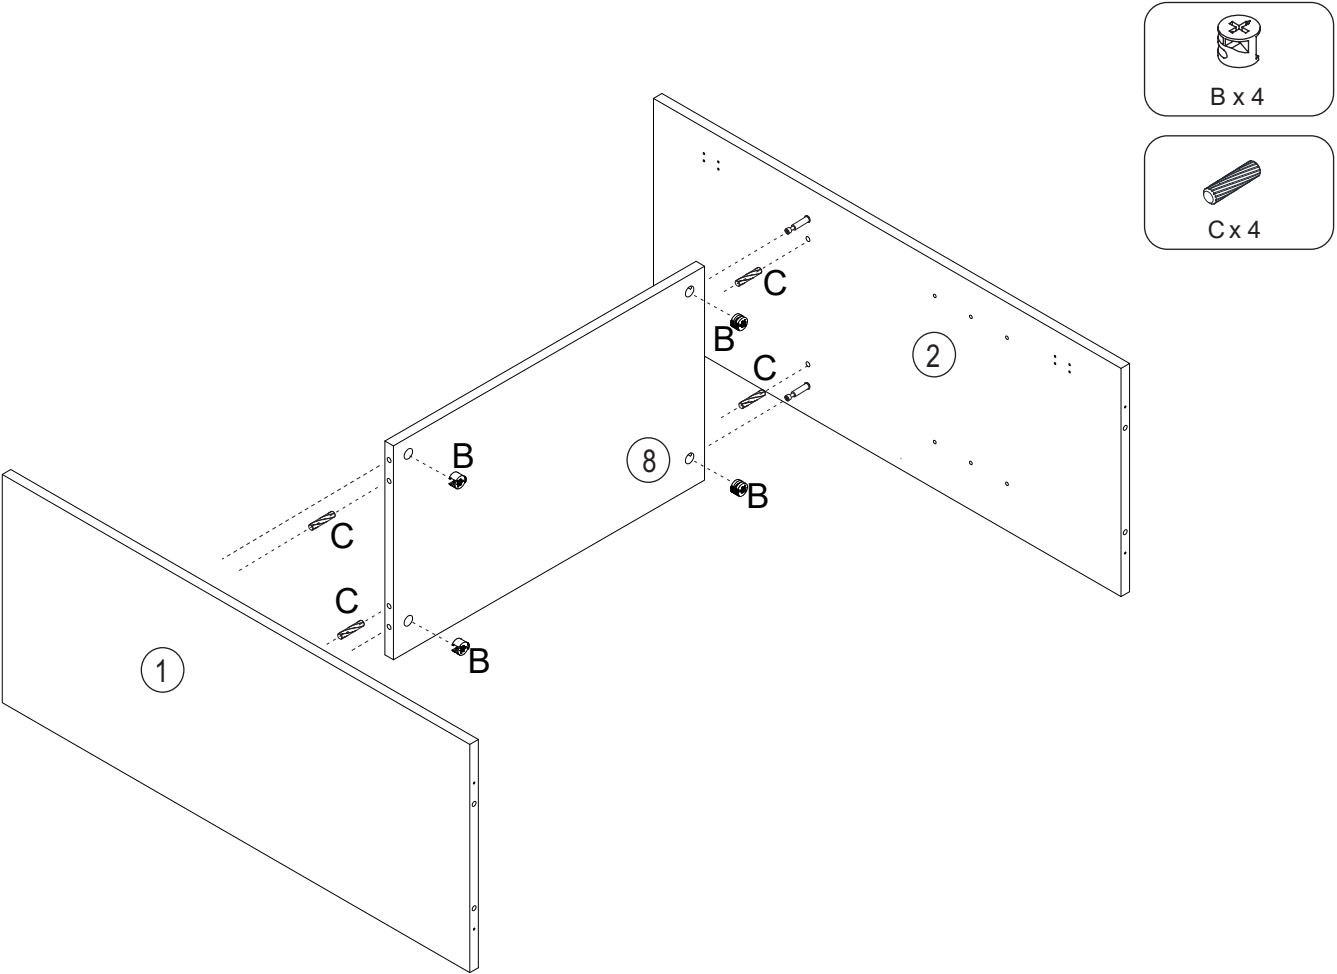

   
 
STEP 7

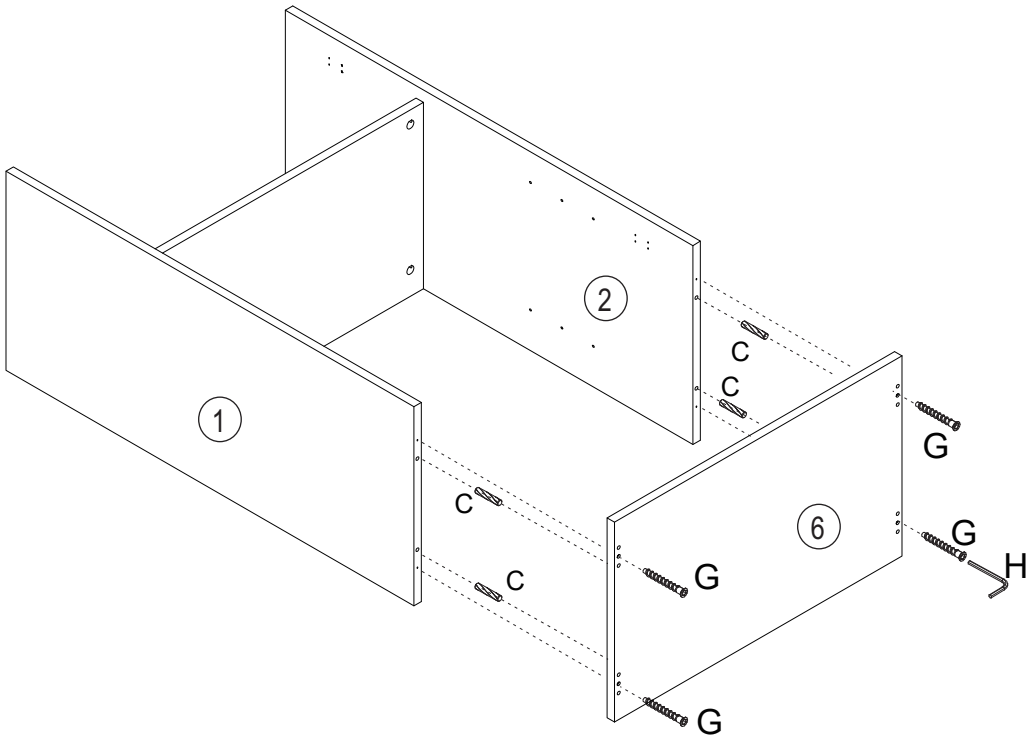

    
 
 
STEP 8

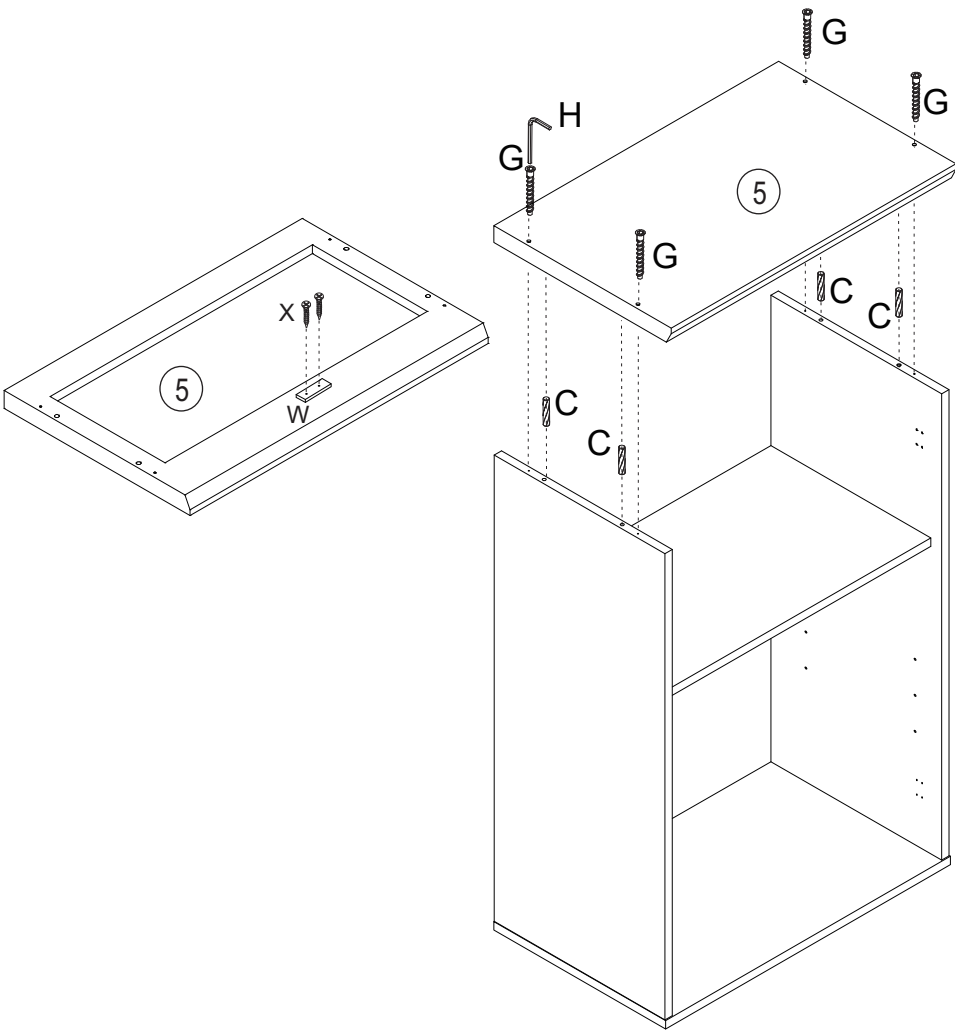

 
 
STEP 9

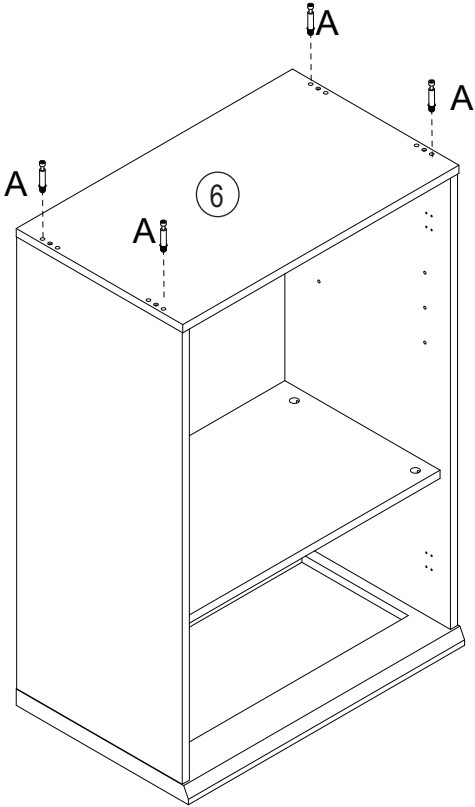


 
 
 
STEP 10

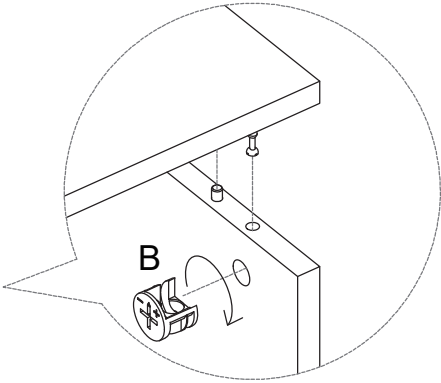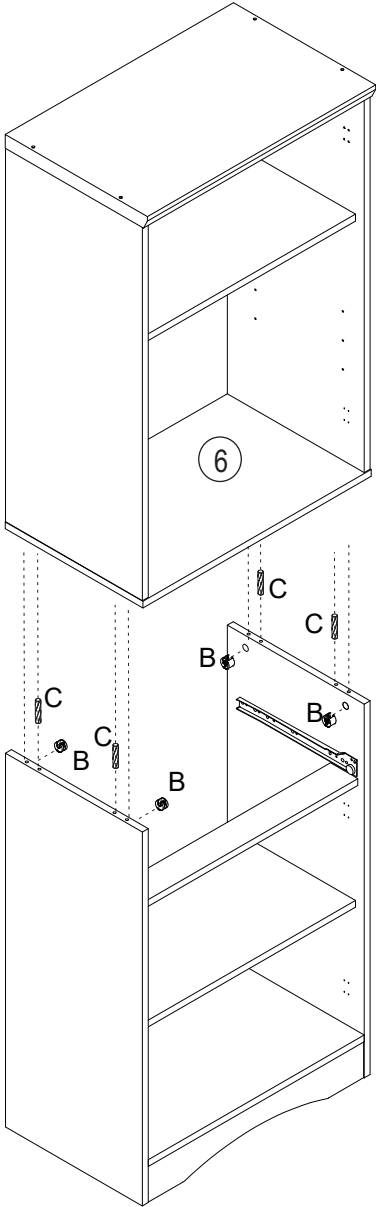

  
STEP 11

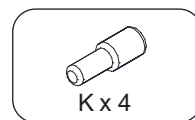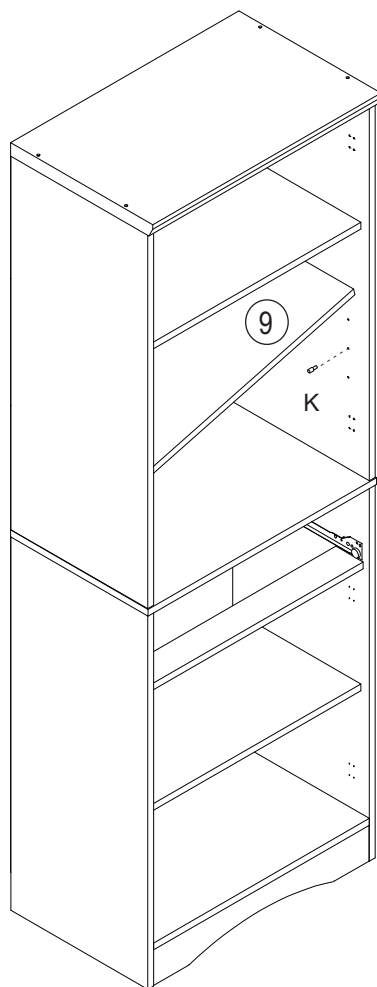

   
 
STEP 12

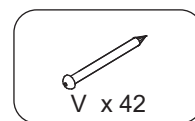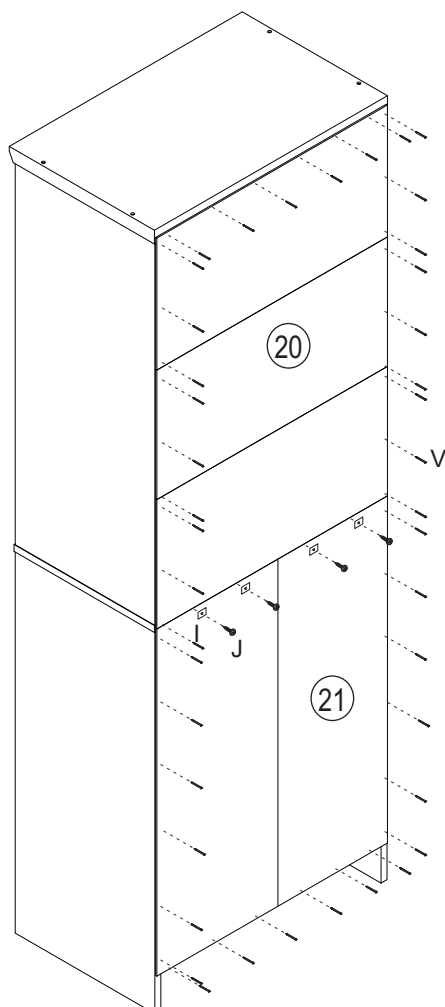

 STEP 13

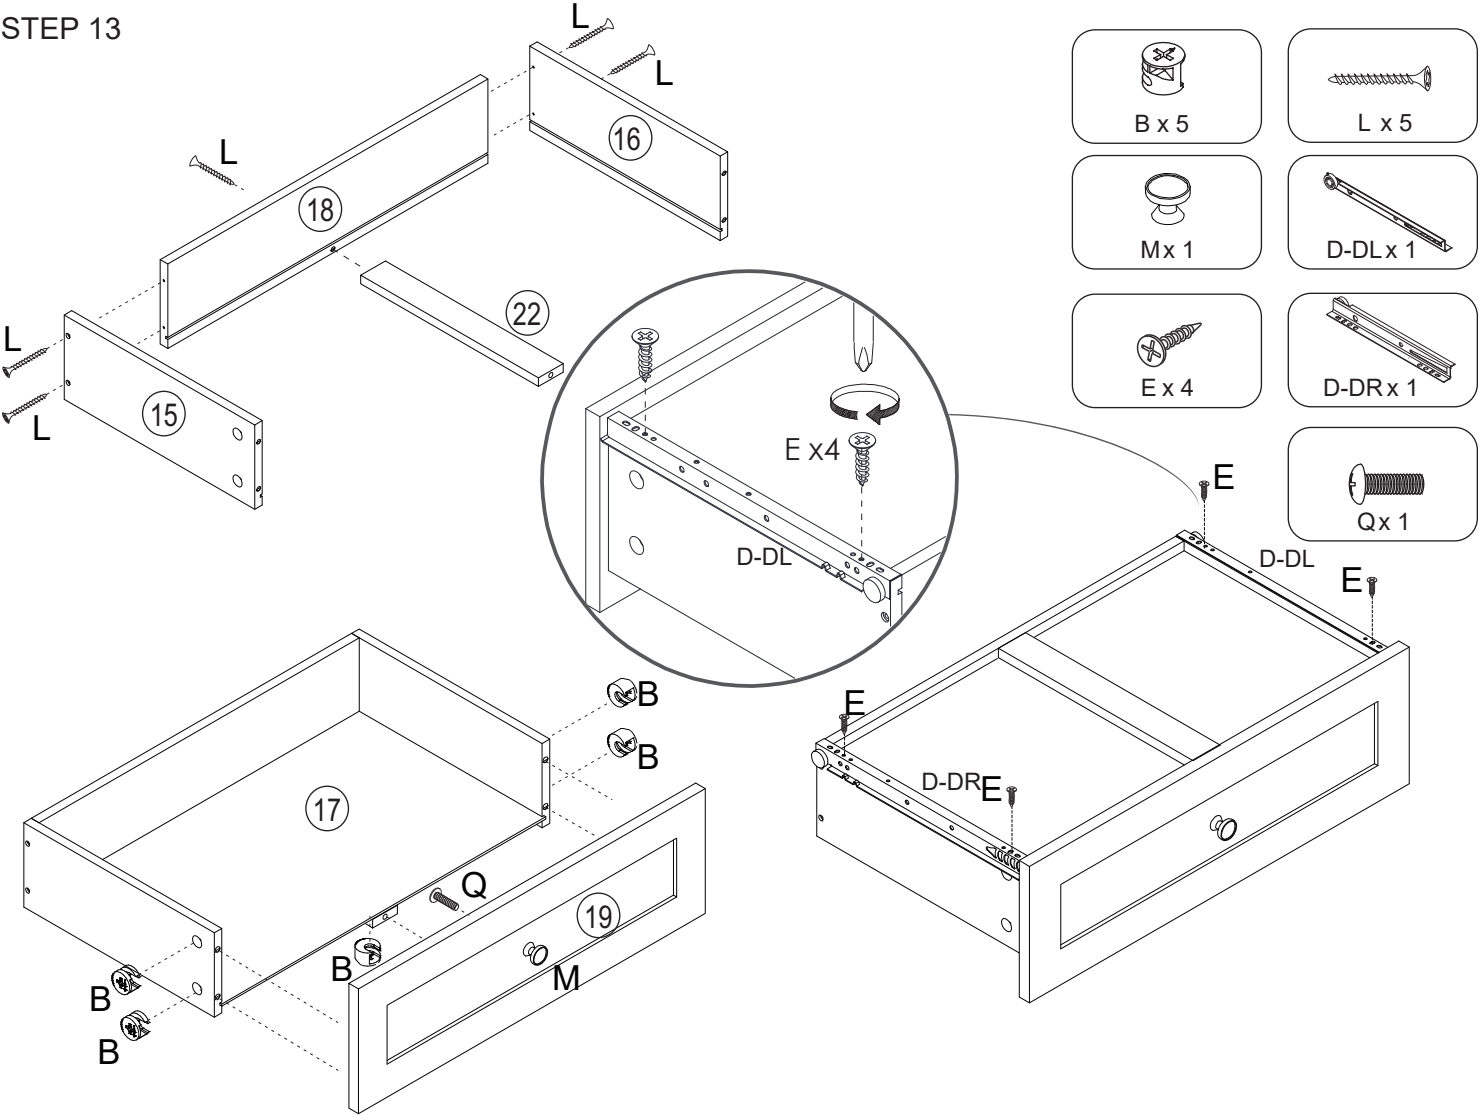


  STEP 14

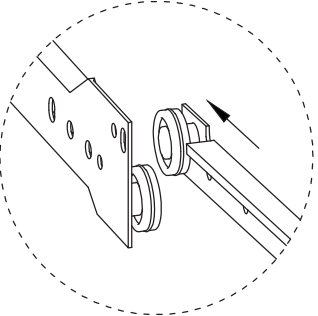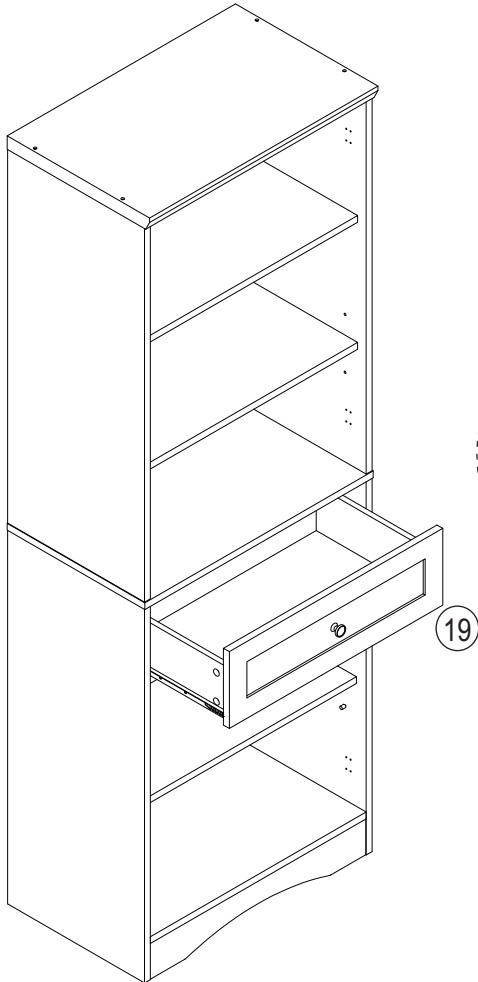


STEP 15

 X 2

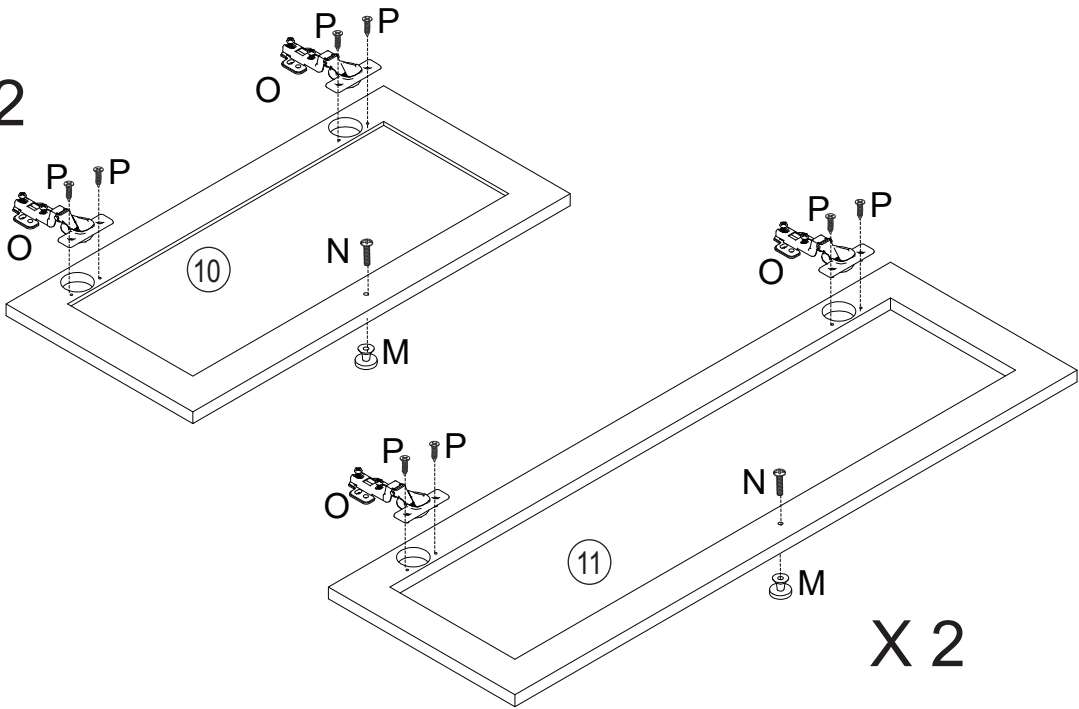






-  N x 4
-  M x 4
-  O x 8
-  P x 16

 STEP 16

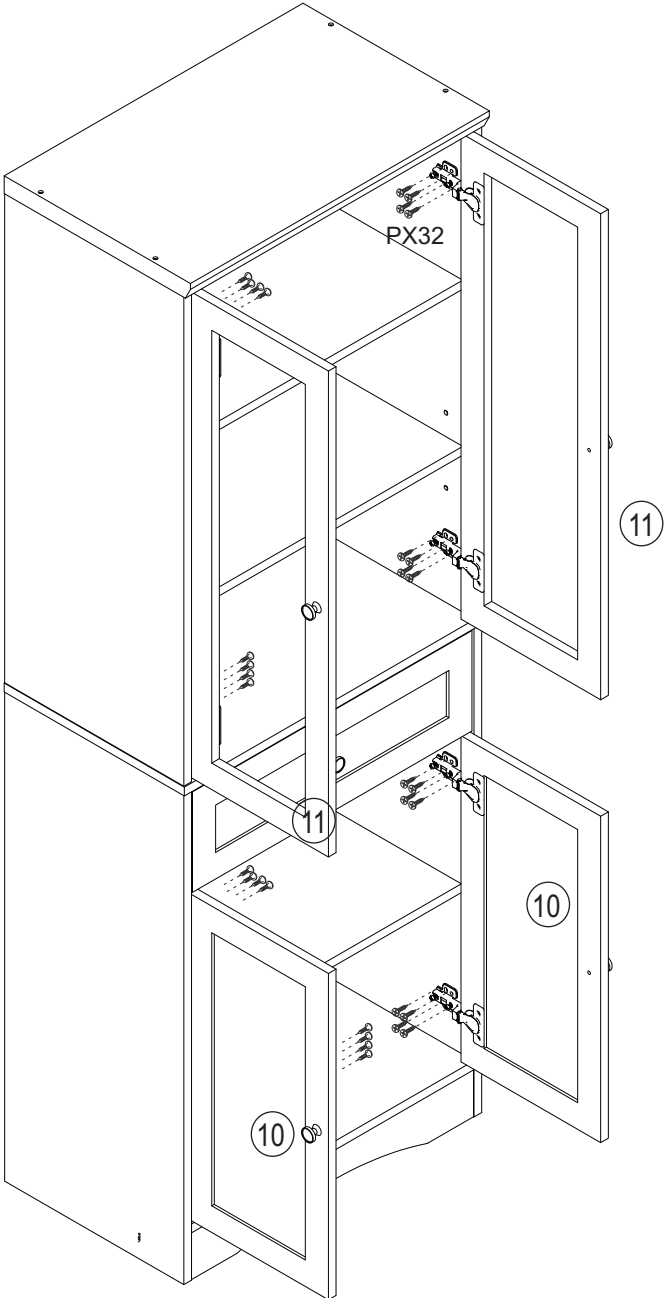


-  P x 32

     STEP 17

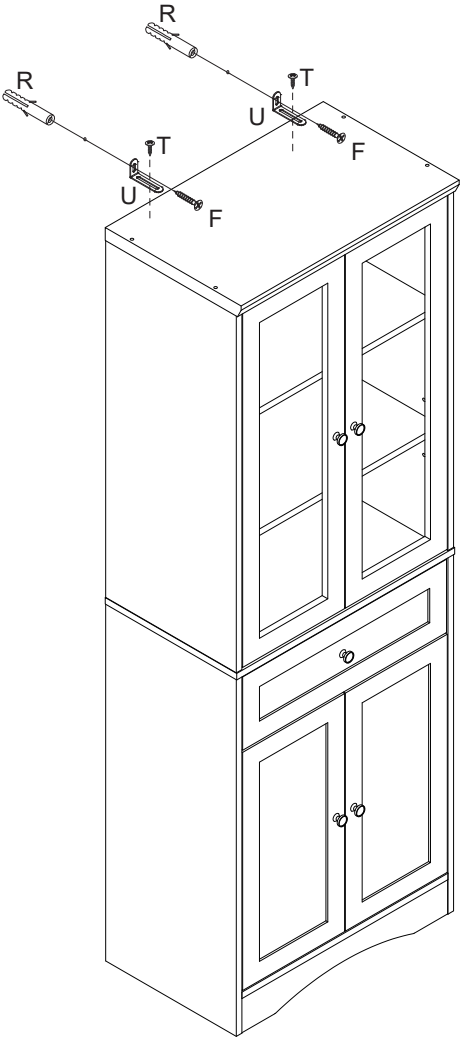

 STEP 18

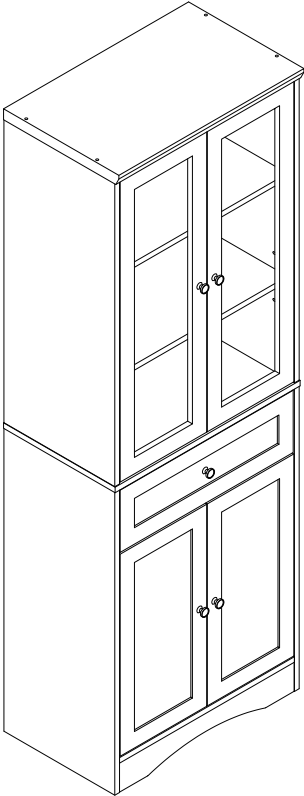




Attention: For safety and stability, we suggest you have to secure the anti-tip accessories to the wall to prevent tipping, injury, and property damage.

Installation Completed

Cabinet Door Adjustment Instructions




Height adjustment:

   - Locate the height adjustment screws on the hinge.
- Use the Phillips screwdriver to either tighten or loosen the screws to raise or lower the cabinet door as desired.

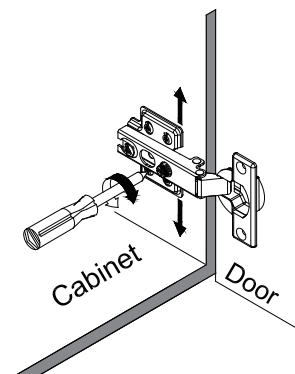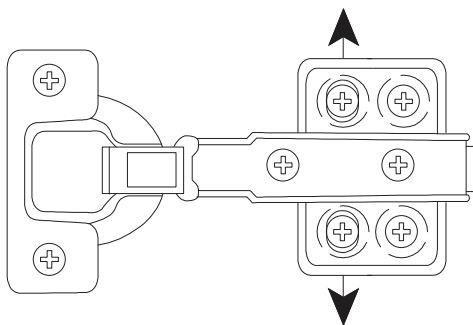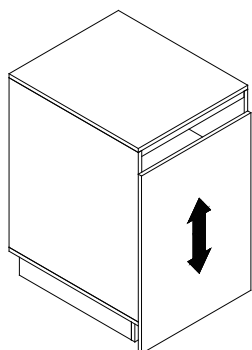

Side-to-side adjustment:

   - If the cabinet door needs to be moved closer to or away from the cabinet frame, locate the side-to-side adjustment screws on the hinge.
- Use the Phillips screwdriver to adjust these screws and gradually move the door in the desired direction.

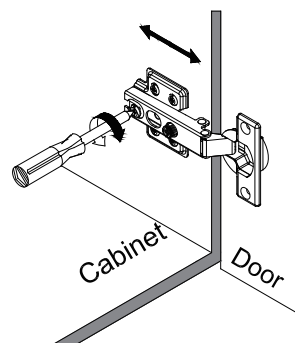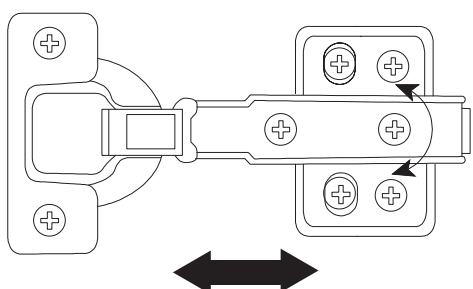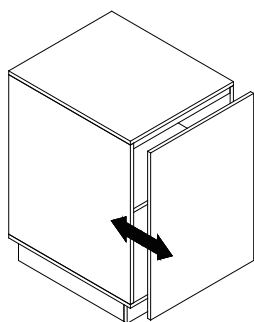

Depth adjustment (if applicable):

- Check if the cabinet door needs to be brought closer to or further away from the cabinet frame.
- For-depth adjustment, locate the depth adjustment screws on the hinge.
- Use the Phillips screwdriver to turn these screws clockwise or counterclockwise accordingly.

