

Quick set up guide:

TOKK™ CAM C2+

PRED
TECHNOLOGIES™



1. Power Button
2. Micro-SD Slot
3. Reset
4. USB Port
5. Mic
6. Lens
7. Indicator

Thanks ! We hope you will enjoy your new TOKK CAM C2+ Camera.
Please refer to the user guide bellow.

To properly set up your new Camera, please use the below quick user guide, in addition, do not hesitate to watch all our tutorial video on our website: www.tokktech.com.

If you encounter any issues setting up your new camera, call us and we will be very happy to help you.

Our customer service phone number is +1 858 999 2114 ext 1.

QR Code for the App



A

If you have a SD card, insert it in the Micro-SD Slot (you can still install and use the camera if you do not have one) --> in motion detection mode you will receive a notification and the footage will be recorded on the SD card, if you do not have an SD card you will receive a notification and will have to open the app and record manually, the footage or picture will be stored on your smart device.

- 1- Plugg the Camera to charge (4) using the furnished micro USB cable, the camera automatically turns on.
- 2- Download the application called "Fowl" on your smart device (App available on the App Store for iOS and Google play for Android, or use QR code (A).
- 3- Go to WIFI settings on your smart device.
- 4- Wait until your camera name appears "OK_XXX", when it appears select it. (disregard messages like "unsecured network, or"/no internet access...") as long as "OK_XXX", is selected as your wifi network you can close the settings.
- 5- Open the "fowl" app, and Press Play to watch your camera video.
- 6- Configure your Wifi by pressing gearshift icon and set camera parameters.
- 7- Select Wifi Settings and enter your home Wifi and Password.

Now press the play button to view the live feed. Congrats you have set up your new TOKK™ CAM.
Check out all the fonctions of the camera and the App on our website in the support page.

Quick set up guide for TOKK™ CAM Fowl App



APP home page

6:08

FOWL

To add another Camera

To access the live view

To access system settings
-Share this cam to another app
-If more than one Cam installed on App
move this cam on top.
-Cloud storage options

To access your account

To come back to main page

To access the video Recordings

System settings

6:45

System settings

WiFi Camera03

Serial number: OKC009351B2CL

WiFi signal strength: Strong

Basics

Device sharing > To open QR code to share Camera to another Fowl App

Stick device on top <input type="checkbox"/> Move this cam up to the first Camera (if more than 1 cam)

Image > Open the sub settings for Image Settings (night vision, display time and date, change live view settings, adjust brightness and contrast)

Pay

Cloud storage payment > To open Cloud Storage settings and payments if needed

Network

WiFi settings > Add the cam to your home Wifi

Storage

TF card recording settings > Check Micro SD card capacity/settings

Safety

Alarm Settings > To open Motion Detection settings and/ notifications and recording time

Hide indicator light <input type="checkbox"/> LED on or Off

System

Firmware upgrade > To check if software update needed

Restart > To re start the App

Delete

To delete the camera

Individual Cam home page

6:56

WiFi Camera03

To go back

Full settings

live view

Change Image Quality

Tap to take a picture (stored on your Phone)

Tap to record a video (stored on your Phone)

Rotate live view

Listen to live view

Rotate (For Cam X1, F10, F3, F3+ only)

Rotate (For Cam X1, F10, F3, F3+ only)

Trigger an Alarm Sound (For Cam X1, F10, F3, F3+ only)

Rotate Trigger light (For Cam X1, F10, F3, F3+ only)

Real-time viewing

Message

TF Card

To go back to live view

To Access the SD card Recordings

To Access the Cloud Storage Recordings

Access all the other Cameras, If you have more than one