 
 




Storage Cabinet

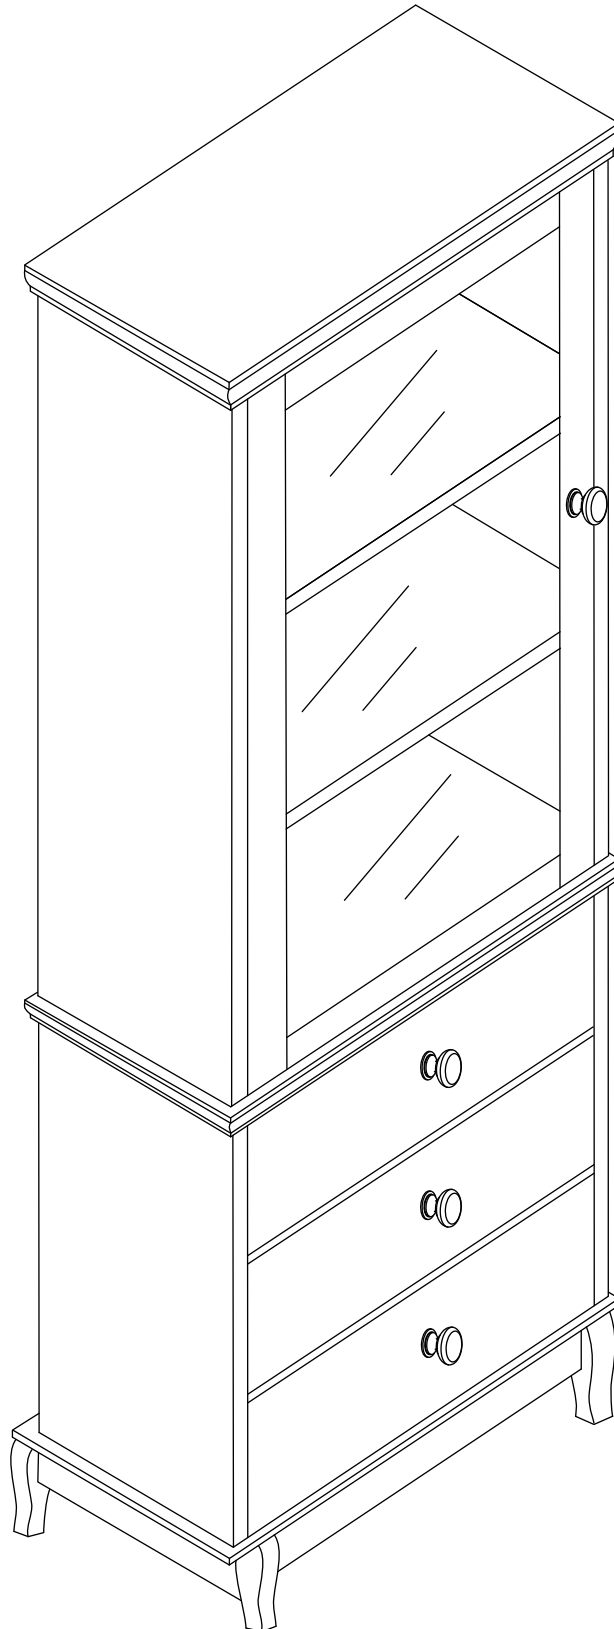

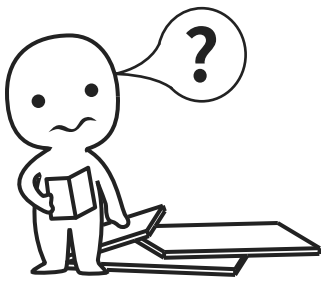


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

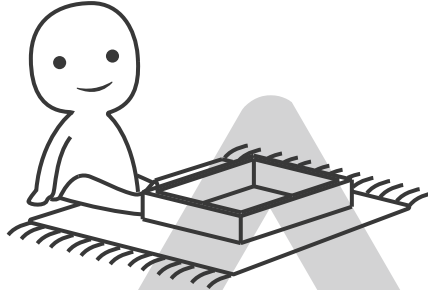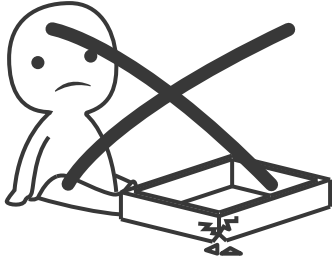



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

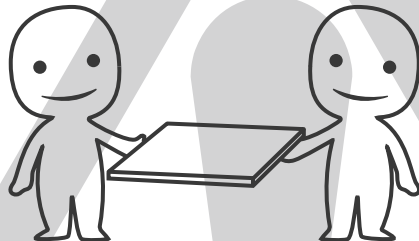

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

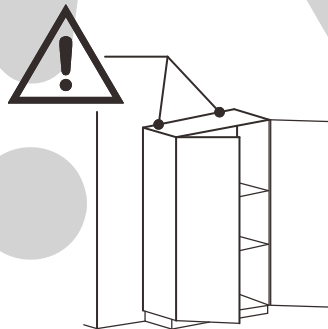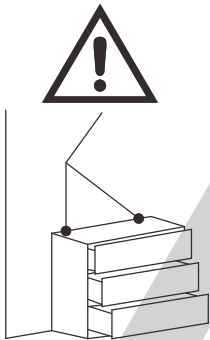

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

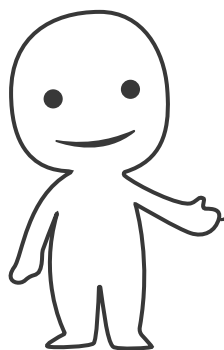


Please prepare the following tools

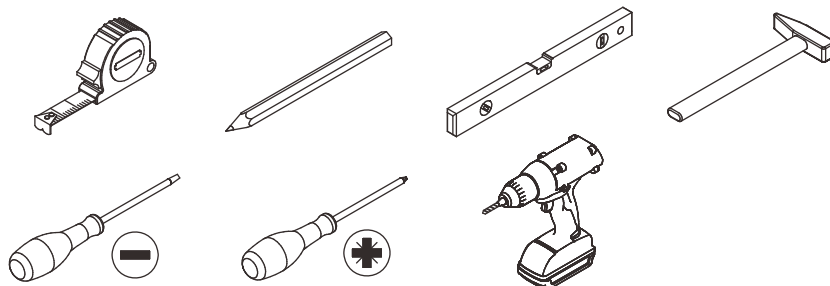 


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 24



B x 50

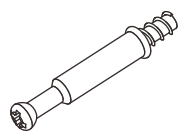 

Ø 6 x 35 mm

C x 50



 
Ø 15 x 10 mm

D x 1



Ø 4 x 12 mm

E x 12

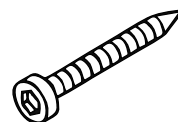

Ø 5 x 40 mm

F x 4



Ø 4 x 16 mm

G x 4

 


H x 24




Ø 3 x 12 mm

J x 1



K x 1

 

Ø 4 x 35 mm

L x 6

 


M x 6




Ø 3 x 14 mm

N x 12




Ø 4 x 30 mm

 P x 1



Q x 1

 

R x 4

 


S x 18




Ø 3.5 x 12 mm


T x 3




CL X 3

 


CR X 3

 


   





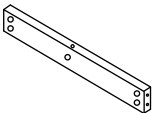
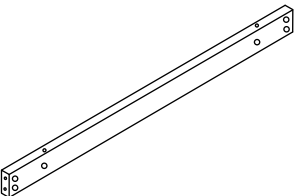
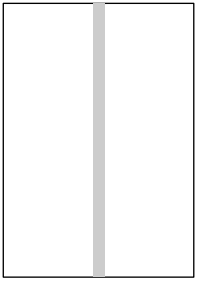
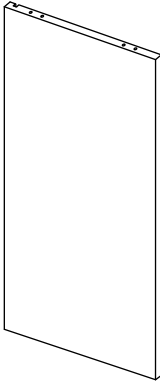
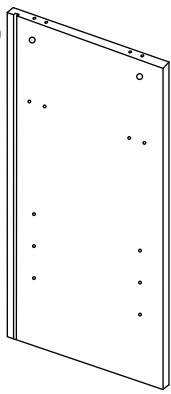
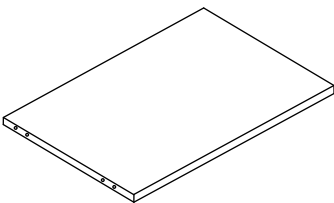
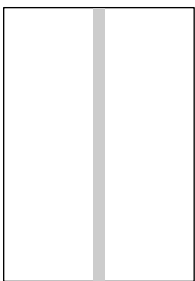
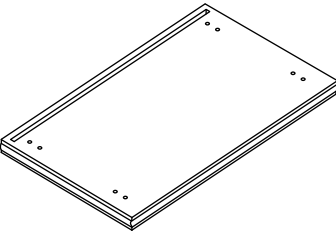
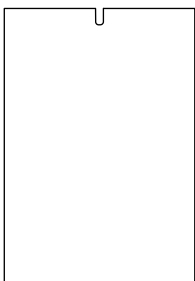
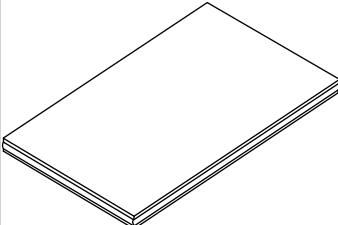
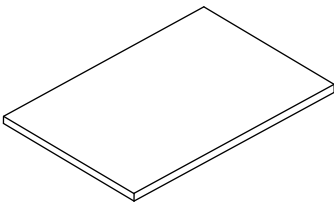
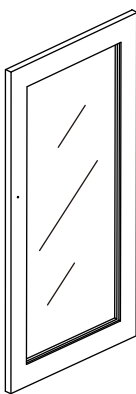
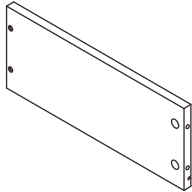
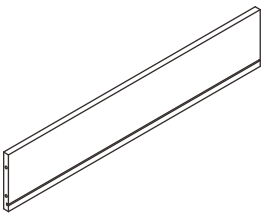
DL X 3






DR X 3



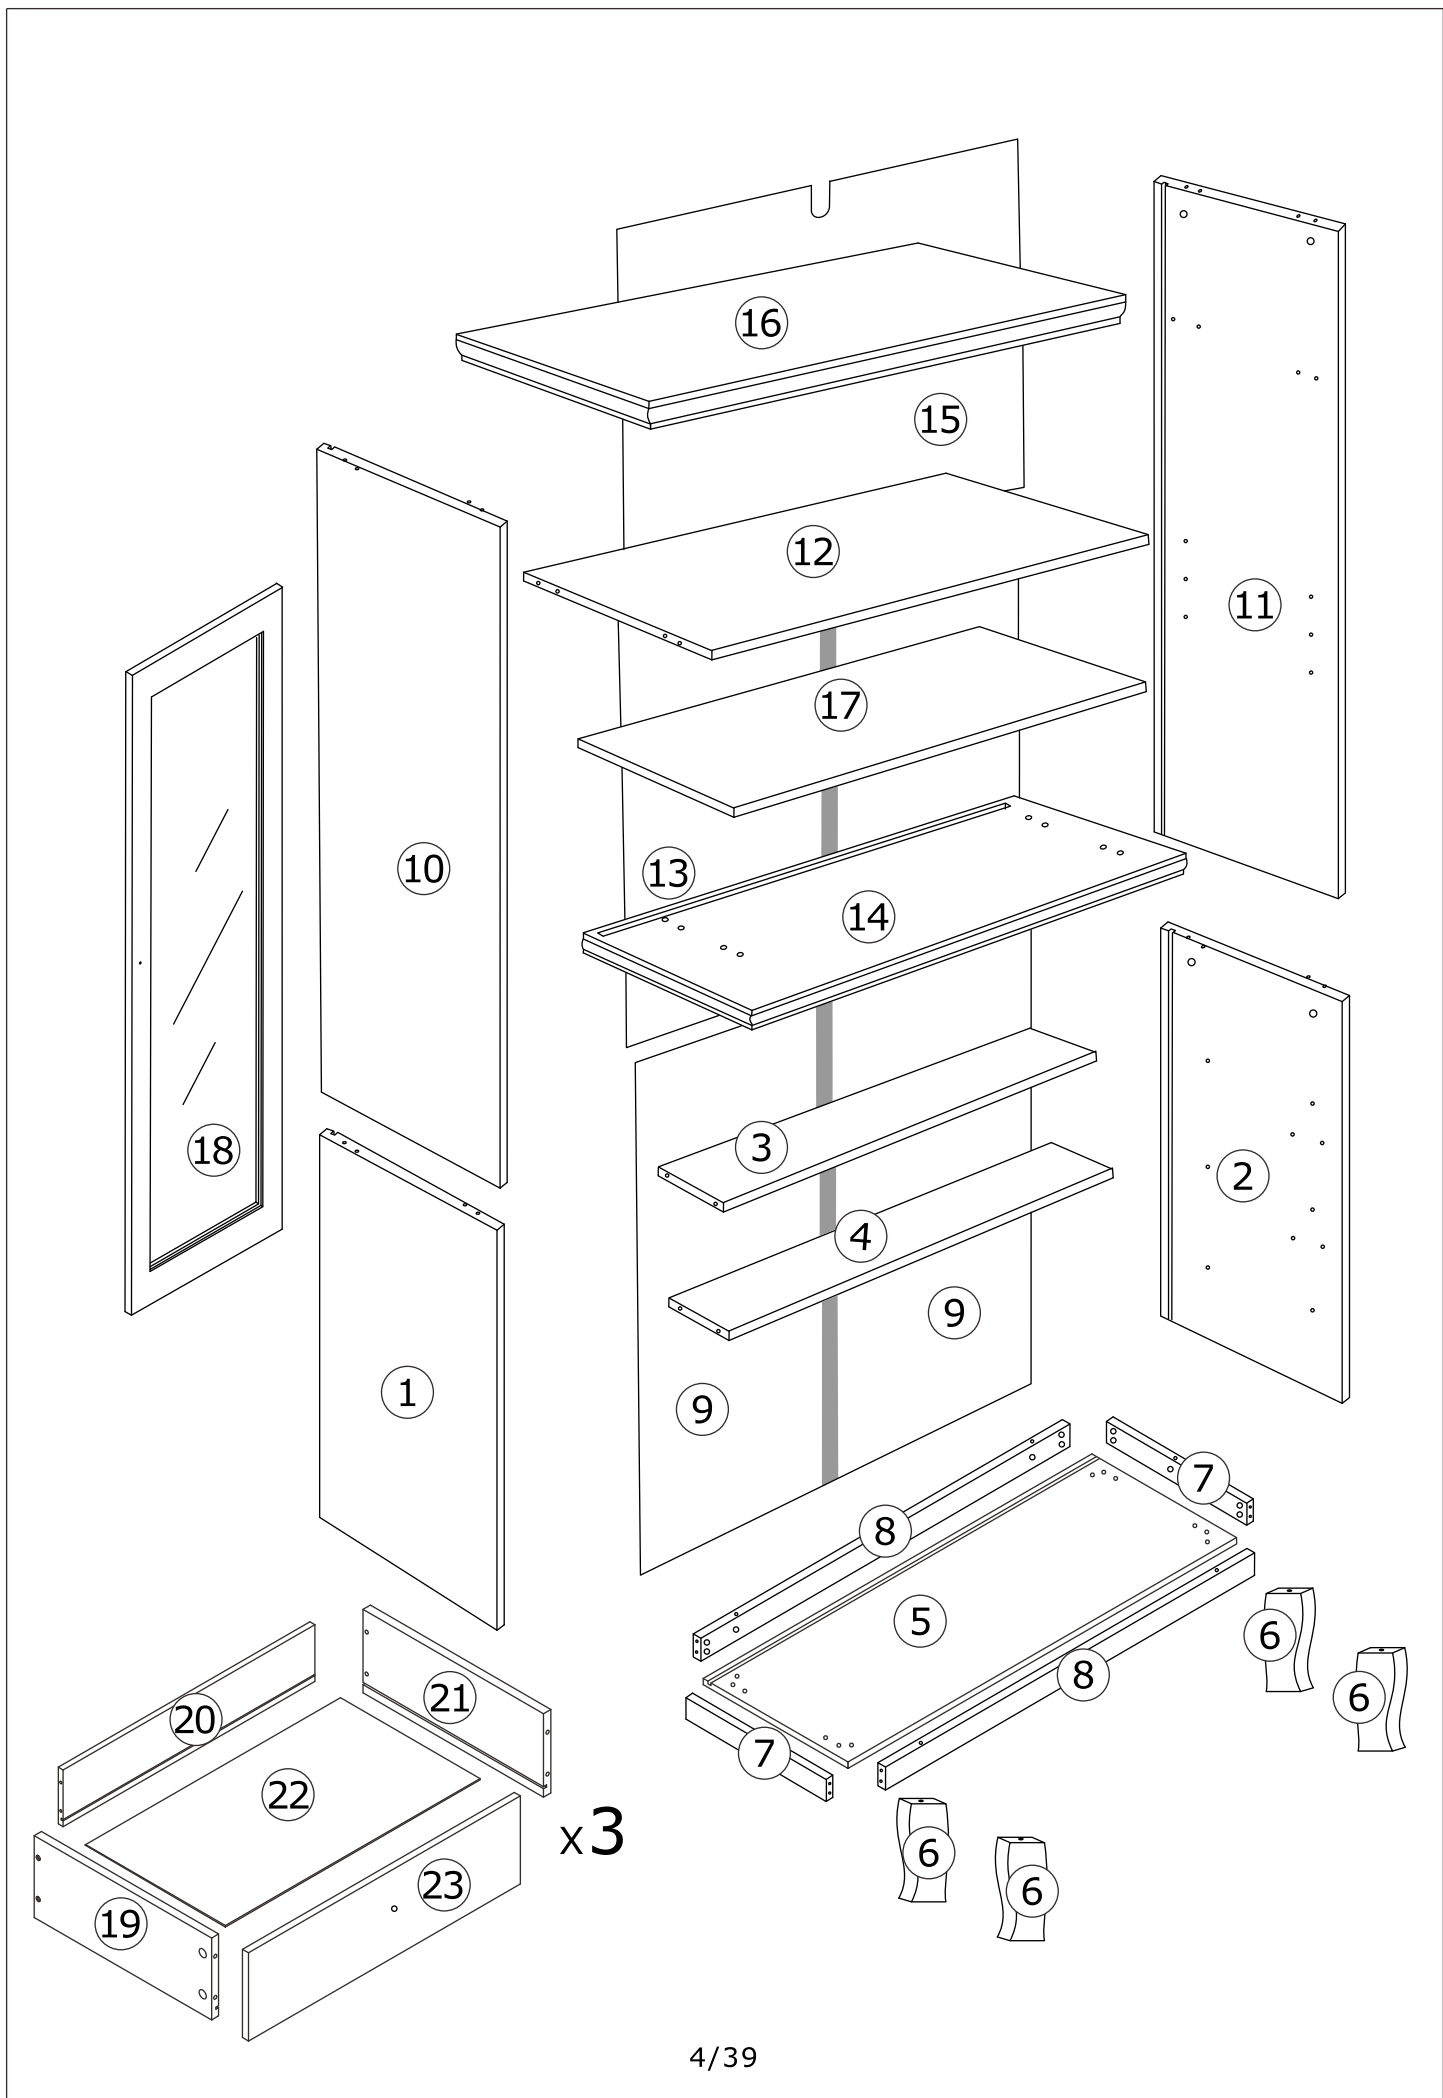
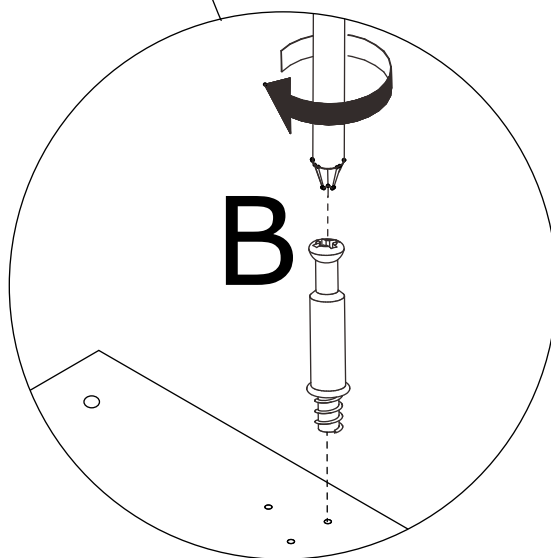 
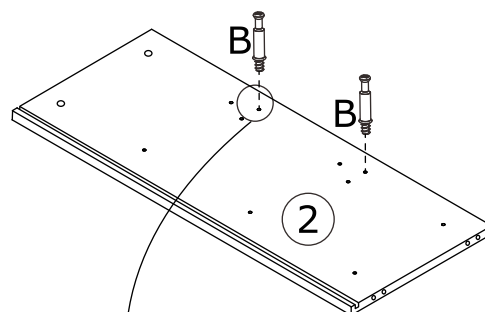 
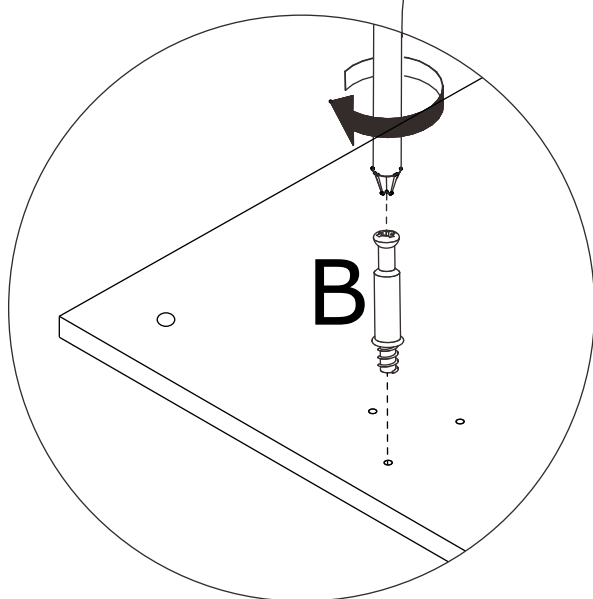 
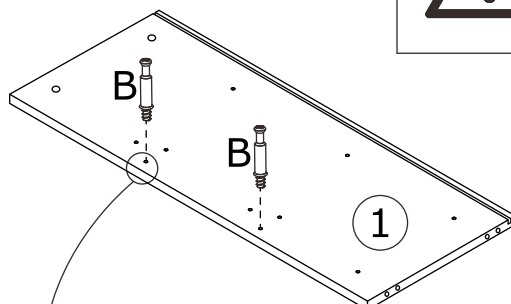 
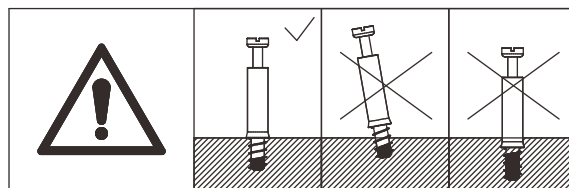 
 

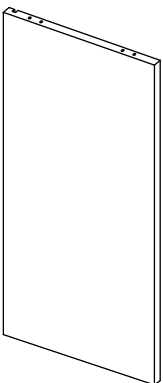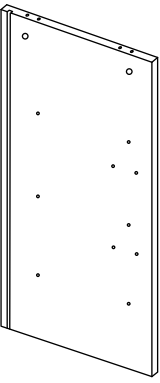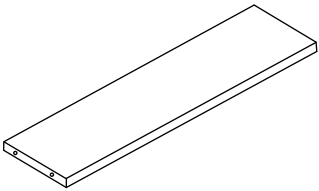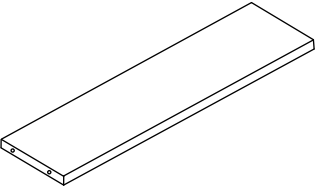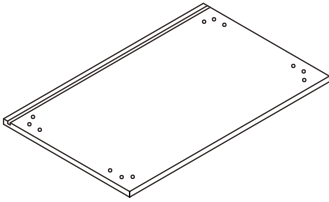
<p>①</p>  <p>1PC</p>	<p>②</p>  <p>1PC</p>	<p>③</p>  <p>1PC</p>	<p>④</p>  <p>1PC</p>
<p>⑤</p>  <p>1PC</p>	<p>⑥</p>  <p>4PC</p>	<p>⑦</p>  <p>2PC</p>	<p>⑧</p>  <p>2PC</p>
<p>⑨</p>  <p>1PC</p>	<p>⑩</p>  <p>1PC</p>	<p>⑪</p>  <p>1PC</p>	<p>⑫</p>  <p>1PC</p>
<p>⑬</p>  <p>1PC</p>	<p>⑭</p>  <p>1PC</p>	<p>⑮</p>  <p>1PC</p>	<p>⑯</p>  <p>1PC</p>
<p>⑰</p>  <p>1PC</p>	<p>⑱</p>  <p>1PC</p>	<p>⑲</p>  <p>3PC</p>	<p>⑳</p>  <p>3PC</p>
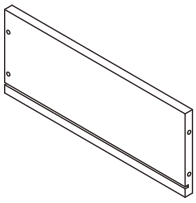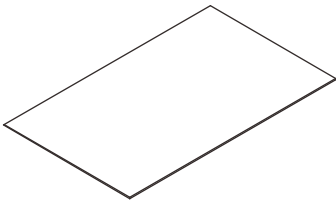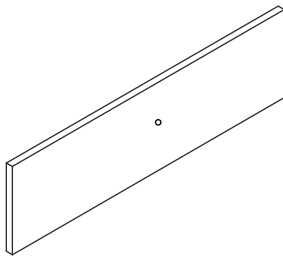
<div>21</div> <div>  </div> <div>3PC</div>	<div>22</div> <div>  </div> <div>3PC</div>	<div>23</div> <div>  </div> <div>3PC</div>	

1

B x 4

 Ø 6x35mm



Insert quickfit screw(B) into corresponding holes in board 1,2 with a screwdriver as shown.

 
2

H x12




Ø 3x12mm

CL x 3



CR x 3

 


H









Ø 3 x 12 mm

 M




Ø 3 x 14mm

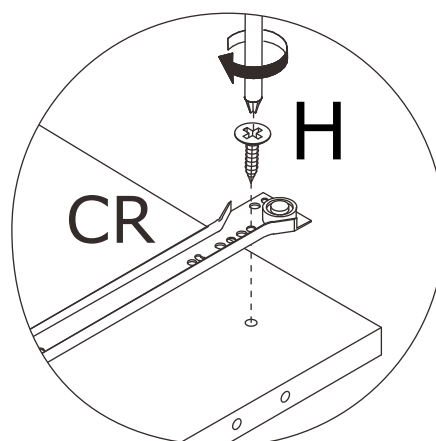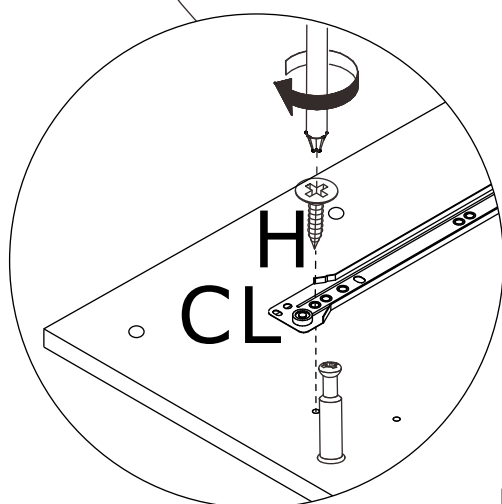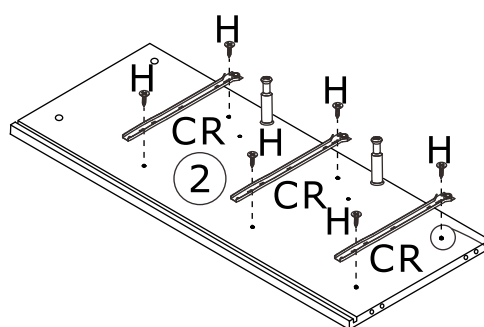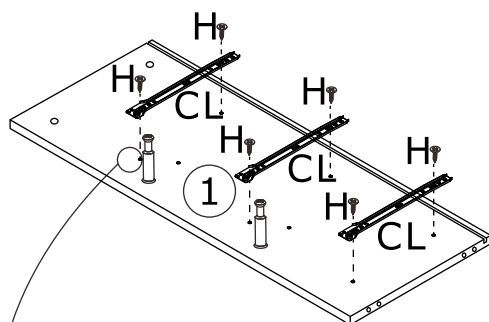      

Fix slide rail(CL) and (CR) to board 1 and 2 with screw(H) as shown. Please pay attention to the holes where the accessories are inserted.

3

 
A x 4





C x 4





 
Ø 15x10mm

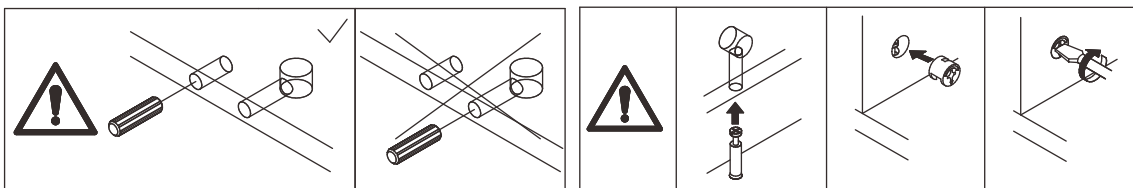

  
Attach board 1,2 to board 3,4 with wooden dowel(A)
and turn cam locks(C) clockwise
to tighten as shown.

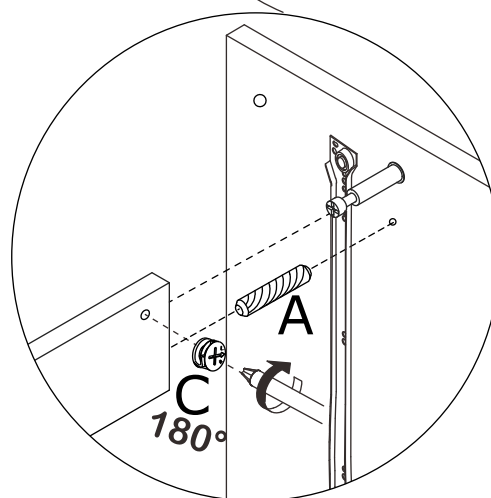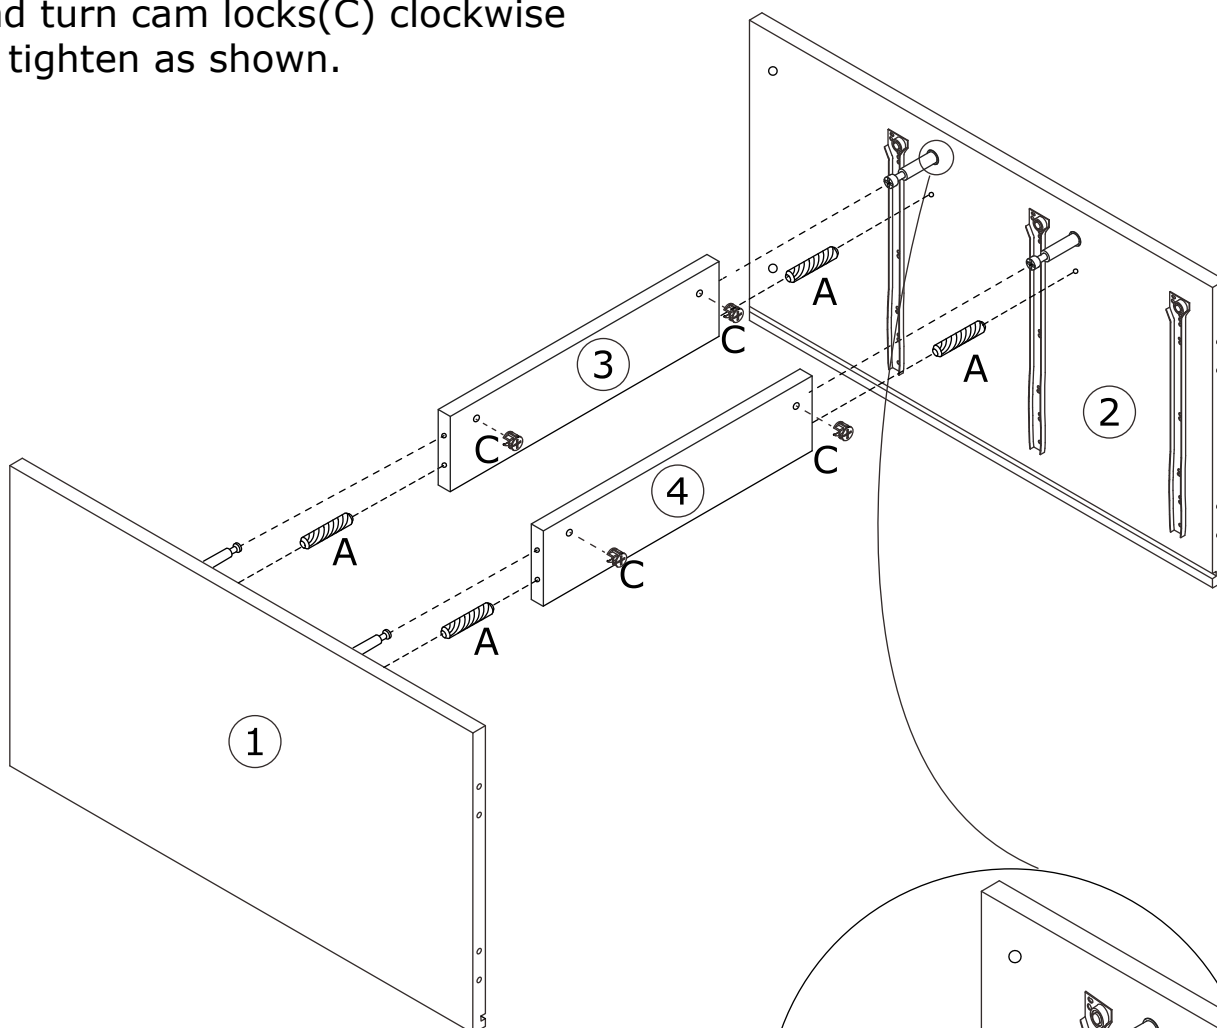

4

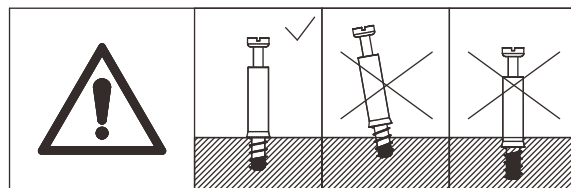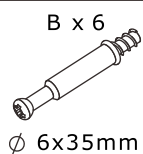   


 Insert quickfit screw(B) into corresponding holes in board 5 with a screwdriver as shown.

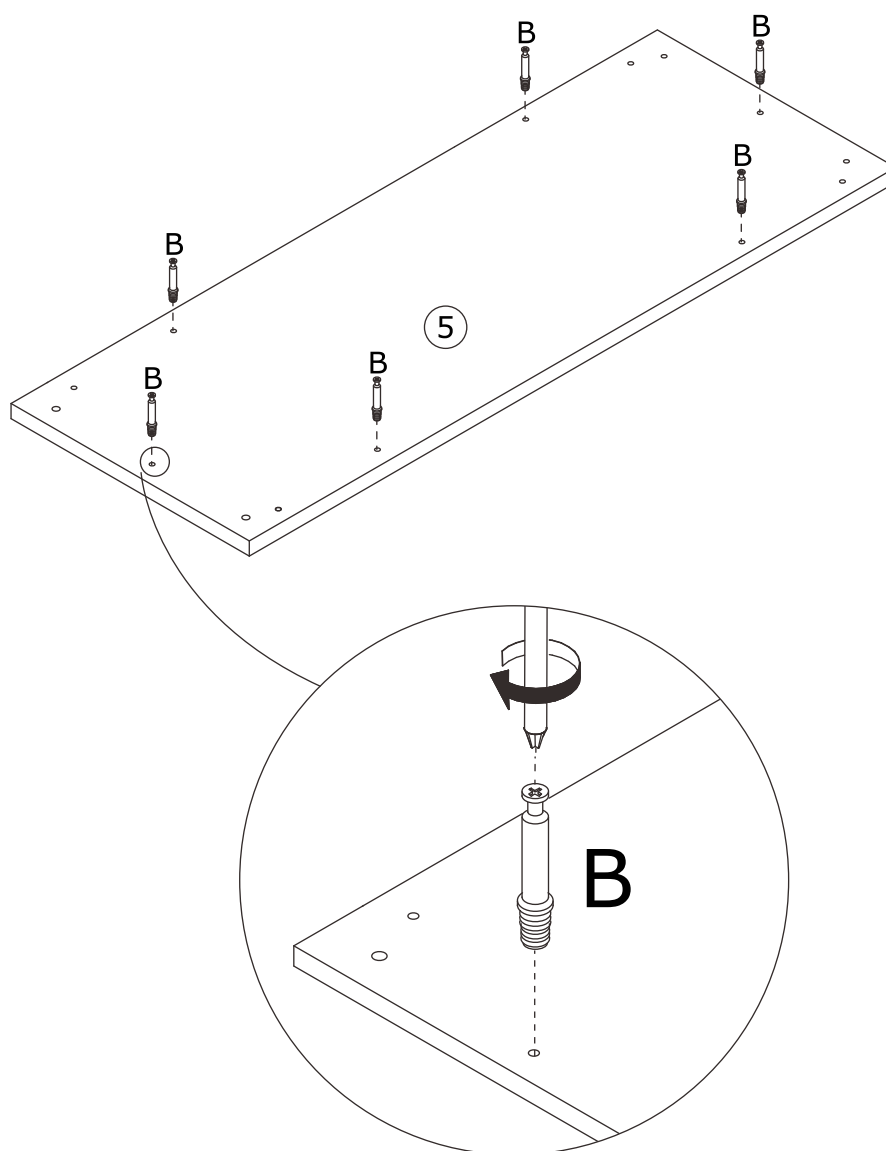

5

 A x 4





E x 4





Ø 5 x 40 mm

 
 
J x 1

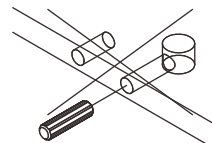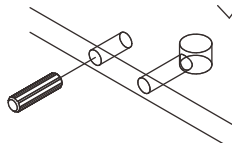

  
Attach board 5 to 1,2 with wooden dowel(A)
and then fix with screw(E) as shown.

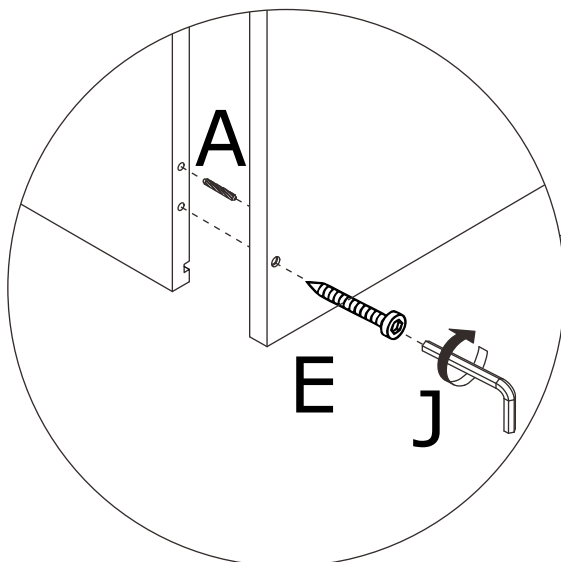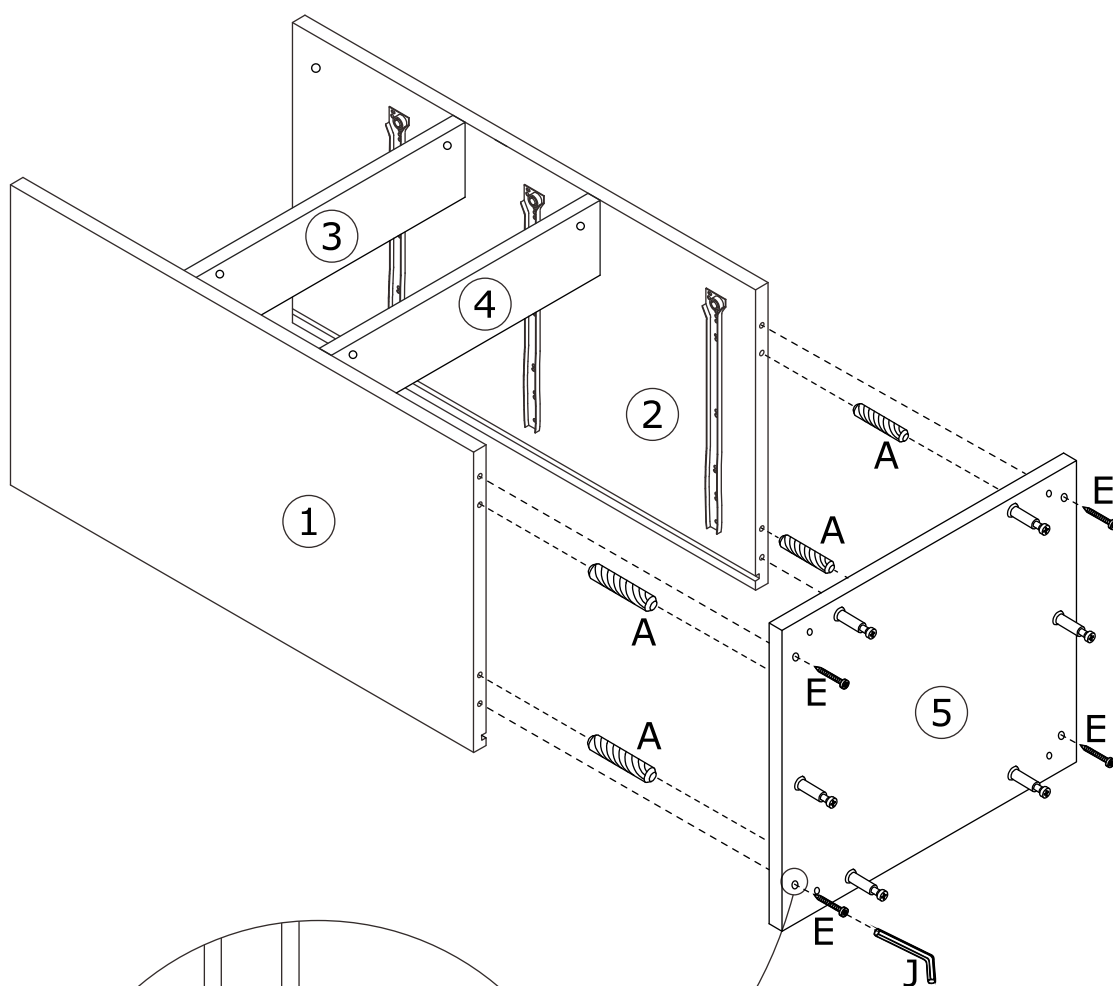

6

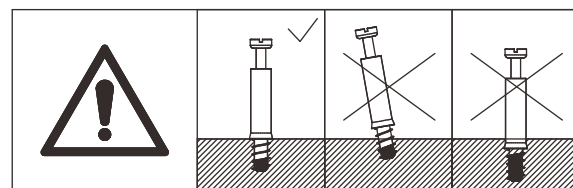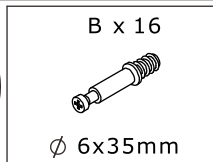  

 Insert quickfit screw(B) into corresponding holes in legs 6 as shown.


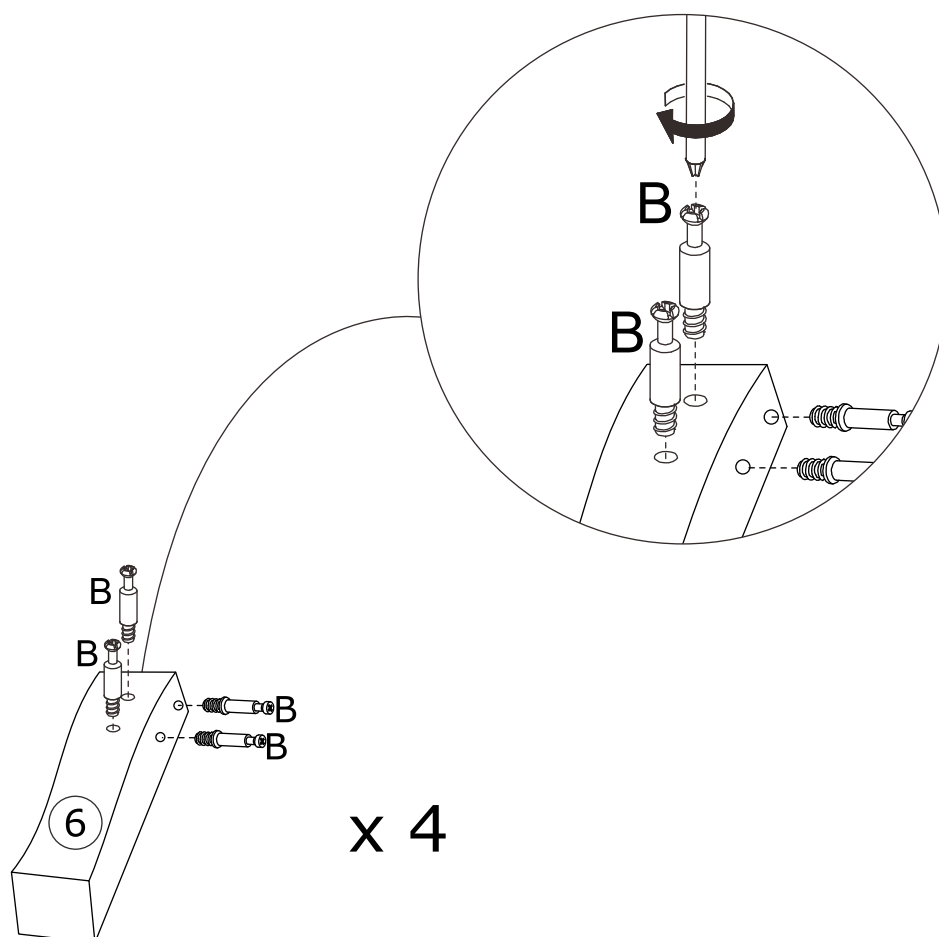


7


C x 8



  Ø 15x10mm

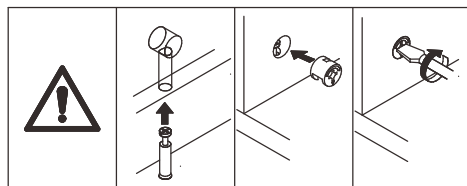

 Connect legs 6 with board 7 and turn cam locks(C) clockwise to tighten as shown.


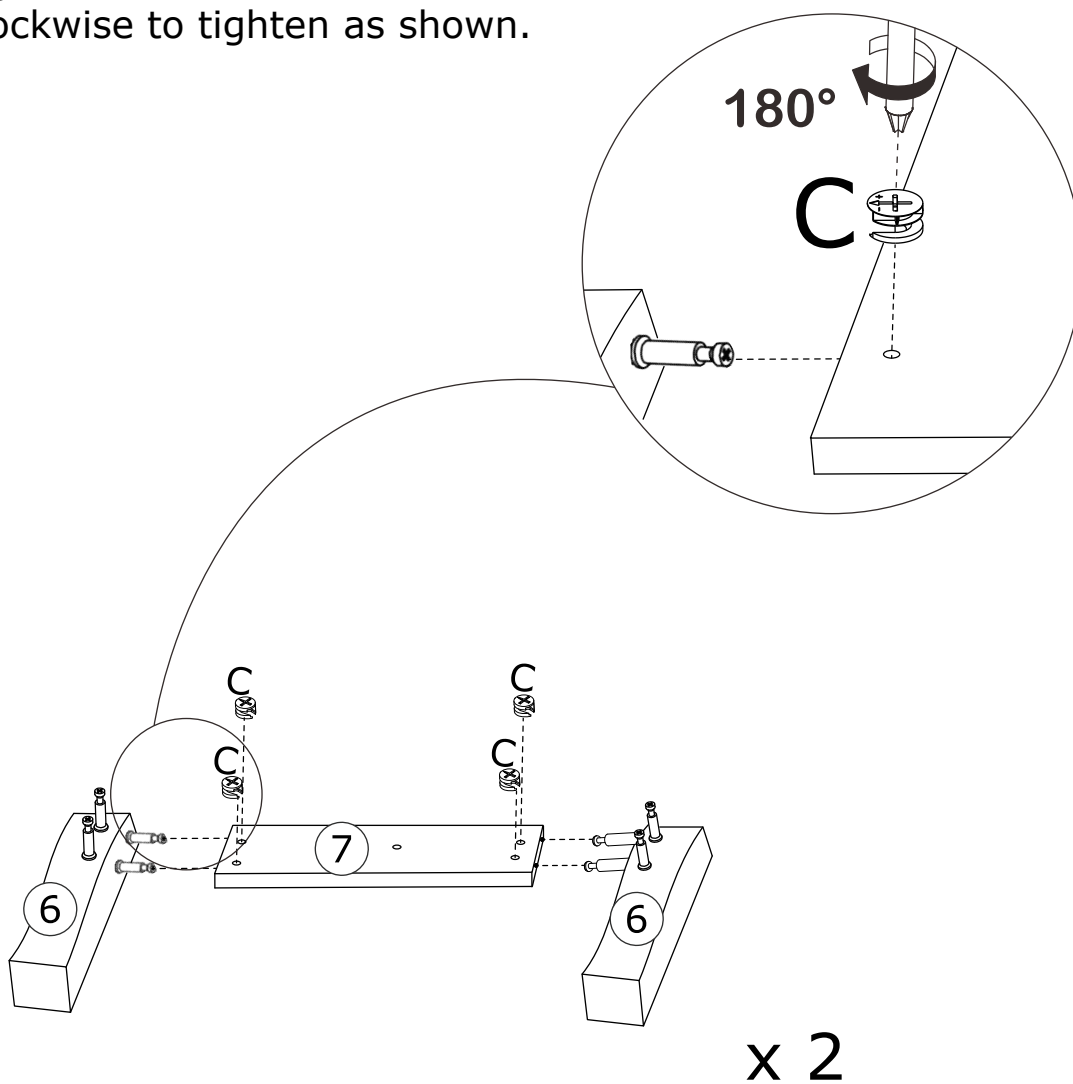


8


C x 8



  Ø 15x10mm

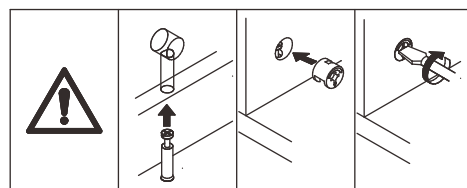

 Connect assembled leg part with board 8 and turn cam locks(C) clockwise to tighten as shown.



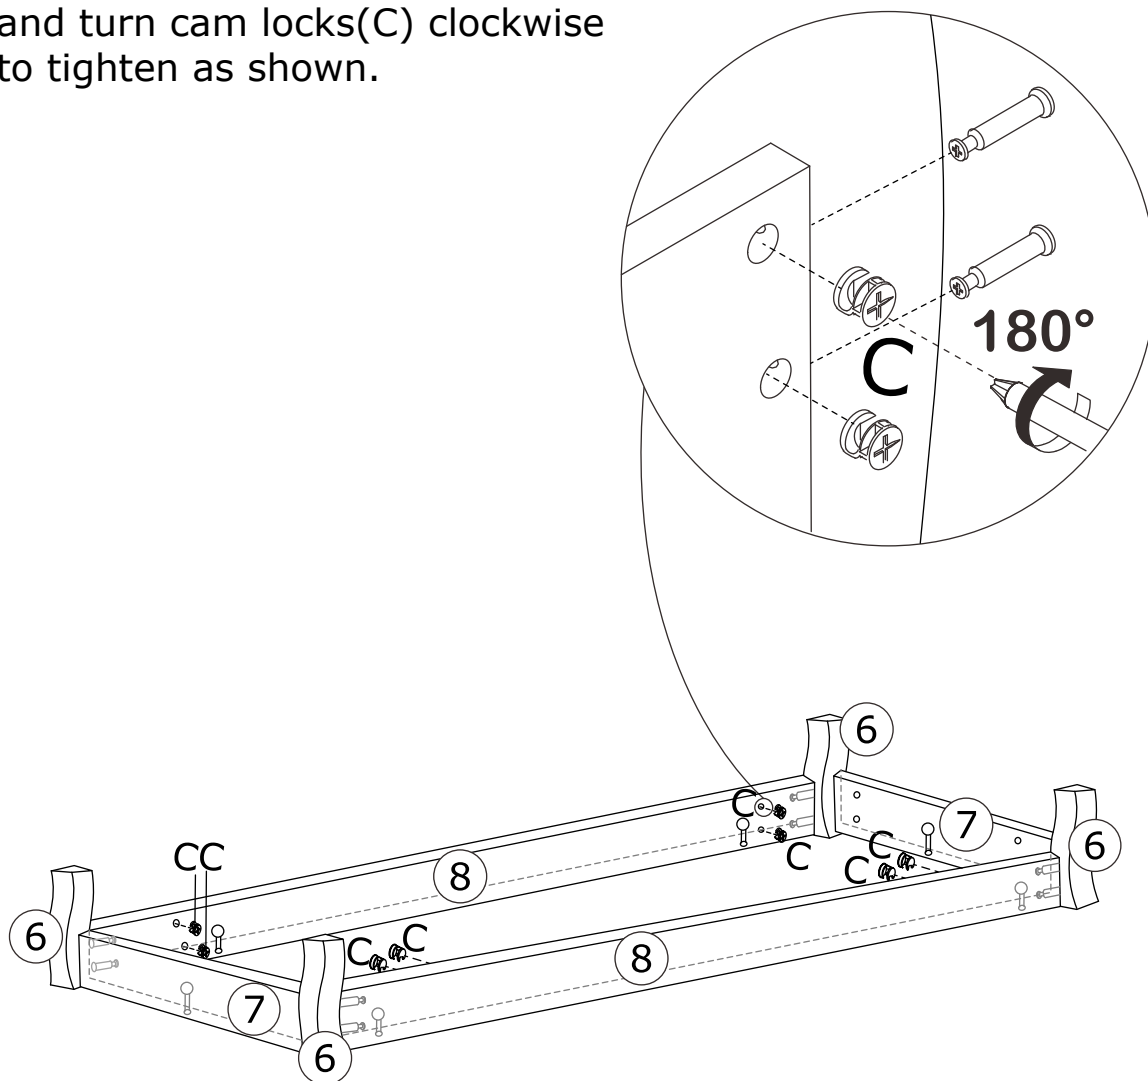


9

C x 6






   Ø 15 x 10 mm

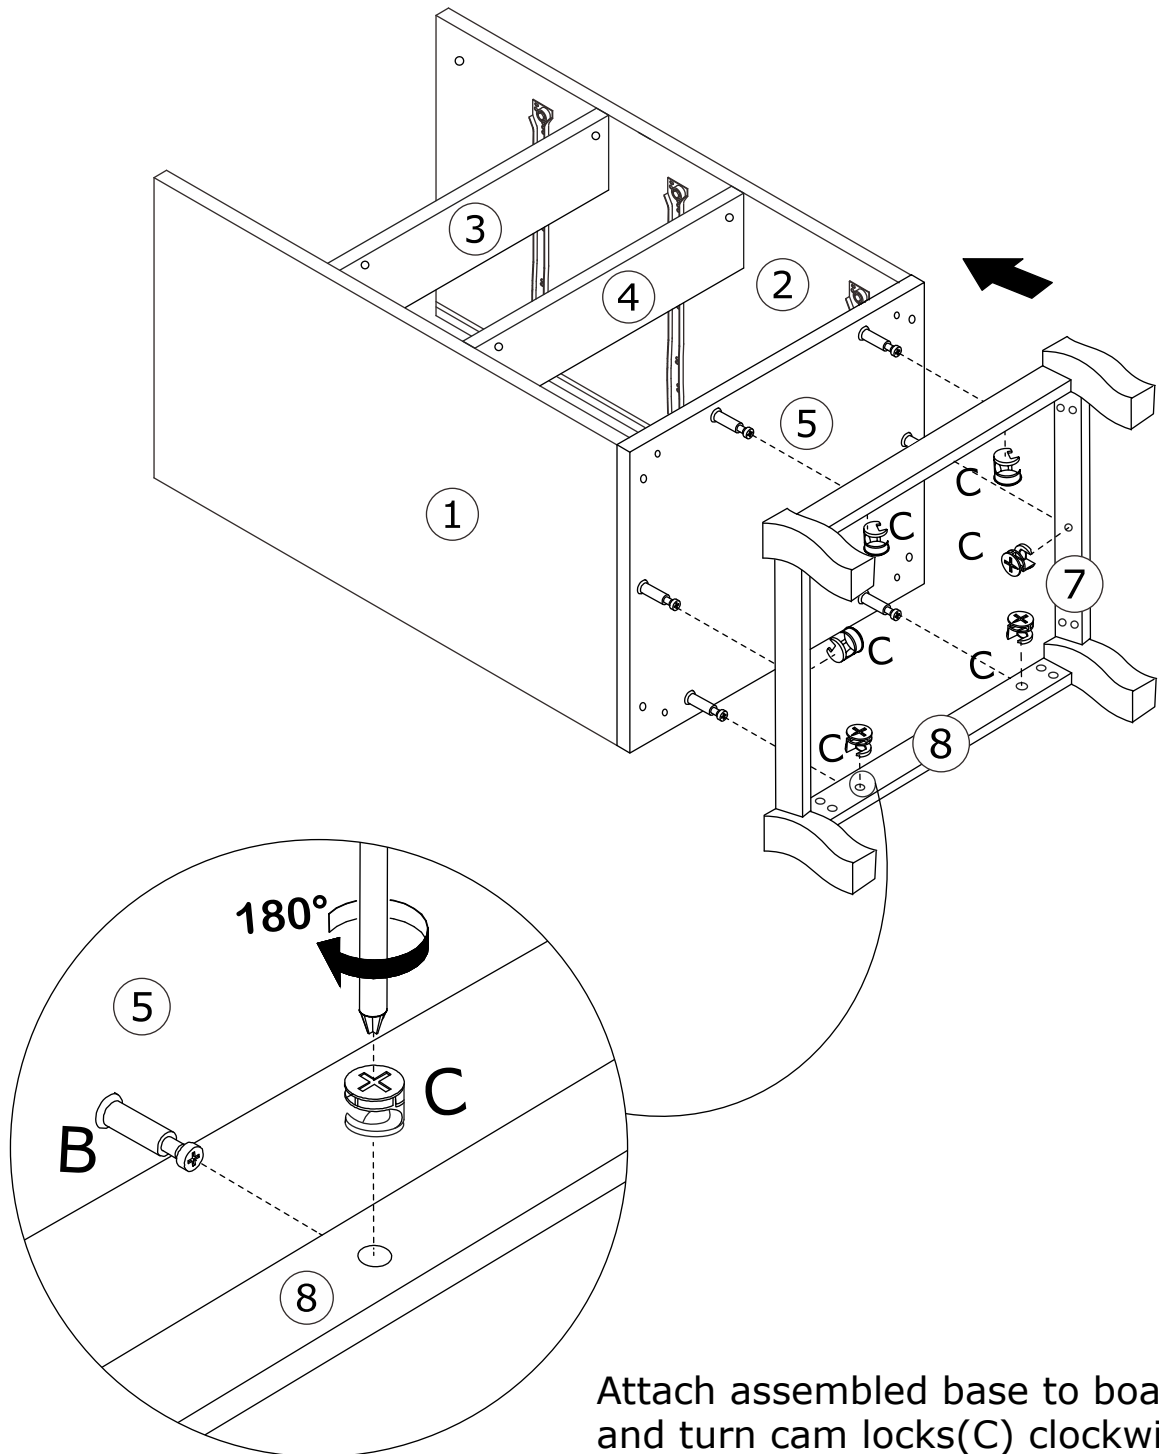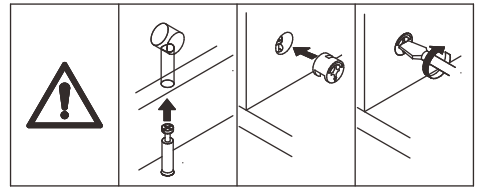



Attach assembled base to board 5 and turn cam locks(C) clockwise to tighten as shown.

   10

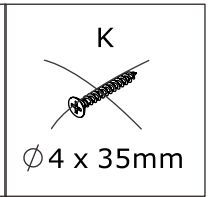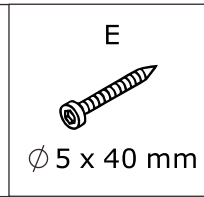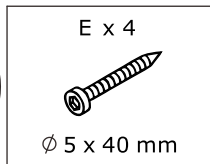


  Fix board 5 with base using screw(E) as shown.


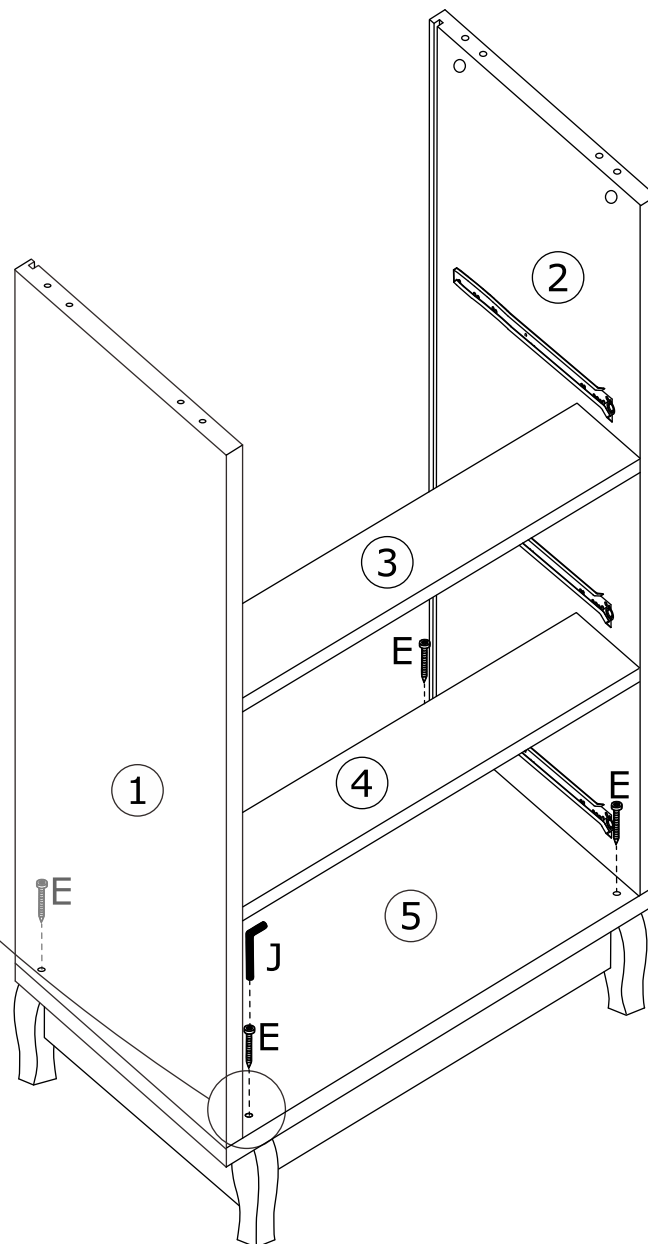
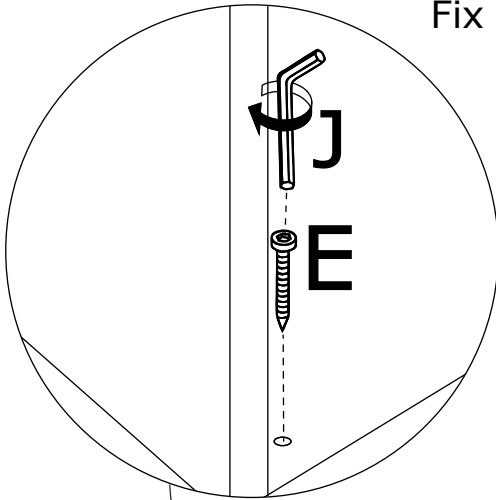


11

 
Slide back board 9 into available slots as shown.

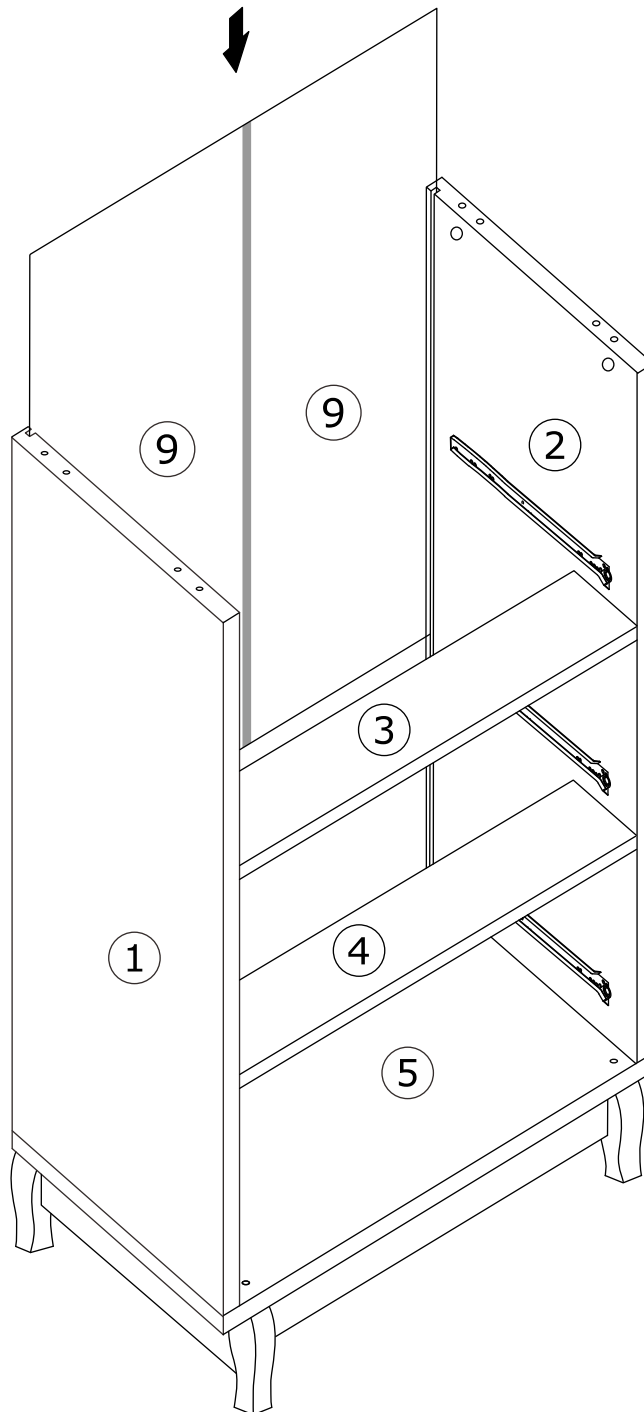


12

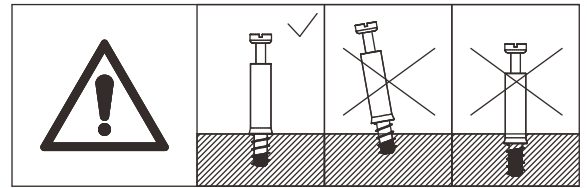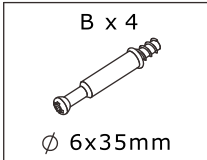   

 
Insert quickfit screw(B) into corresponding holes in board 10,11 as shown.

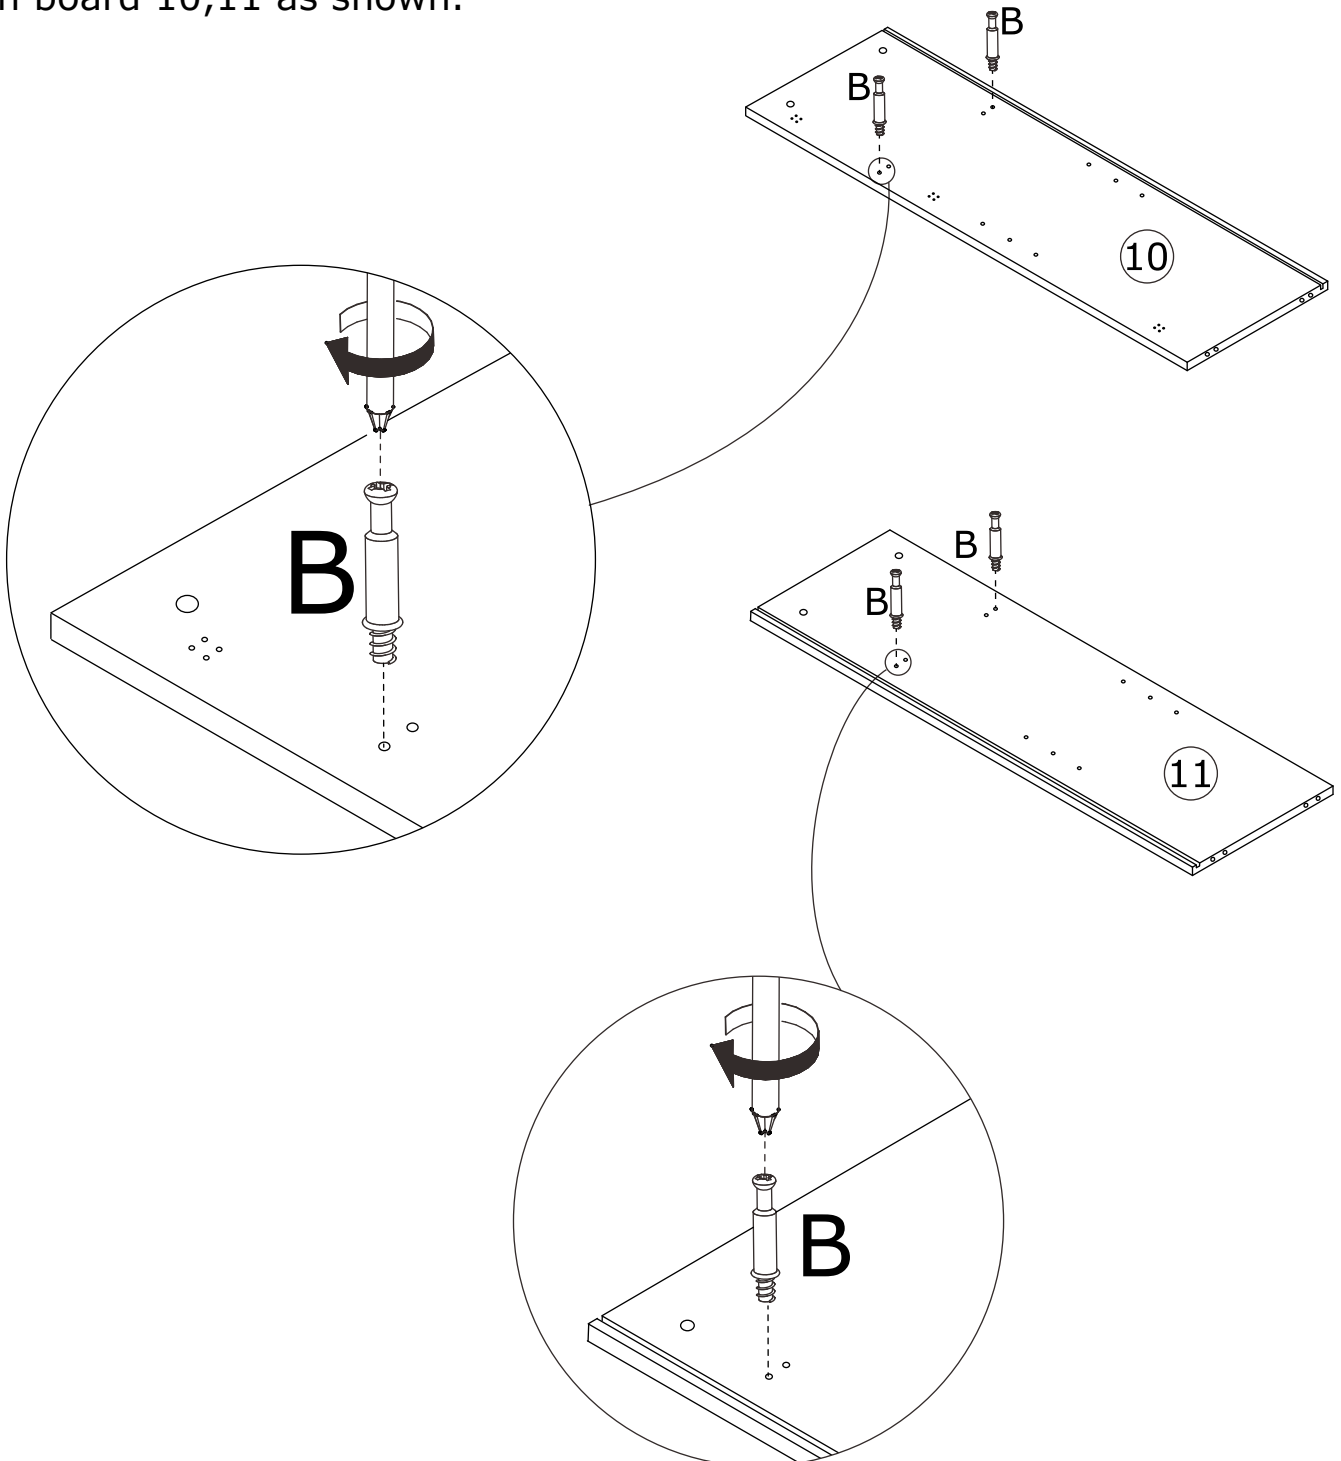

13

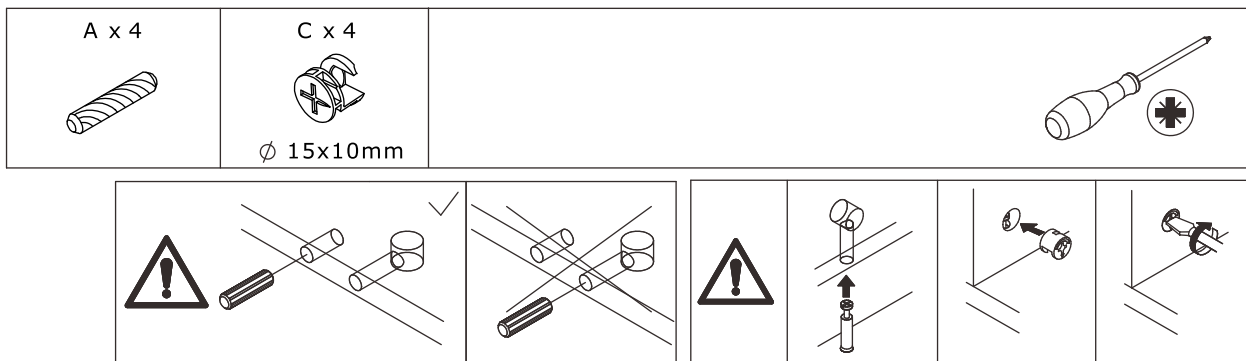 


 Attach board 10,11 to board 12 with wooden dowel(A) and turn cam locks(C) clockwise to tighten as shown.



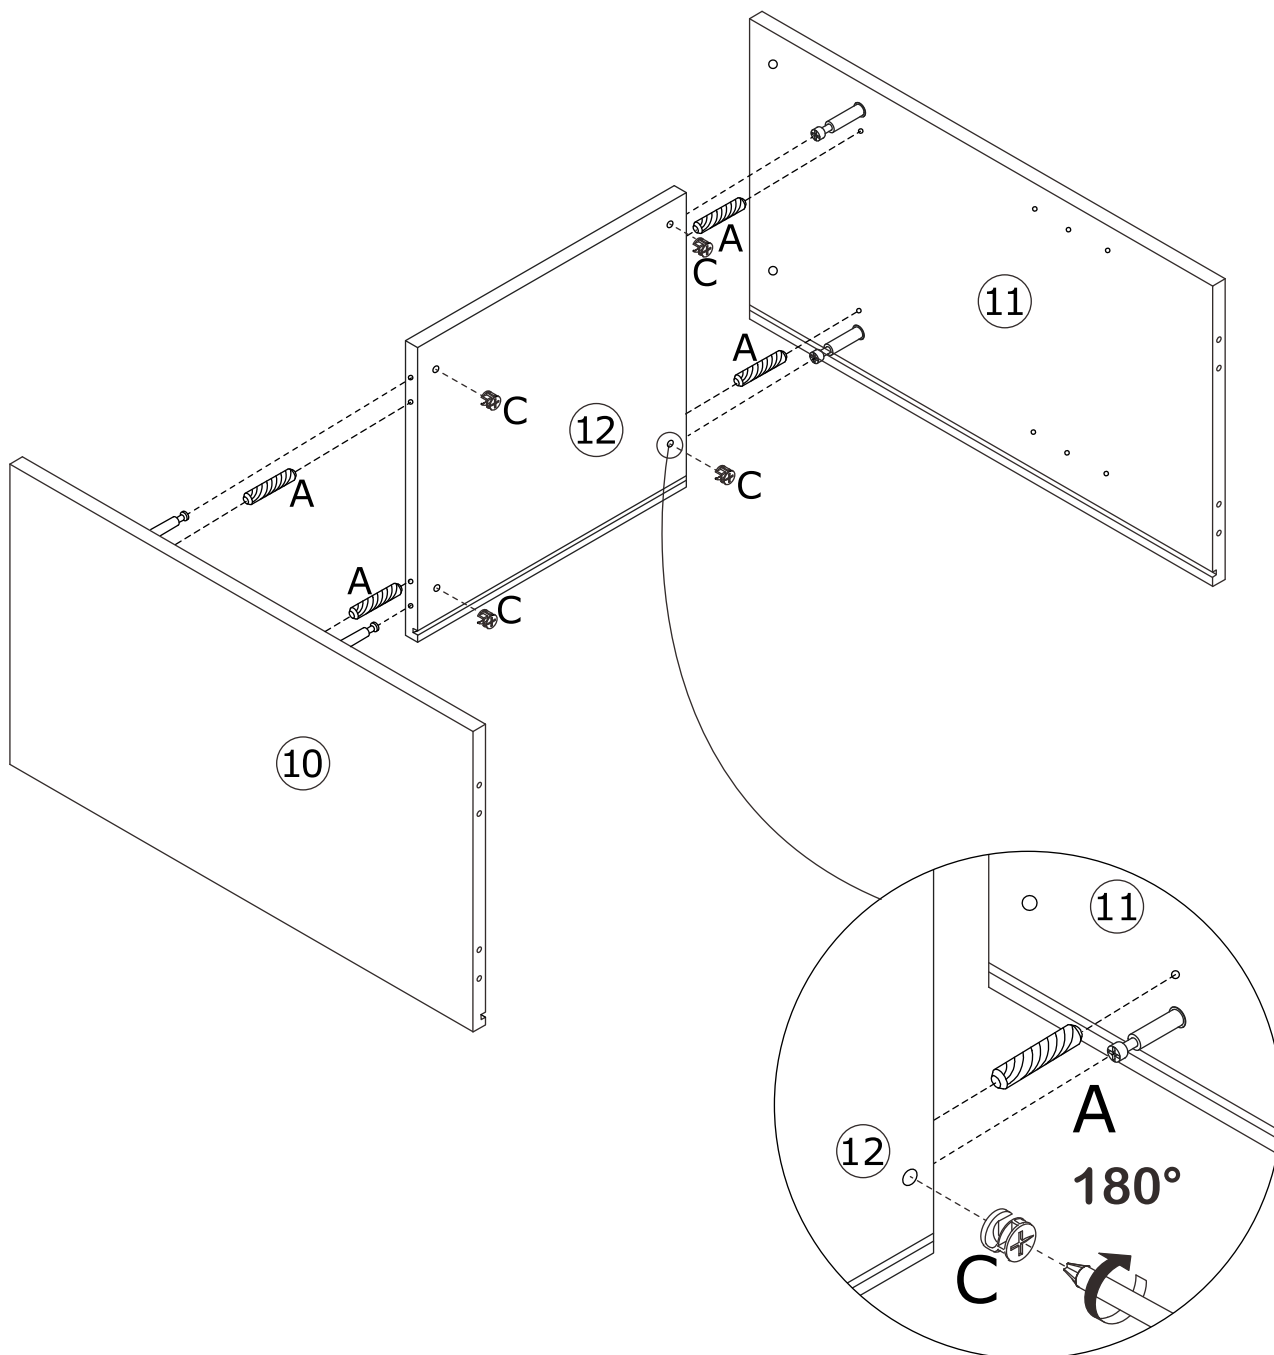


14

 
Slide board 13 into available slots as shown.

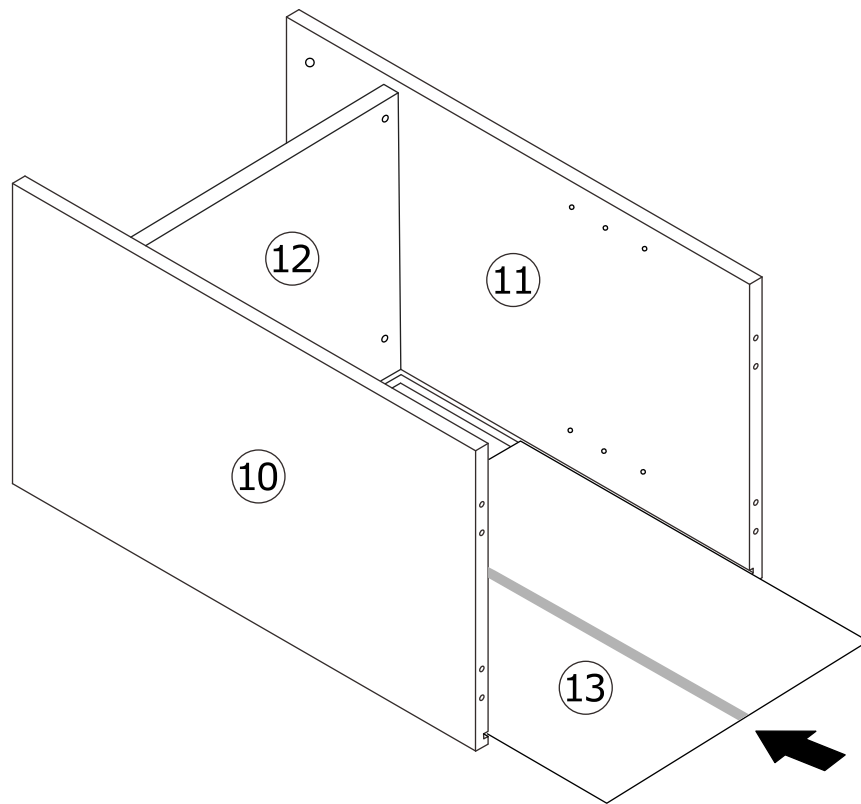

15

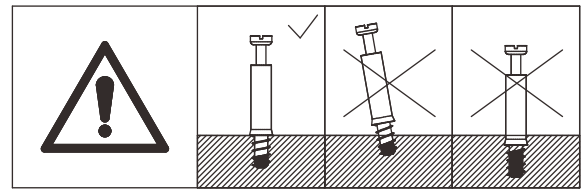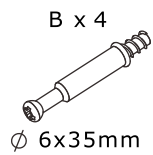   


 Insert quickfit screw(B) into board 14 with a screwdriver as shown.

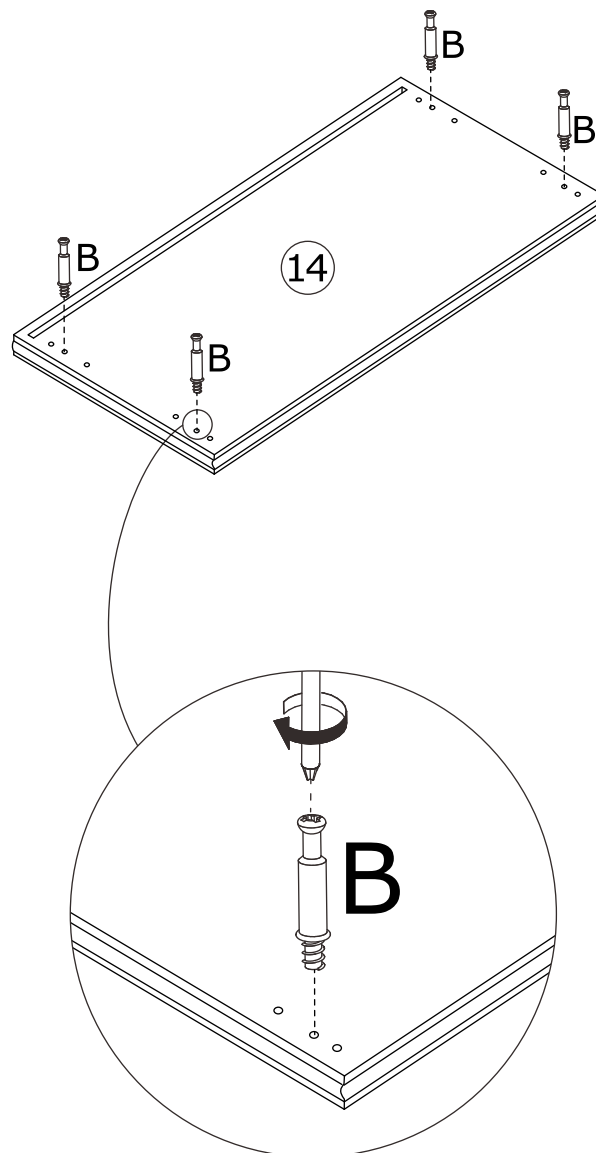

16



 
A x 4



E x 4



   
Ø 5 x 40 mm

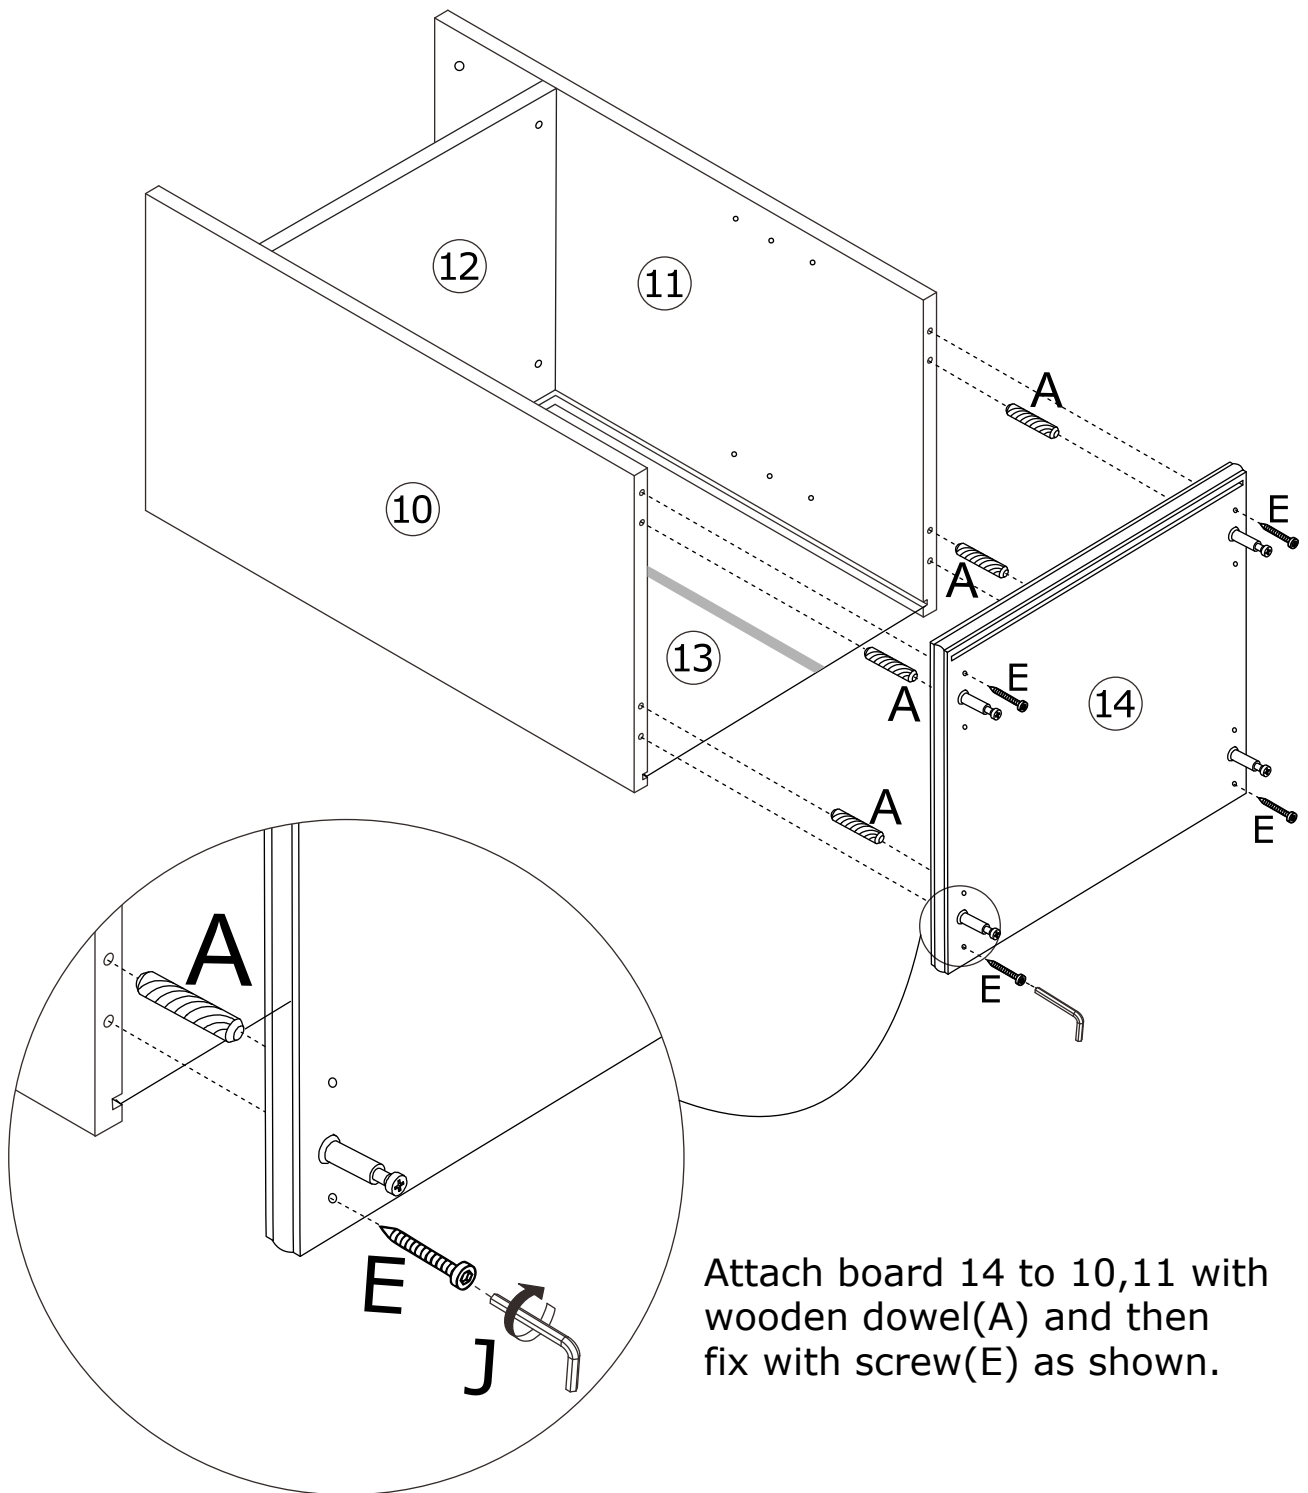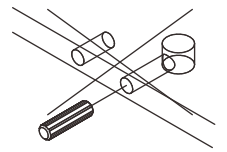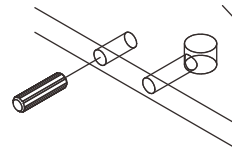

Attach board 14 to 10,11 with wooden dowel(A) and then fix with screw(E) as shown.

17





 
A x 4



C x 4




     Ø 15 x 10 mm

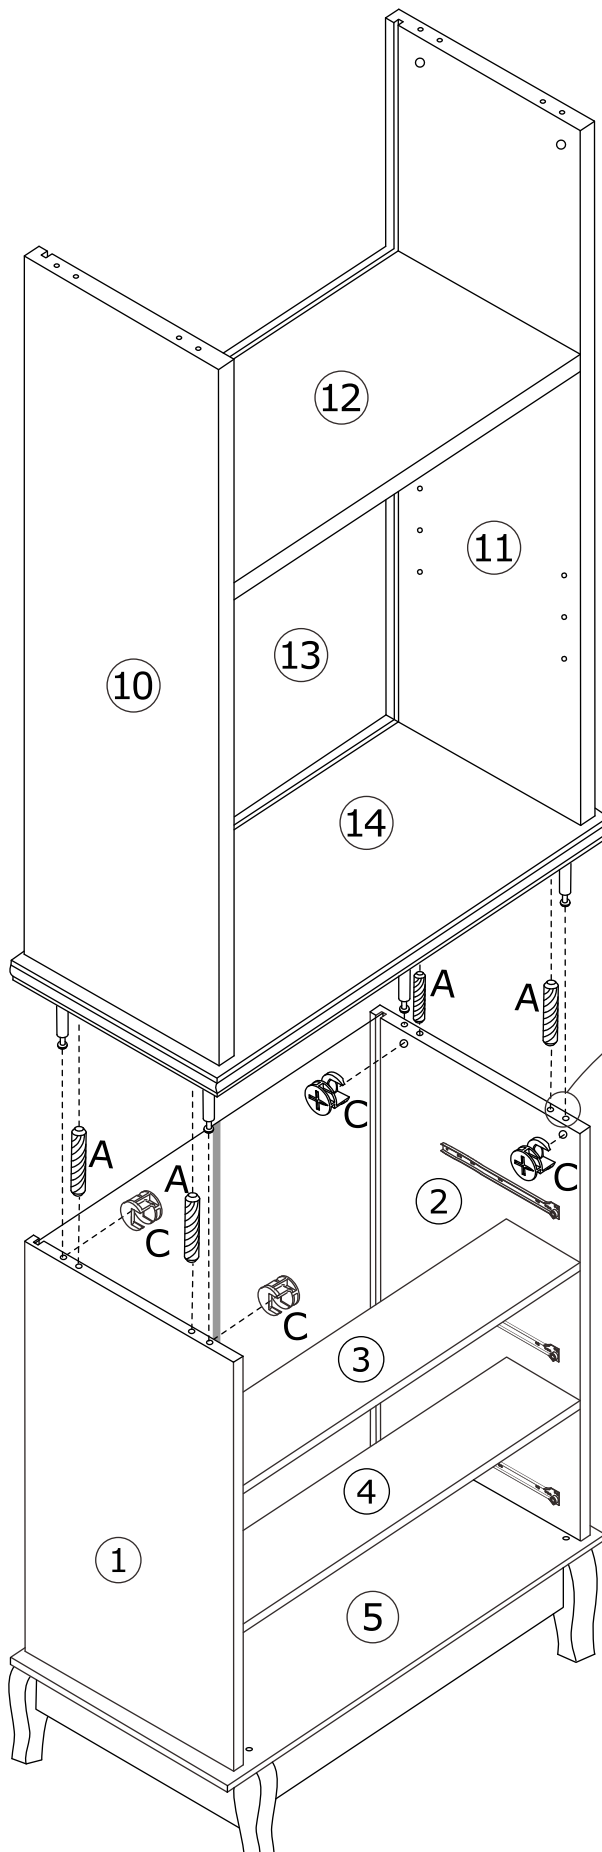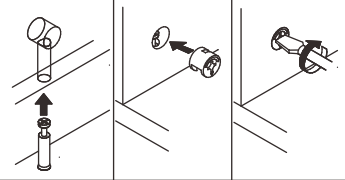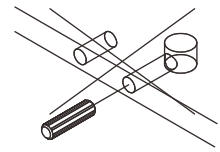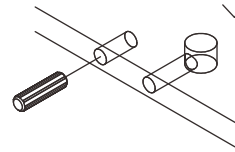


Connect two components with wooden dowel(A) and turn cam locks(C) clockwise to tighten as shown.

 Recommend more than 2 people!

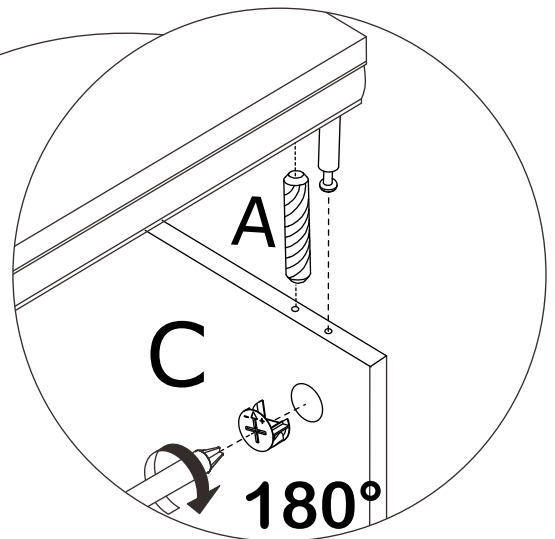

18

 Slide board 15 into available slots as shown.

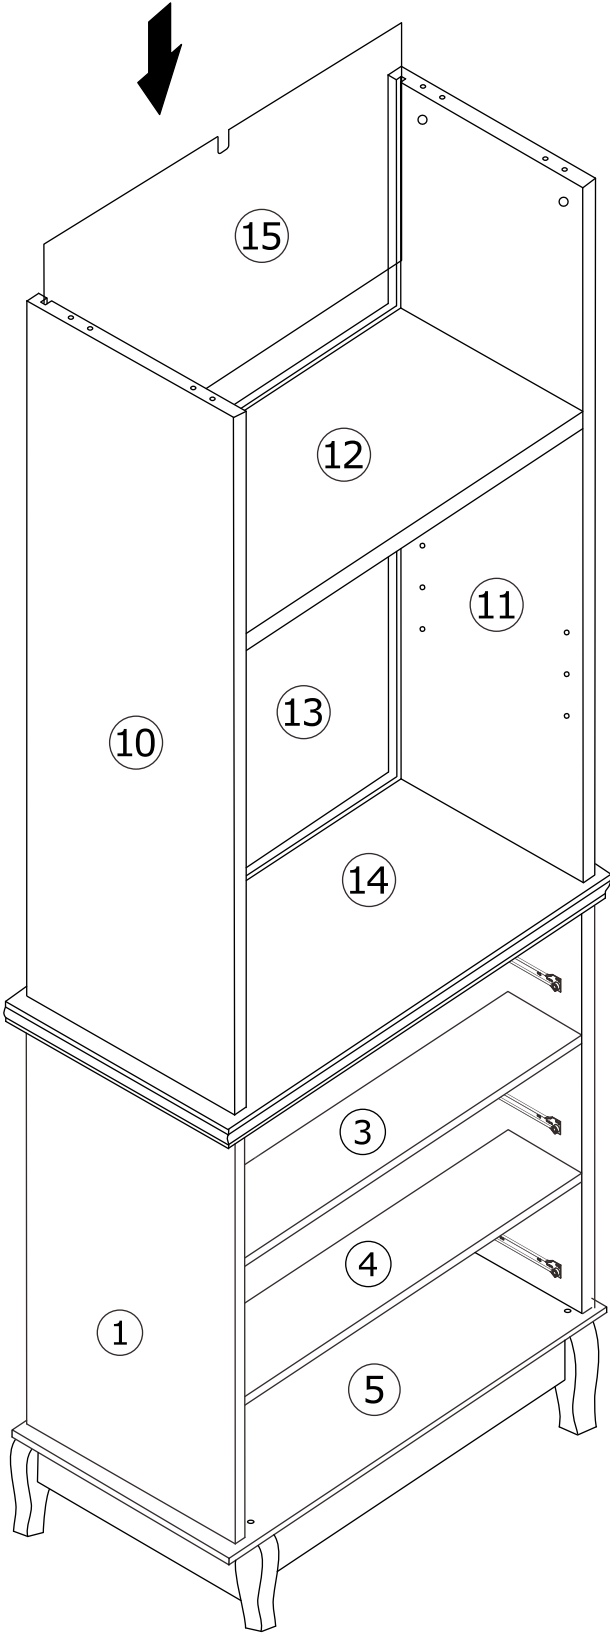


19







B x 4



 D x 1

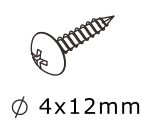

Q x 1

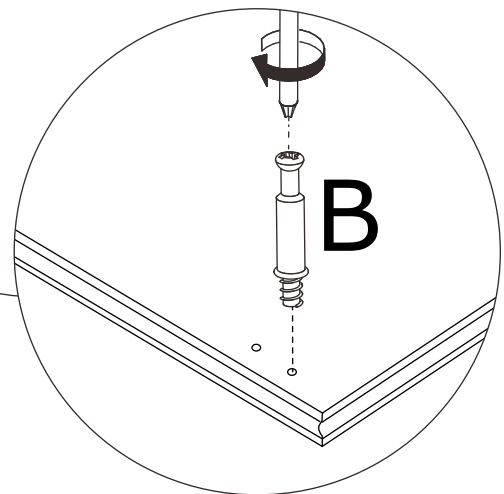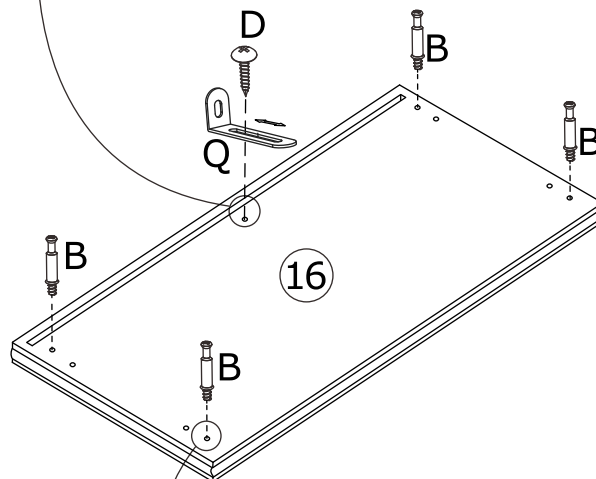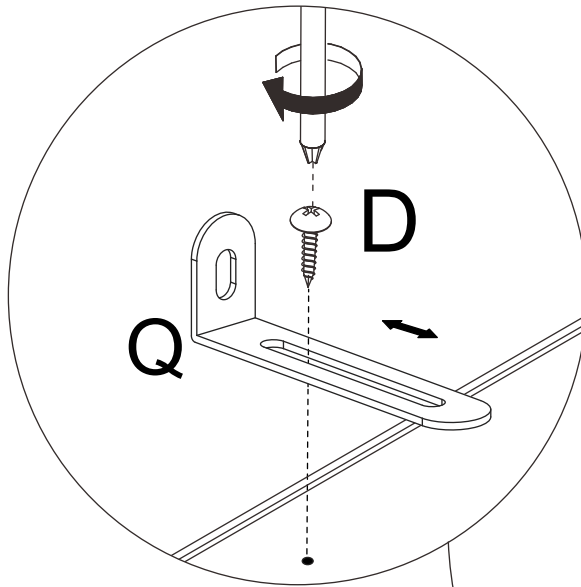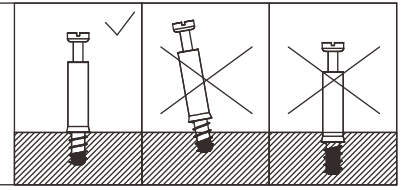      


Insert quickfit screw(B) into board 16 with a screwdriver as shown.

Fix part(Q) to board 16 with screw(D) as shown.

20




 
A x 4



C x 4



    Ø 15 x 10 mm

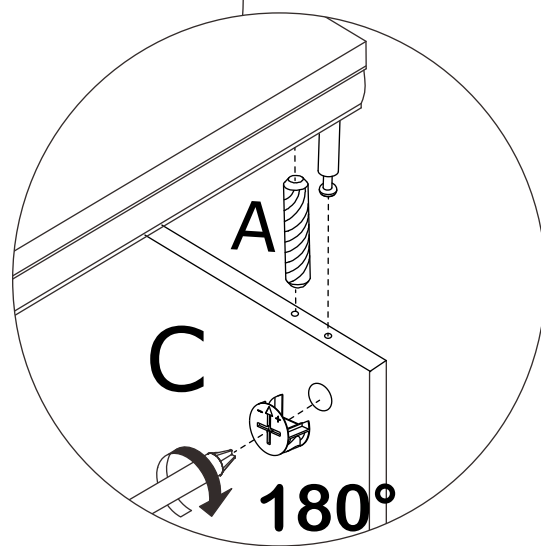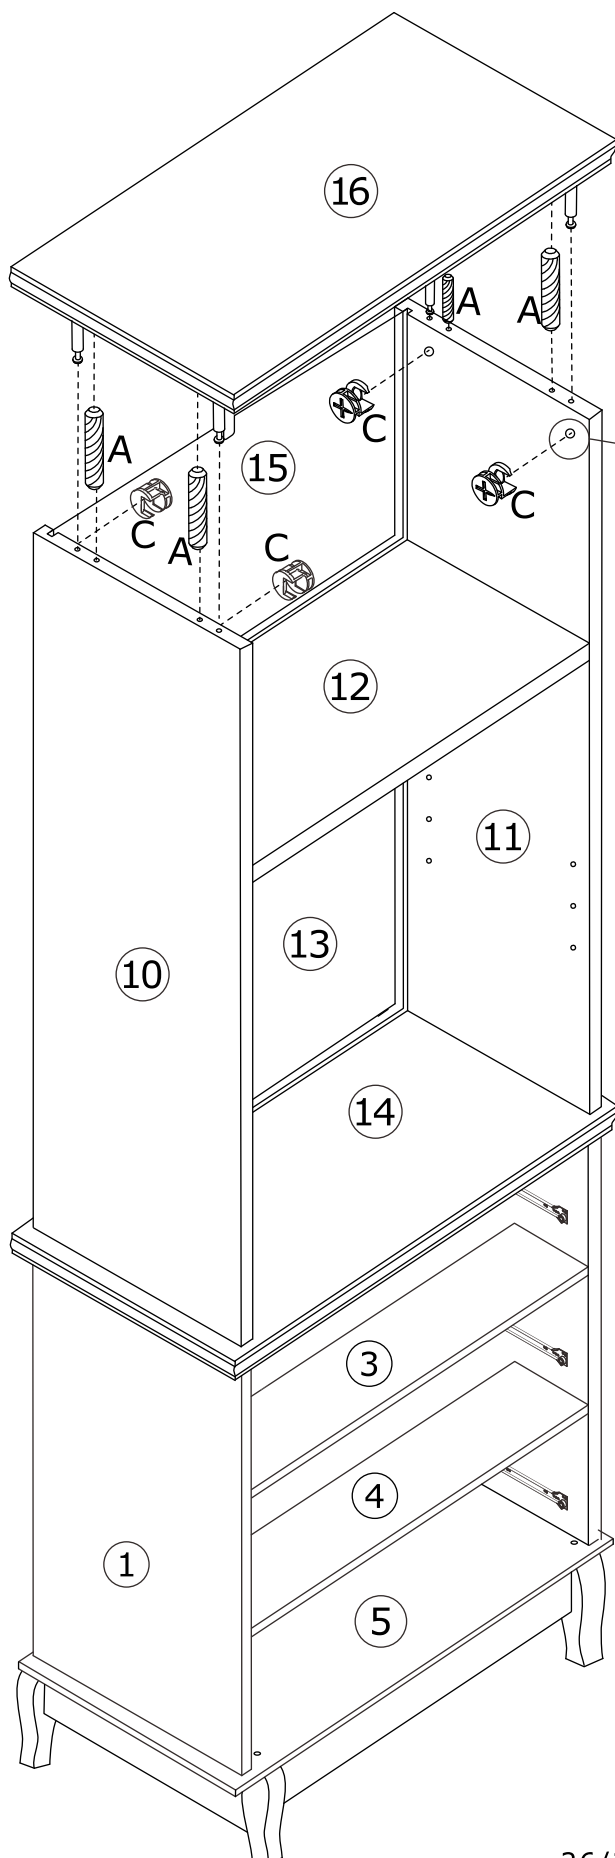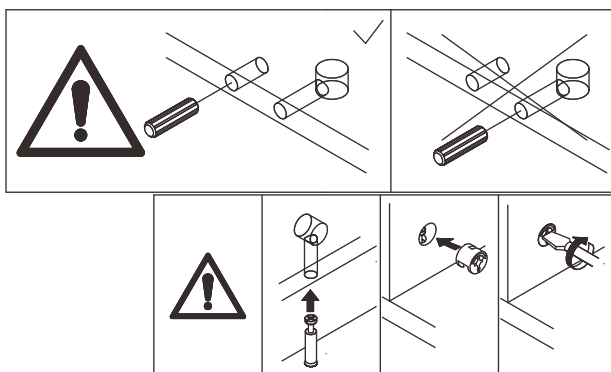


Cover board 16 to board 10,11 with wooden dowel(A) and turn cam locks(C) clockwise to tighten as shown.

21

R x 4



 Insert part(R) into board 10,11 and put shelf 17 in.

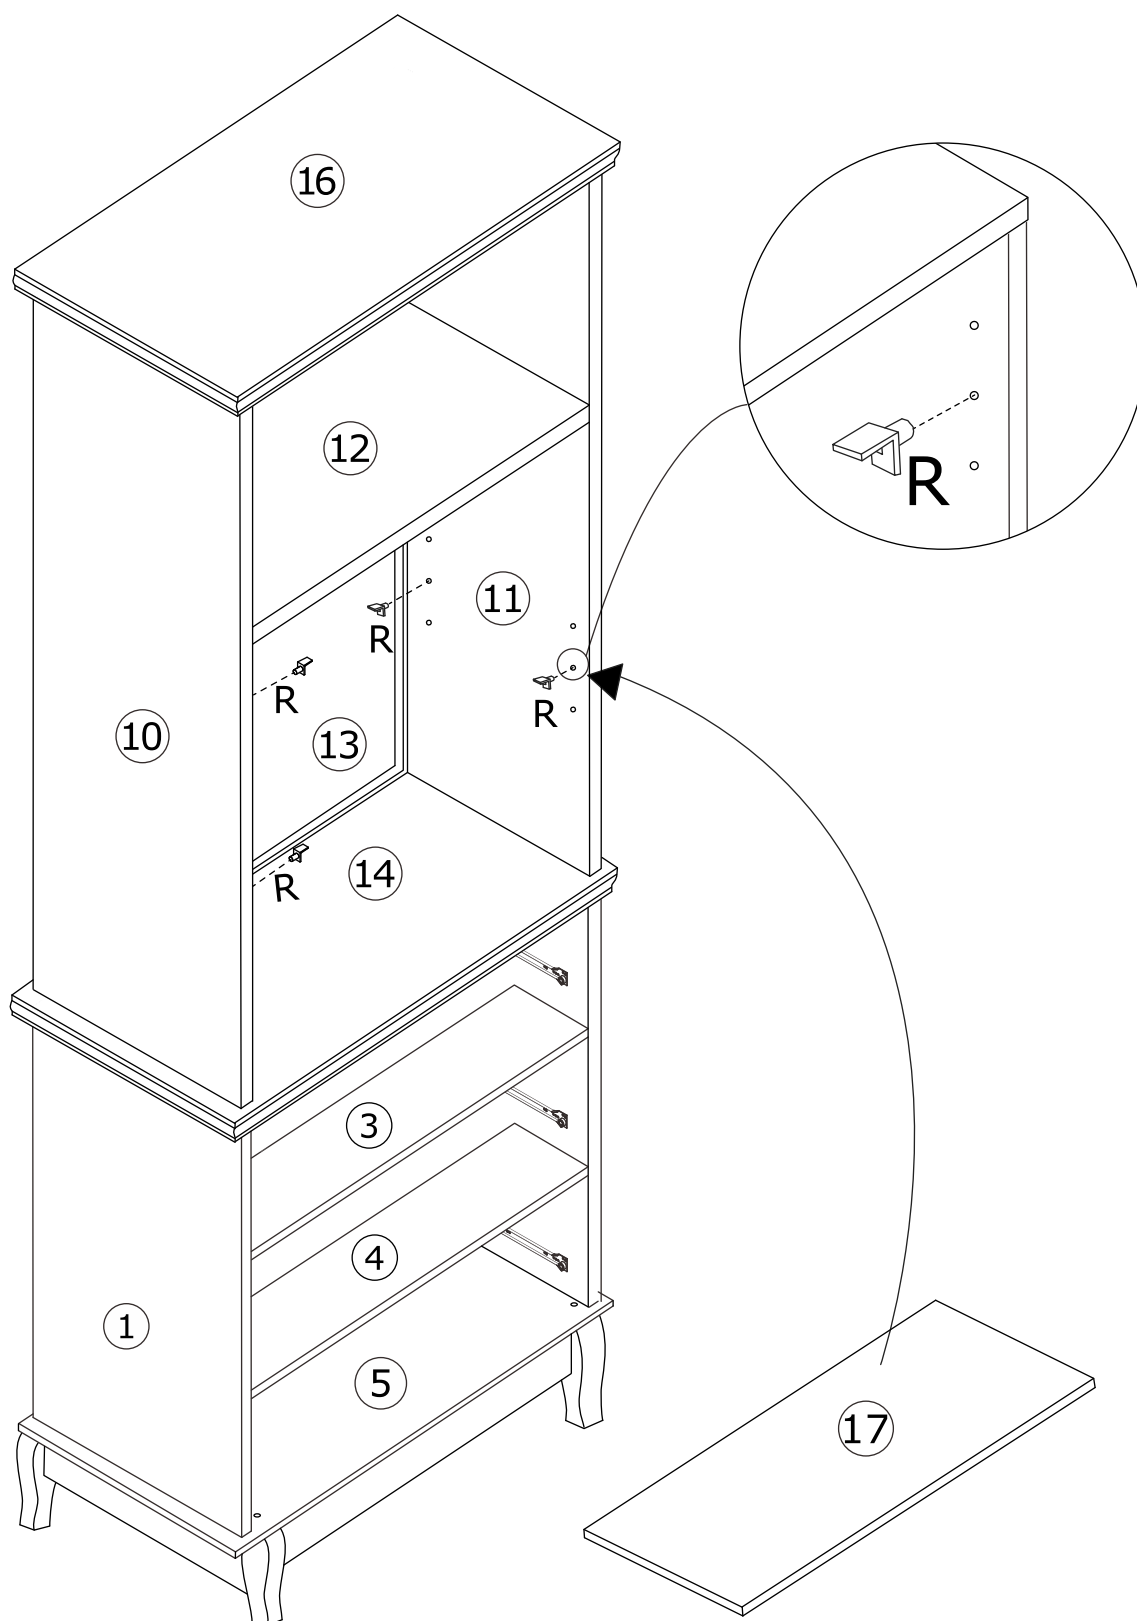


22

M x 6





Ø 3x14mm

 L x 6



  Reinforce back boards with part(L) and screw(M) as shown.

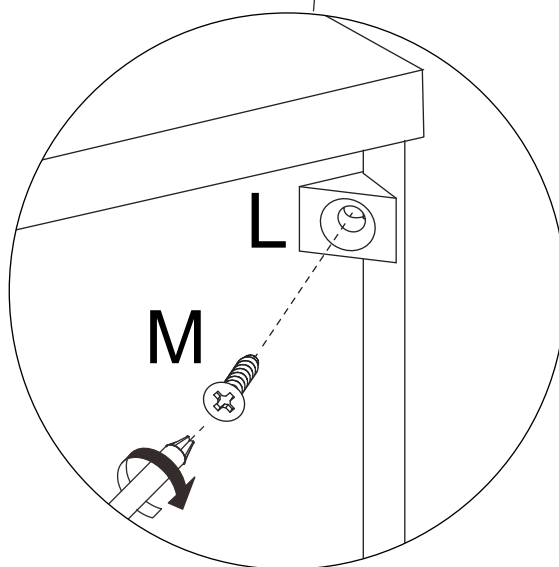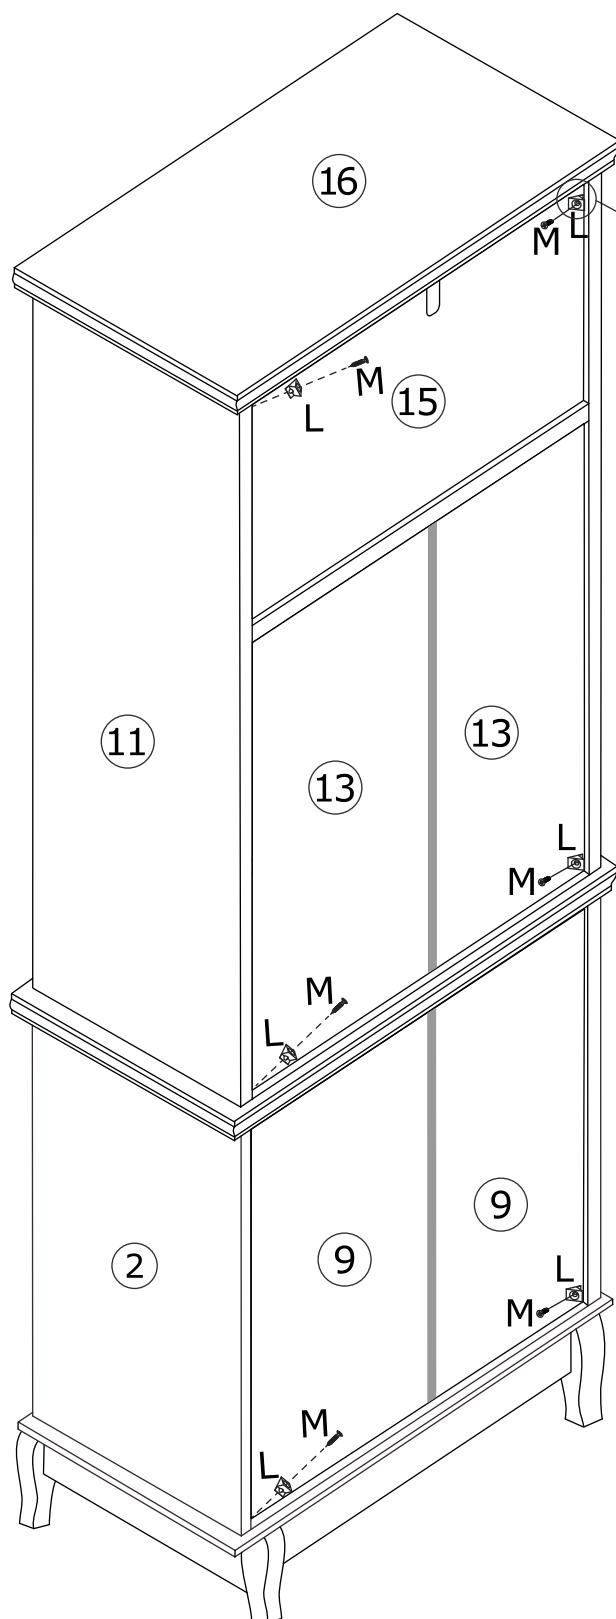

23

 
F x 1






G x 1



T x 3




S x 6

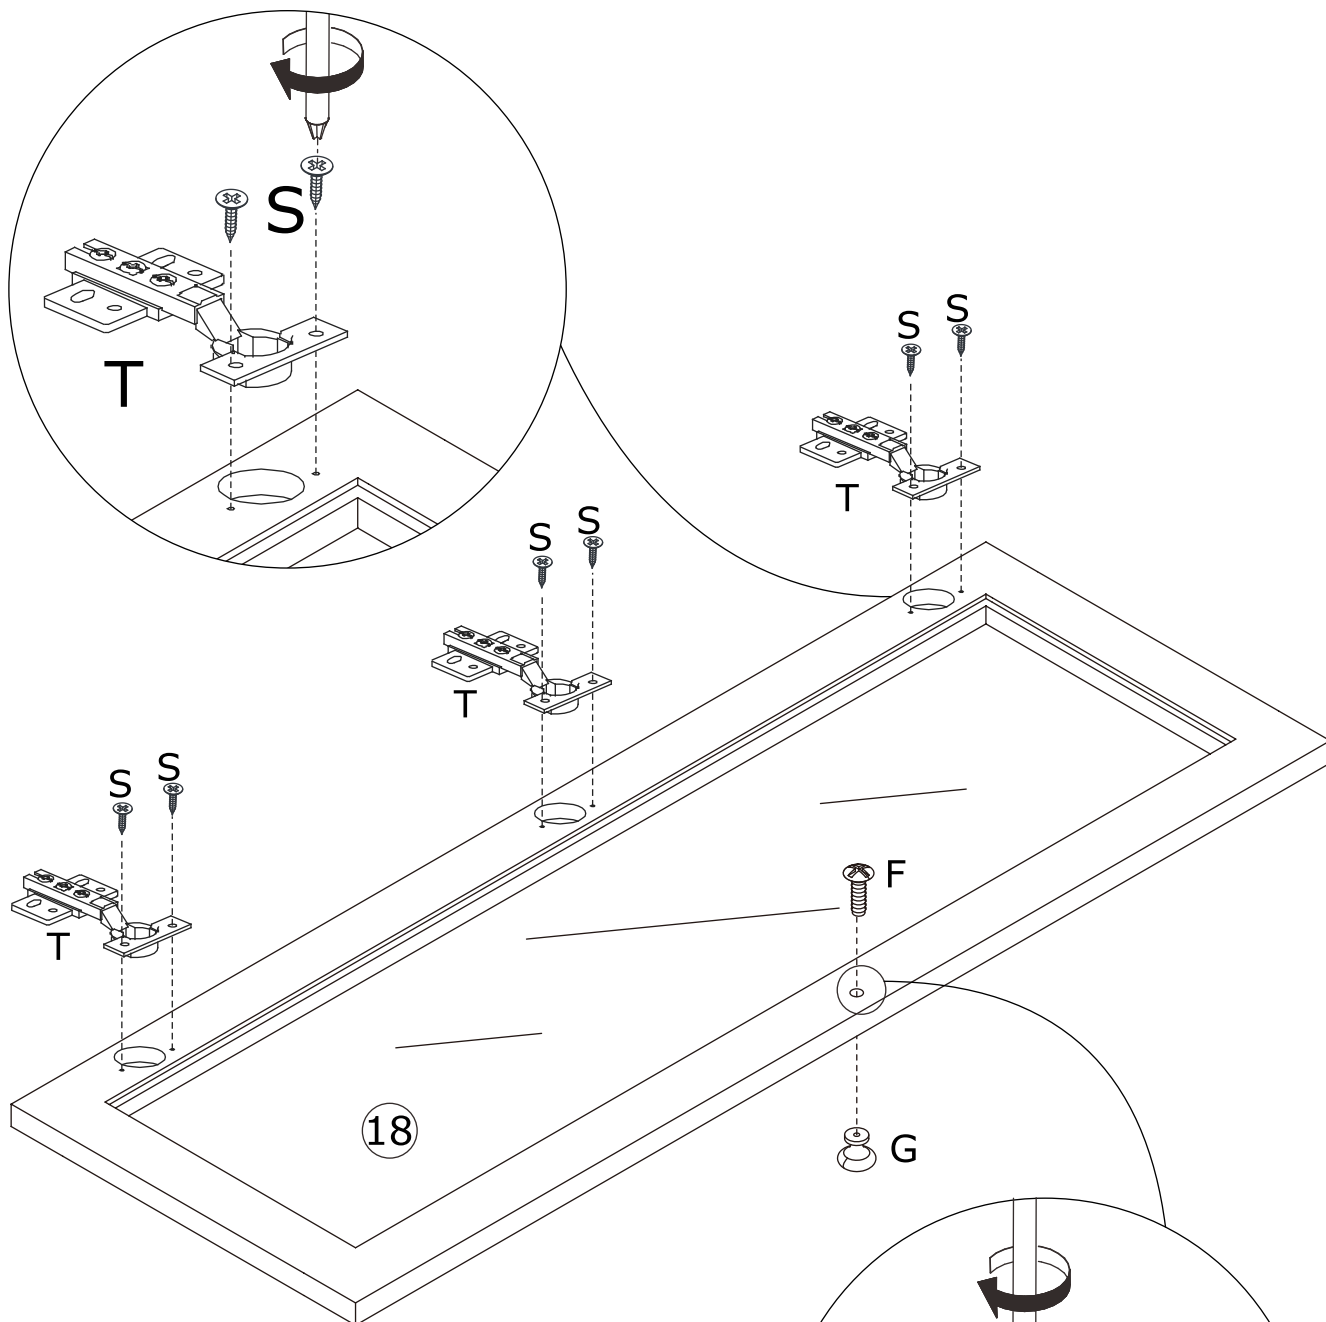   

Fix hinge(T) to board 18 with screw(S) as shown. Please don't use an electric screwdriver or use force to rotate, may cause crack.

 Fix knob(G) to board 18 with screw(F) as shown.



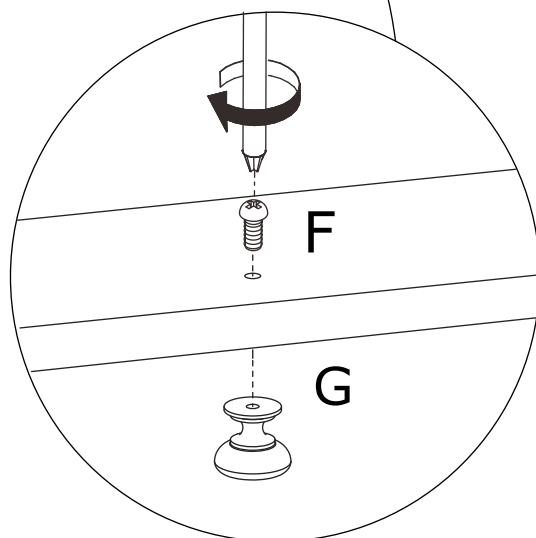


24


S x 12













 
 
 
Ø 3.5x12mm

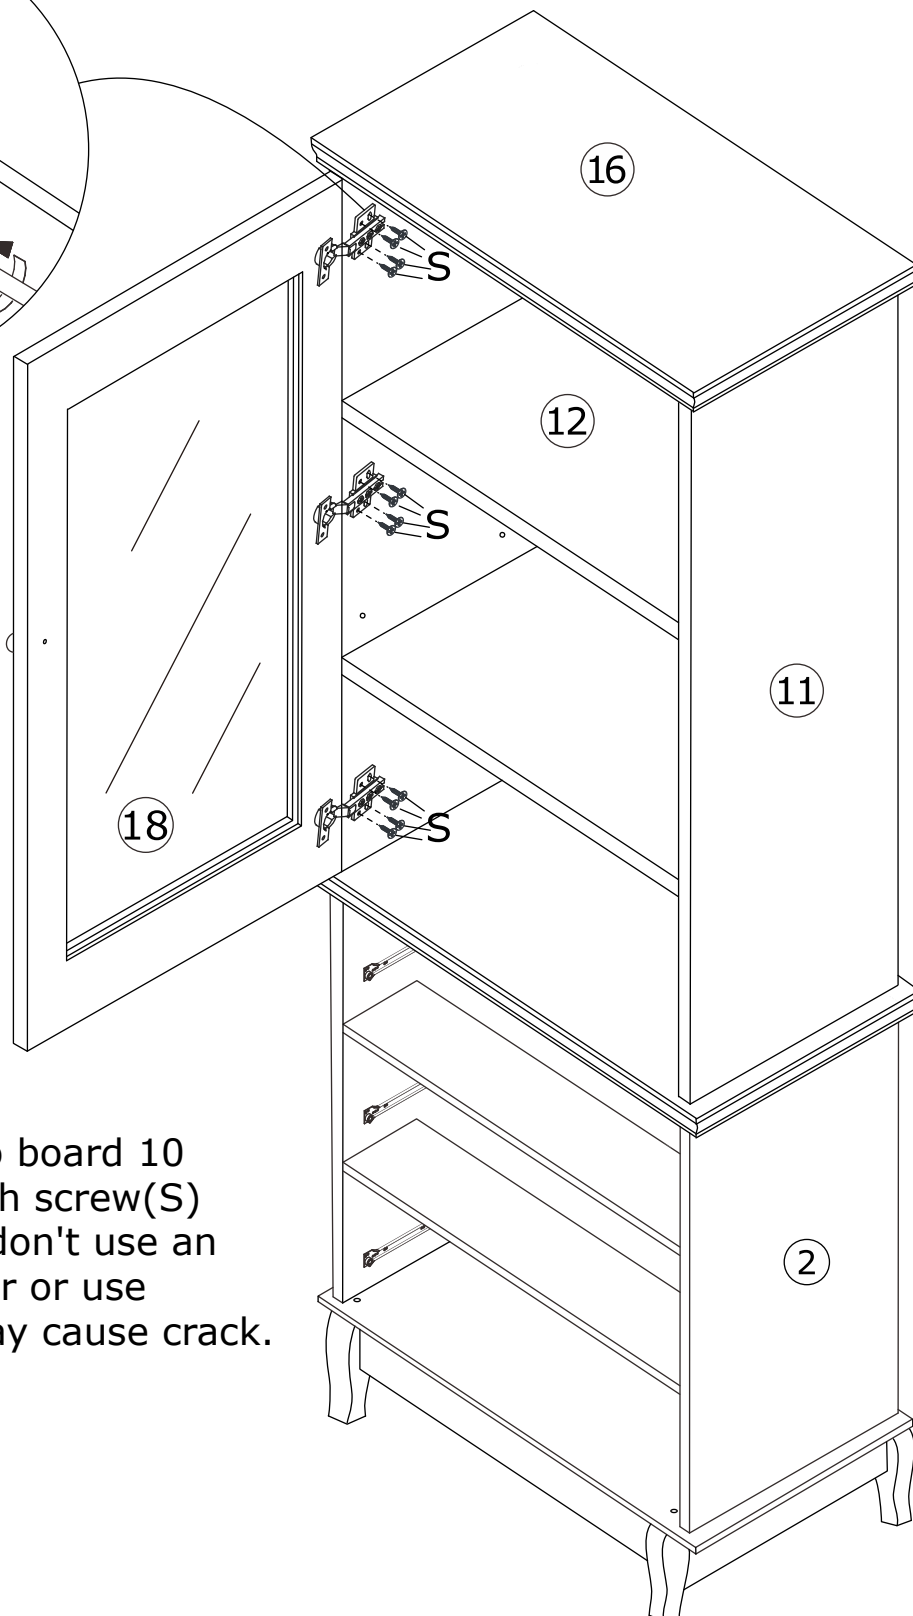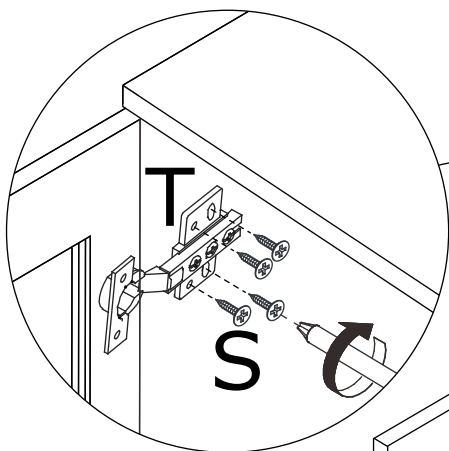

 Attach board 18 to board 10 by fixing hinge with screw(S) as shown. Please don't use an electric screwdriver or use force to rotate, may cause crack.



Adjust hinges to door alignment.

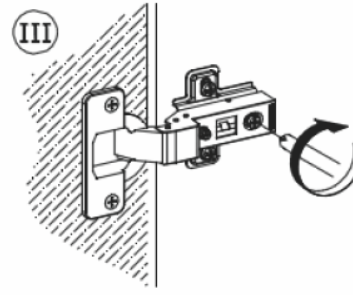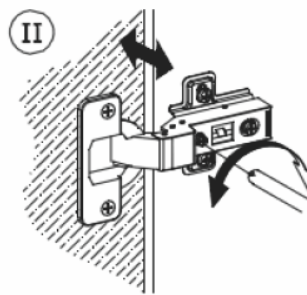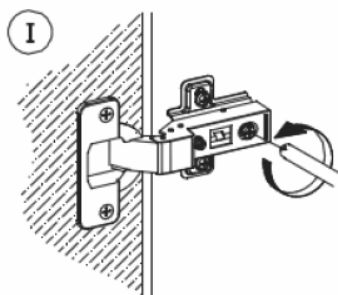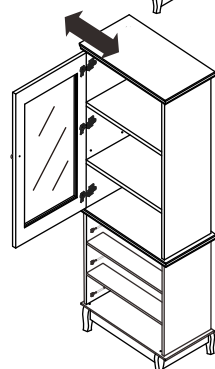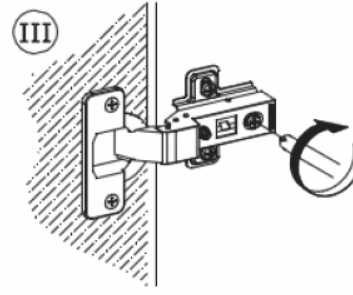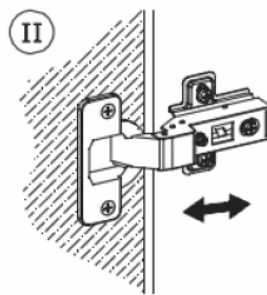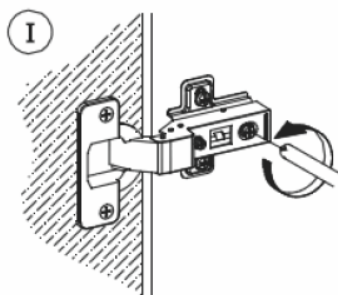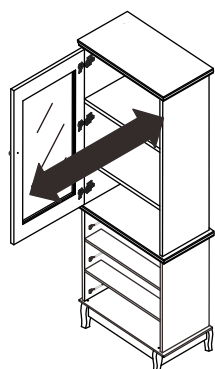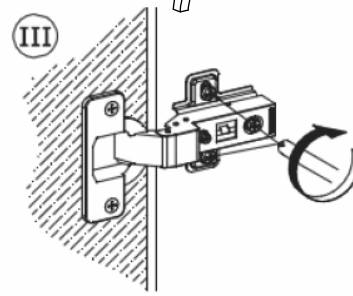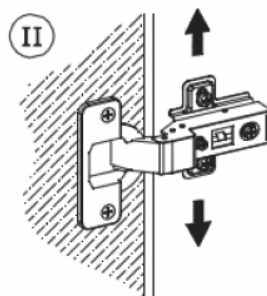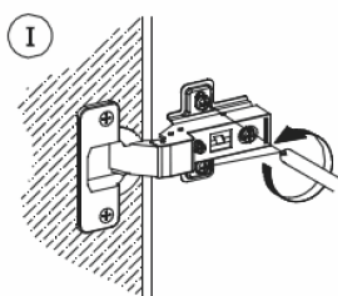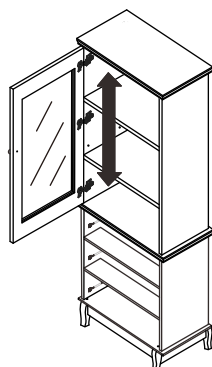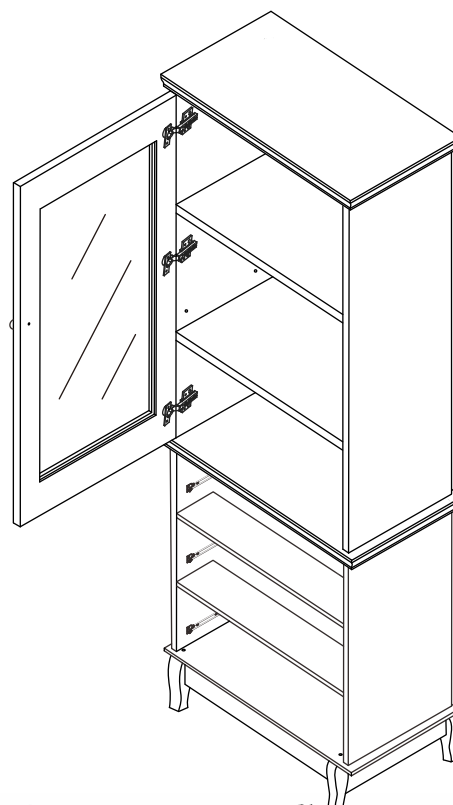             

26

B x 12



 
 
 
 
 
Ø 6x35mm

F x 3



Ø 4x16mm


G x 3

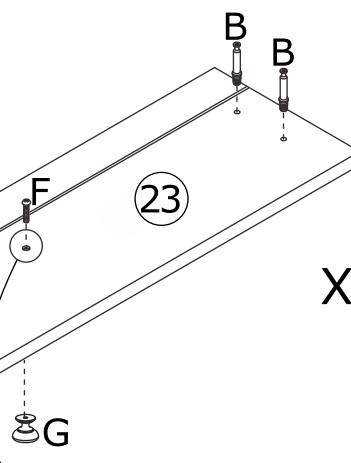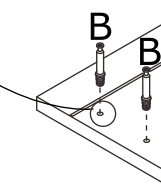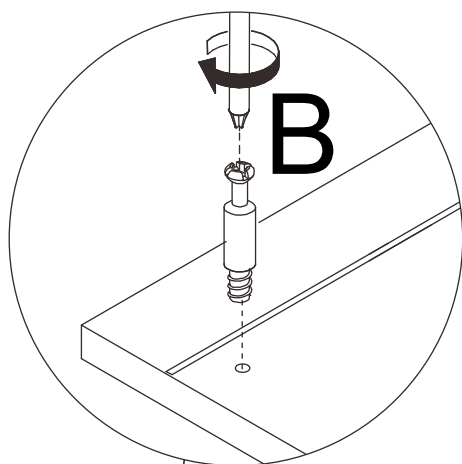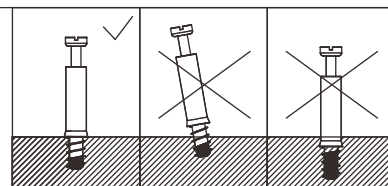

x3

Insert quickfit screw(B) into corresponding holes in board 23 with a screwdriver as shown.

 Fix knob(G) to board 23 with screw(F) as shown.


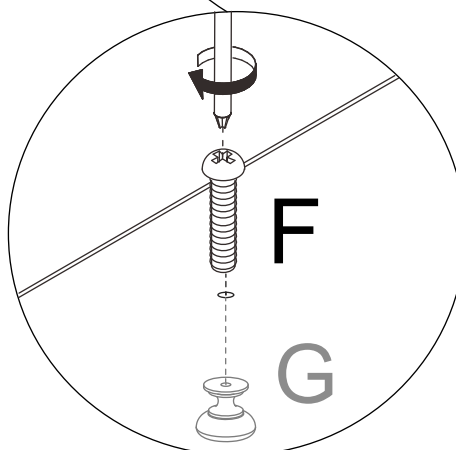


27


N x 12



  
Ø 4x30mm




Ø 5 x 40 mm

 

Ø 4 x 35mm

 

Ø 4 x 30mm



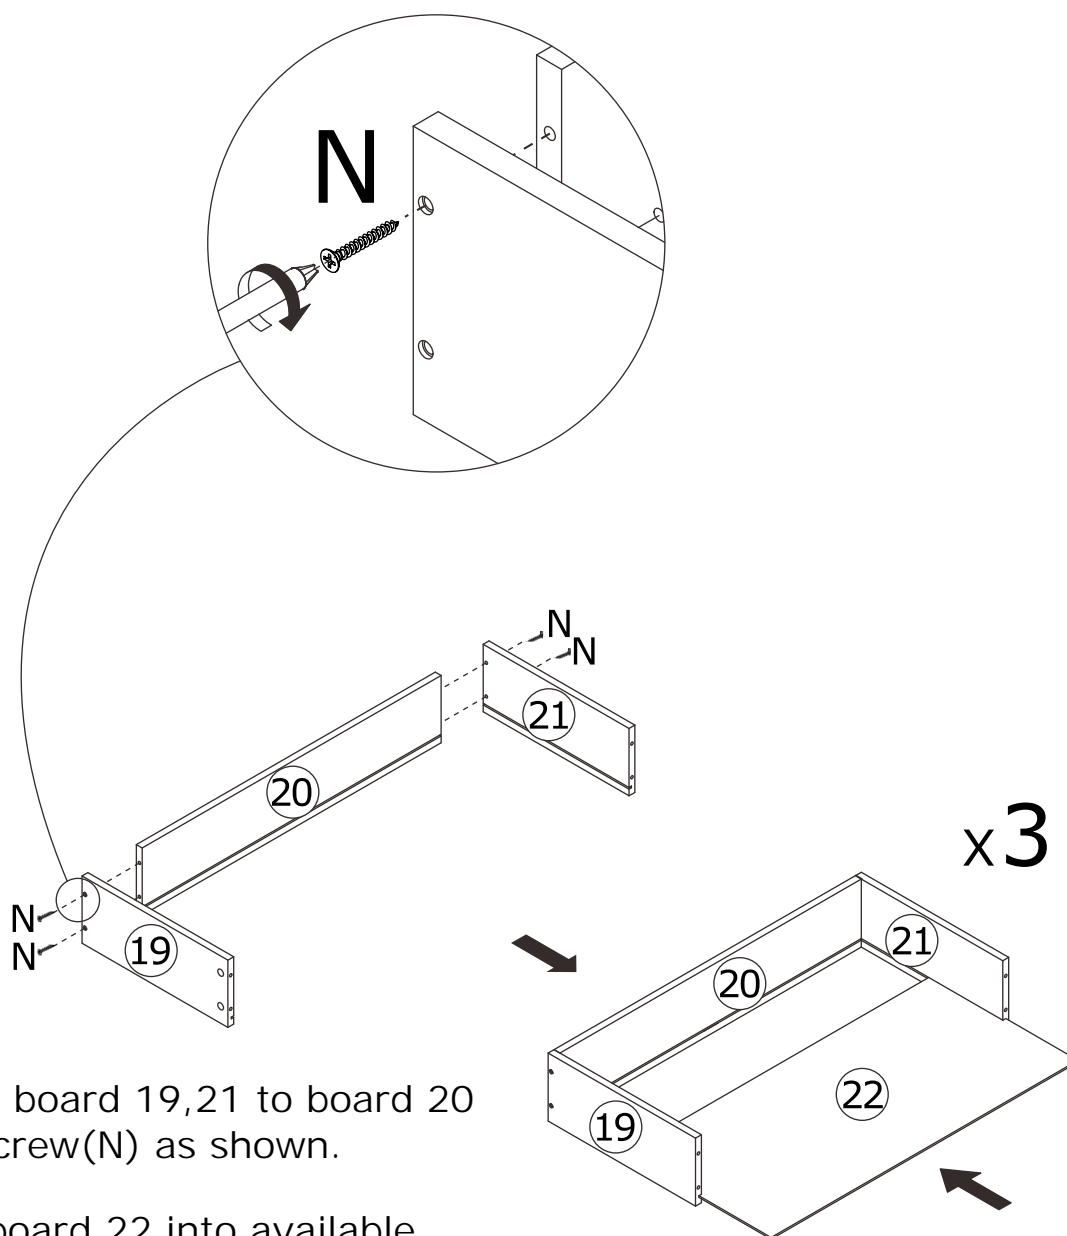 


Attach board 19,21 to board 20 with screw(N) as shown.


Slide board 22 into available slots as shown.

28

   C x 12

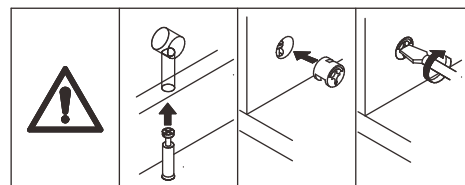

 Attach board 23 to board 19,21 and turn cam locks(C) clockwise to tighten as shown.

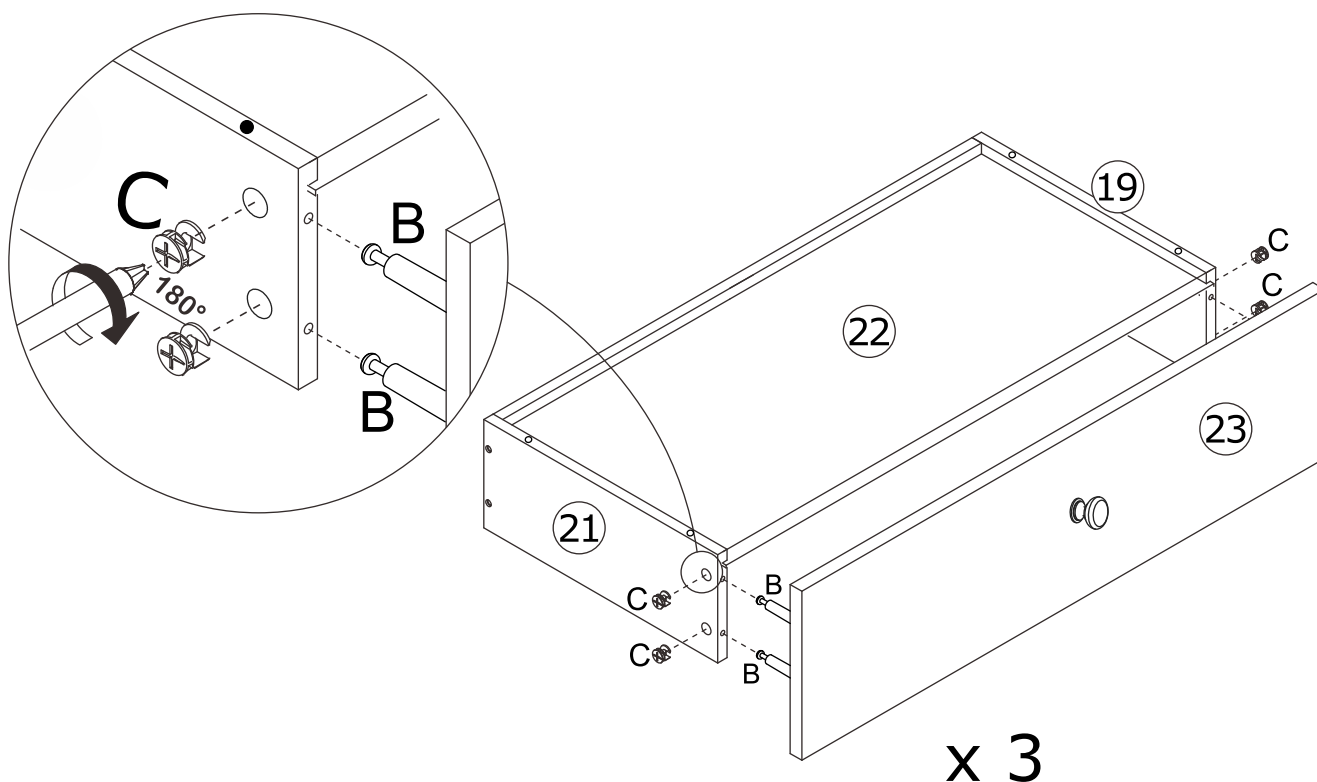


29

Hx 12




Ø 3 x 12mm

 DL x 3



DR x 3

 

H

 
 


Ø 3 x 12 mm



M



Ø 3 x 14mm

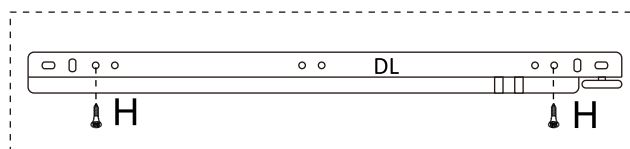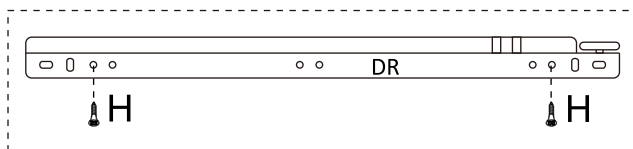


  Fix runner(DL) and (DR) to board 19 and 21 respectively with screw(H) as shown.

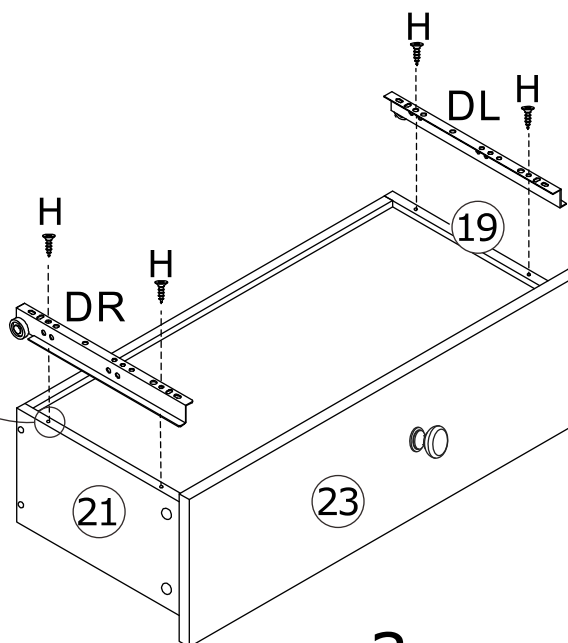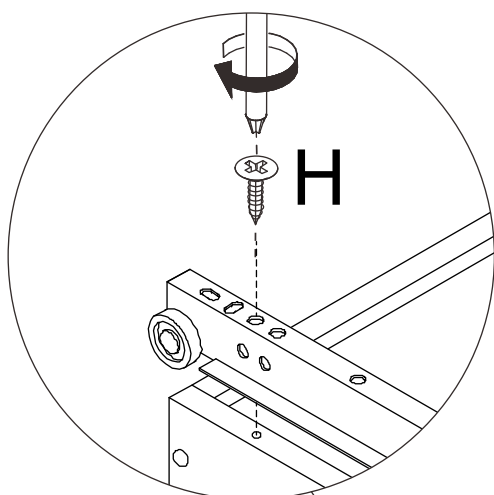


x 3

 30

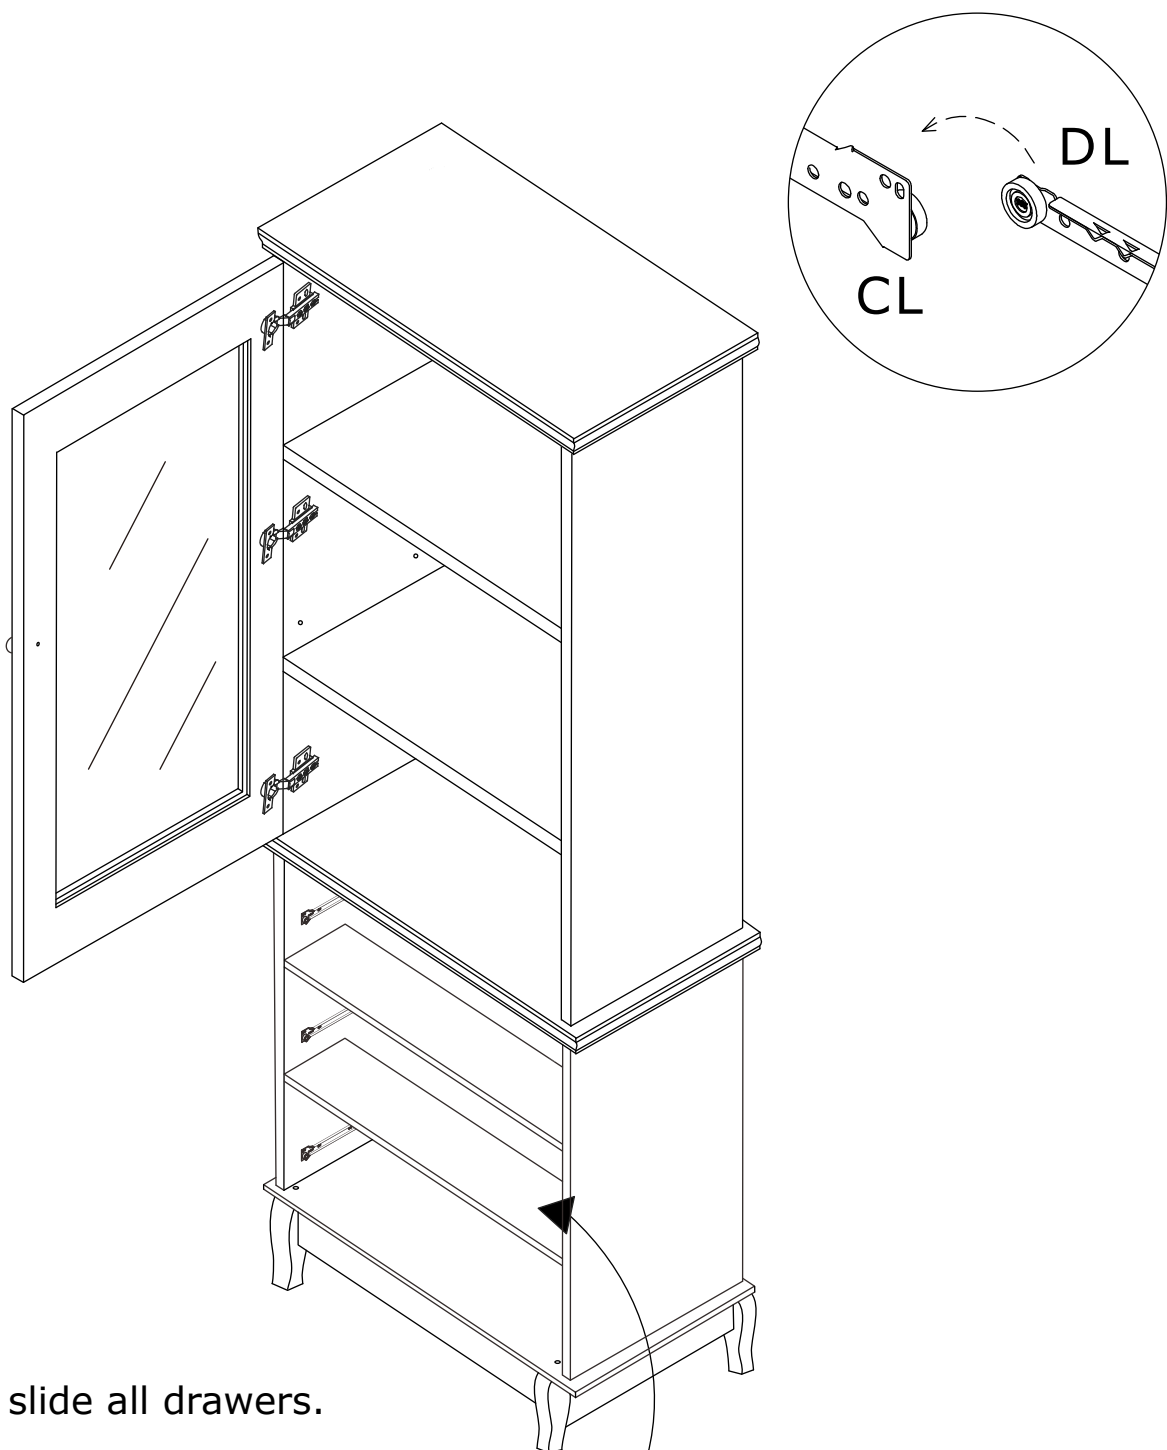

Align rails, slide all drawers.

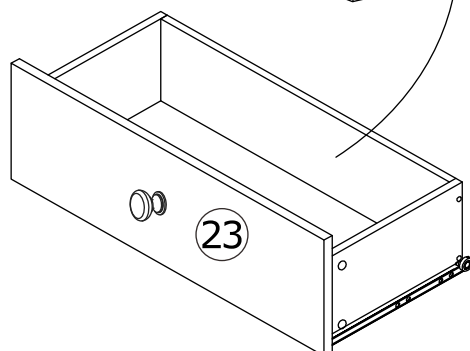 

x 3

31

 
 
 
 
 
 
P x 1



K x 1



Ø 4 x 35 mm

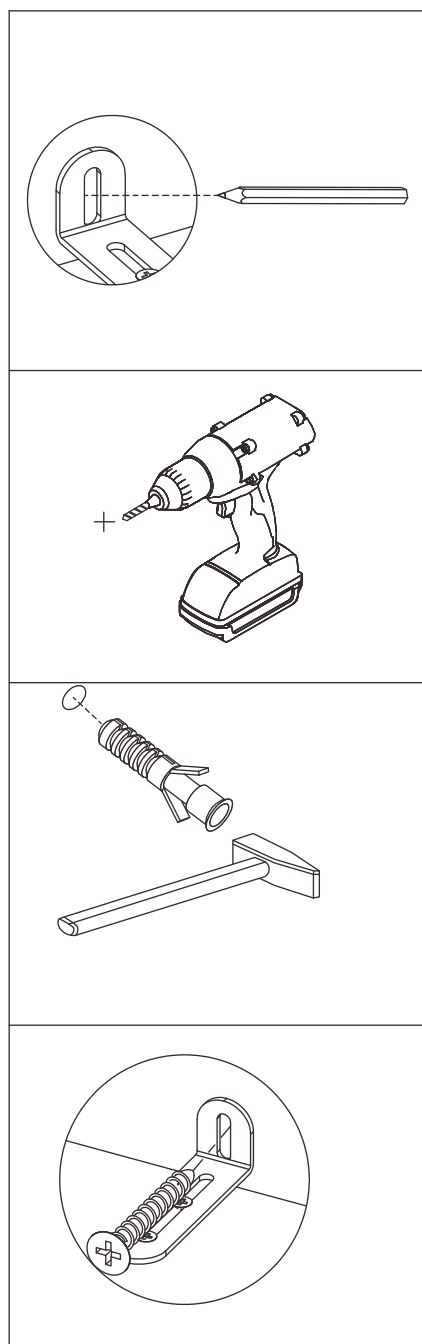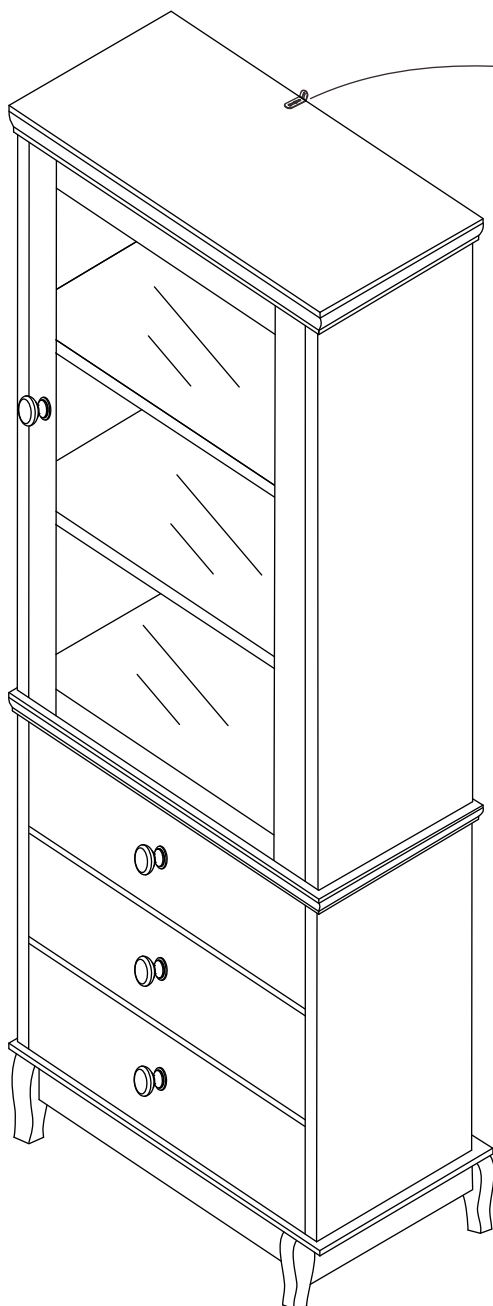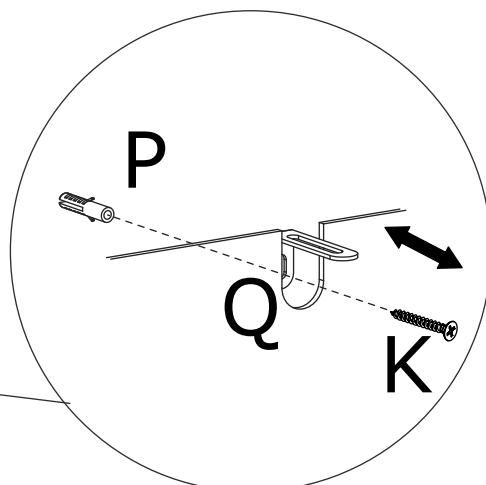

Fix part(P) into a proper position on your wall,
fix part(Q) to part(P) with screw(K) as shown.

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.