



Outdoor Smart Umbrella with Wind Sensor, Solar Panel, LED Light, and Remote Control



Warranty and Help

One Year Limited Warranty

Questions? We're here to help Toll Free: 1-888-889-8320 Email: service@theabove.com Reflection International Inc. 1502 Foothill Blvd., #103-222 La Verne, CA 91750



Remote Control

 
Scan here for warranty and replacement parts




Height Series

Quick Start Guide

1




- 1. Locate the control board at the top of the umbrella.
- 2. Pull off the silicone cover in the center at the top of the control board.
- 3. Turn the power switch in the red box from off to on.
- 4. Push the silicon cover back into place.

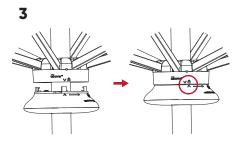


- 1. Insert the LED fixture through the pole with the umbrella.
- Align
 Aon the LED light with
 ven the runner hub.
 Turn the LED light right until
 ven the LED light is
 aligned with
 on the runner hub.

Quick Tips

 Remote Control Functions

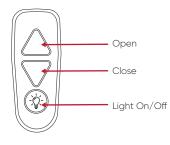



- 1. Align \bigotimes on the wind sensor to \bigotimes on the control board.
- Turn the wind sensor clockwise until ⋈ on the wind sensor is aligned with no the control board to lock into place.

Note: The control board is already attached to the top of the umbrella.



1. Connect the umbrella to the pole provided and secure the umbrella to a base.

Congratulations, your setup is complete!

Quick Tips

Your umbrella should come pre-charged. However for the first-time use, it is recommended to charge your umbrella.

1. Charge using Solar

Place the umbrella with the solar panel attached to the control board out in the sun for up to 12 hours for a full charge.

2. Charge Using Micro USB

With the control board attached to the umbrella, charge using the micro USB charging port on the LED light or on top of the control board for up to 4 hours for a full charge.

