




# 3-LIGHT VANITY BAR

MODEL #FV11-050

Français p. 8

Español p. 15

PORTFOLIO® and PORTFOLIO & Design™ are trademarks or registered trademark of LF, LLC. All rights reserved.

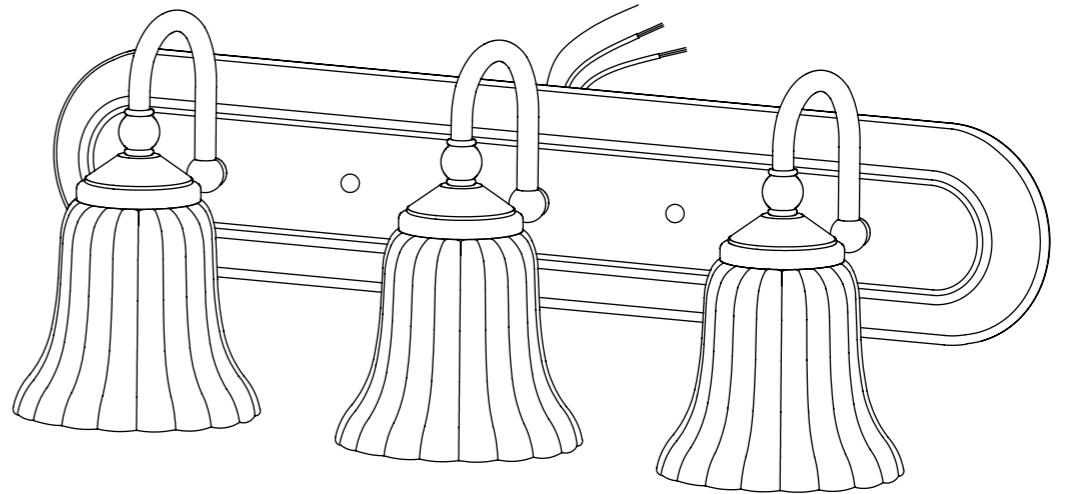

## ATTACH YOUR RECEIPT HERE

Serial Number \_\_\_\_\_ Purchase Date \_\_\_\_\_




Intertek




**Questions, problems, missing parts?** Before returning to your retailer, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

## PACKAGE CONTENTS

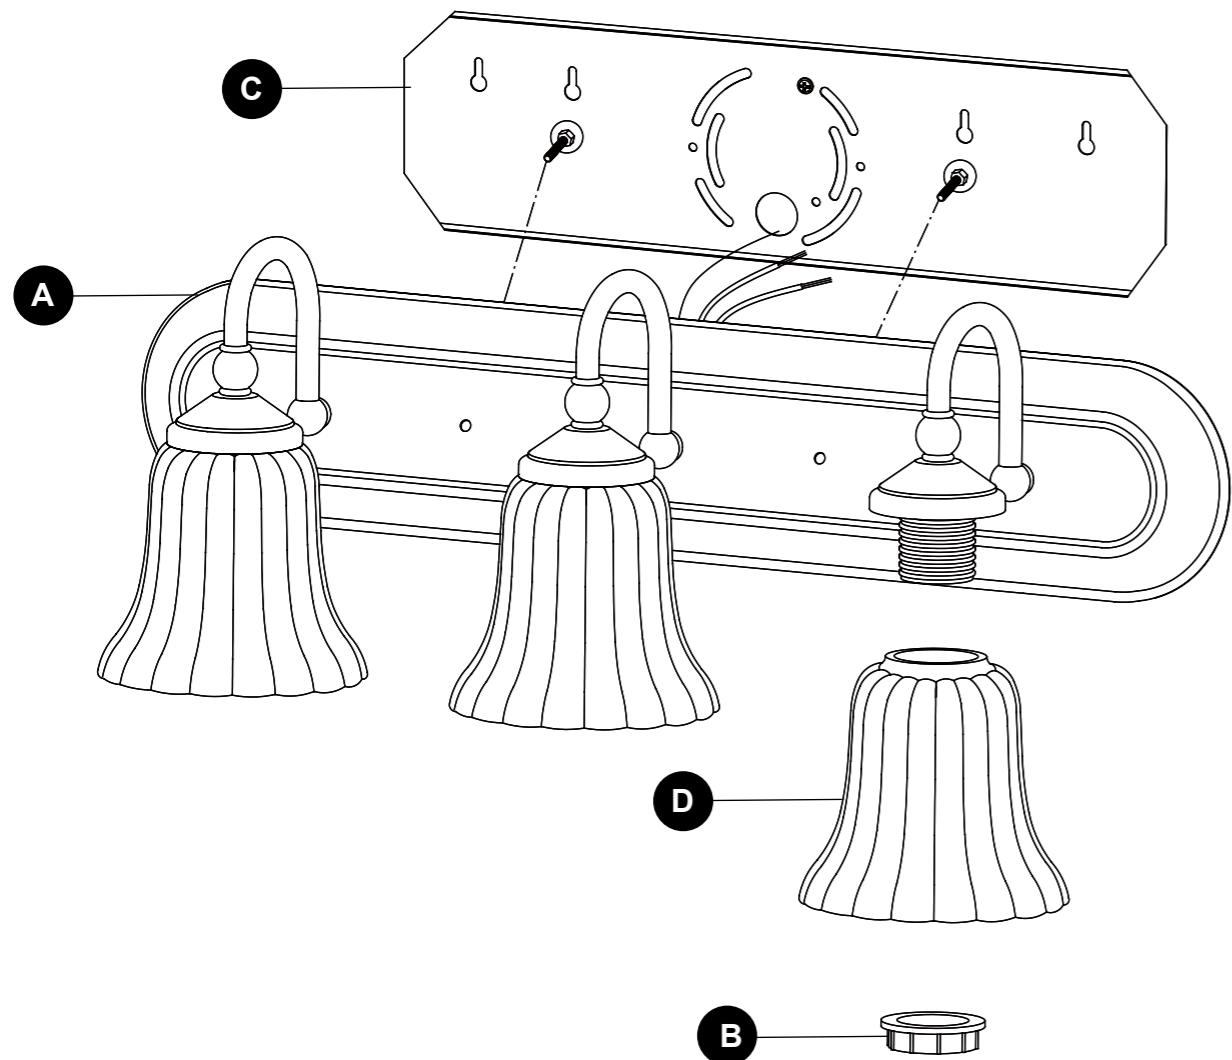

## HARDWARE CONTENTS (shown actual size)

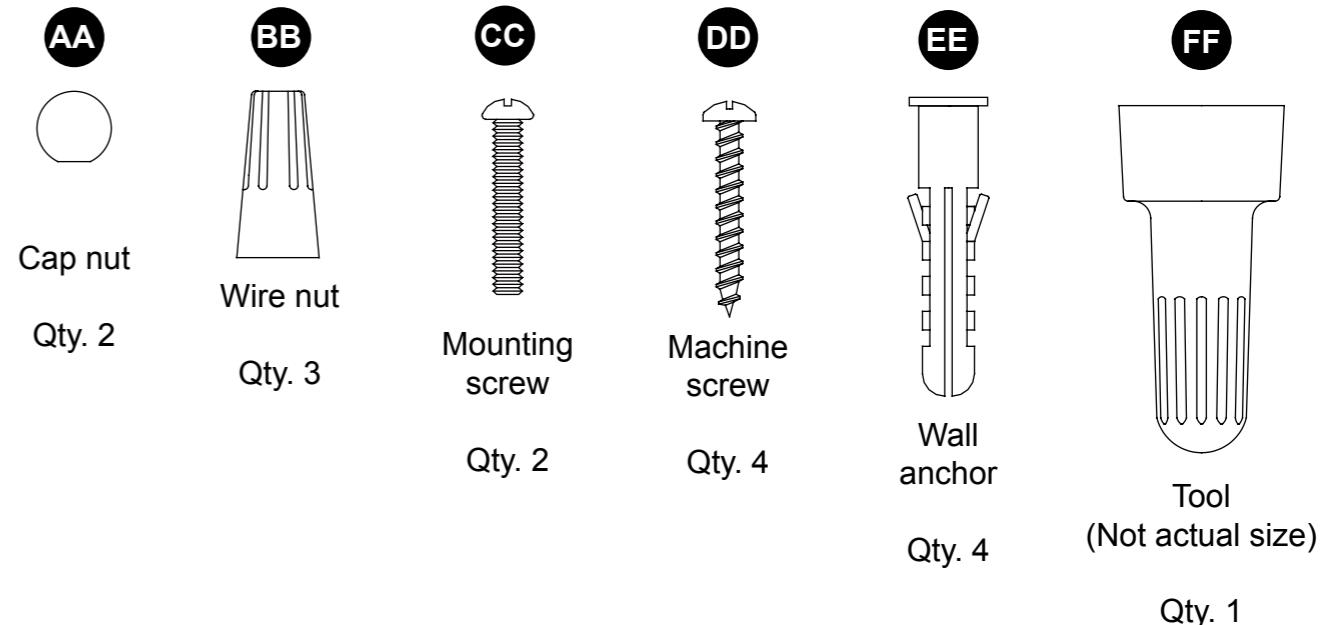

### ⚠ SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

### ⚠ WARNING

- TURN OFF ELECTRICITY at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching off circuit breaker).
- MINIMUM 90°C SUPPLY CONDUCTORS.

### CAUTION

- CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.
- If in doubt about electrical installation, consult a licensed electrician.

PART	DESCRIPTION	QUANTITY
A	Fixture	1
B	Socket ring (preassembled to Fixture (A))	3
C	Backplate (preassembled to Fixture (A))	1
D	Glass shade	3

### PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


### Estimated Assembly Time: 25 minutes

Tools Required for Assembly (not included): Flathead screwdriver, Phillips screwdriver, Pliers, Electrical tape, Wire cutters, Safety glasses, Drill and 5/16 in. drill bit.

Helpful Tools (not included): Wire strippers.




## ASSEMBLY INSTRUCTIONS

1. Remove the backplate (C) from the fixture (A) and then hold it against the wall and mark the position of the holes through the backplate (C). **Note:** Make sure fixture (A) is being mounted to a secure surface.


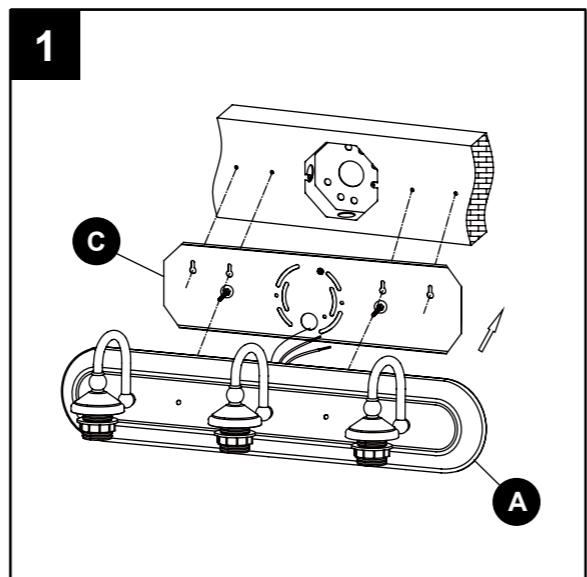


2. Using a 5/16 in. drill bit (not included), drill pilot holes at marked locations. For masonry installations, insert wall anchors (EE) into the holes. Otherwise, attach backplate (C) to wall using machine screws (DD) and use mounting screws (CC) to secure it to the outlet box. **Note:** Make sure the narrow end of the keyhole slots on backplate (C) slide down over the screw heads.

### Hardware Used

   CC	Mounting screw		x 2
DD	Machine screw		x 4
EE	Wall anchor		x 4


3. Strip 3/4 in. of insulation from wire ends. Twist stripped ends together with pliers (not included), black to black (power) and white to white (neutral). Attach copper wire to ground wire. **Helpful hint:** If necessary, attach copper ground wire to grounded outlet box.

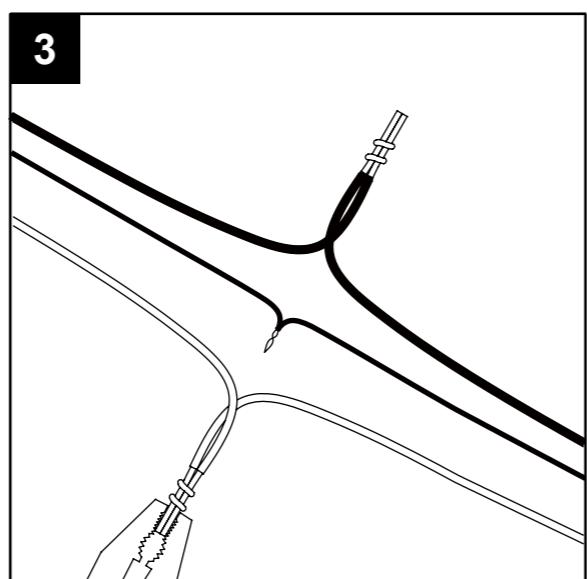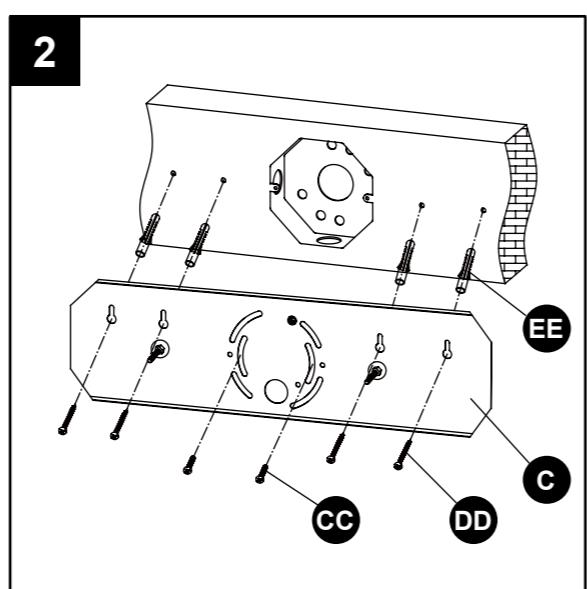


## ASSEMBLY INSTRUCTIONS

4. Attach wire nuts (BB). Tape wire nuts (BB) and wires together.
 
### Hardware Used


BB	Wire nut		x 3
----	----------	---	-----

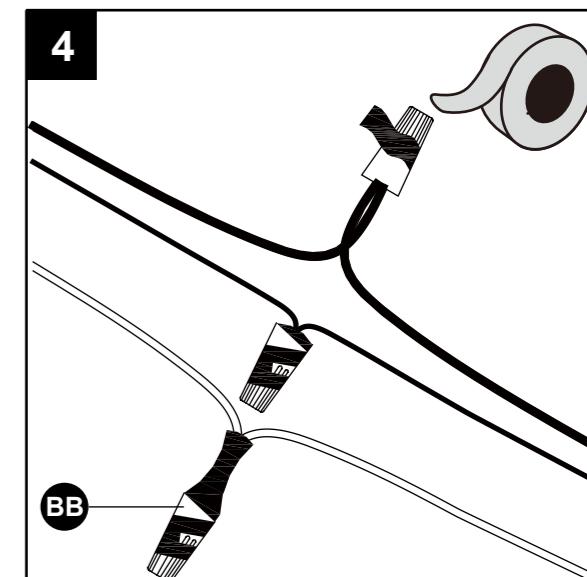

5. Place the fixture (A) onto the backplate (C), and secure with cap nuts (AA). **Note:** The fixture (A) can be installed with the sockets facing up or down.


### Hardware Used


AA	Cap nut		x 2
----	---------	---	-----

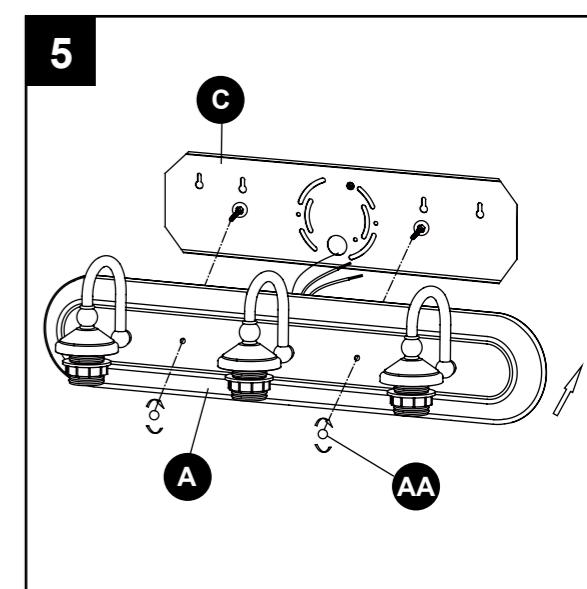

6. Remove socket rings (B) from sockets of fixture (A) with tool (FF). Install glass shades (D) over sockets, securing with socket rings (B). Tighten socket rings (B) with tool (FF).


### Hardware Used

 FF	Tool		x 1
----	------	---	-----

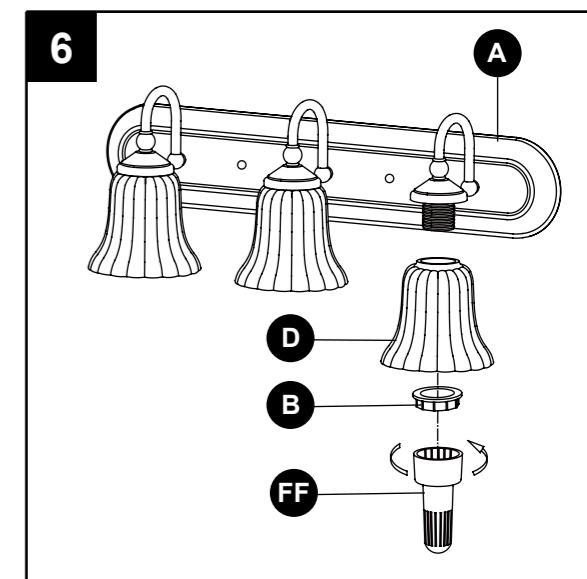

## ASSEMBLY INSTRUCTIONS

7. Install light bulbs (not included). Use 60-watt max. standard-base incandescent bulbs or halogen/CFL/LED equivalents.

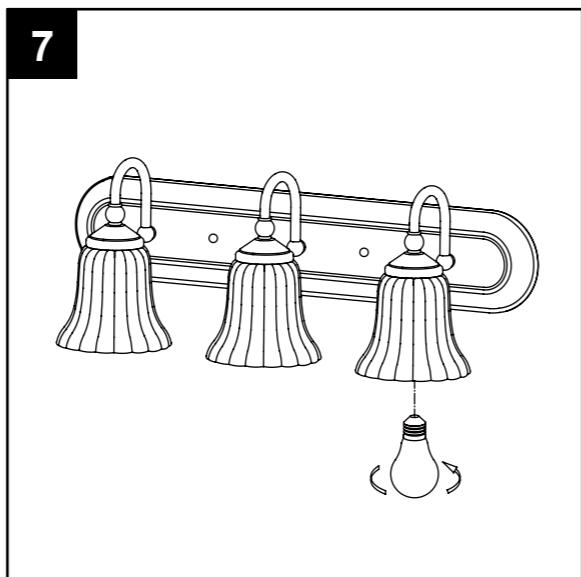

## CARE AND MAINTENANCE

- Shut off main power supply before wiping product with damp cloth or window cleaner. Do not use abrasives.

## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Bulb won't light.	1. Bulb is burned out. 2. Power is off. 3. Faulty wire connection. 4. Faulty switch.	1. Replace light bulb. 2. Make sure power supply is on. 3. Check wiring. 4. Test or replace switch.
Fuse blows or circuit breaker trips when light is turned on.	Crossed wires or power wire is grounding out.	Check wire connections.


## WARRANTY

The manufacturer warrants all of its lighting fixtures against defects in materials and workmanship for one (1) year from the date of purchase. If within this period the product is found to be defective in material or workmanship, the product must be returned, with a copy of the original sales receipt as proof of purchase in the original carton, to the place of purchase. The manufacturer will, at its option, repair, replace or refund the original purchase price to the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage, improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

## REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PART	DESCRIPTION	PART #
AA	Cap nut	110-100900
BB	Wire nut	375-022000
CC	Mounting screw	109-042600
DD	Machine screw	109-352600
EE	Wall anchor	407-039000
FF	Tool	407-051000

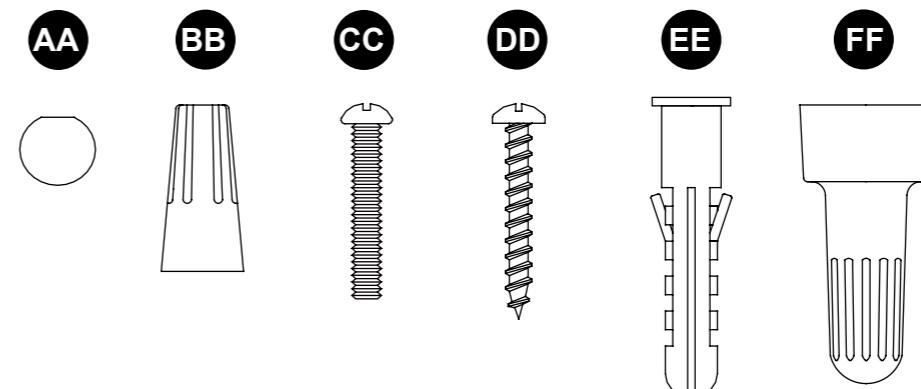

Printed in China