

## ASSEMBLY INSTRUCTION RATTAN SOFA SET

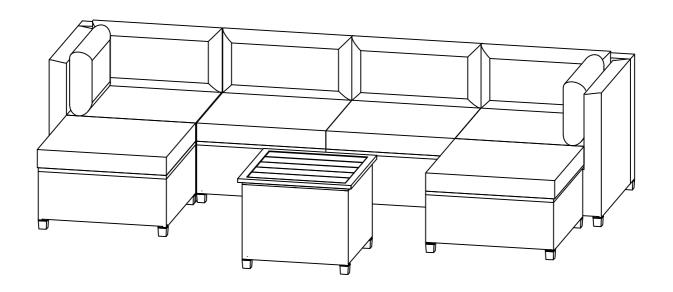



WF 299715; WF 299716; WF 299717


## **Notice**


- 1. 50% Tighten before fixings all screws, Allen wrench is recommended instead of an electric drill.
- 2. Place the item on a flat ground to adjust and make sure it remains stable.
- 3. Tighten up all screws with tools gradually.
- 4. If the screws are not aligned with holes during assembly, please loosen all all the other screws to 50% and continue the assembly process.
- 5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
- 6. Note: If one or more screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are disigned to be relatively larger to provide more space for the adjustment of the screws.

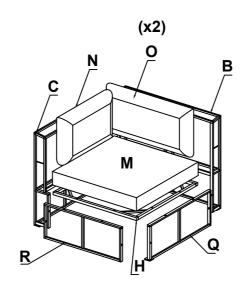

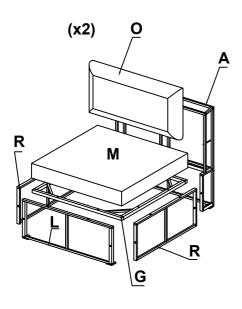


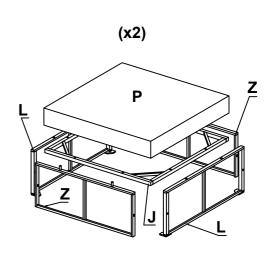


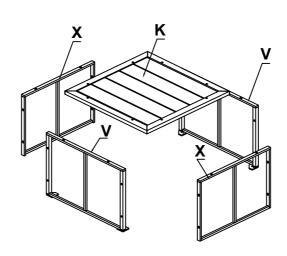


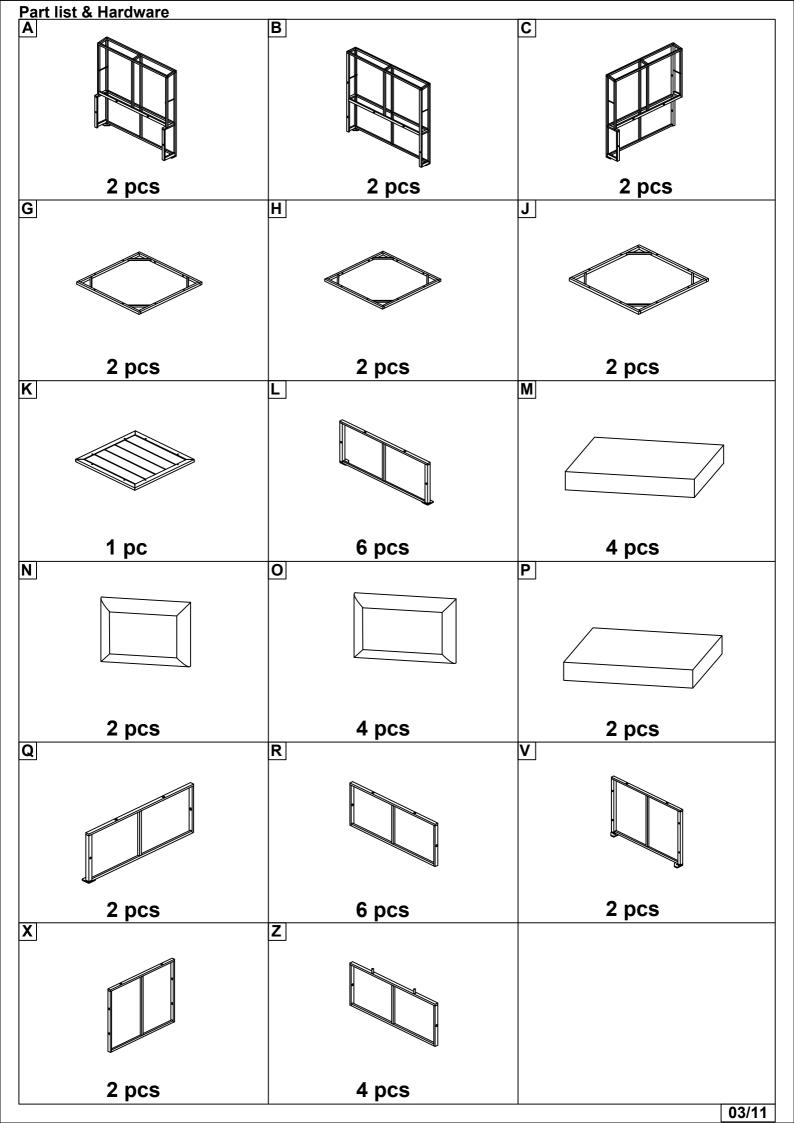



Part list & Hardware		
		3
Bolt M6x40 mm (28 pcs)+extra 2pcs	Bolt M6x35 mm (12 pcs)+extra 2 pcs	Bolt M6x30 mm (70 pcs)+extra 3 pcs
4	5	6
Plastic feet (28 pcs)	Plastic connector (10 pcs)	Allen key M4 (2 pcs)
		04/11

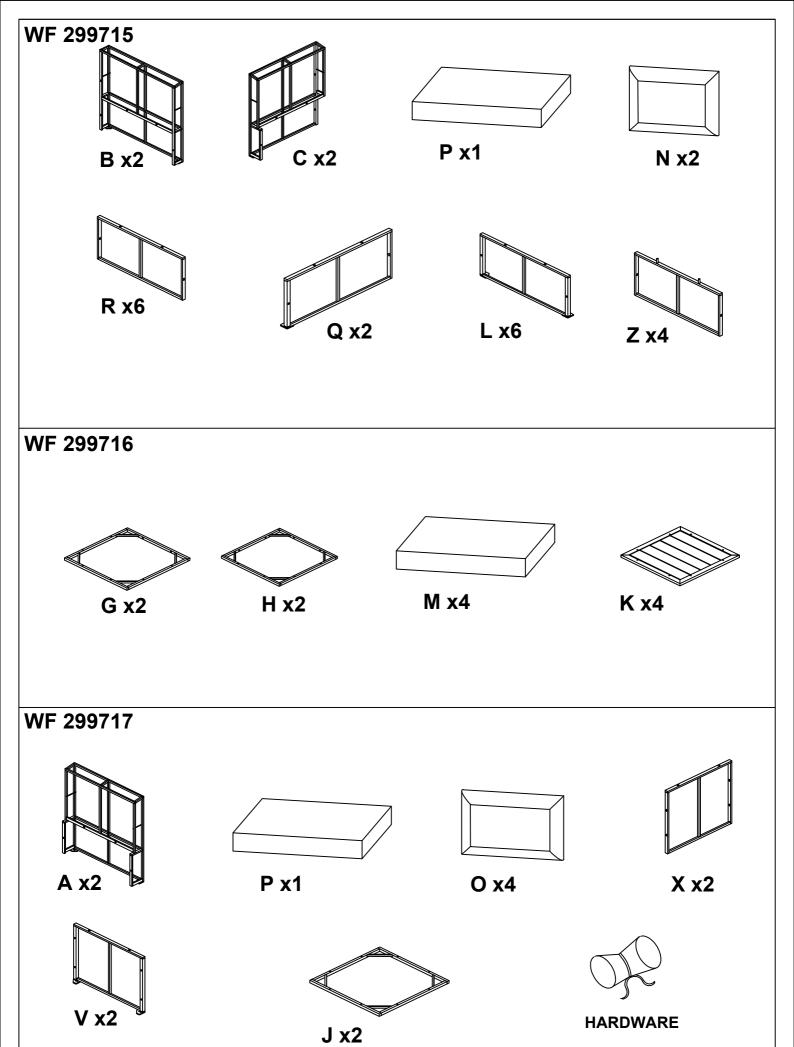


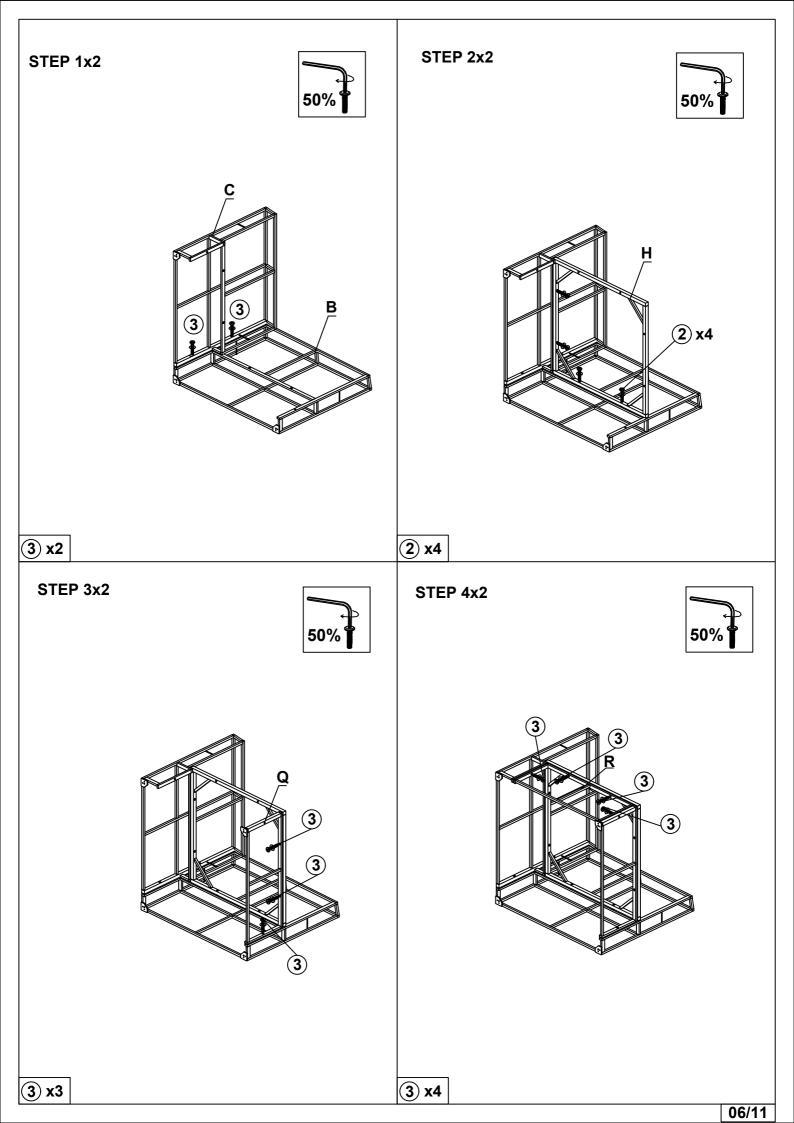


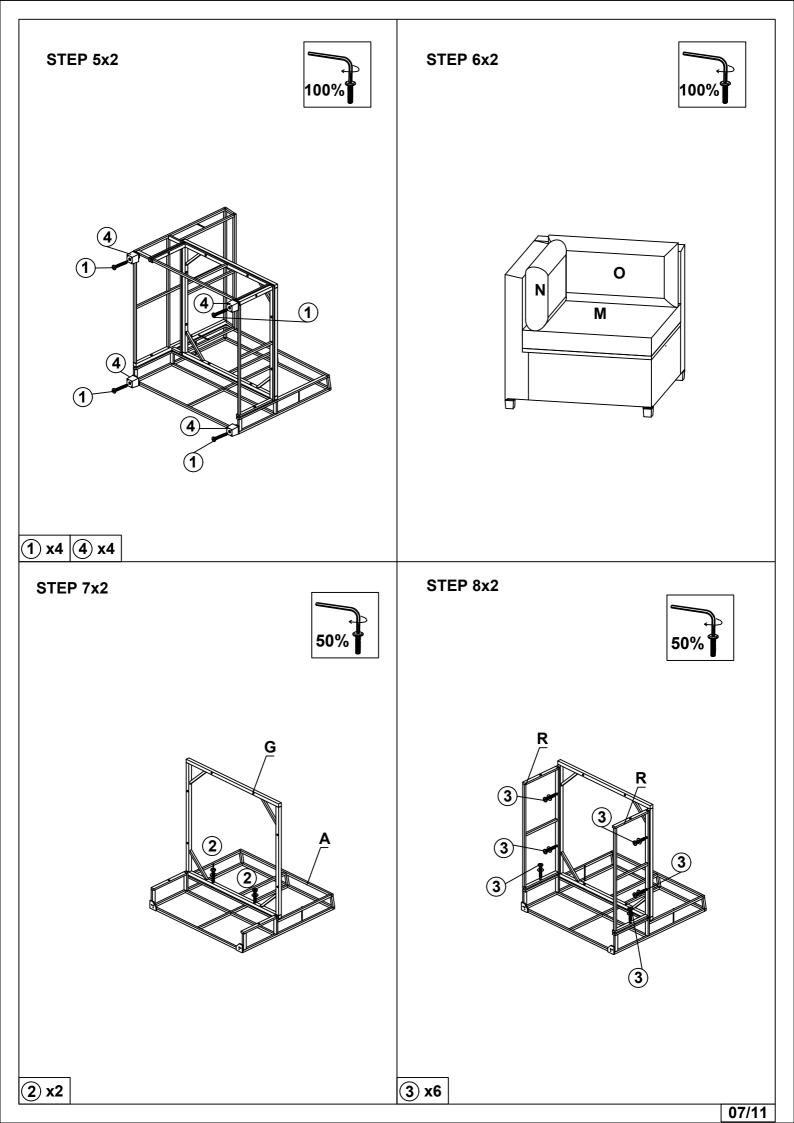

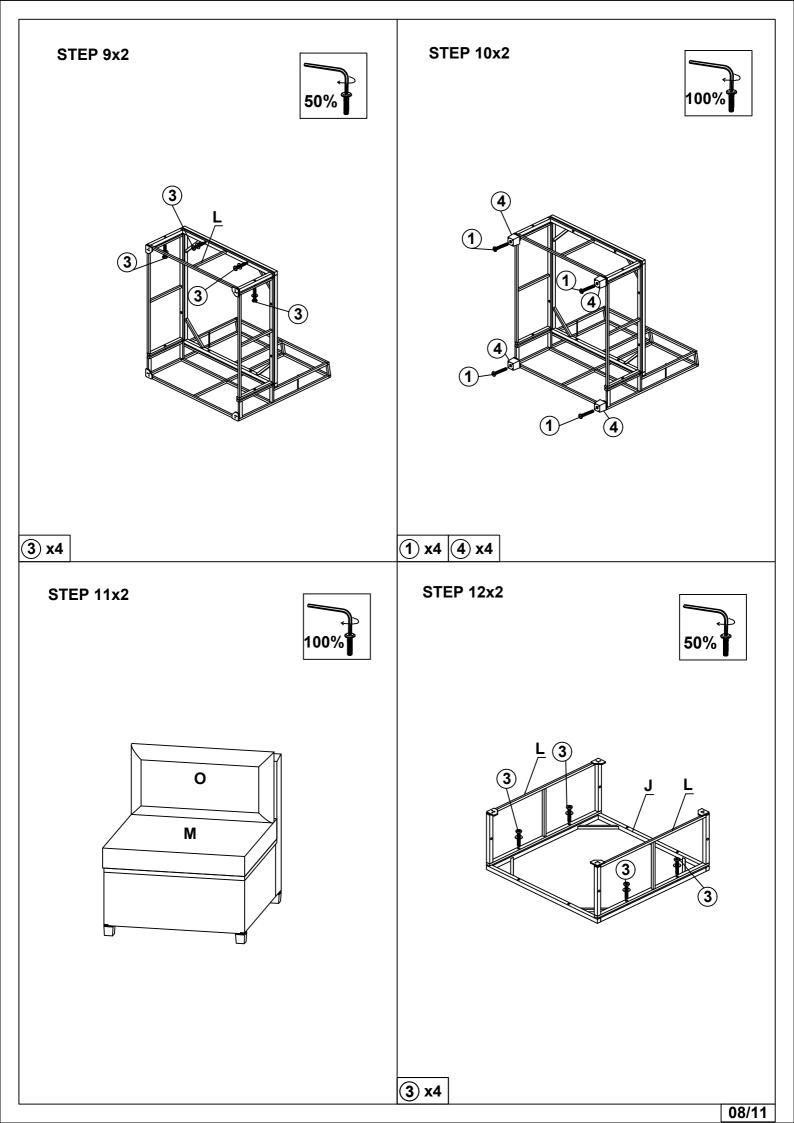

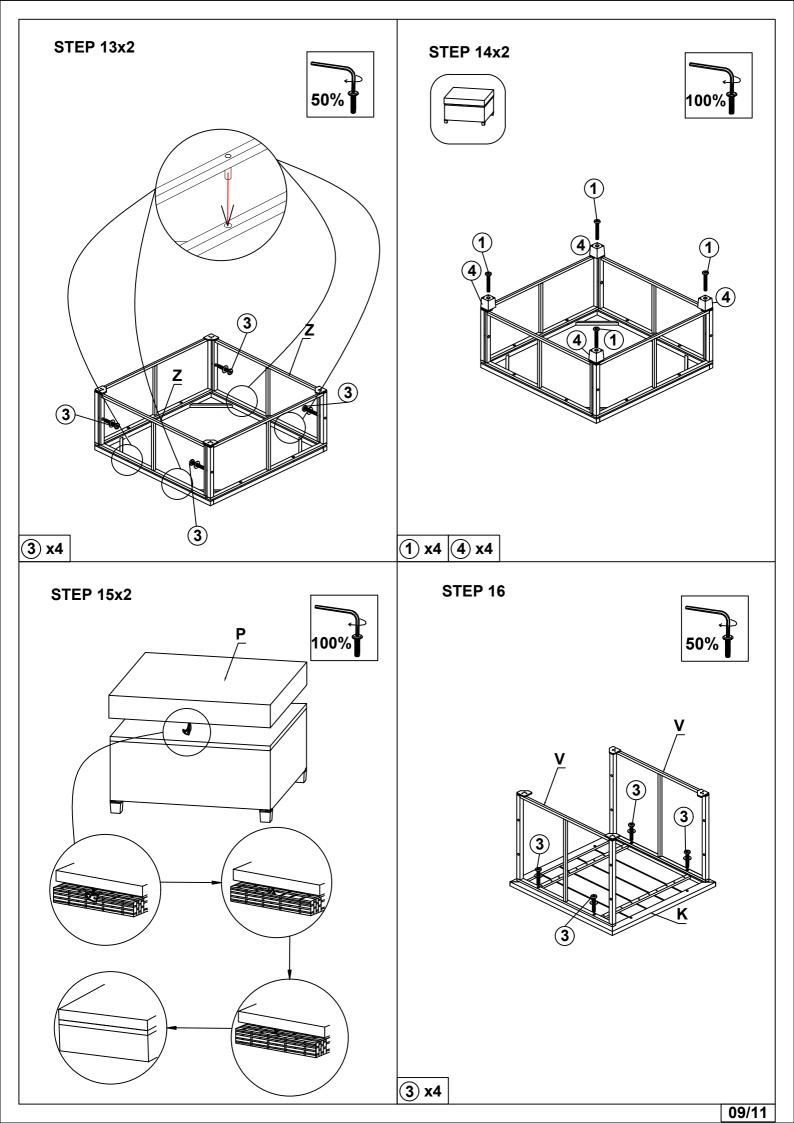

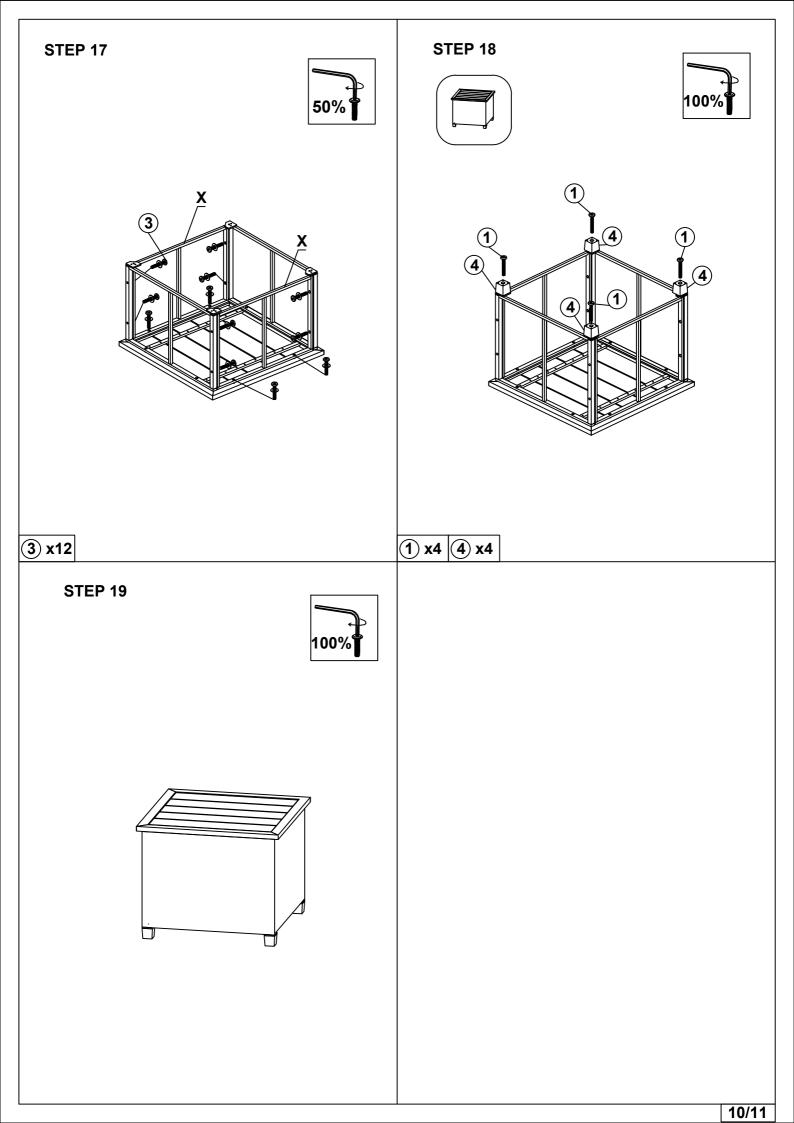

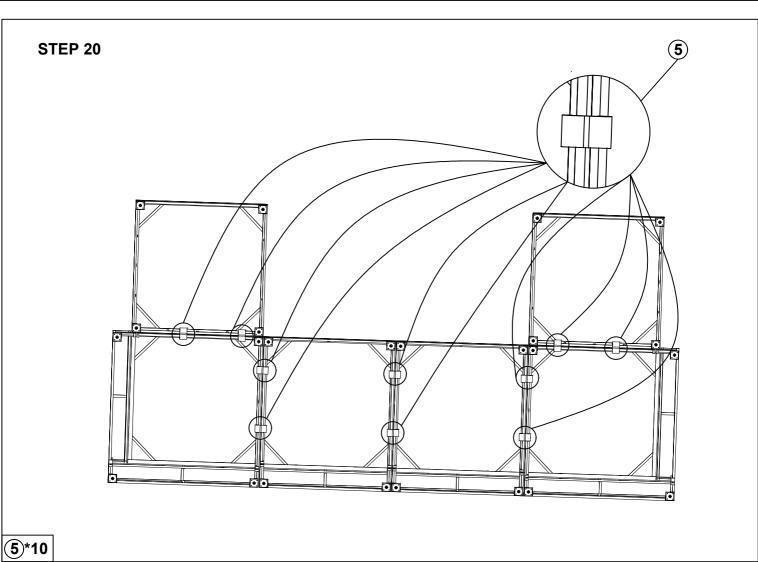

**STEP 27** 

