


# To be a kitchen icon

# FREESTANDING GAS RANGE

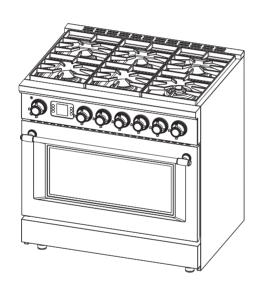



AK-G36N05A

**AK-G48N05A** 



Conforms to CSA / ANSI STD Z21.1 Certified to CSA STD 1.1

Toll Free Number: +1 888-828-2025 WWW.AKICON.COM

Contents		
Consumer information	3	
Important Safety Information	4	
Features of Your Range	8	
Door Handle Installations	9	
Oven Racks Installation	9	
Electrical	9	
Gas Supply	10	
Pressure Regulator	11	
Gas Shut-off Valve	11	
Product Dimensions and Cabinets		
Exhaust Hood Installation		
Gas Conversion Operation		
Gas Supply Connection	19	
Cooktop Operation		
Ignition	19	
Simmer and Boil		
Cooktop Cleaning Tips		
Timing Controller		
Oven Thermostat & Cooking times		
Care and Cleaning Recommendations	22	
Troubleshooting Tips	23	
Wire Diagram	25	

#### Consumer information

## **Range Safety**

#### Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is a safety alert symbol. It will alert you to potential personal or property safety hazards. Obey all safety messages to avoid any property damage, personal injury or death.

# **AWARNING**

**WARNING** indicates a potentially hazardous situation which, if not avoided, could result in serious injury or death.

# **ACAUTION**

**CAUTION** indicates a moderate hazardous situation which, if not avoided, could result in minor or moderate injury. All safety messages will alert you what the potential hazard is, tell you how to reduce the chance of injury, and let you know what can happen if the instructions are not followed.

# **AWARNING**

If the information in this manual is not followed exactly, a fire or explosion may result, causing property damage, personal injury or death.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

#### - WHAT TO DO IF YOU SMELL GAS

- · Do not try to light any appliance.
- Do not touch any electrical switch.
- Do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency or the gas supplier.

#### **ANTI-TIP DEVICE**

# WARNING



# Tip-over Hazard

A Child or adult can tip the range which can result in serious injuries or death. Install the anti-tip device to the range and/or structure per installation instructions. Engage the range to the Anti-tip device installed to the structure.

Re-engage the anti-tip device if the range is removed.

Failure to follow these instructions can result in death or serious injuries and/or burns to children and adults.


To reduce the risk of tipping the range, the range must be secured by properly installed anti-tip device packed with the range. See installation instructions shipped with the bracket for complete details before attempting to install.

All ranges can tip and cause injuries.

#### Make sure the anti-tip bracket is installed.

Slide range forward.

Make sure the anti-tip bracket is securely attached to the wall behind the range.

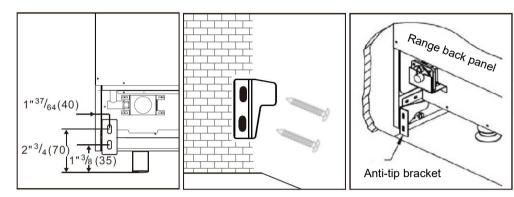

# **A** WARNING

This product can expose you to chemicals including carbon monoxide, which is known to the State of California to cause developmental harm.

For more information go to www.P65Warnings.ca.gov

The installation must conform with local codes or, in the absence of local codes, with the National Fuel Gas Code, ANSI Z223.1/NFPA 54 or, in Canada, the Natural Gas and Propane Installation Code, CSA B149.1.

# **AWARNING**

Never operate the top surface cooking section of the appliance unattended

Failure to follow this warning statement may result in fire, explosion or burn hazard that could cause property damage, personal injury or death.

If a fire should occur, keep away from the appliance and immediately call your fire department. DO NOT ATTEND TO EXTINGUISH AN OIL/GREASE FIRE WITH WATER

#### IMPORTANT SAFETY INFORMATION

#### READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE

**AWARNING** Read all safety instructions before using the product. Failure to follow these instructions may result in fire, electrical shock, serious injury or death.

#### **GENERAL SAFETY INSTRUCTIONS**

**AWARNING** NEVER use this appliance as a space heater to heat or warm the room. Doing so may result in carbon monoxide poisoning and overheating of the oven.

- 1. Use this range for its intended purpose as described in this instruction manual.
- 2. Have your range installed and properly grounded by a qualified installer in accordance with the provided installation instructions.

- 3. Any adjustment and service should be performed only by a qualified gas range installer or service technician. Do not attempt to repair or replace any part of your range unless it is specifically recommended in this manual.
- 4. Your range is shipped from the factory set for use with natural gas or propane (LP) gas. It can be converted for use with either. If required, these adjustments must be made by a qualified technician in accordance with the installation instructions and local codes. The agency performing this work assumes responsibility for the conversion.
- 5. Have the installer show you the location of the range gas shut-off valve and how to turn it off if necessary.
- 6. Plug your range into a 120-volt grounded outlet only. Do not removed the round grounding prong from the plug. If in doubt about the grounding of the home electrical system, it is your responsibility and obligation to have an ungrounded outlet in accordance with the National Electrical Code. Do not use an extension code with this range.
- 7. Before performing any service, unplug the range or disconnect the power supply at the household distribution panel by removing the fuse or switching off the circuit breaker.
- 8. Be sure all packing materials are removed from the range before operating to prevent ignition of these materials.
- 9. Avoid scratching or impacting glass displays. Doing so may lead to glass breakage. Do not cook on a product with broken glass. Shock, fire, or cuts may occur.
- 10. Do not leave children alone or unattended in an area where an appliance is in use. They should never be allowed to climb, sit or stand on any part of the range.
- 11. **ACAUTION** Do not store items of interest to children in cabinets above an oven-children who climb onto the oven to reach items could be seriously injured.
- 12. Never block the vents (air openings) of the range. They provide the air inlets and outlets that are necessary for the range to operate properly with correct combustion. Air openings are located at the rear of the cooktop, at the top and bottom of the oven door, and at the bottom of the range.
- 13. Use only dry pot holders--moist or damp pot holders on hot surfaces may result in burns from steam. Do not let pot holders touch surface burners, burner grate, or oven heating element. Do not use a towel or other bulky fabrics in place of pot holders.
- 14. Do not touch the heating elements or the interior surface of the oven. These surfaces may be hot enough to burn even though they are dark in color. During and after use, do not touch, or let clothing or other flammable materials contact any interior area of the oven; allow sufficient time for cooling first. Other surfaces of the appliance may become hot enough to cause burns. Potentially hot surfaces include the burners, grates, oven vent opening, surfaces near the opening, crevices around the oven door, metal trim parts above the door, any back guard, or high shelf surface.
- 15. Do not heat unopened food containers. Pressure could build up and the container could burst, causing any injury.

# **AWARNING** Extremely Heavy.

Proper equipment and adequate manpower are needed when move the range to avoid personal injury or damage to the unit or the floor.

Failure to follow this advice may result in damage or personal injury.

**AWARNING** DO NOT carry or lift the cooking range by the oven door handle or the control panel!







CORRECT

**INCORRECT** 

INCORRET

**AWARNING** Never pour cold water to hot surfaces in a hot oven. The steam created could cause serious burns or scalding and the sudden change in temperature can damage the enamel in the oven.

**AWARNING** Cook food thoroughly to help protect against foodborne illness. Minimum safe food

temperature recommendations can be found at www.lsltDoneYet.gov and www.fsis.usda.gov. Use a food thermometer to take food temperatures and check several locations.

Do not allow anyone to climb, stand or hang on the oven door, drawer or cooktop. They could damage the range or tip it over causing severe injury or death.

Keep the ventilator hood and grease filter clean to maintain good venting and to avoid grease fires. Turn the ventilator OFF in case of a fire or when intentionally "flaming" liquor or other spirits on the cooktop. The blower if in operation, could spread the flames.

# **AWARNING** KEEP FLAMMABLE MATERIAL AWAY FROM THE RANGE

Failure to do so may result in fire or personal injury.

Do not store or use flammable materials in an oven or near the cooktop, including paper, plastic, pot holders, linens, wall coverings, curtains, drapes and gasoline or other flammable vapors and liquids. Never wear loose-fitting or hanging garments while using the appliance. These garments may ignite if they contact hot surfaces causing severe burns.

Do not let cooking grease or other flammable materials accumulate in or near the range. Grease in the oven or on the cooktop may ignite.

# **AWARNING** IN THE EVENT OF A FIRE, TAKE THE FOLLOWING STEPS TO PREVENT INJURY AND FIRE SPREADING.

Do not use water on grease fires. Never pick up a flaming pan. Turn the controls off. Smother a flaming pan on a surface unit by covering the pan completely with a well-fitting lid, cookie sheet or flat tray. Use a multi-purpose dry chemical or foam-type fire extinguisher.

If there is a fire in the oven during baking, smother the fire by closing the oven door and turning the oven off or by using a multi-purpose dry chemical or foam-type fire extinguisher. If there is a fire in the oven during self-clean, turn the oven off and wait for the fire to go out. Do not force the door open. Introduction of fresh air at self-clean temperatures may lead to a burst of flame from the oven. Failure to follow this instruction may result in severe burns.

# **AWARNING** COOKTOP SAFETY INSTRUCTIONS

Never leave the surface burners unattended at medium or high heat settings. Foods, especially oily foods, may ignite resulting in fire that could spread to surrounding cabinets.

Never leave oil unattended while frying. If allowed to heat beyond its smoking point, oil may ignite resulting in fire that may spread to surrounding cabinets. Use a deep fat thermometer whenever possible to monitor oil temperature.

To avoid oil spillover and fire, use the minimum amount of oil when frying in a shallow pan and avoid cooking frozen foods with excessive amounts of ice.

Use proper pan size and avoid pans that are unstable or easily tipped. Select cookware that matches the size of the burner. Burner flames should be adjusted so that they do not extend beyond the bottom of the pan. Excessive flames may be hazardous.

When using glass/ceramic cookware, make sure it is suitable for cooktop use; others may break because of a sudden change in temperature.

To minimize the possibility of burns, ignition of flammable materials and spillage, cookware handles should be turned toward the center of the range without extending over nearby burners.

Do not use a wok with a round metal support ring. The ring may trap heat and block air to the burner resulting in a carbon monoxide hazard.

Do not attempt to lift the cooktop. Doing so may damage the gas tubing to the surface burners resulting in a gas leak and risk of fire.

Do not use aluminum foil to cover the grills or line any part of the cooktop. Doing so may result in carbon monoxide poisoning, overheating of the cooktop surfaces, or a potential fire hazard.

# **AWARNING** OVEN SAFETY INSTRUCTIONS

NEVER cover any slots, holes, or passages in the oven bottom or cover an entire rack with materials such as aluminum foil or oven liners. Never place foil or oven liners on the oven bottom. They can heat causing risk of smoke or fire.

Stand away from the range when opening the oven door. Escaping hot air or steam can cause burns to hands, face and/or eyes.

Never place cooking utensils, pizza or baking stones, or any type of foil or liner on the oven floor.


These items can trap heat or melt, resulting in damage to the product and risk of shock, smoke or fire. Place oven racks in desired location while oven is cool. If the rack must be moved while the oven is hot, be careful to avoid touching hot surfaces.


Do not leave items such as paper, cooking utensils, or food in the oven when not in use. Items stored in an oven can ignite.


Do not leave items on the cooktop near the oven vent. Items may overheat resulting in a risk of fire or burns.

Never broil with the door open. Open-door broiling is not advised due to overheating of control knobs.

# **Features of Your Range**

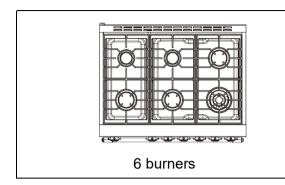

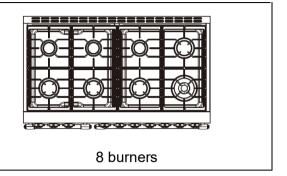


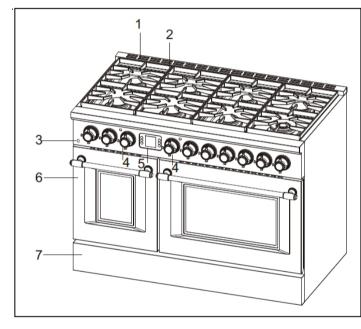

	Feature Index	
1	Oven Vents	
2	Cooktop Burner Grates	
3	18" Oven Lamp (for AK-G48N05A)	
4	Oven/Broil Burner	
5	Oven Timer	
6	Oven Door	
7	Kick Panel	


Not all features are on all models. Appearance may vary.

#### YOU NEED TOOLS FOR INSTALLATION. (not supplied with the range)

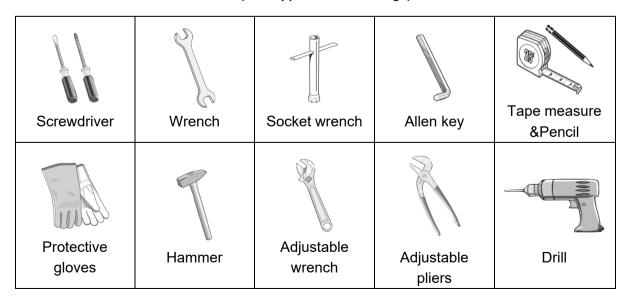


#### **Door handle installations**

The door handle is not pre-installed. Follow the illustrations below to install the door handle quickly and easily.

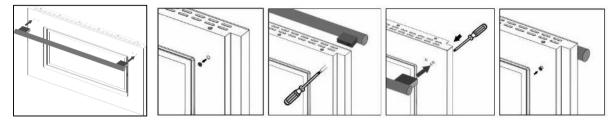


- 1. Remove the black rubber cap on the inside of oven door. (Do not throw it away).
- 2. Insert the screwdriver to the hole to reach the embedded screw.
- 3. Position the handle holder correctly to accept the screw bolt on the outside of oven door, tighten the screw.
- 4. Repeat step No. 1 to 3 for the other side.
- 5. Put the black rubber caps back to cover the two holes on the inside of oven door.


#### **Oven Racks Installation**

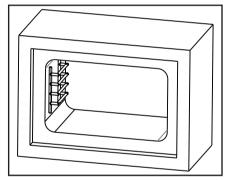

1-Open the oven door

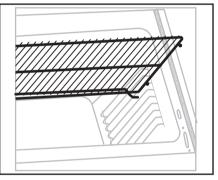

2- Put the baking rack to the center position of the side rack. Raise the baking rack a little bit so that the steel ball can cross the side rack.

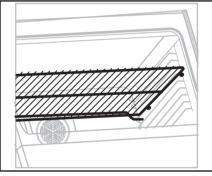

3- Push the baking rack smoothly all the way into the oven cavity.

#### **Electrical**

Your range must be electrically grounded in accordance with local codes or, in the absence of local codes, in accordance with the National Electrical Code (ANSI/NFPA 70, latest edition). In Canada, electrical grounding must be in accordance with the current CSA C22.1 Canadian Electrical Code Part 1 and/or local codes.

The power supply must be the correct polarity. Reverse polarity will result in continuous sparking of the electrodes, even after flame ignition. If there is any doubt as to whether the power supply has the correct polarity or grounded, have it checked by a qualified electrician.

#### **ELECTRICAL REQUIREMENTS**

r 20 amp dedicated circuit
rounding-type

#### **▲WARNING**

**Electrical Grounding Instructions:** this cooking range is equipped with a three-prong (grounding) plug for your protection against shock hazard and should be plugged directly into a properly grounded three-pronged receptacle.

**Do Not** cut or removes the grounding prong from the plug.

Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing.

#### Grounding

The power cord is equipped with a three-prong (grounding) plug which mates with a standard three-prong grounding wall receptacle to minimize the possibility of electrical shock hazard from the range.

All cord connected appliance shall include instructions relative to location of the wall receptacle and a warning to the user to disconnect the electrical supply before serving the appliance.

Where a standard two-prong wall receptacle is encountered, it is the responsibility and obligation of the customer to have it replaced with a properly grounded three-prong wall receptacle. Do not cut or remove the grounding prong from the power cord.

#### **Gas Supply**

Installation must comply with local codes or, in the absence of local codes, with the National Fuel Gas Code, ANSI Z223.1 / NFPA 54. In Canada, installation must conform to the current natural Gas Installation /code, CAN 1-1.1-M81 and with local codes where applicable.

This range has been design-certified according to ANSI Z21.1b-2012 latest edition.

#### GAS REQUIREMENTS

NATURAL GAS	WC
Regulator Pressure	5" (12.5 mb)
Minimum Supply Pressure	6"
Maximum Supply Pressure	14" (34.9 mb), 0.5 psi (3.5 kPa)
LP GAS	WC
Regulator Pressure	10" (25 mb)
Minimum Supply Pressure	11"
Maximum Supply Pressure	14" (34.9 mb), 0.5 psi (3.5 kPa)

The min and max gas supply pressure stands for the pressure at the Gas Shut-Off Valve.

**AWARNING** Do not obstruct the flow of combustion air into the range and ventilation air away from the range.


Ventilation: it is recommended that the unit be operated with an oven head, vented exhaust hood of sufficient size and capacity.


#### **Pressure Regulator**

Since service pressure may fluctuate with local demand, every gas cooking range must be equipped with a pressure regulator on the incoming service line for safe and efficient operation.

The pressure regulator preinstalled on the range has a gas inlet of 1/2" NPT for the 30", 36" & of 3/4" NPT for the 48".60".

Pressure regulator can withstand a maximum input pressure of 0.5 psi (3.5 kPa), and is set at 5" WC outlet pressure when used on NATURAL GAS and 10" WC outlet pressure when used on LIQUID PROPANE.

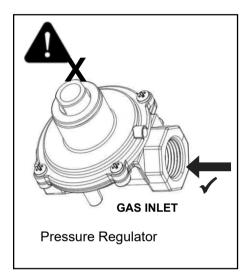

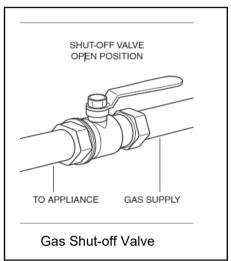



# Gas Shut-off Valve (not included)

The supply line must be equipped with an approved external gas shut-off valve located near the range in an accessible location. Do not block access to the shut-off valve. Refer to the illustration below. A 3/4" (19 mm) ID gas supply line must be connected to the range. If local codes permit, a certified, 3' (.9 m) long, 1/2" (13 mm) or 3/4" (19 mm) ID flexible metal gas line is recommended to connect the unit's 1/2" NPT (30", 36") or 3/4" NPT (48",60") female inlet to the gas supply line. Pipe joint compounds suitable for use with natural or LP gas should be used.


The appliance and its shut-off valve must be disconnected from the gas supply piping system during must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the system at test pressures equal to or less than 0.5 psi (3.5 kPa).

## **Product Dimensions and Cabinets**

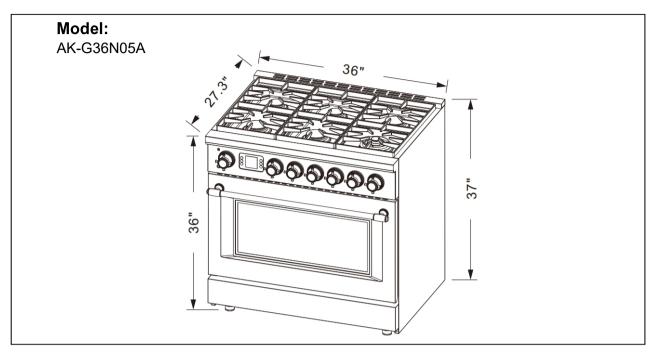

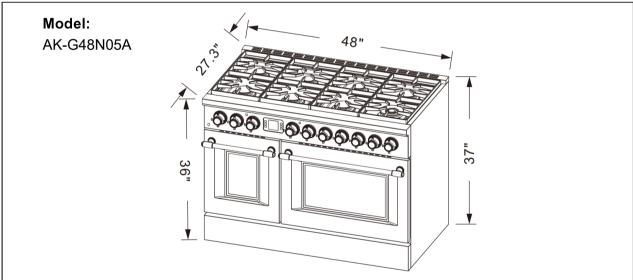

This range may be installed directly adjacent to existing countertop-height cabinets (36" or 91.5 cm from the floor). To achieve the best look, the cooktop should be level with the cabinet countertop. This can be accomplished by raising the unit using the adjustment spindles on the legs.

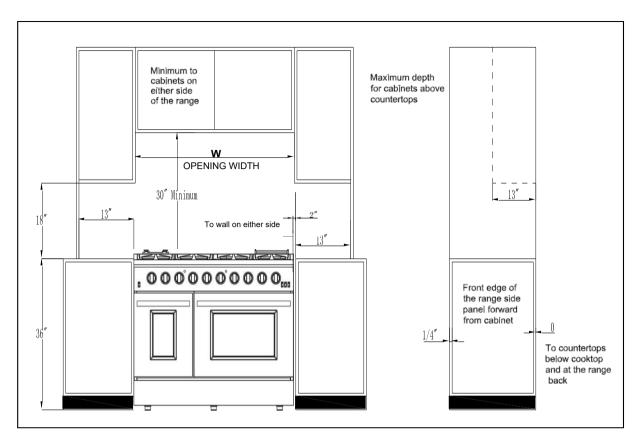


OPENING WIDTH	W
36" Model	36" (914)
48" Model	48" (1219)

#### **Exhaust Hood Installation**

The bottom of the hood should be 30" min. to 36" above the countertop. This would typically result in the bottom of the hood being 66" to 72" above the floor. These dimensions provide safe and efficient operation of the hood.

#### After Installation:

- 1. Check ignition of cooktop burners.
- 2. Check the air shutter adjustment sharp blue flame, with no yellow tipping or lifting flames.
- 3. Check ignition of oven burner.
- 4. Visually check tubular burner (oven burner) re-ignition to be sure both rows of burner ports are relighting each time.
- 5. Check for gas leaks at all gas connections (using a gas detector, never a flame).
- 6. Check oven bake and convection bake function.

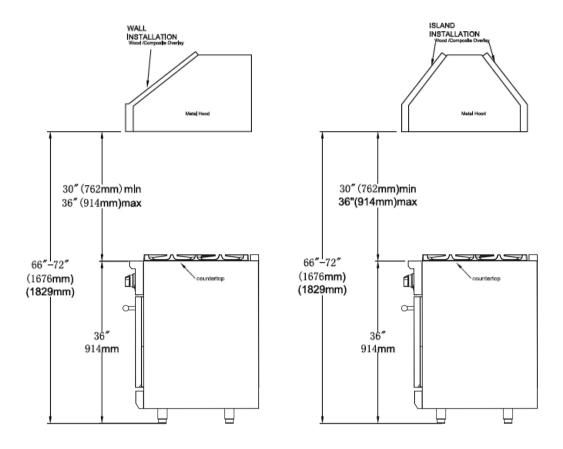

# **Gas Conversion Operation**

This cooking range can be used with LP gas and NG gas. It is shipped from the factory adjusted for use with NG(Nature Gas). Conversion nozzles are included. Follow the instruction shown below for gas conversion.

**AWARNING** Gas conversion shall be conducted by a trained professional.

Contact a local professional to complete this procedure. If this procedure isn't completed by a professional, the warranty can be voided. Forno has the right to ask for a proof (invoice from the professional) when there is signs of an improper conversion.

**AWARNING** Before carrying out this operation, disconnect the range from gas and electricity. Fail to do so, may result in fire, or electrical shock hazard can occur and result in injury or death. Do not remove regulator or allow it to turn during servicing.

The gas conversion procedure for this range includes 8 steps:

- 1. Pressure regulator
- 2. Cooktop burners
- 3. Oven burner
- 4. Broil burner

- 5. Gas valves
- 6. Reconnect Gas and Electrical Supply
- 7. Air shutter oven burner
- 8. Installation of new rating label


The conversion is not completed if all 8 steps have not been concluded properly. Before performing the gas conversion, locate the package containing the replacement nozzles shipped with every range.


#### **STEP 1:** Pressure Regulator


To access the gas regulator, pull the range away from the cabinet wall. The gas regulator is located at the bottom back left corner of the range.

**AWARNING** Electrical shock hazard can occur and result in injury or death. Disconnect electrical power to the range before servicing. Do not remove regulator or allow it to turn during servicing.

- a. Unscrew the cap from the regulator.
- b. Unscrew the brass insert from the cap. Do not remove the spring from the brass insert. Rotate the brass insert with the fully extended spring 180° and screw back the brass insert on the cap. Insert the cap with the spring first into the regulator. Make sure the cap is fully tighten on the regulator, if not done correctly a gas leak can occur.

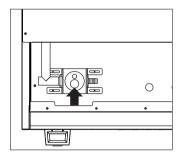

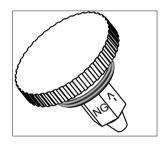

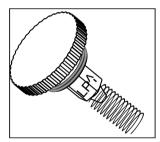

Position NG

Position LP

#### **STEP 2:** Cooktop Burners

- a. Remove cooking grates, burner caps and inner burner rings.
- b. Lift off outer burner heads and burner bases.
- c. Remove the factory installed natural gas nozzles from the center of the nozzle holders using a 7mm socket wrench. Replace the LP nozzle in each nozzle holder. Tighten each nozzle until snug. Use caution not to over tighten.




Socket Wrench


Care should be taken when removing and replacing gas components. Use proper support to prevent damage to components.

**IMPORTANT:** Each nozzle has a number indicating its flow diameter printed on the body. Consult the table below for matching nozzles and burners.

	COOKTOP BURNERS		
ORIFICE FOR NATURAL GAS (NG) & LIQUID PROPANE (LP)	A. 9,000BTU	B.15,000BTU	C.20,000BTU
NG	1.33	1.75	1.38 x 2 (OUTER) 0.75 x 1 (CENTER)
LP	0.9	1.18	0.9 x 2 (OUTER) 0.46 x 1 (CENTER)

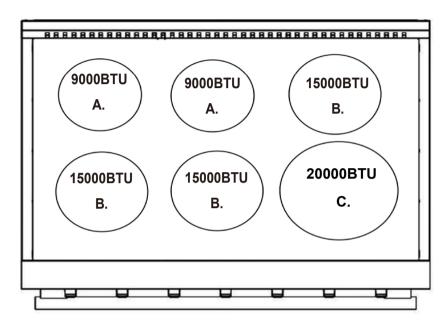

Model: AK-G36N05A

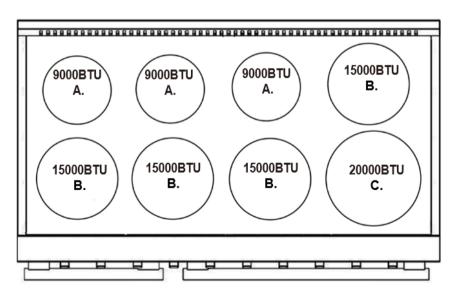

Model: AK-G48N05A


**IMPORTANT:** Save the nozzles removed from the range for future use.

#### STEP 3: Oven Burner

 - a. Remove 3 screws between the kick panel and the oven door . Hold the toe kick panel on both ends and slowly pull away towards the front.
- b. Remove 2 screws which holding the nozzle bracket and locate the nozzle.

Replace with oven burner nozzle, size 1.32mm and tighten. Replace the nozzle bracket, aligning the new nozzle into the air shutter of the oven burner.


Repeat upon steps for 18" oven (48" ranges only).



		Model:AK-G36N05A	Model:AK-G48N05A
Oven	NG	2.2	2.2
	LPG	1.39	1.39
18" Oven	NG		1.7
	LPG		1.12

STEP 4: Broil Burner

- a. Remove 2 screws which fixing the nozzle bracket and locate the nozzle.
- b. Using a 5/8"or 19mm open wrench, remove the gas line from the nozzle holder. Using a  $\frac{1}{2}$ "open wrench, remove the nozzle from the orifice holder. Replace with 0.94 mm oven broiler nozzle.

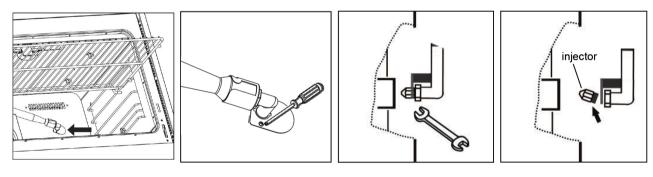


			Model:AK-G36N05A	Model:AK-G48N05A
Broil	NG	1.38	1.38	
	DIOII	LPG	0.94	0.94

STEP 5: Gas Valve

- a. Remove control knobs.
- b. Using a flat screwdriver, adjust main burner bypass jets toward to 1/4 circle for LP until the flame is normal. For 9,000btu and 15,000btu burners, please refer to fig.1, which is in the center of valve axis. For 20,000btu burners, please refer to fig.2, which is in the left side of valve axis.

**PLEASE NOTE:** If the bypass jets screw is tighten too much, the igniter will go ON when burner is set to minimum because the gas outlet is too low.

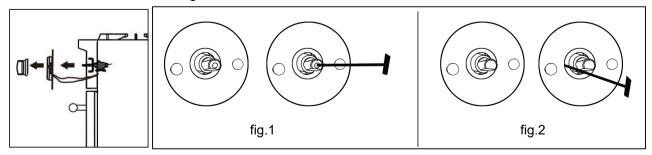


#### STEP 6: Reconnect Gas and Electrical Supply

Leak testing of the range shall be conducted according to the installation instructions provided with the range.

Before operating the range after the gas conversion, always check for leaks with a soapy water solution or other acceptable method in at gas connections installed between the gas inlet pipe of the range, gas regulator, and the manual shut-off valve.

Use soapy solutions to check for leakage on all joints.

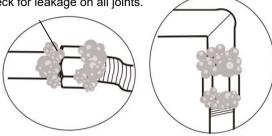

#### **AWARNING** DO NOT use a flame to check for gas leaks!

#### **STEP 7:** Air Shutter Oven Burner (no necessary)

The air shutter for the oven burner may need adjustment, especially if the unit has been converted for use with LP. The approximate flame height at the oven burner is one inch (distinctive inner blue flame).

To determine if the oven burner flame is acceptable:

- a. With the kick plate removed, set the oven to bake at 350° F and observe the flame. If the flame yellow in color, increase the air shutter opening size. If the flame is blue and lifting away from the burner, reduce the air shutter opening size.
- b. Turn off the oven and allow it to cool before adjusting the air shutter. To adjust, loosen the lock screw, reposition the air shutter and tighten the lock screw. Retest the burner by repeating the steps above. When the burner flame is a distinct blue colour and burning steadily, the air shutter is adjusted correctly.

#### **STEP 8:** Installation of New Rating Label

Record the model and serial number on the LP / Propane Rating serial plate provided in this kit. The information can be obtained from the existing Rating / Serial plate. Place the new plate as close as possible to the existing Rating / Serial plate on the range.

#### Preparation

Before moving the range, protect any finished flooring and secure oven door(s) closed to prevent damage.

The oven door(s) can be removed to lighten the load or to fit the unit through a doorway. Only remove if necessary. Do not remove the griddle or any other component. Door removal should only be done by a certified installer or service technician.

#### **Placement**

Do not lift or carry the oven door by the door handle.

Use an appliance dolly to move the range near the opening. Remove and recycle packing materials. Do not discard the anti-tip bracket supplied with the range.

#### Leveling

Raise the range to the desired height by adjusting the legs. The legs can be adjusted by rotating the metal leg leg clockwise to raise and counter clockwise to lower.

#### Anti-Tip Bracket

To prevent the range from tipping forward, the anti-tip bracket must be installed. Refer to the illustration on page 5.

#### **Gas Supply Connection**

All connections to the gas piping must be wrench-tightened. Do not overtighten or allow pipes to turn when tightening.

When all connections have been made, check that all range controls are in the "OFF" position and turn on the main gas supply valve.

If a flexible metal connector is being used, verify it is not kinked, then attach the gas supply line to the regulator on the range. Open the valve and check for leaks by placing a liquid detergent solution onto all gas connections. Bubbles around connections indicate a gas leak. If a leak appears, close the shut-off valve and adjust connections.

Leak testing of the appliance shall be conducted according to the manufacture's instructions .Use some soap water (50% water and 50% soap) or a leak detector at all joints and connections to check for leaks in the system. Do not use a flame to check for gas leaks.

The appliance must be isolated from the building's gas supply piping system by closing its individual manual shut-off valve during any pressure testing of the gas supply piping system at test pressure equal to or less than 0.5 psi (3.5kPa).


#### **Getting Started**

Before you start cooking, please take the following steps.

- Remove the exterior and interior packing.
- Remove the protective film on steel and aluminum parts.
- Clean the range thoroughly with hot water and a mild detergent. Rinse and dry with a soft cloth to remove any residual oil and grease left over from the manufacturing process.
- Check that surface burner components are assembled correctly.
- Furnish the interior of the oven by inserting the shelves and tray.

# **Cooktop Operation**

The burner design combines all burner parts in one assembly. The burner cap must be seated horizontally on the burner. Refer to the illustration.

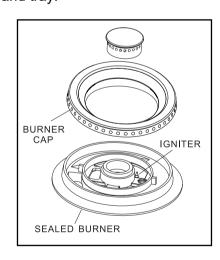

#### Ignition

To light the cooktop burners, push and turn the appropriate control knob counter clockwise to a "Hi" position. You will hear a clicking noise –the sound of the electric spark igniting the burner.

Once burner ignition has been achieved, turn the burner control knob to adjust the flame size. If the knob stays at "Hi", it will continue to click.

NOTE: When one burner is turned to the "Hi" position, all the burners will spark. Do not attempt to disassemble or clean around any burner while another burner is on. Do not touch any burner cap, burner base, or igniter while the igniters are sparking.

#### **Heat Settings:**

Hi	Ignites the burners.	
Simmer	Melting small quantities, steaming rice, warming food, melting	
	chocolate or butter.	
Low	Melting large quantities.	
Low-Medium	Low-temperature frying, simmering large quantities, heating milk,	
	cream sauces, gravies.	
Medium	Sautéing and browning, braising, pan-frying, maintaining	
	slow boil on large quantities.	
Medium-Hi	High-temperature frying, pan boiling, maintaining slow boil	
	on large quantities.	
Hi	Boiling liquid quickly, deep frying.	

ACAUTION Never leave pans on a high setting unattended. Be careful when cooking food in fat or grease; it can become hot enough to ignite.

#### Simmer and Boil

A smaller flame will give the best results when simmering. Small flames offer precise cooking performance for delicate foods, keeping food warm, melting chocolate or butter, and for cooking over low heat for long period of time.

The highest (larger) flame settings provide the maximum heat that is available on your range. This setting should be used for heavy cooking jobs such as boiling water and cooking pasts.

Please Note: Only the 20,000BTU burner can reach a simmer flame to the minimum setting.

#### Flame Size

- When you select the flame size, watch the flame when you turn the knob.
- Any flame larger than the bottom of the cookware is wasted.
- The flame should be steady and blue in color. Foreign material in the gas line may cause an orange flame during initial operation.


#### **Power Failure**

- If the gas does not ignite within four seconds, turn off the valve and allow at least five minutes for any gas to dissipate. Repeat the lighting procedure.
- In the event of a power failure, the surface burners can be lighted manually. Hold a lighted match near a burner and turn the knob counter-clockwise to "HI". After burner lights, turn knob to the desired setting.

# **Cooktop Cleaning Tips**

- To prevent the cooktop from discoloring or staining, clean cooktop after each use, and wipe up acidic or sugary spills as soon as the cooktop has cooled.
- The sealed burners of your range are not secured to the cooktop and are designed to be removed. Boil overs or spills will not seep underneath the cooktop. The burners should be cleaned after each use.

#### **Timing Controller**

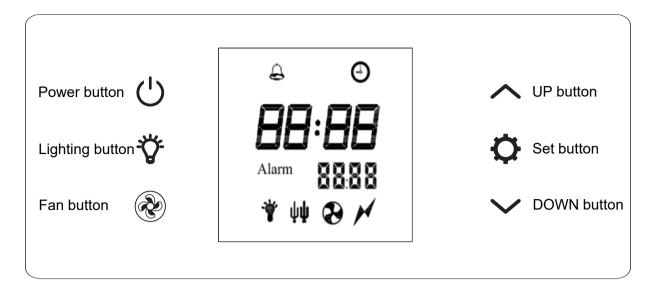

#### 1. Power-on state

After the startup, the time icon ① is keeping lighting, the current time II:III is 12:00 and starts running, the alarm time IIII is 00:00 and is keeping lighting, and the ":" in the current time and alarm icon is blinking.

#### 2. Set current time

1. Press the  $\bullet$  button once, the time icon  $\bullet$  and the current time  $\bullet$  blink, enter the time setting mode, press  $\wedge$  up button and  $\vee$  down button to set the time, stop for 5 seconds or press  $\bullet$  twice to finish. The  $\bullet$  icon is keeping on. (Long press  $\wedge$  button can quickly increase or decrease values)

#### 3, Set alarm clock time

1. Press the Doubtton twice, the ringtone icon and the alarm clock time \$8888 blink, enter the alarm mode setting (0-23 hours 59 minutes), press the button and button to adjust the alarm time (long press where we can quickly increase or decrease the value), 5 seconds after setting, or press the button to start the alarm function. The and Alarm icons are keeping on, and the \$888 displays the countdown time of the alarm.

2. When the alarm countdown is zero, the icons of Alarm and \$888 blink, and the buzzer buzzes. If the buzzer will be automatically turned off after 2 minutes of no operation, press any key of Alarm to cancel the buzzer sound and Alarm \$888 icon stops blinking.

#### 4. Relay control

- 1. Press () to turn on or off all functions and displays.
- 2. Press the  $\nabla$  key to turn on or off lighting, lighting icon  $\nabla$  on or  $\Psi$  off, relays L and M on or off.
- 3. Press the key to turn on or off the fan, fan icon on or off, relay J on or off.

The lighting function and the fan function have the memory function, which restores the status before the last power failure after power-on.

#### Oven Thermostat & Cooking times

The numbers printed on the control panel indicate the increasing oven temperature value (°F). To regulate the temperature, set the desired number on the control knob indicator.

Note: The BROIL position is only to turn on the broil burner.

Cooking times can vary according to the type of food, its density and its size. It is advisable to watch when cooking for the first time and to check results since similar results are obtained when preparing the same dishes under the same conditions.

Use the thermostat to control the temperatures, and control the time according to the cooking guides.

This unit is equipped with a cooling fan that will automatically turn on when the temperature between the cooking surface and the oven is above 158°f (70°c). This is to ensure that the internal components remain within safe operating temperatures, thus prolonging the lifespan of the appliance and preventing overheating issues.

The fan will stay on until the temperature is below 158°f (70°c), so it is normal to hear the fan humming even after the range is not being used. This continuous operation ensures efficient cooling of the unit and maintains optimal performance.

Please note that the cooling fan can stay on for up to 30 minutes after the range has been turned off, depending on the temperature of the internal components.

NOTE: This duration may vary based on usage and environmental conditions.

#### **Care and Cleaning Recommendations**

Stainless steel	Use a non-abrasive stainless steel cleaner and apply with a soft lint-free cloth. To bring out the natural luster, lightly wipe surface with a water-dampened microfiber cloth followed by a dry polishing cloth. Always follow the grain of stainless steel.
Burner grates	Remove and place on a flat surface near the sink. Clean with hot water and mild detergent or paste of baking soda and water. Do not immerse in water. Towel dry and rub lightly with olive oil. This help the grates keeping their shine and avoid any rust from appearing. Any leftover of water on the grates might result in rust or marks.
Burner pan	Remove surface debris before cleaning to help speed up the cleaning process and decrease the chance of scratching the surface during cleaning. Using mild abrasive cleaners or spray degreasers, clean and rinse the surface and dry immediately to avoid streaking. To clean hard water stains, use white vinegar and water. Rinse and dry immediately.
Surface burners	To clean hard water stains, use white vinegar and water. Rinse and dry immediately. Allow to cool. Use mild detergent or spray degreaser to clean. Rinse with water and towel dry. <b>NOTE:</b> Pro-style gas range require a high level of maintenance, if the orifices are clog or that the burners dirty, they might stop working. If it's the case, remove them from, clean them thoroughly and remove any excess of water. Forno is not responsible for any maintenance related issues.


Control knobs	Using a damp cloth, wipe with a mild detergent or spray degreaser; rinse and	
	dry. Do not place in dishwasher.	
Oven interior	Use mild abrasive cleaners, spray degreasers. Use a razor blade to gently lift	
	baked on foods from oven cavity and window. For stubborn stains, spray with a	
	mild abrasive cleaner or spray degreaser. Wash the entire oven cavity with soap	
	and water to remove all cleaning chemicals.	
Oven racks	To clean the upper rack, use mild detergent and a scouring pad. Rinse and dry.	
	To clean the bottom pan, discard grease and wash with hot water and mild	
	detergent. Rinse and dry. The upper rack is dishwasher safe. However, do not	
	place the porcelain-coated rack or pan in dishwasher.	


# Troubleshooting Tips Before you call for service

Donner Incomet annual	Check that power is on.
Range does not operate	Check that electrical power to range and home circuit breaker
	is on.
Burners Do Not Light Or Spark	Electrical plug is not plugged into a live power outlet.
Randomly	Gas supply not turned on.
	Burner parts not replaced correctly.
	Holes in the simmer rings or slits in the burner rings are
	clogged.
	Clogged nozzles, or wet burners or electrodes.
	A fuse in your home may be blown or circuit breaker tripped.
Burners Have Yellow Or	Burner parts not replaced correctly.
Yellow-Tipped Flames	A. Yellow flames: Call for service.
	B. Yellow tips on outer cones: Normal for propane (LP) gas.
	C. Soft blue flames: Normal for natural gas.
	If burner flames look like (A), call for service. Normal burner
	flames should look like (B) or (C), depending on the type of
	gas.
Burner Flames Very Large Or Yellow	The range may be connected to the wrong fuel type. Contact
, ,	the person who installed your range or made the conversion.
Burner Flames Contain Orange Flickers	Airborne dust; cool-mist humidifier; debris on or inside burner.
Oven Lights Do Not Work	The light bulb is defective. Replace the bulb.
Oven Racks Are Hard To Slide	Do not spray with a cooking spray or other lubricant sprays.
	See Full extension oven racks in the Care and Cleaning
	section.
Food Does Not Bake Or Roast	The oven controls are improperly set. See the Baking or
Properly	Roasting section.
, ,	Oven not preheated for a long enough time.
	1 3

	1
	Incorrect cookware or cookware of improper size being used.
	Racks in the wrong position. See the Baking or Roasting
	section.
	Use a foil tent to slow down browning during roasting.
	Oven thermostat needs adjustment. See the Oven thermostat
	adjustment section.
Food Does Not Broil Properly	This model is designed for closed door broiling only. Close the
	door. Always broil with the door closed.
	The oven controls are not set at BROIL. See the Broiling
	section.
	Improper rack position.
	Cookware is not suited for broiling. Use the broiling pan and
	rack that came with your oven.
	Aluminum foil used on the broiling pan and rack has not been
	fitted properly and slit as recommended.
Oven Temperature Too Hot Or Too	
Cold	Need to adjust the oven knob temperature setting.
Steam From The Vent	When using the convection mode, it is normal to see steam
	coming out of the oven vent. As the number of racks or amount
	of food being cooked increases, the amount of visible steam
	will increase.
Burning Or Oily Odor Emitting From	This is normal in a new oven and will disappear in time.
The Vent	
Strong Odor	This is temporary. An odour caused by the insulation around
	the inside of the oven is normal for the first few times the oven
	is used.
Convection Fan Not On All The Time	The convection fan (depending on the function you are using)
	may cycle on and off until the function is over or the door is
	opened for optimized performance.
	This is normal. In addition, the convection fan may cycle in the
	clockwise and counter clockwise direction until the function is
	over or the door is opened.
Condensation Or Fogging On The	Condensation or fogging on the inside of the oven door glass is
Inside of the Door Glass	normal during the preheating of the oven and will evaporate
	usually by the end of the preheating cycle.
Cracking Or Popping Sound During	This is normal. This is the sound of the metal heating and
Cleaning	cooling during both the cooking and cleaning functions.
Excessive Smoking Occurs During	The oven is heavily soiled. Turn the Oven Mode Selector and
Cleaning	the Temperature knobs to OFF. Open the windows to rid the
	room of smoke. Wait until the locked door indicator light goes
	off. Wipe up excess soil and do the cleaning again.
	on the ap occorded and do the diddining again.

# Wire Diagram

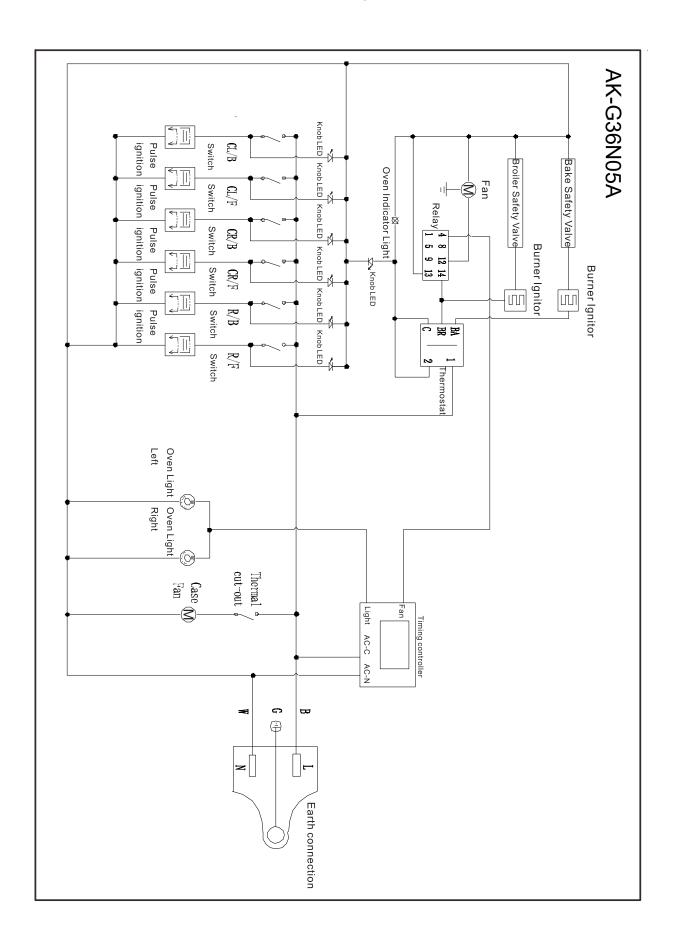

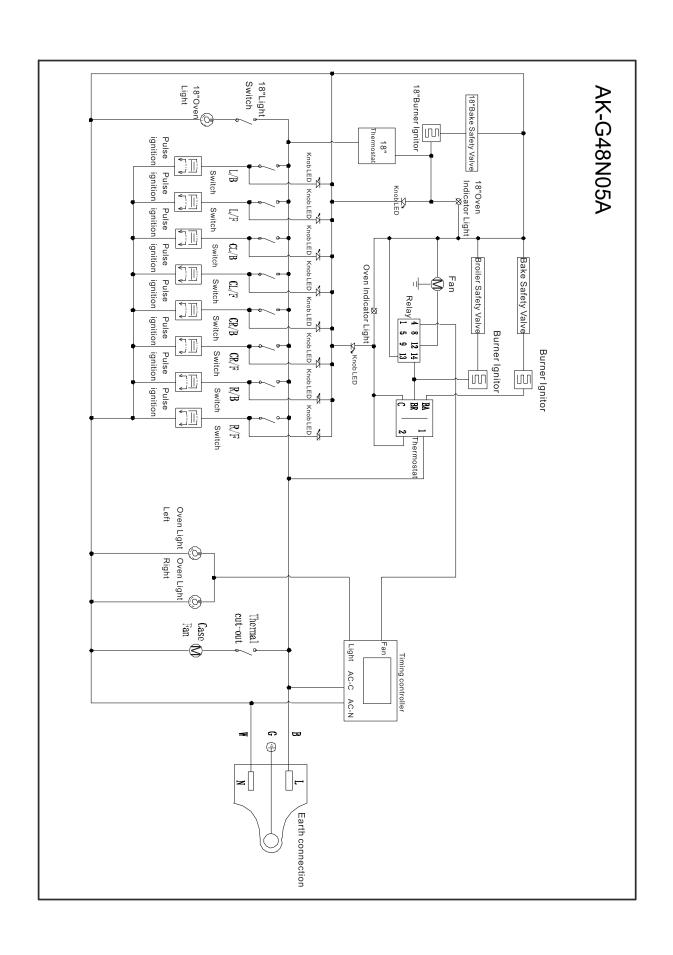

# WARRANTY



# Scan the QR code or enter the URL directly to register for warranty.

www.akiconshop.com/registration.html

## Official contact information.

service@akicon.com service@akiconshop.com

Toll Free Number: +1 (888)-828-2025

WWW.AKICON.COM
WWW.AKICONSHOP.COM

#### **SERVICE**

If you have any questions, please contact us. We recommend using email and attaching photos and videos to better help resolve the issue.

- 1. Read the safety instructions.
- 2. Read all instructions in the manual BEFORE operating the appliance.
- 3. Remove all packing materials from the oven before using.
- 4. Observe all governing codes and ordinances.
- 5. Installation is only to be done by a qualified technician, but ultimately proper vinstallation is the responsibility of the installer.
- 6. Product failure due to improper installation is not covered under the Warranty.

# AKICON

# **AKICON INC**

Website: www.akicon.com / www.akiconshop.com

Email: info@akicon.com

Address: 108 EAST 13TH ST WILMINGTON, DE 19801 US

Toll Free Number: +1 (888)-828-2025